

# 411®

## Produktdatenblatt Product Data Sheet



**Bezeichnung**  
Description

**Schieferreparaturhaken 411®**  
Slate repair hook 411®

**Anwendungsbereich**  
Scope of Application

**Windsogsicherung von kleinformatischen Deckwerkstoffen.**  
Securing small format roof and facade coverings against wind uplift.

**Technische Daten**  
Technical Data

**Verpackungseinheit** 100 Stück  
**Material** Kupfer / Edelstahl 1.4301  
(schwarz u. blank)  
**Packaging unit** 100 pcs.  
**Material** Copper / stainless steel 1.4301  
(black and uncoated)

**Montage**  
Installation


1. Defekte Schieferplatte entfernen.
2. Reparaturhaken auf der Fuge bzw. Unterkonstruktion so befestigen,
3. dass der Haken unterhalb der Gebindelinie umgeknickt werden kann.
4. Schieferplatte einschieben und Haken umbiegen, ggf. kürzen.  
Die aktuellen Vorschriften für Dacheindeckungen und Herstellervorschriften sind bei der Montage zu beachten.

1. Remove defective slate plate.
2. Fix repair hook in the gap or subconstruction
3. beneath dash line for ease of bending.
4. Insert slate panel and bend hook, or shorten if necessary.  
Please take note of the current roofing and manufacturer regulations.

**Hersteller**  
Manufacturer

**Friedrich Ossenberg-Schule GmbH + Co KG**  
Amerikastraße 2  
58675 Hemer  
GERMANY  
Tel. +49 (0) 2372. 558. 99. 0  
Fax +49 (0) 2372. 558. 99. 99 90  
info@fos.de  
www.fos.de

  
FOS® QUALITÄT MADE IN GERMANY

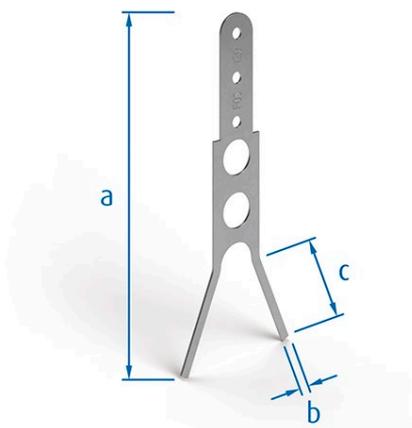

a	b	c	Code
120	3	35	411001
140	3	35	411002
160	3	35	411003