

Sonava

beyond acoustic panels

Pattex

VERARBEITUNGSANLEITUNG: MONTAGE VON SONAVA AKUSTIKPANEELN MIT PATTEx MONTAGE ALL MATERIALS



PLANUNG UND VORBEREITUNG

Vor Beginn der Verklebung muss die Position der einzelnen Paneele auf der Wandfläche geplant und festgelegt werden. Die Paneele bei Bedarf zuschneiden.

UNTERGRUND

Die zu beklebende Fläche muss trocken, tragfähig, sauber (frei von trennenden Substanzen) und ausreichend ebenflächig sein.

KLEBSTOFFAUSWAHL

Wir empfehlen die Verwendung des Pattex Montage All Materials aus der Kartusche für einen sauberen und präzisen Klebstoffauftrag. Dieser verklebt die Akustikpaneele auf nahezu allen bauüblichen Untergründen. Er bietet eine gute Repositionierbarkeit zu Beginn, eine sichere Anfangshaftung während und perfekte Endfestigkeit nach der Montage.

VERBRAUCH


ca. 300 g/m² (≈ 1 Kartusche)



PRFOFI HOTLINE

0211 797-6700

produkt-info-klebstoffe@henkel.com

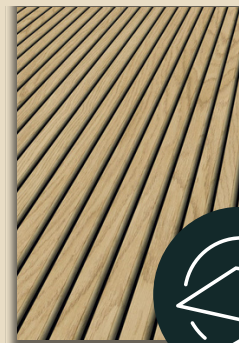

VERARBEITUNG

- Kartusche oberhalb des Gewindes aufschneiden.
- Kartuschenspitze auf etwa 8 mm Durchmesser zuschneiden und aufschrauben
- Kartusche in geeignete Kartuschenpistole einlegen.

KLEBSTOFFAUFTRAG


Klebstoff senkrecht strangweise auf die Rückseite/ Filzseite der Paneele auftragen, beginnend ca. 1 cm vom Rand rechts und links. Dann die Fläche mit Strängen immer wieder teilen, bis ein Abstand der einzelnen Stränge von ca. 8 cm erreicht ist.

- Das Paneel direkt nach dem Klebstoffauftrag in geplanter Position anlegen und bei Bedarf noch leicht justieren
- In endgültiger Position das Paneel kräftig andrücken oder mit einer Moosgummiwalze anrollen.

ZUSÄTZLICHE HINWEISE

Bitte beachten Sie auch unser technisches Merkblatt von Pattex für weitere Details unter www.pattex.de

1 4 3 5 2

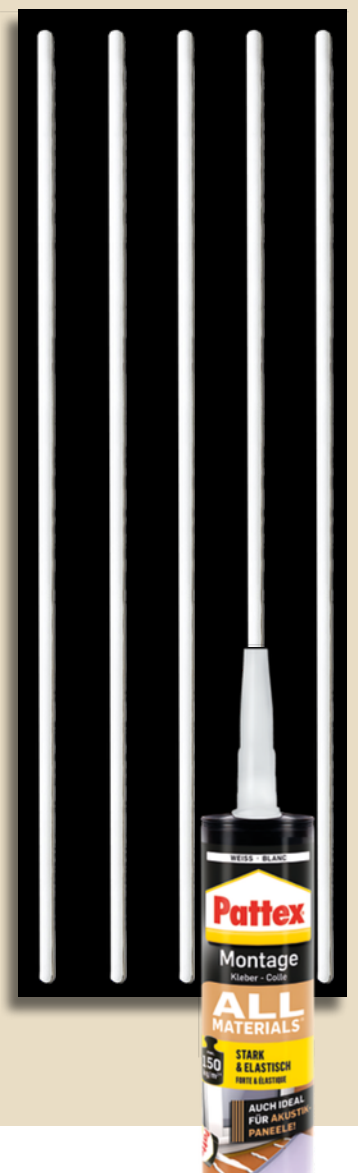

Sonava

beyond acoustic panels



INSTALLATION INSTRUCTION: INSTALLATION OF SONAVA ACOUSTIC PANELS WITH PATTEX MONTAGE ALL MATERIALS



PLANNING AND PREPARATION

Before starting to glue the panels, the position of each individual panel on the wall surface must be planned and determined. Cut the panels to size if necessary.

SUBSTRATE

The surface to be bonded must be dry, stable, clean (free of separating substances) and sufficiently even.

ADHESIVE SELECTION

We recommend using Pattex Montage All Materials from a cartridge for clean and precise adhesive application. This adhesive bonds the acoustic panels to almost all common construction substrates. It offers good repositionability at the beginning, secure initial adhesion during application and perfect final strength after installation.

CONSUMPTION


Approx. 300 g/m² (≈ 1 cartridge)



HOTLINE

0211 797-6700

produkt-info-klebstoffe@henkel.com

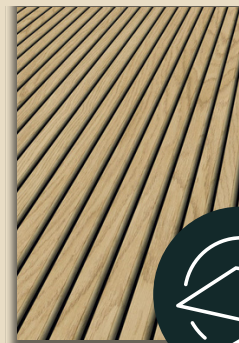

APPLICATION

- Cut the cartridge above the thread.
- Cut the tip of the cartridge to a diameter of approx. 8 mm and screw it on.
- Insert the cartridge into a suitable cartridge gun.

ADHESIVE APPLICATION

Apply the adhesive vertically in continuous strands on the back/felt side of the panels, starting approx. 1 cm from the right and left edges. Then divide the surface repeatedly into additional strands until a spacing of approx. 8 cm between the individual lines is achieved.

- Immediately after applying the adhesive, place the
- Once in the final position, press the panel firmly or roll it with a foam rubber roller.

ADDITIONAL INFORMATION

Please also refer to our technical data sheet from Pattex for further details at www.pattex.de

1 4 3 5 2

