
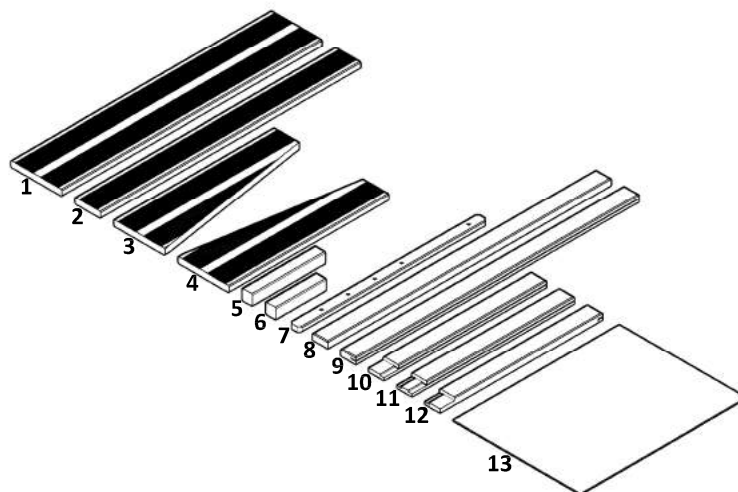


Montageanleitung

Frühbeetaufsatz für 5909228 (89070)

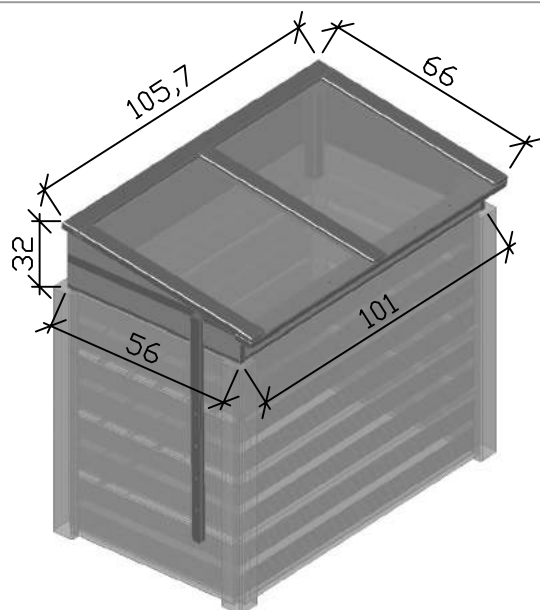

A 16x 3x20 (691111)

B 8x 4x35 (691112)

C 26x 4,5x50 (691107)

D 3x 5x100 (691103)

E 4x Dichtscheibe (692320)

F 2x Lappenband (692461)

G 2x Schraubhaken (692220)

H 2x Schrauböse (692221)

I/J 3x Feder (693021/693022)

1 1x 20,5x190x970 (551890)

2 1x 20,5x95x970 (551892)

3 1x 20,5x190/95x595 (552105)

4 1x 20,5x190/95x595 (552104)

5 2x 38x38x270 (553807)

6 2x 38x38x185 (553808)

7 2x 16x38x700 (551815)

8 1x 25x55x1057 (552504)

9 1x 25x55x1057 (552516)


10 1x 25x55x605 (552510)

11 1x 25x55x605 (552513)


12 1x 25x55x605 (552507)

13 2x 2x474x619 (593507)
Plexiglas


1

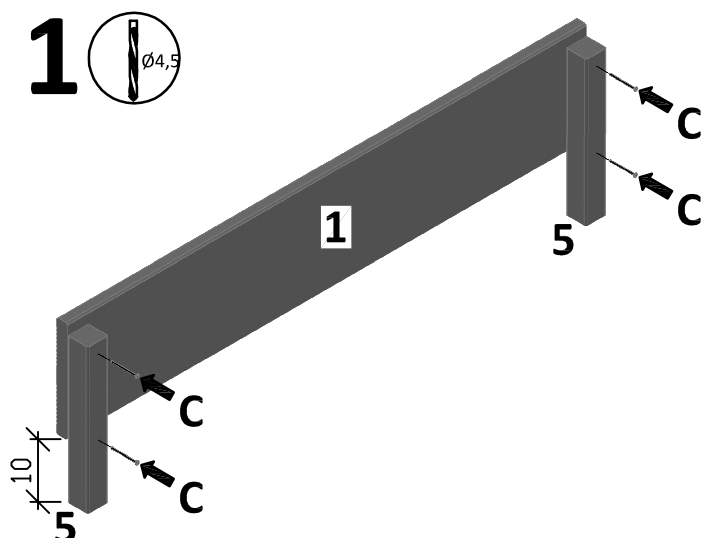

2

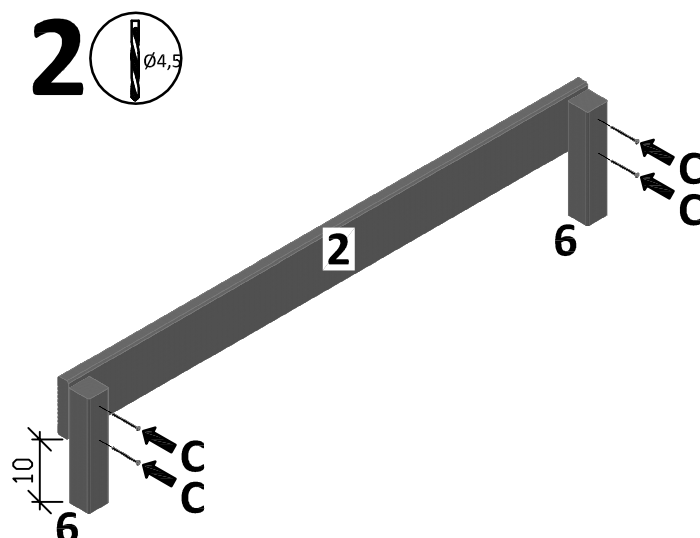


3 

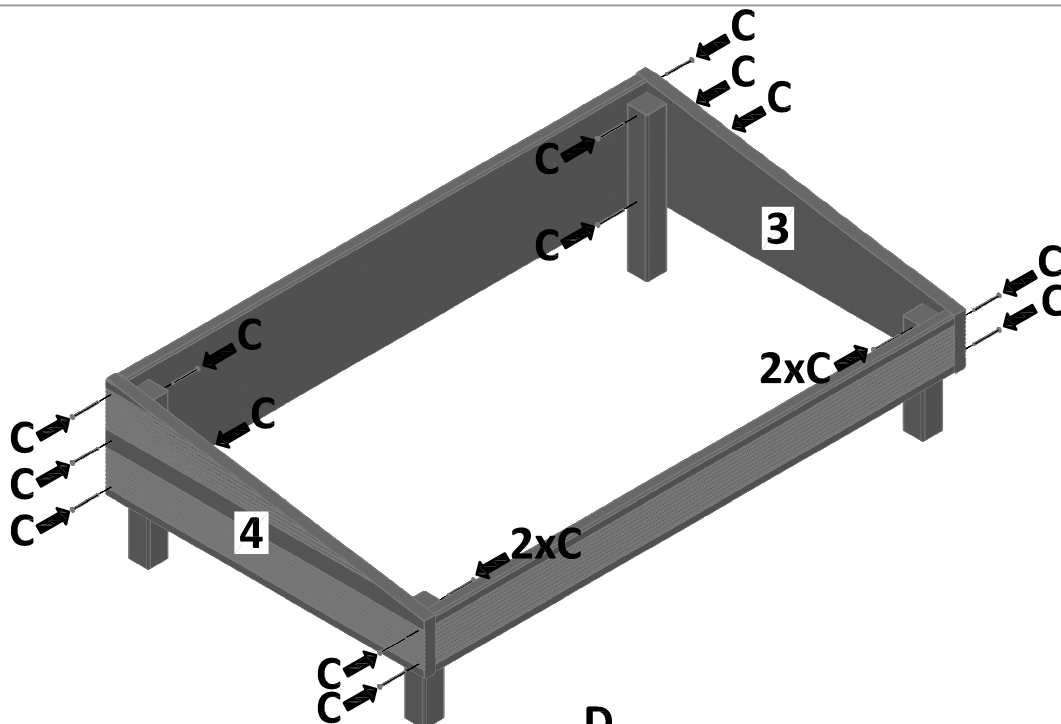



4 



Die Feder I, in die Nut der Verbindung zwischen den Rahmenteilen, mit wasserfestem Holzleim (nicht im Lieferumfang enthalten) einleimen!

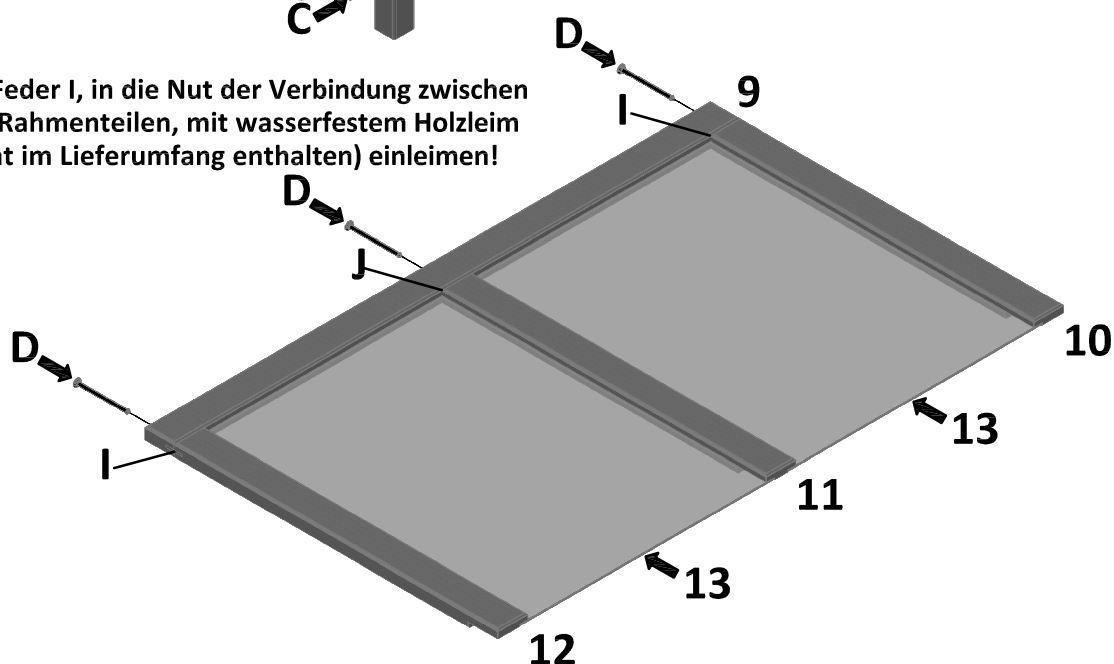

5 

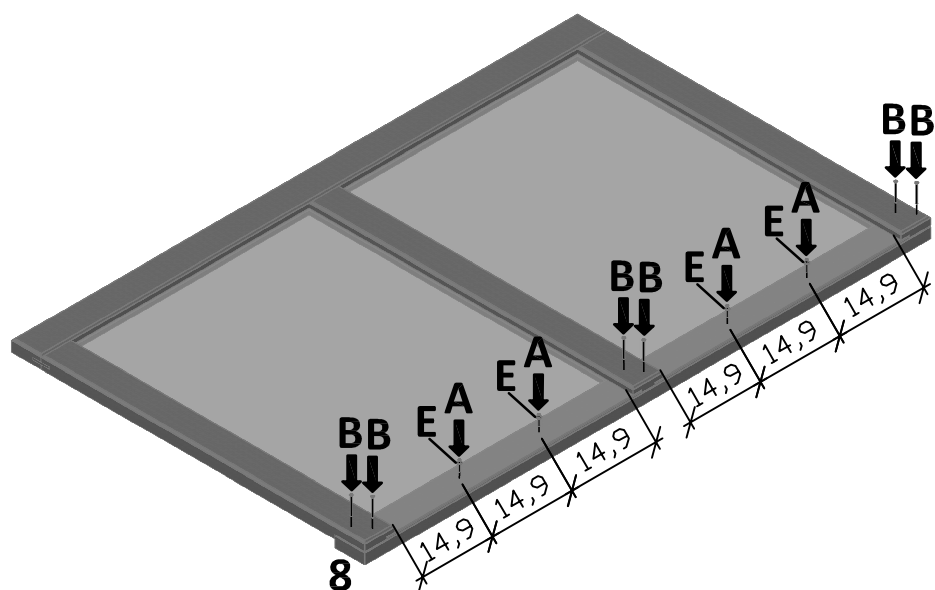


6 

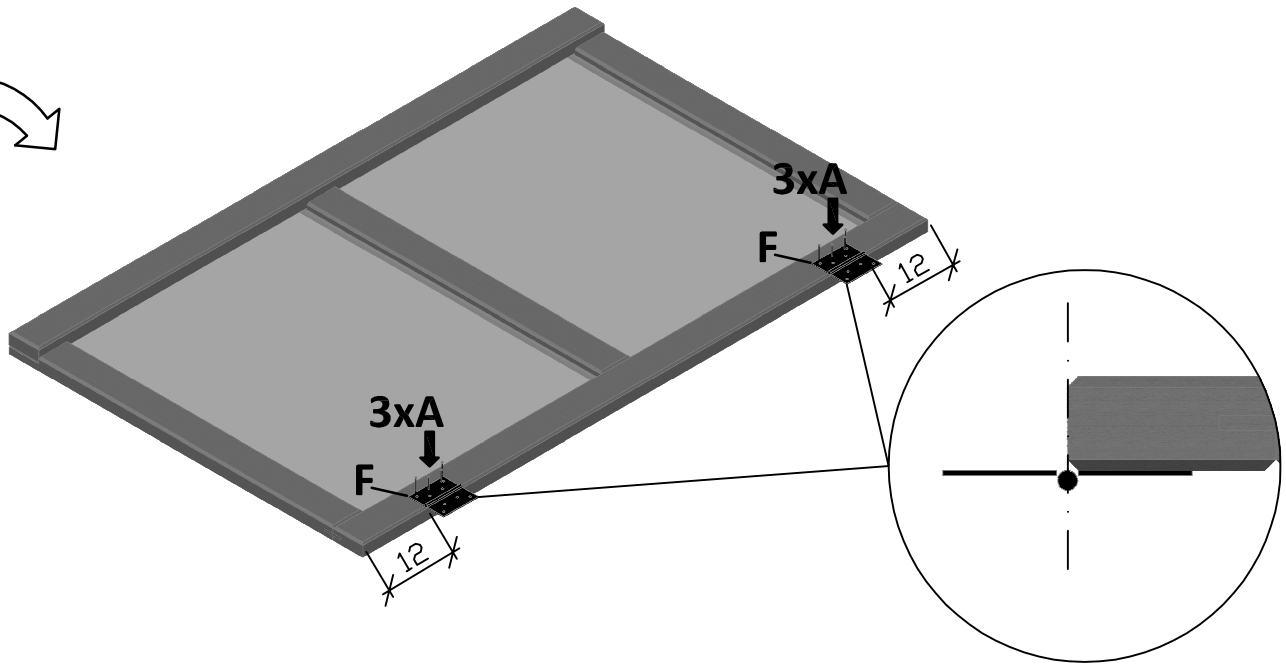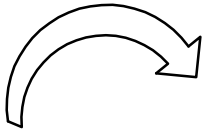



7 

Deckel auf dem Grundkörper vermitteln!

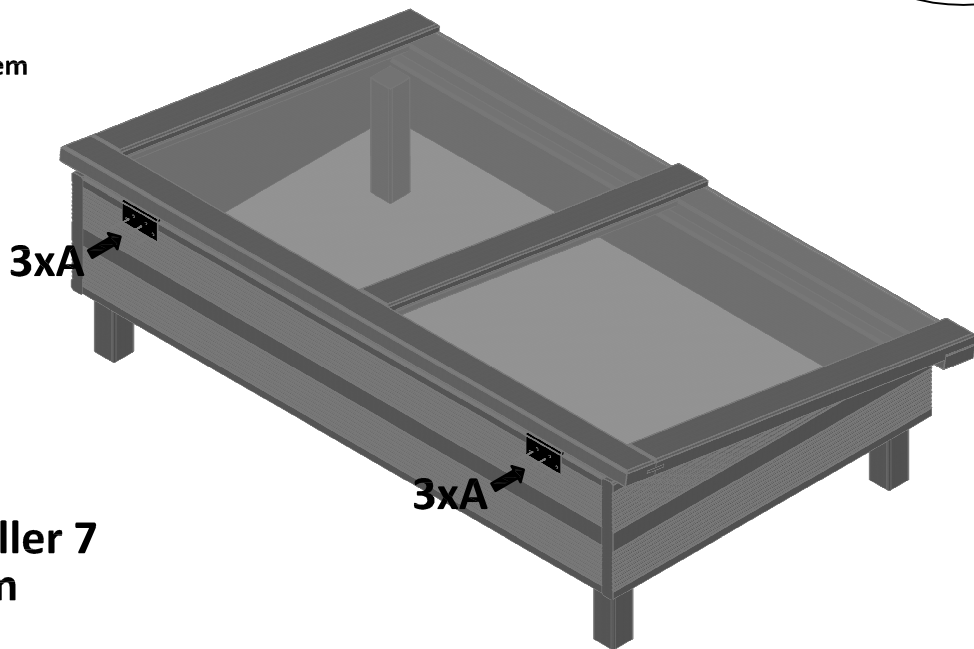



Achtung: Aufsteller 7 links & rechts am Deckel anbringen!


8 

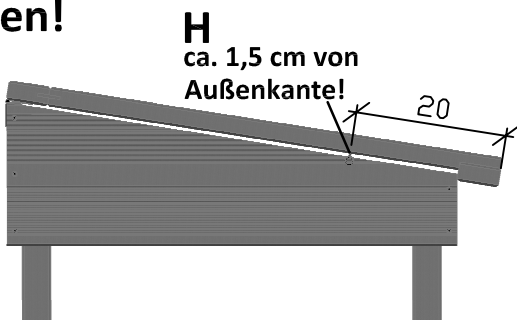

10

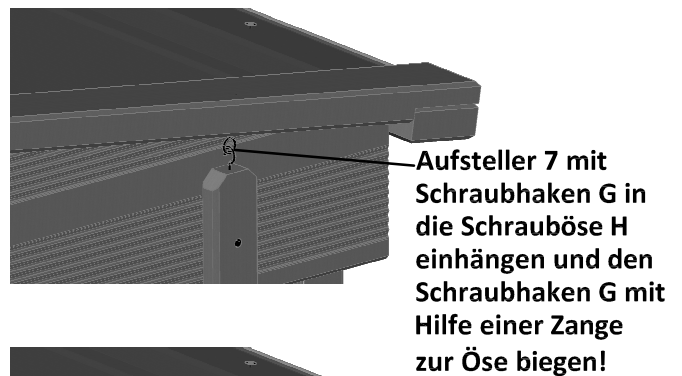

9 

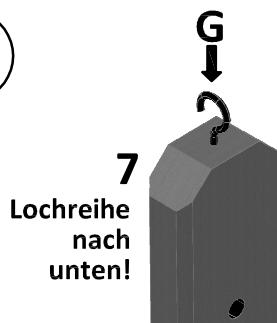

11

