
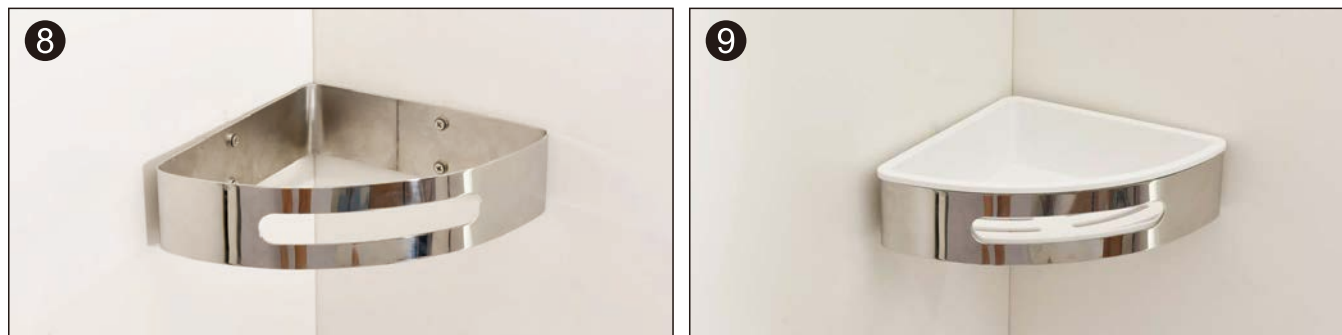
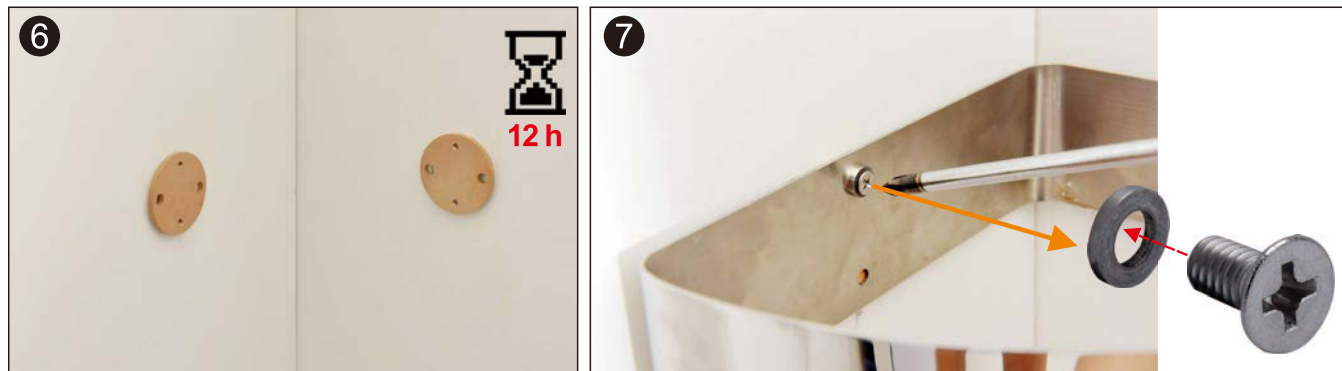
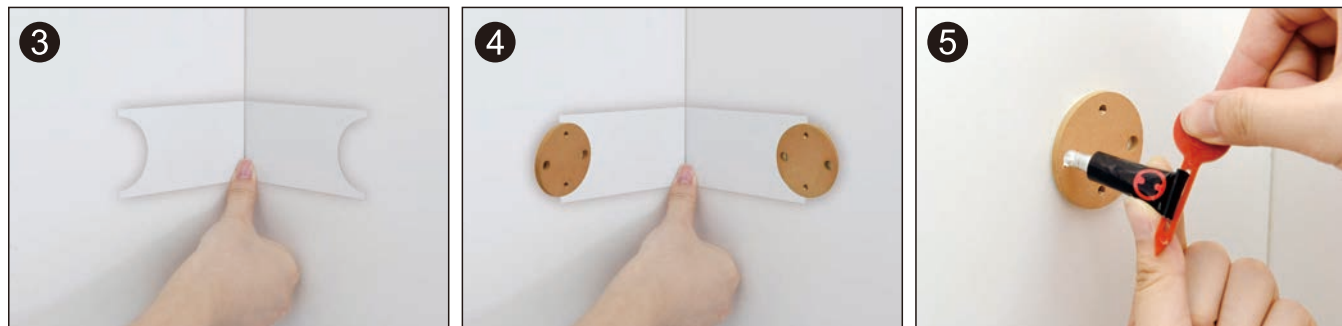
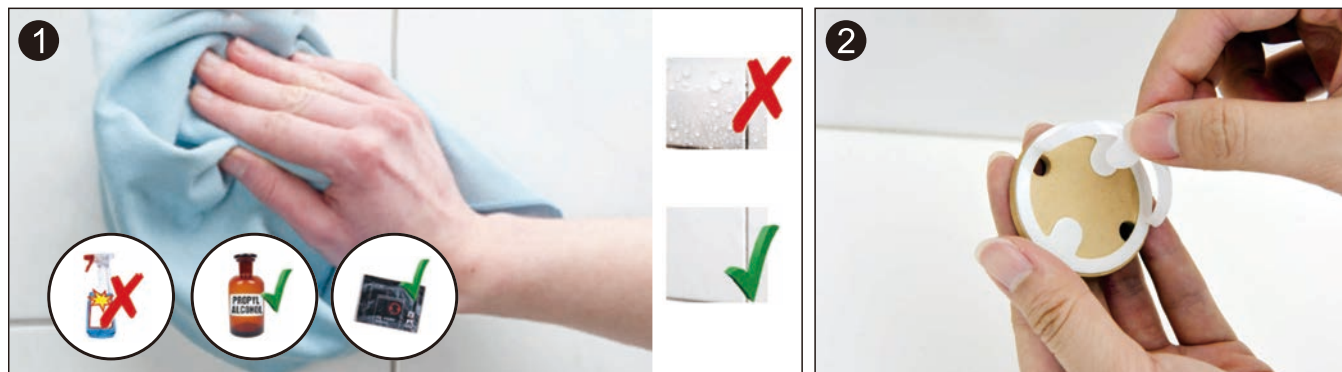


正面

NWB Glue Installation Guide for Item# 6410663, version 1.0

- | | | | | | | | |
|---------------------|-----------------------|---------------------|----------------------|---|---|---------------|---|
| DE optional | IT opzionale | SE valfritt | SK voliteľný |  |  | BK21-2 |  |
| FR optionnel | NL facultatief | CZ volitelný | RO facultativ | | | | |


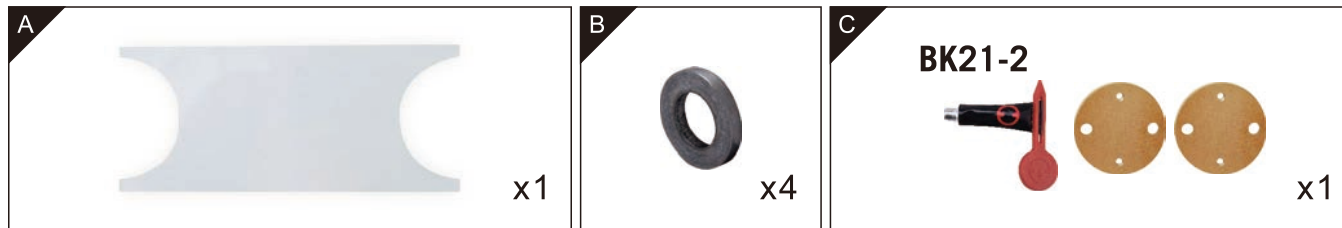


Manufactured for
HORNBACK Baumarkt AG
Hornbachstrasse 11
76879 Bornheim / Germany
www.hornbach.com

背面

- | | | | | | | | |
|---------------------|----------------------|----------------------|--------------------|---|----|---|----|
| DE Inklusive | IT incluso | SE inkluderad | SK zahrnuté |  | X4 |  | X4 |
| FR Compris | NL inbegrepen | CZ Zahrnuta | RO Inclus | | | | |

(D4mm-7.2mm) x26.7mm D6mm x 28.2mm

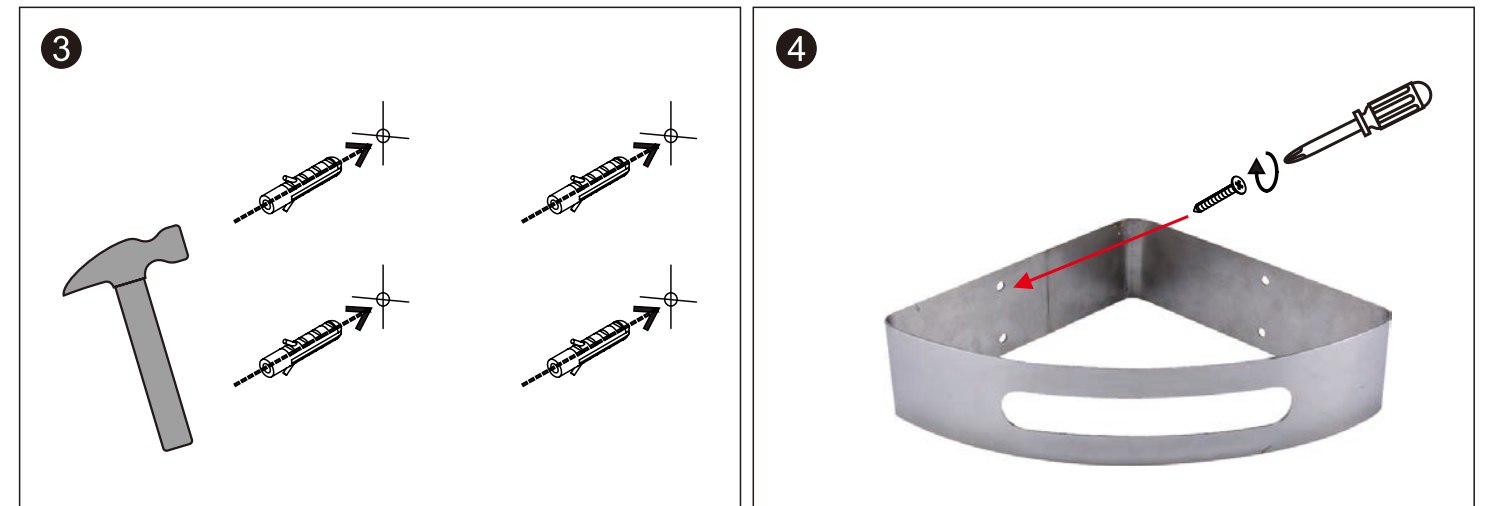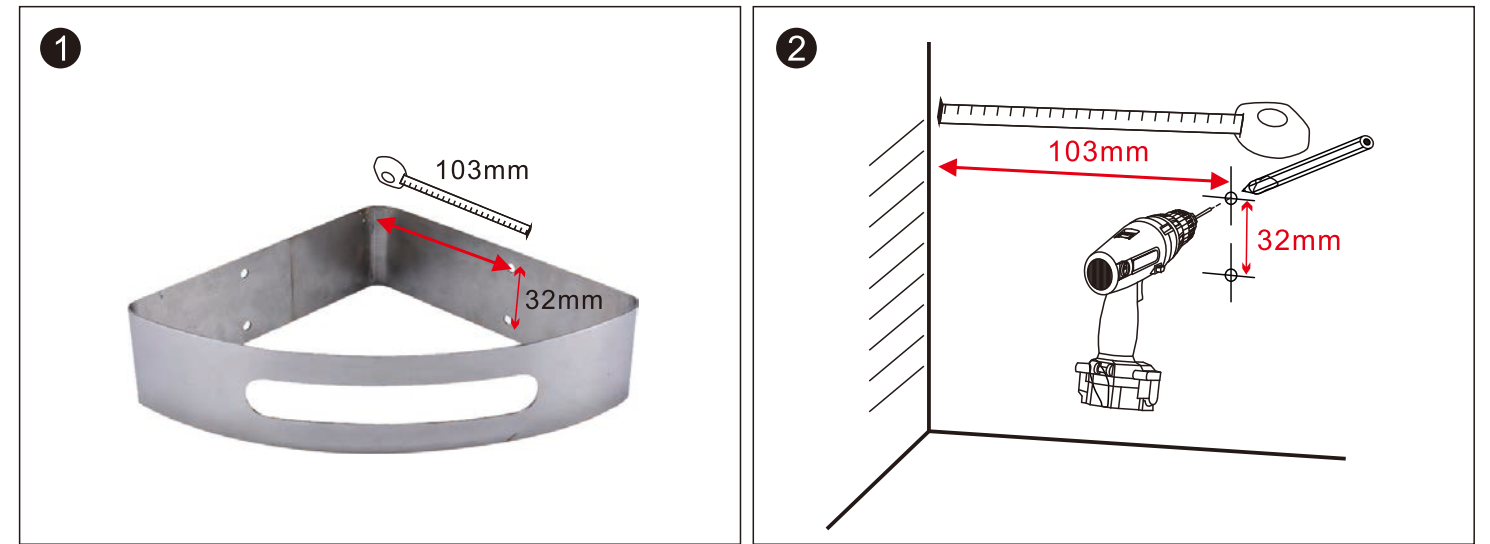

Manufactured for
HORNBACK Baumarkt AG
Hornbachstrasse 11
76879 Bornheim / Germany
www.hornbach.com

290.0 mm

210.0 mm