




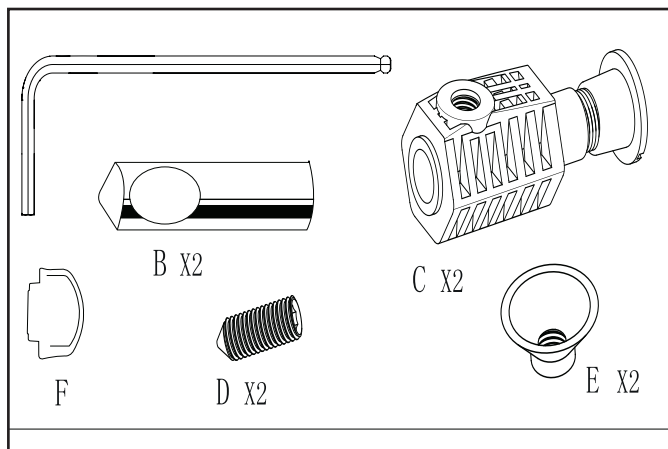


1. The following parts are included: A, B, C, D, E, and F (see illustration).

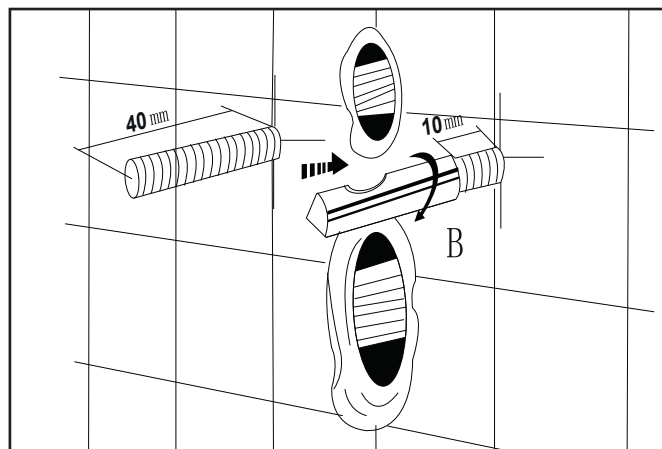


2. Insert **part B** onto the screw rod, ensuring the screw notch is facing **vertically upward**.

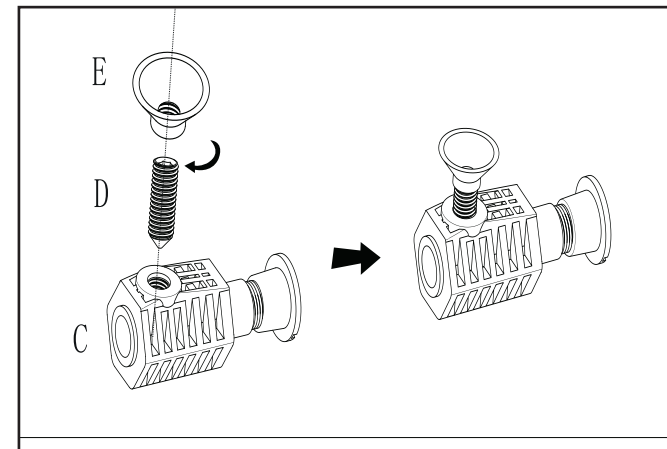


3. Insert **part D** into the mounting hole, with the threaded hole positioned **vertically upward**.

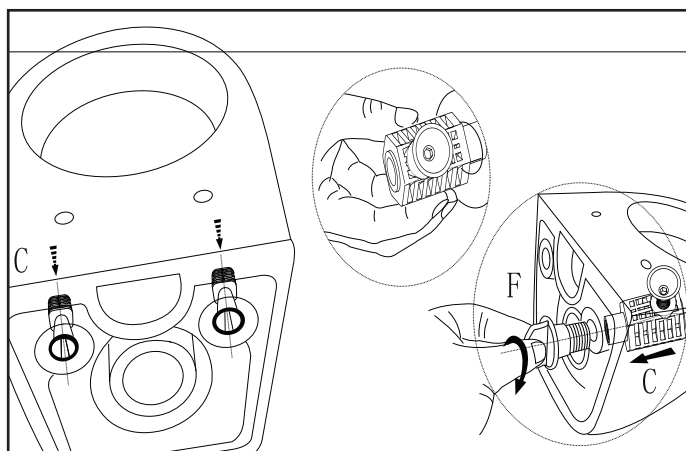

4. Insert **part B** into part C, then position part D directly above **part C**.

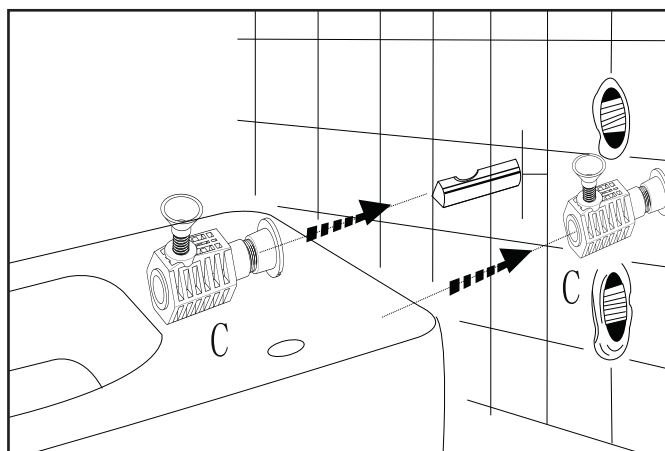

5. Fasten **part D** into the threaded hole of **part C**, and secure it to the mounting hole using the included Allen key.

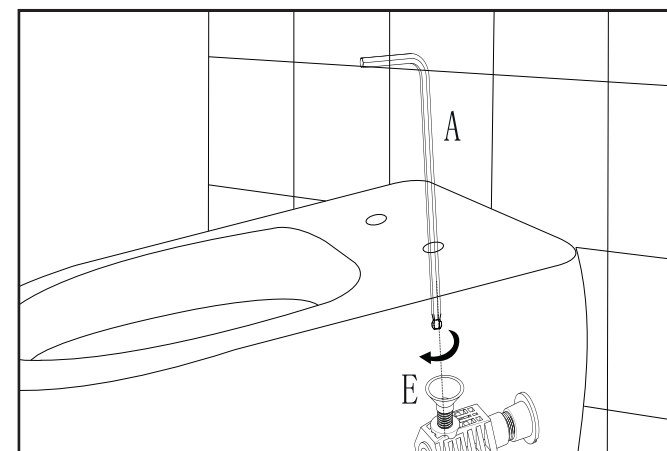

6. The installation is now complete. **Please sit down carefully to test stability.**