



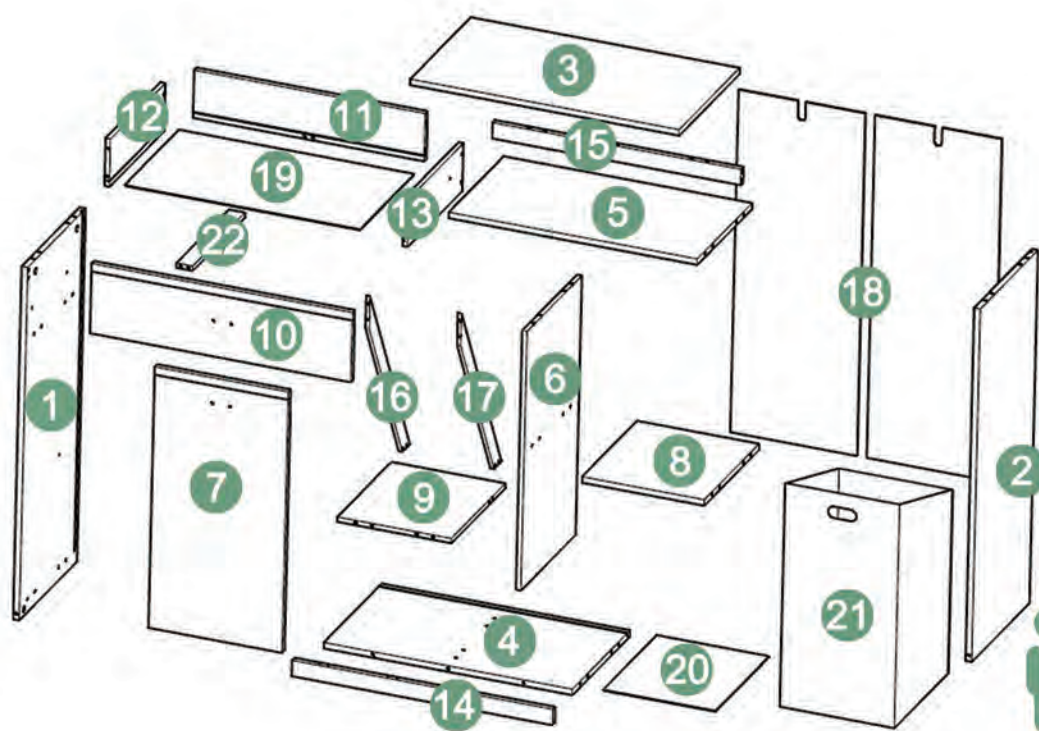


2022-01

BZR66**SoBuy®**

TOOLS:

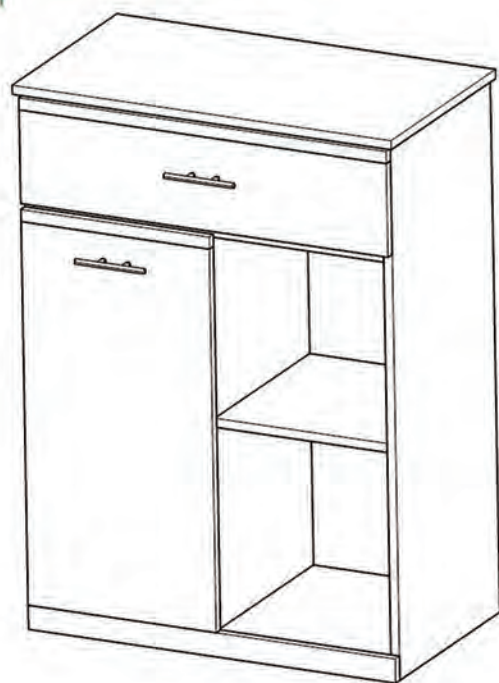


UNIT:MM

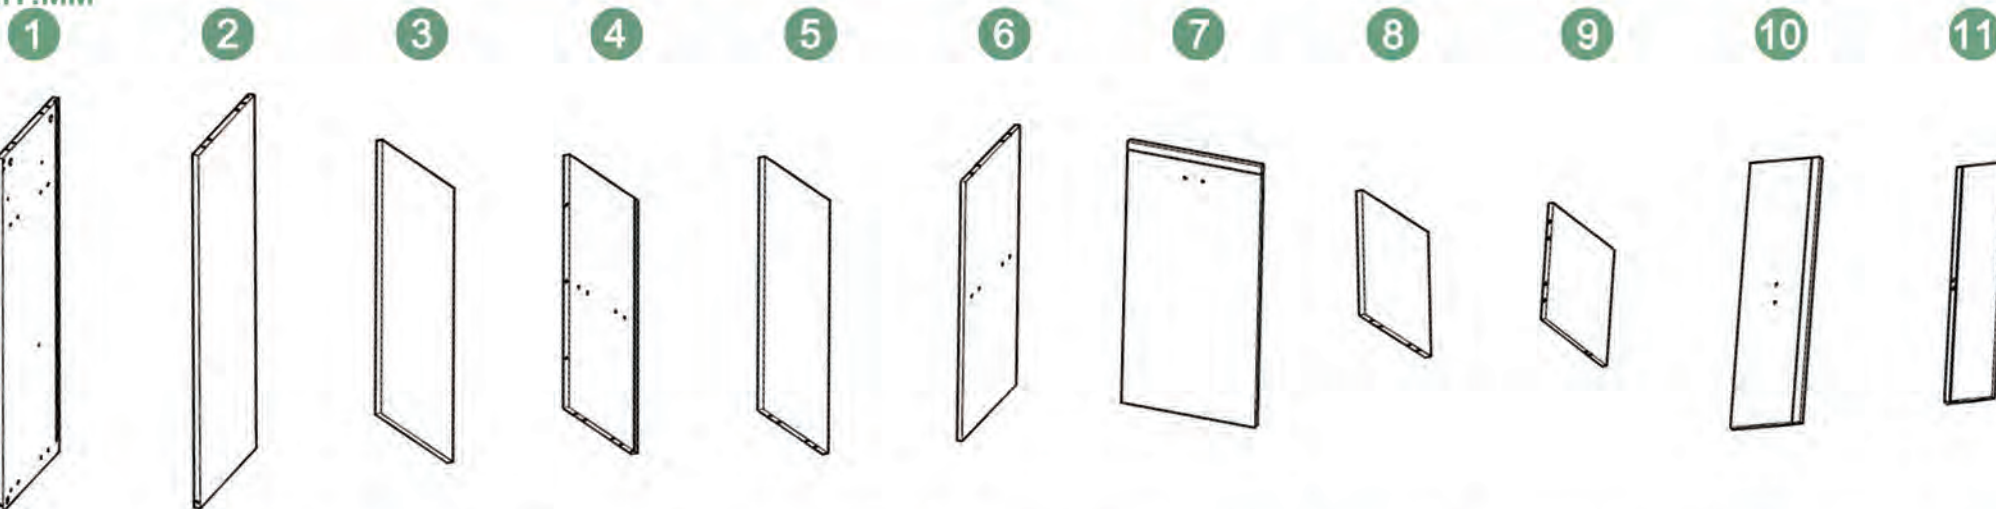


885*353*15 885*353*15 660*370*15 610*353*12 610*335*12 650*335*12 650*328*15 335*300*12 330*280*12 640*175*15 567*120*12

UNIT:MM

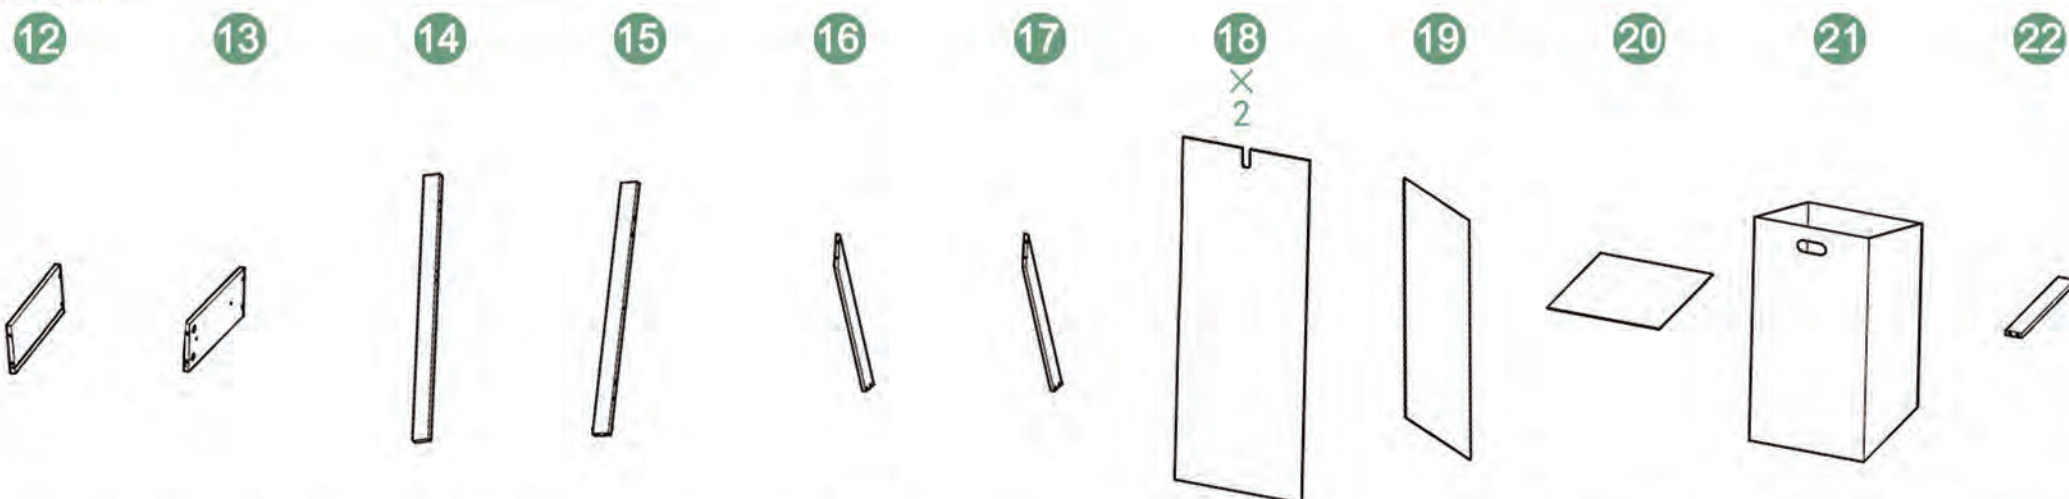

335*120*12 335*120*12 640*40*15 610*40*15 530*45*9 530*45*9 858*310*5 577*330*5 325*275*3 330*280*560 320*40*12



UNIT:MM

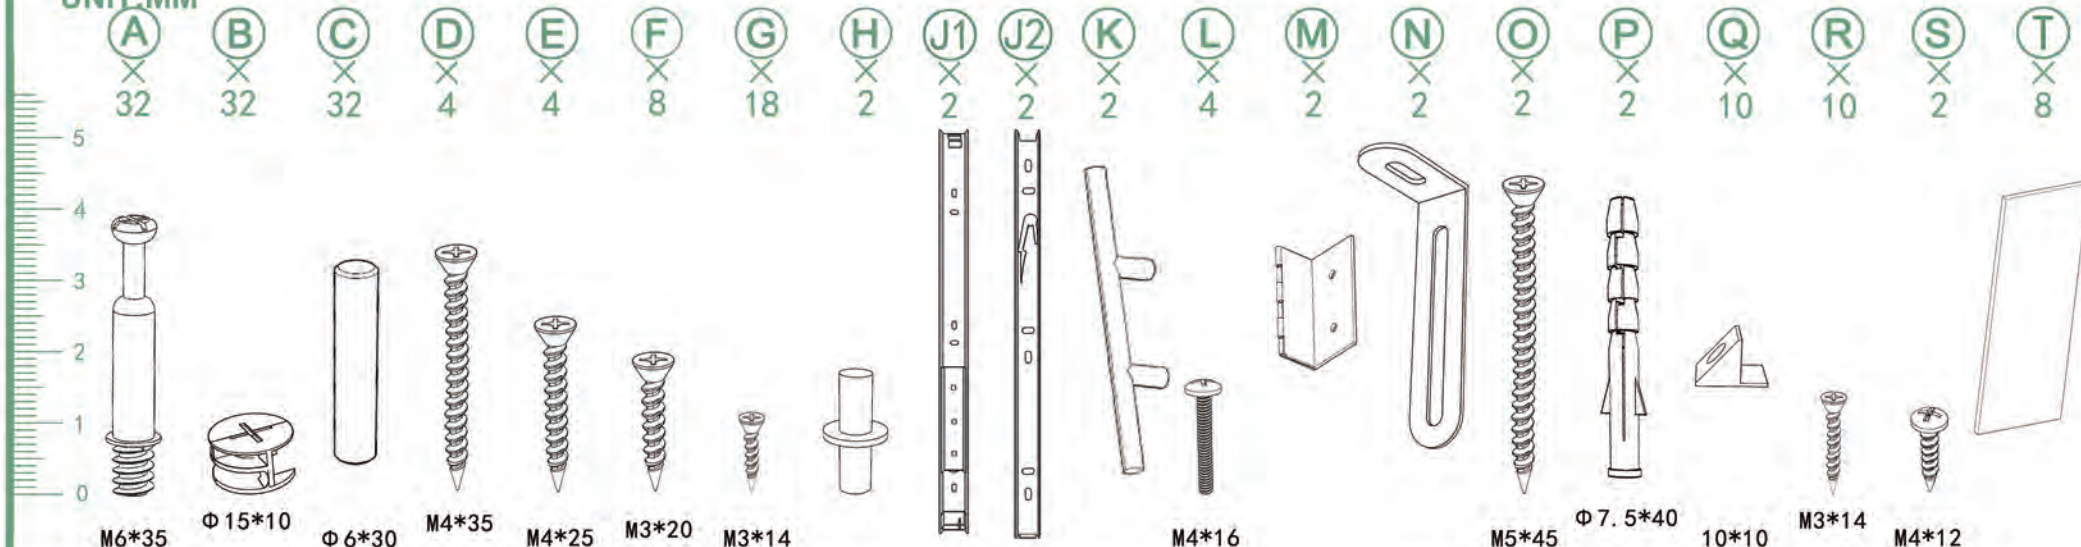

Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:01.2022

BOLT INSTALLATION AS BELOW:

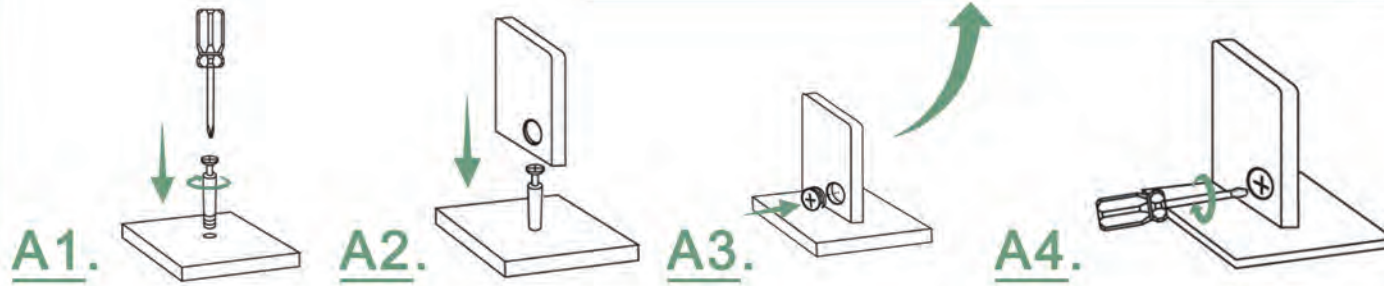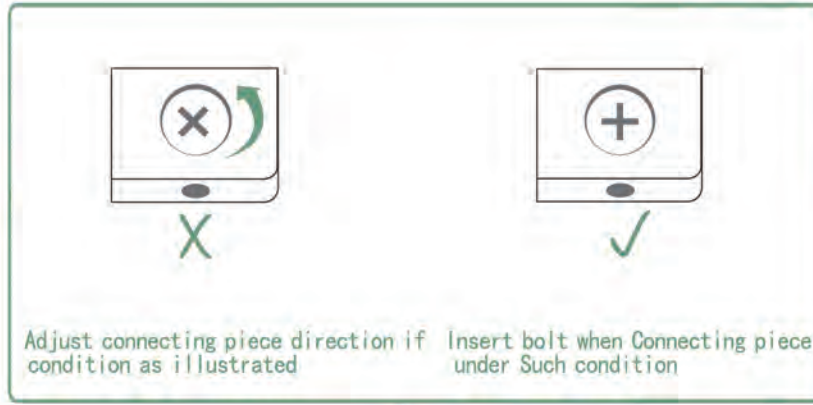


BACKPLATE BUCKLE INSTALLATION AS BELOW:




B1.


B2.

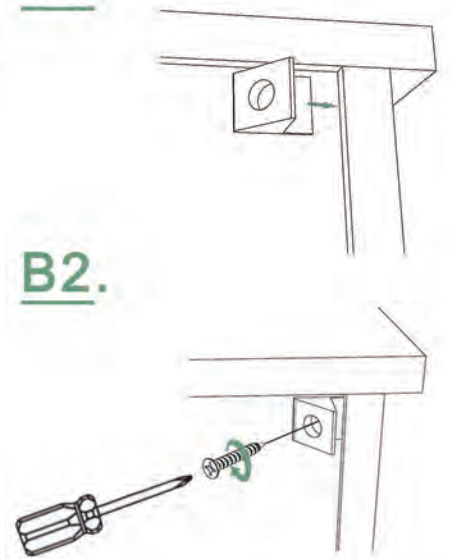


1.

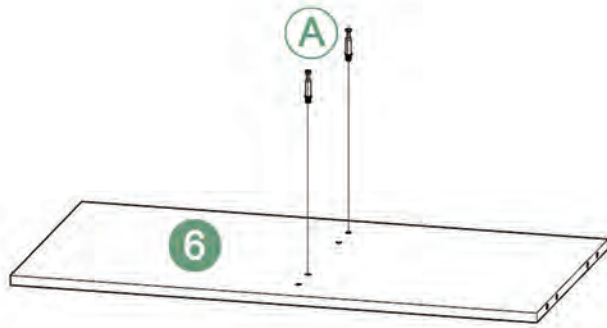


2.

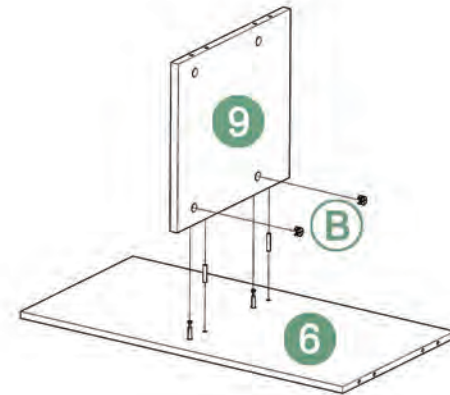


3.

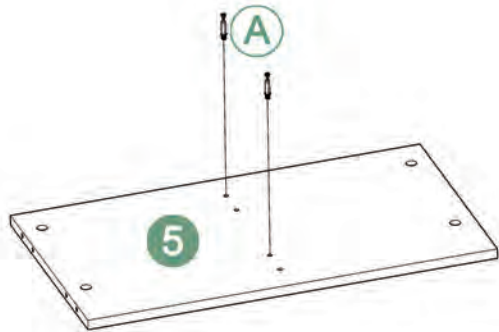


4.

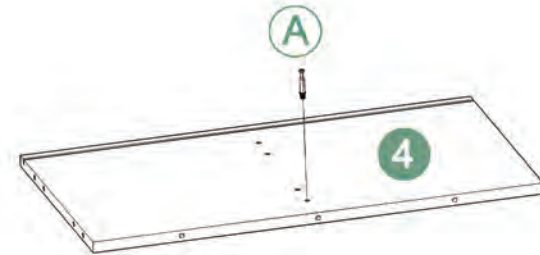


5.

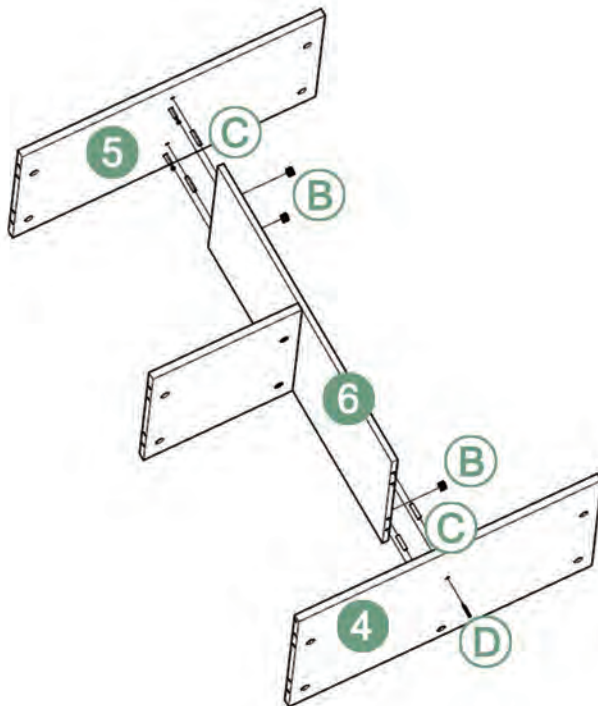


6.

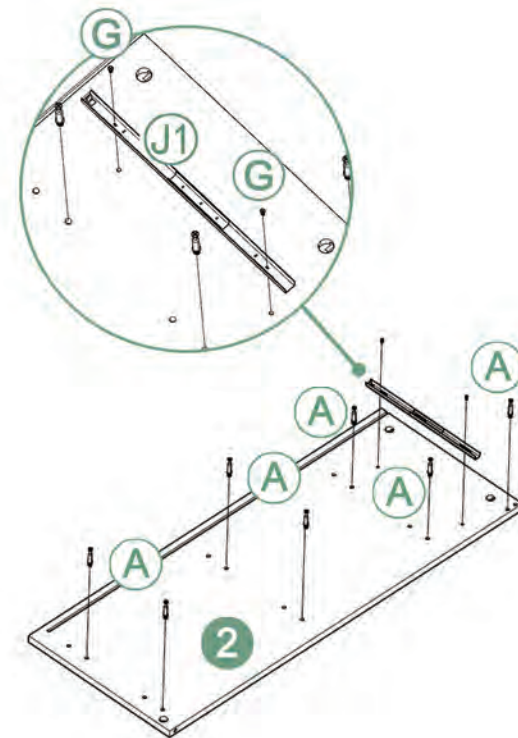


7.

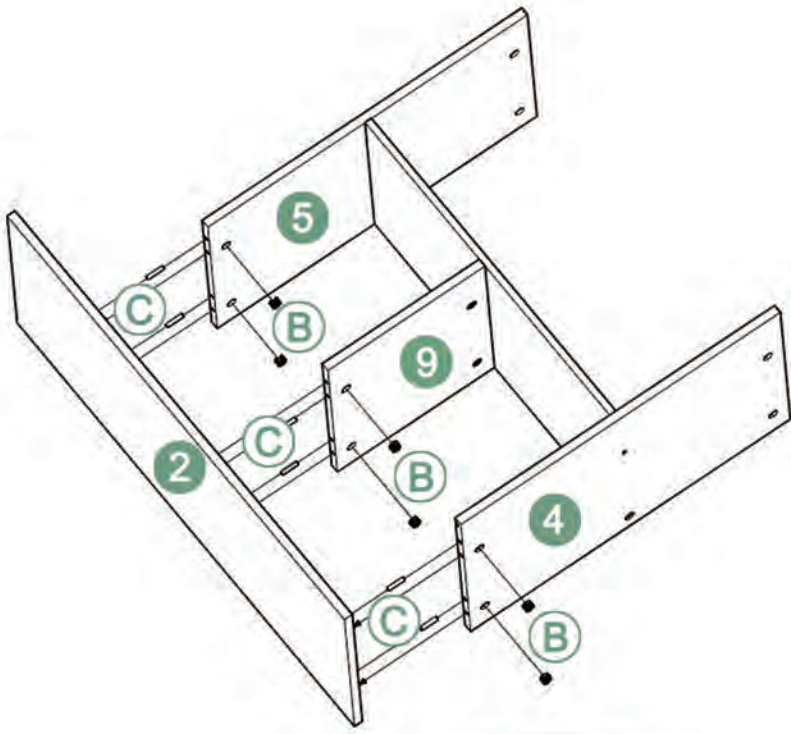


8.

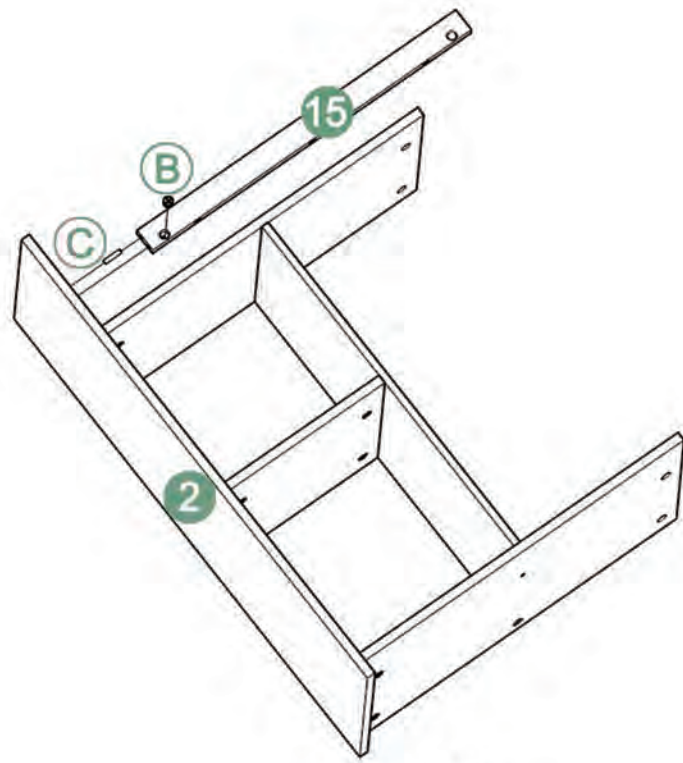


9.

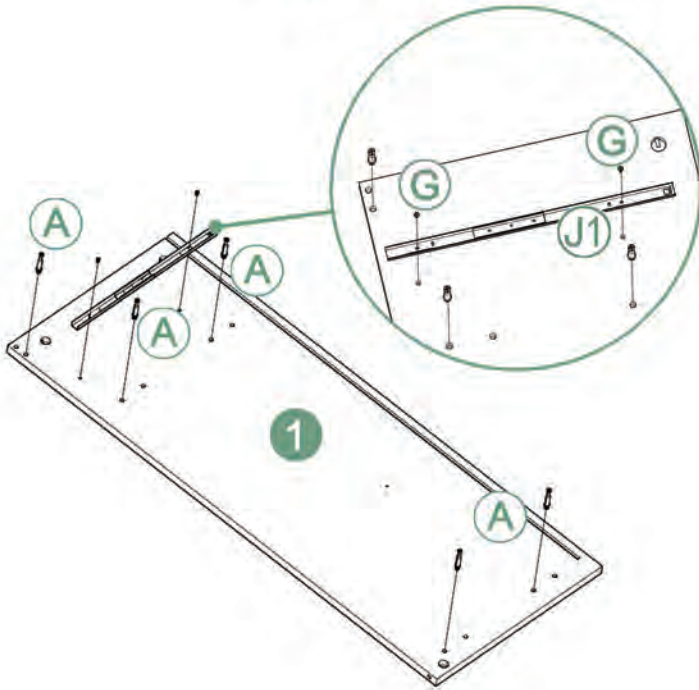


10.

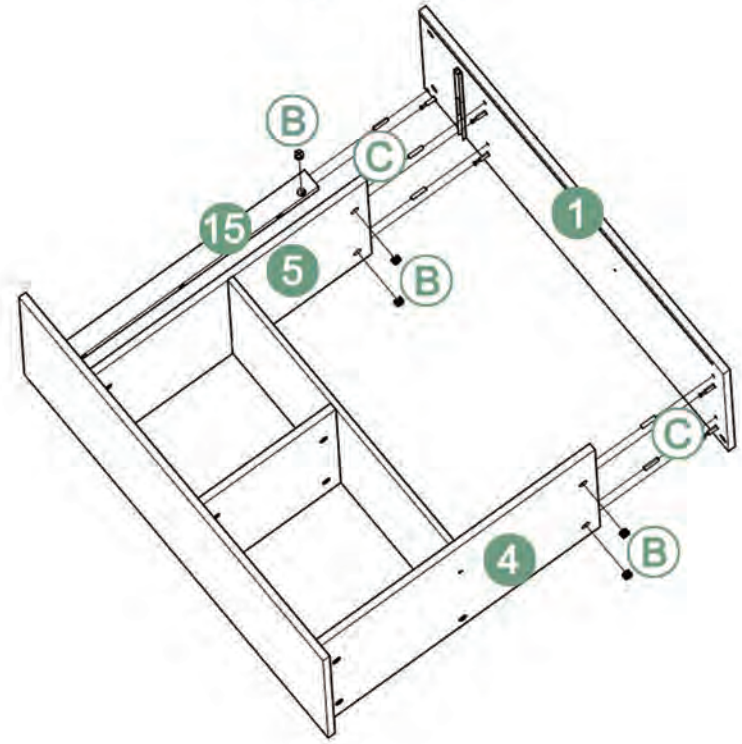


11.

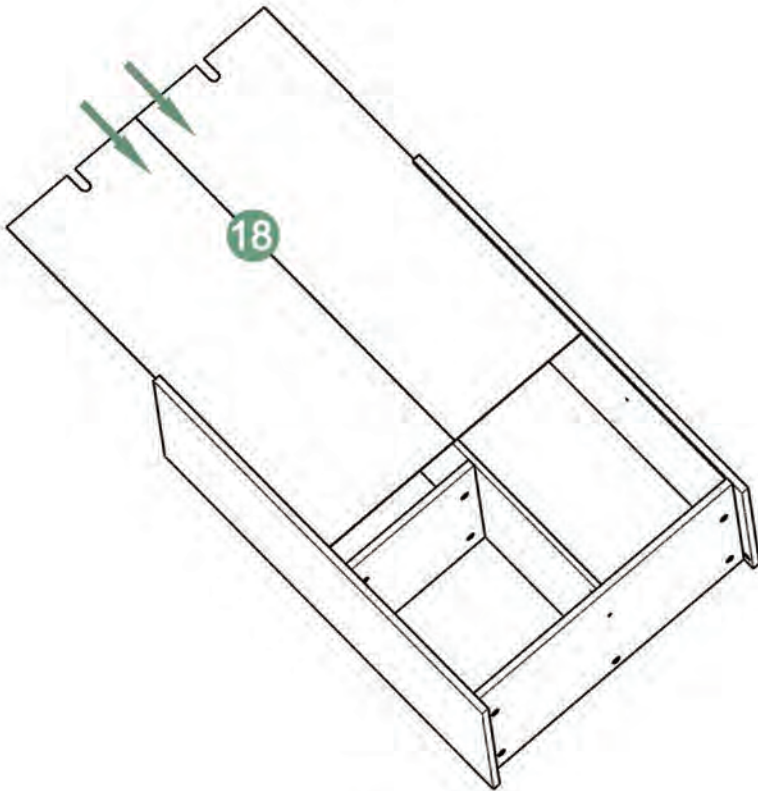


12.

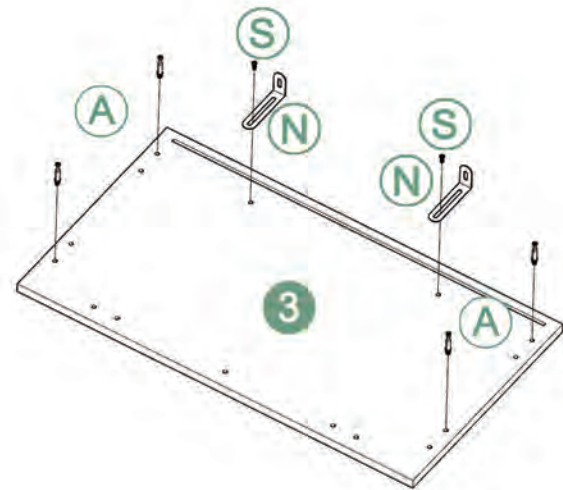


13.

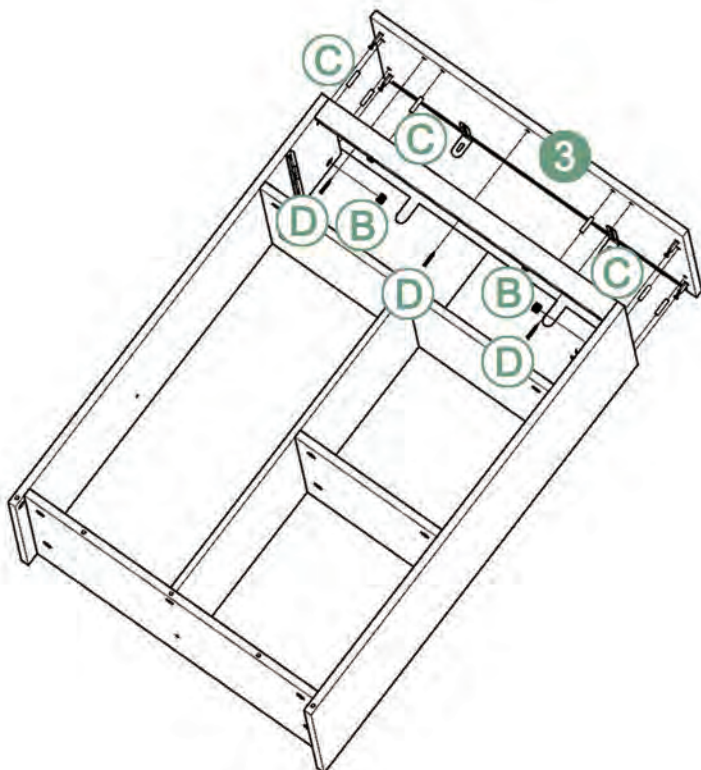

14.

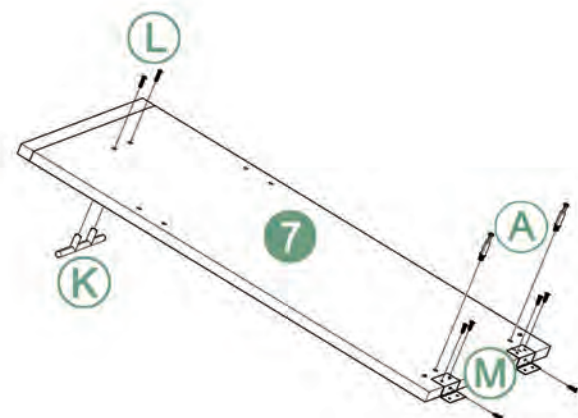


15.

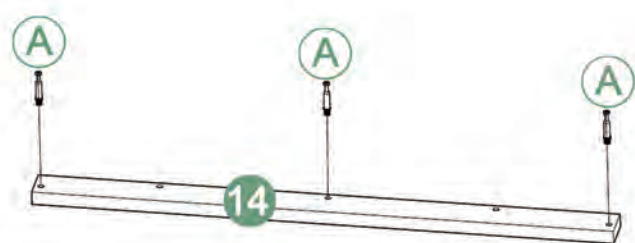


16.


SoBuy®

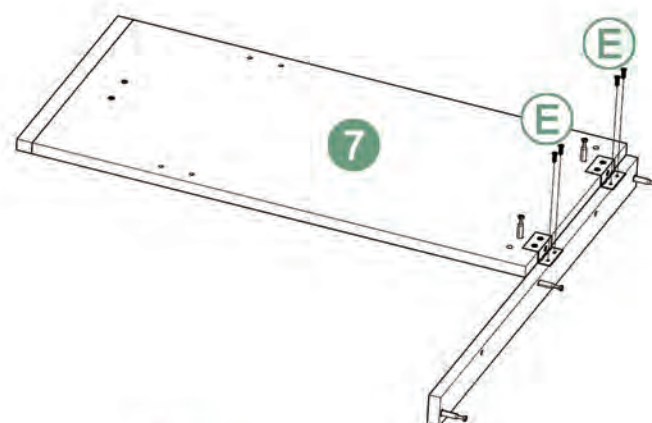


17.

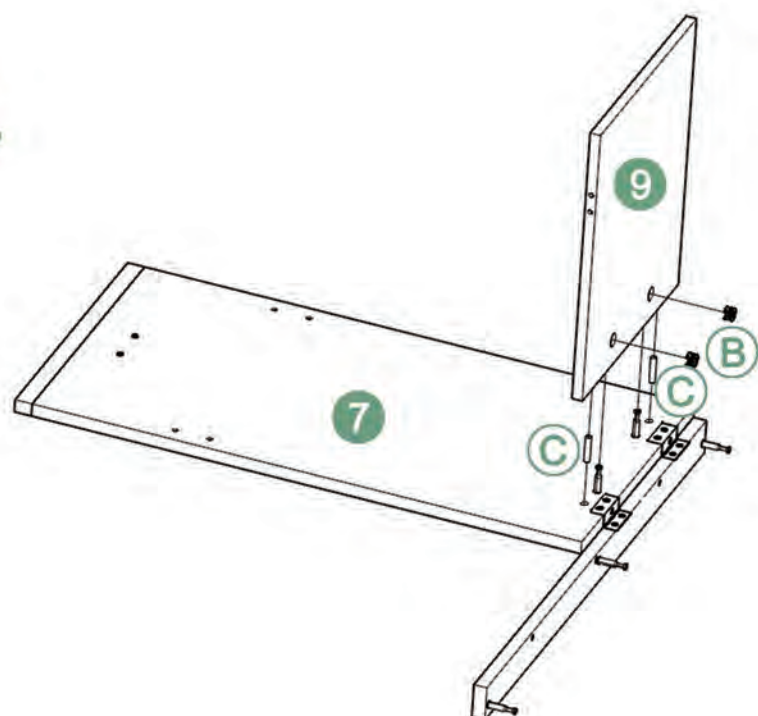


18.

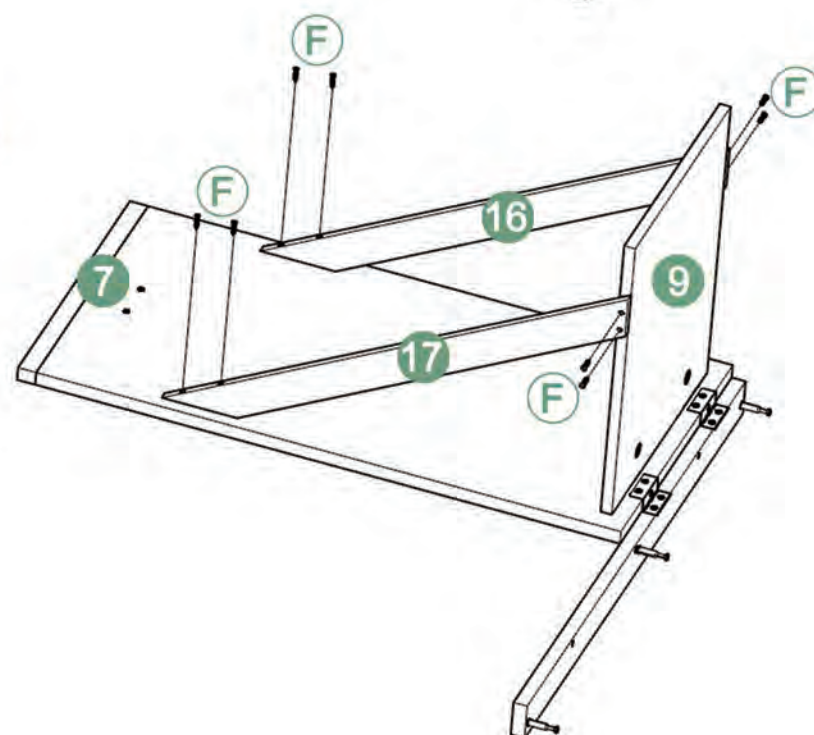


19.

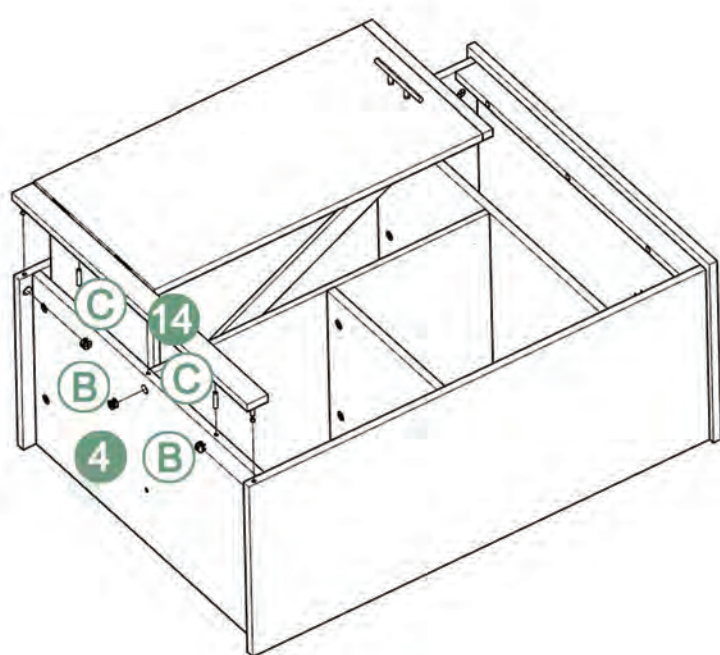


20.

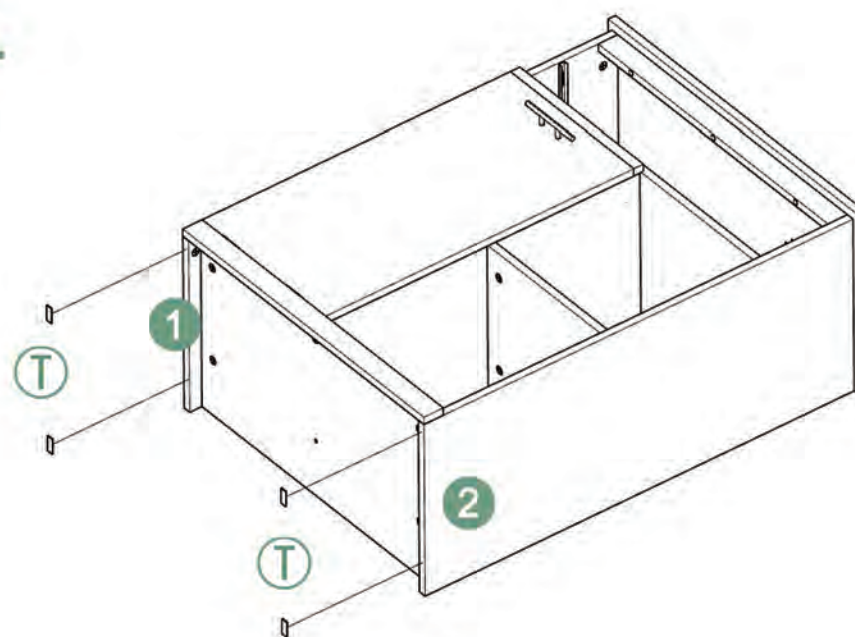


21.

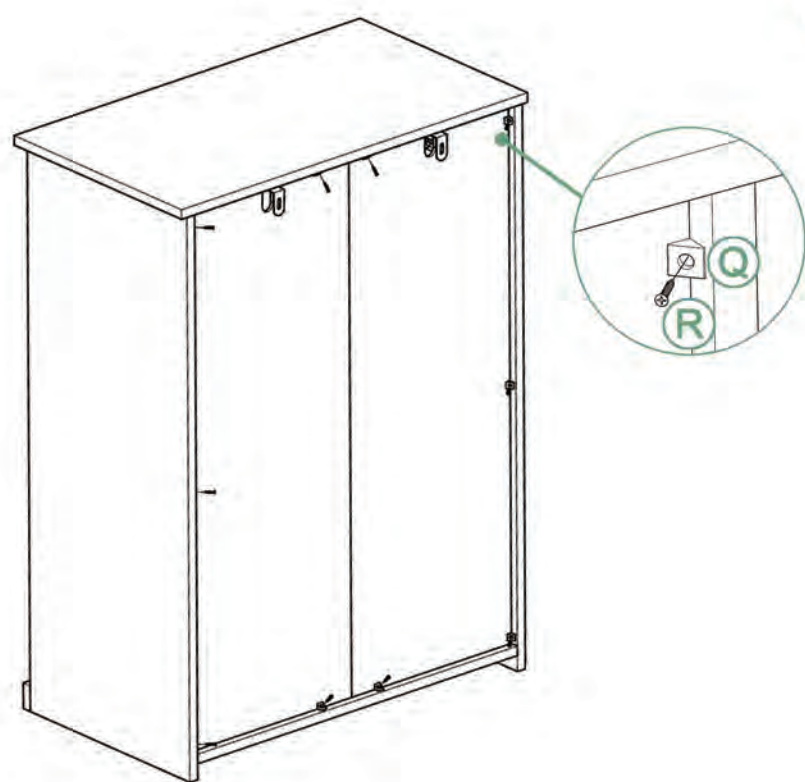


22.

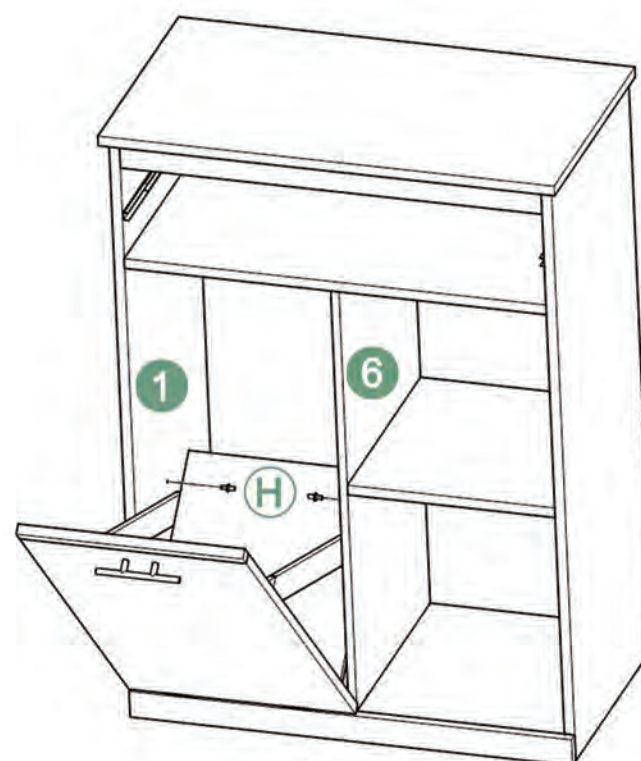

23.

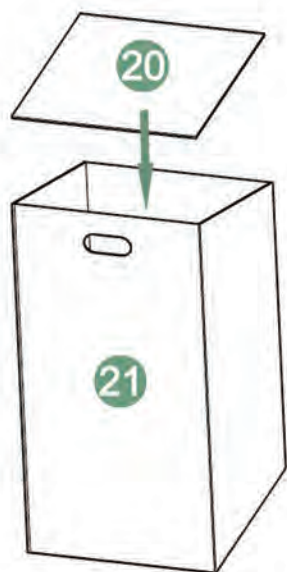


24.

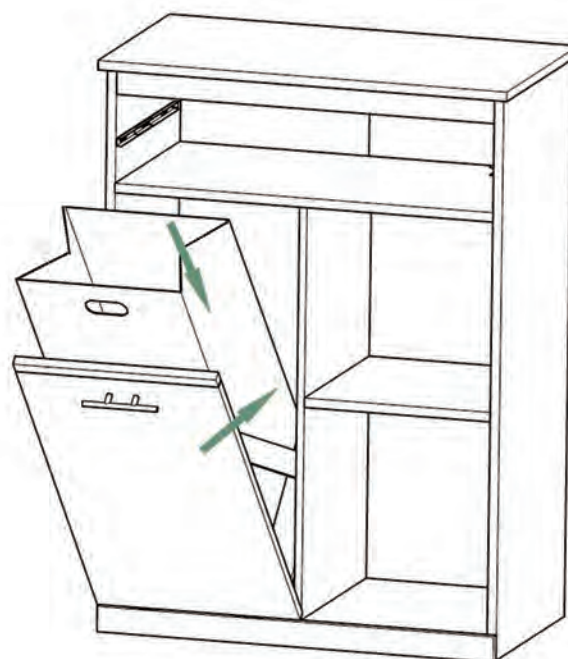


SoBuy®


25.

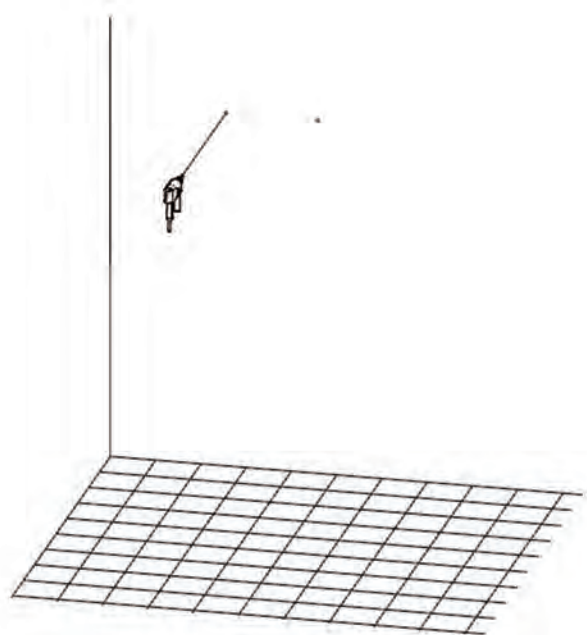


26.

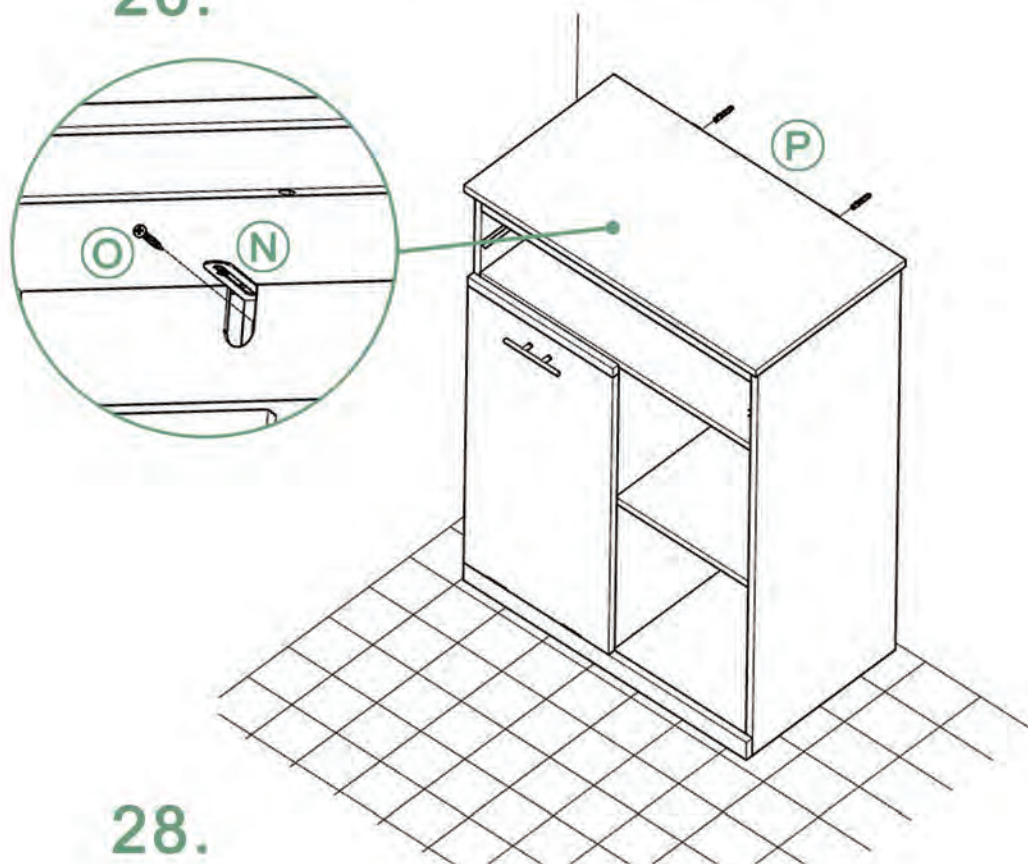


27.

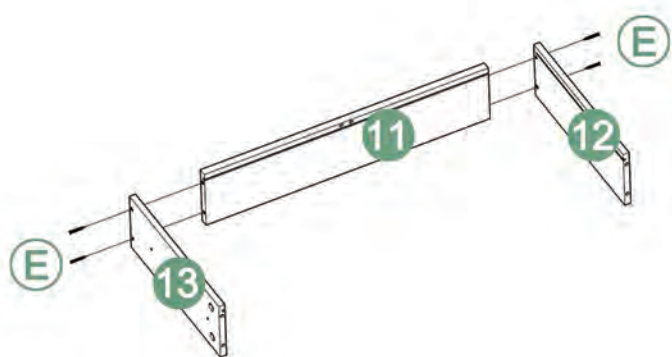


28.

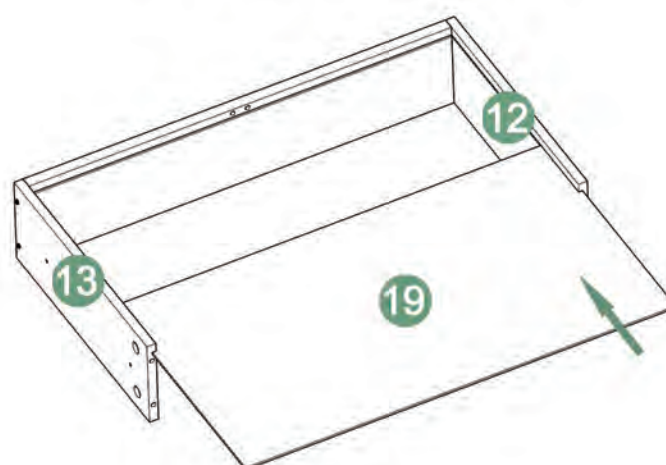


29.

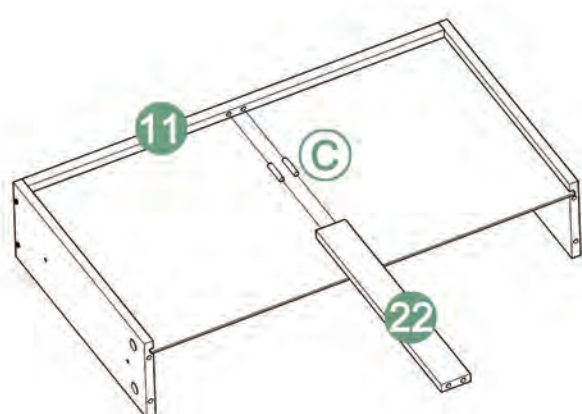


30.

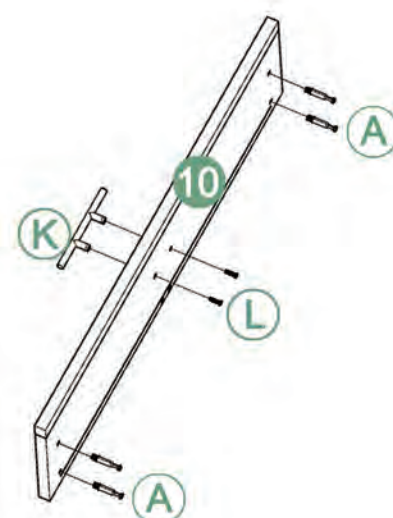

31.

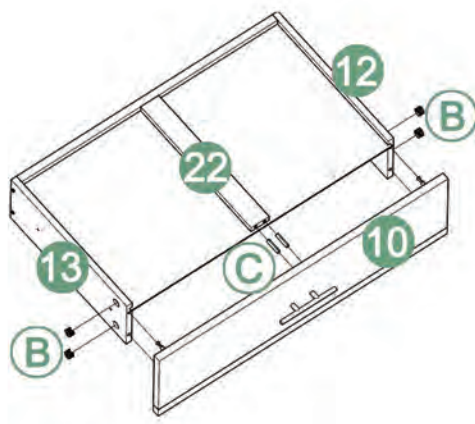

32.

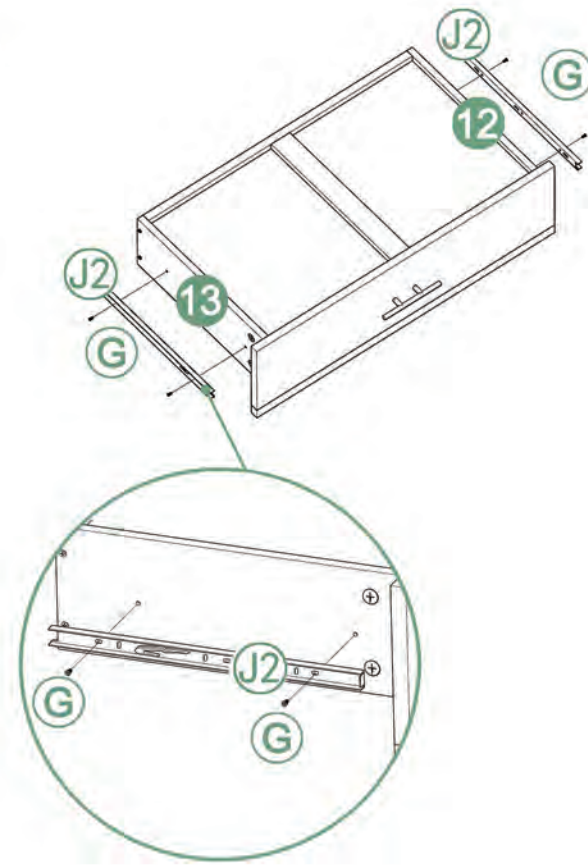

33.

