






FKW122




SoBuy



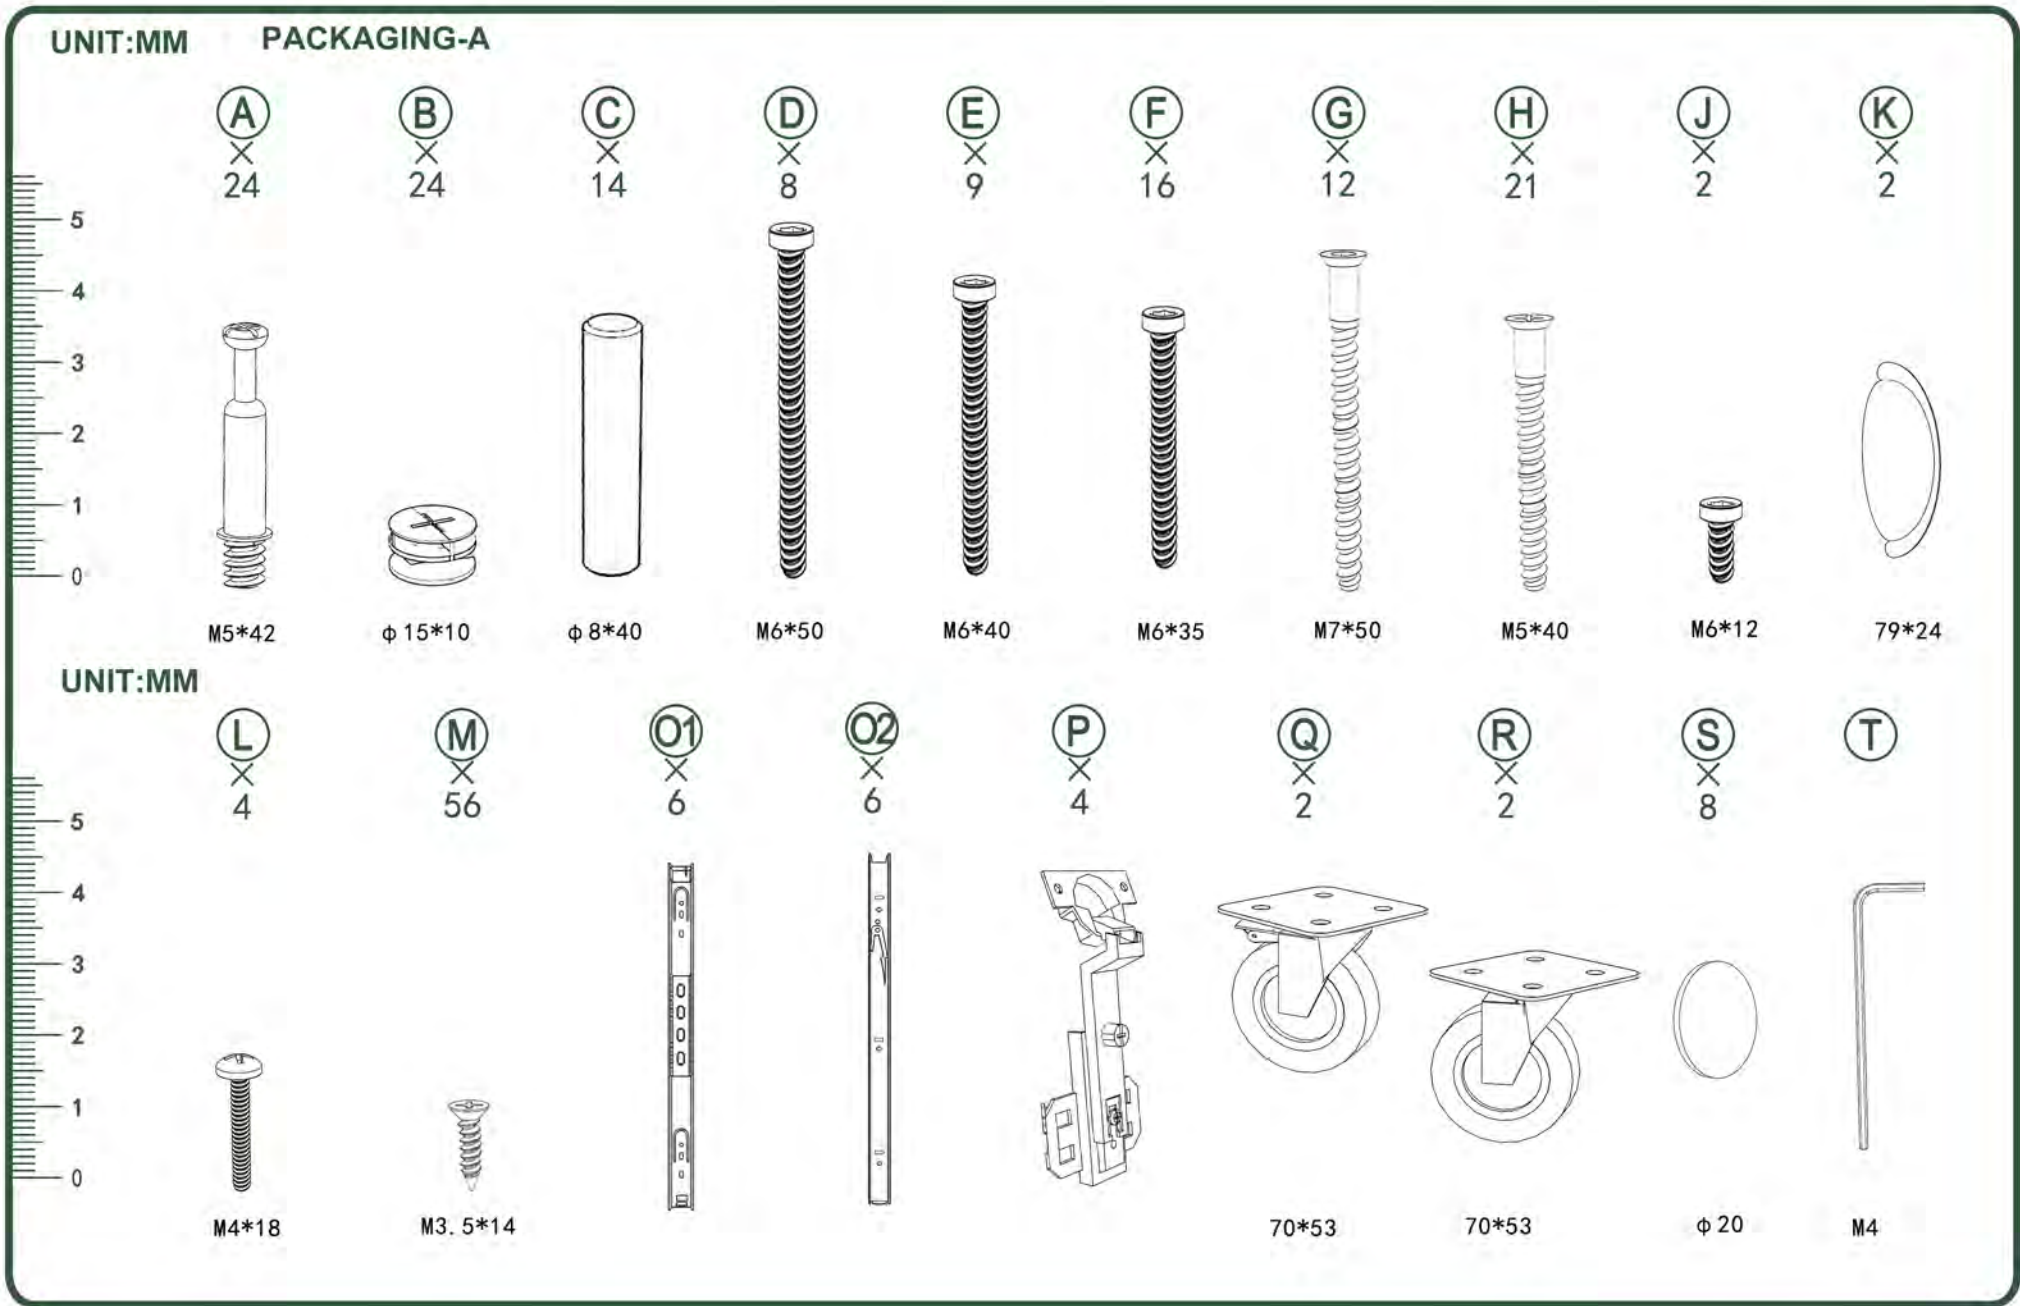


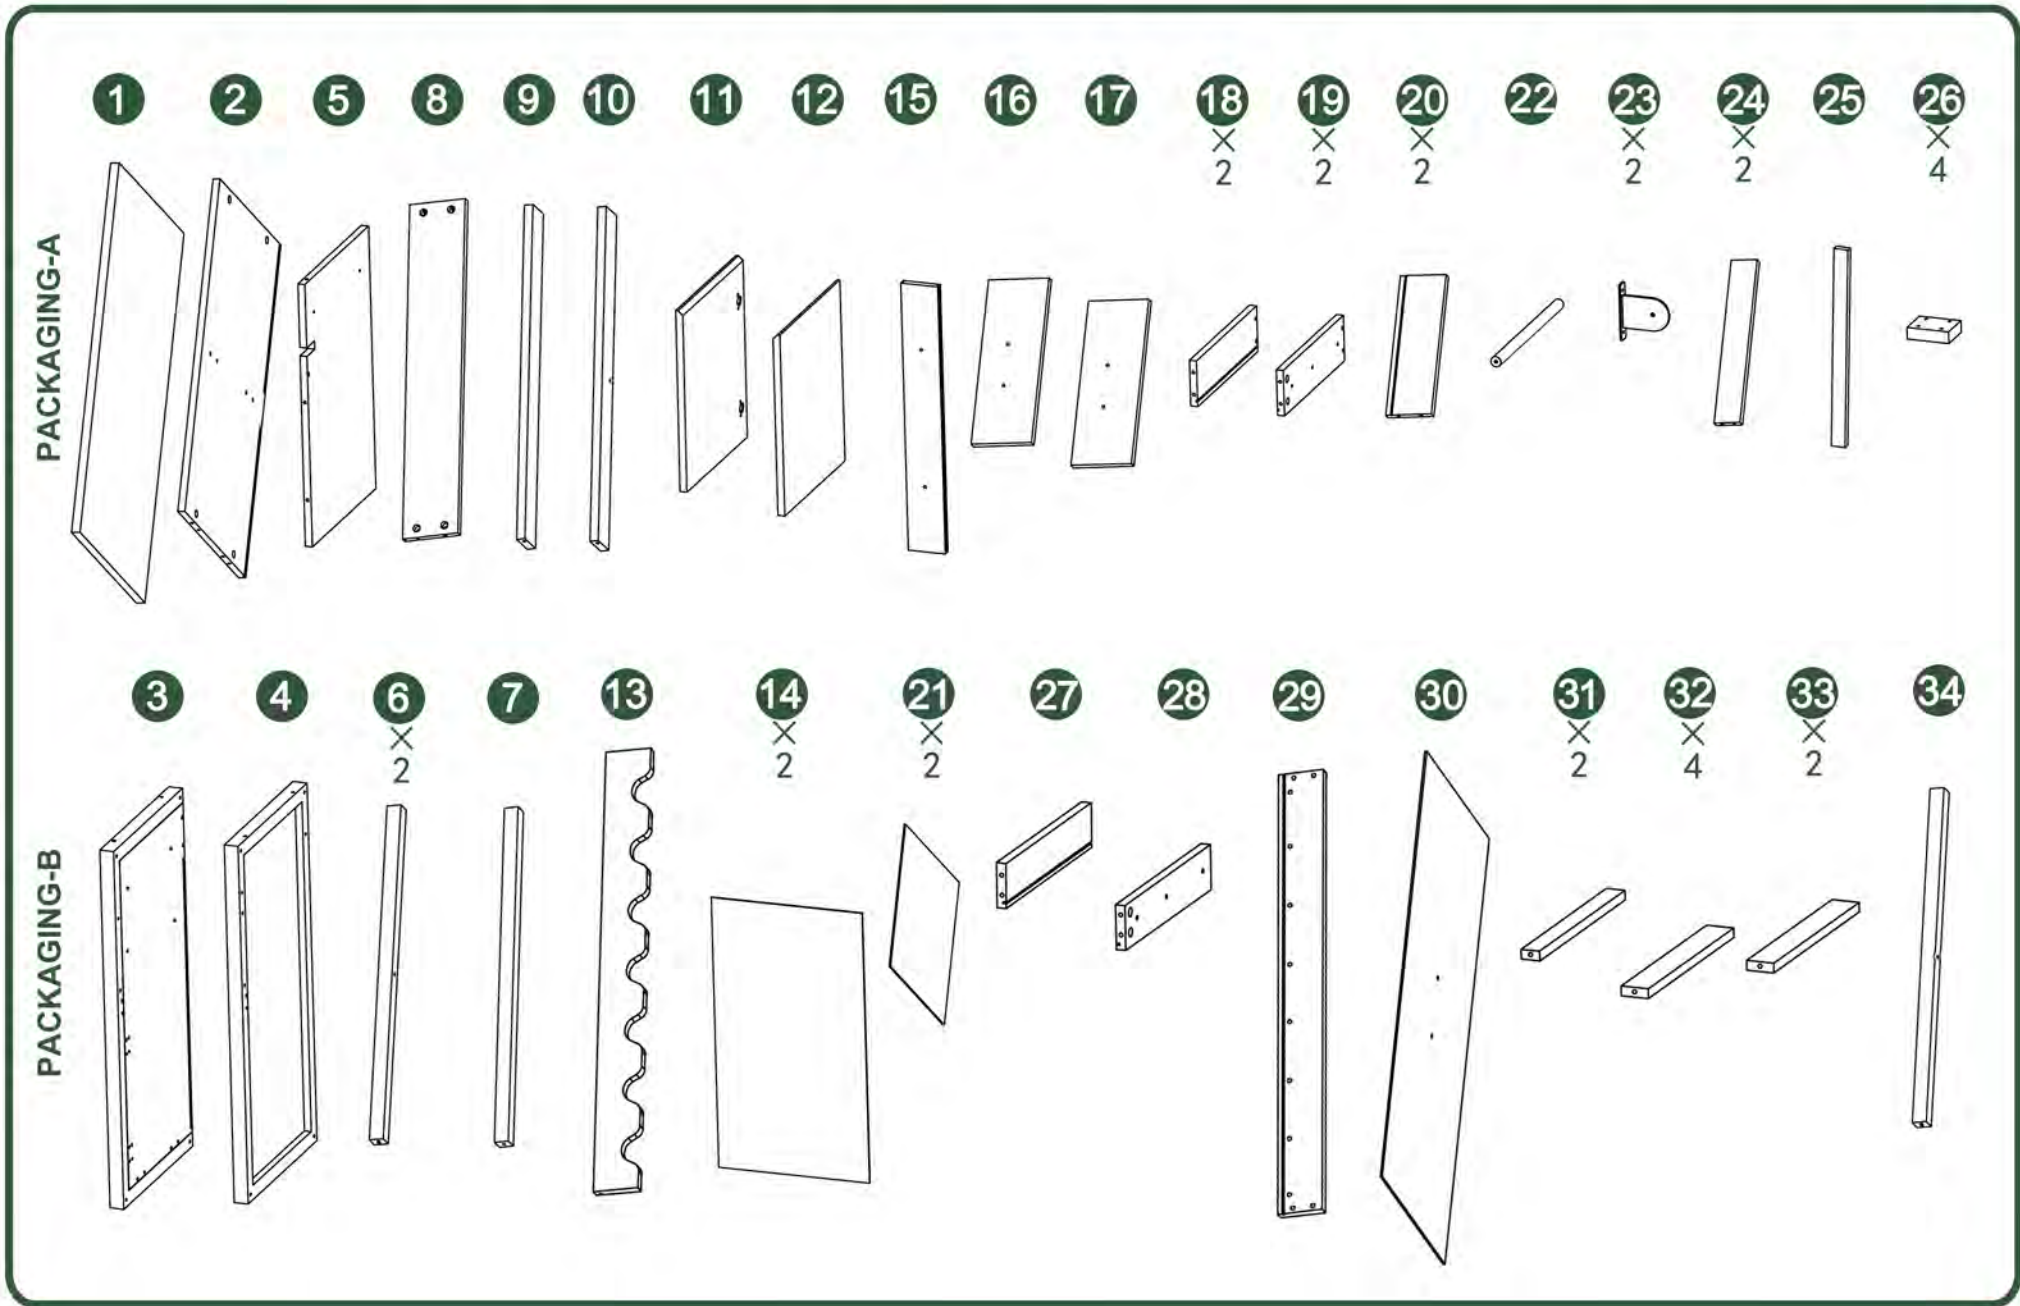

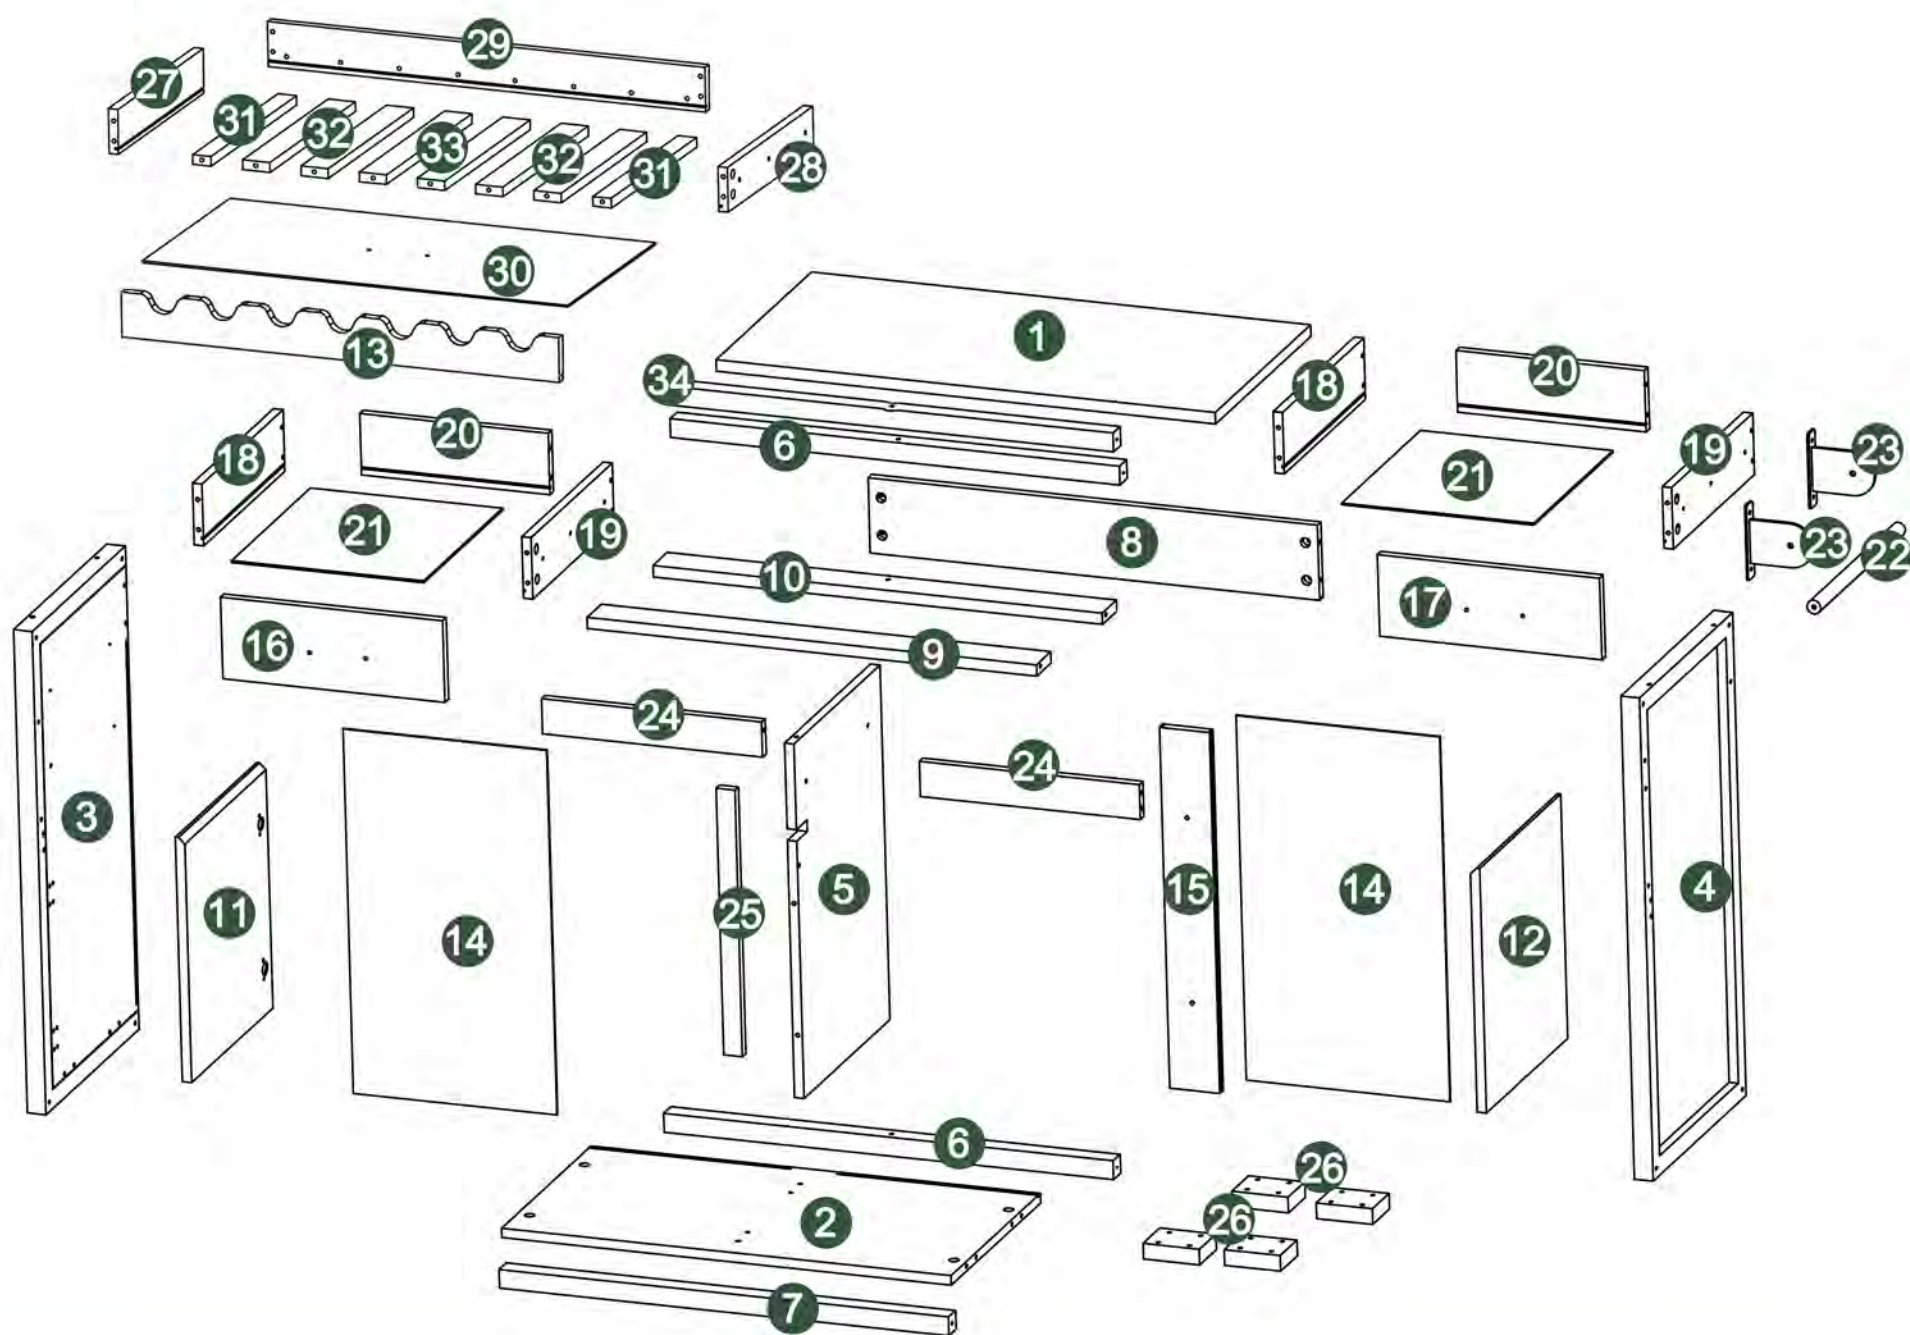


BOLT INSTALLATION AS BELOW:

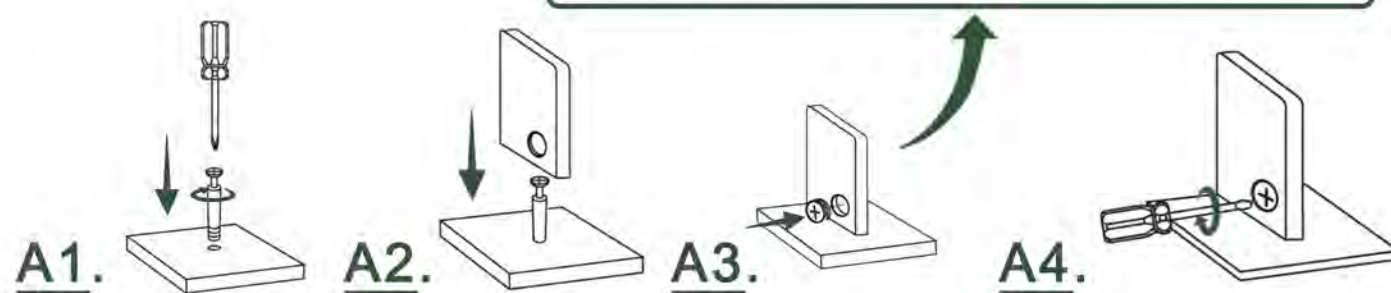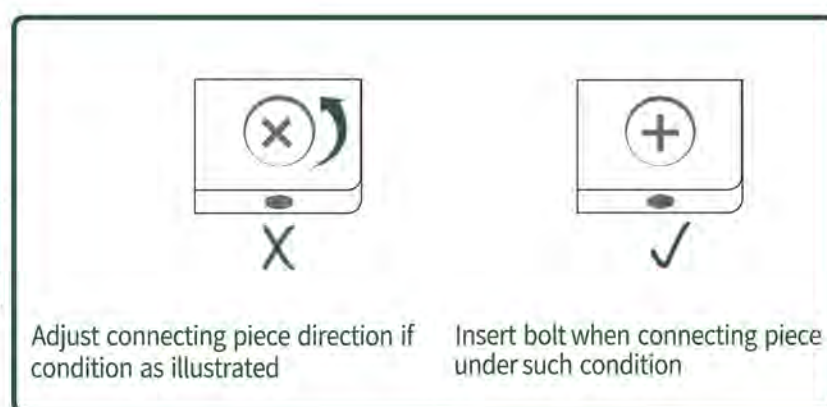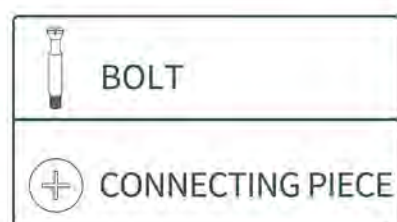


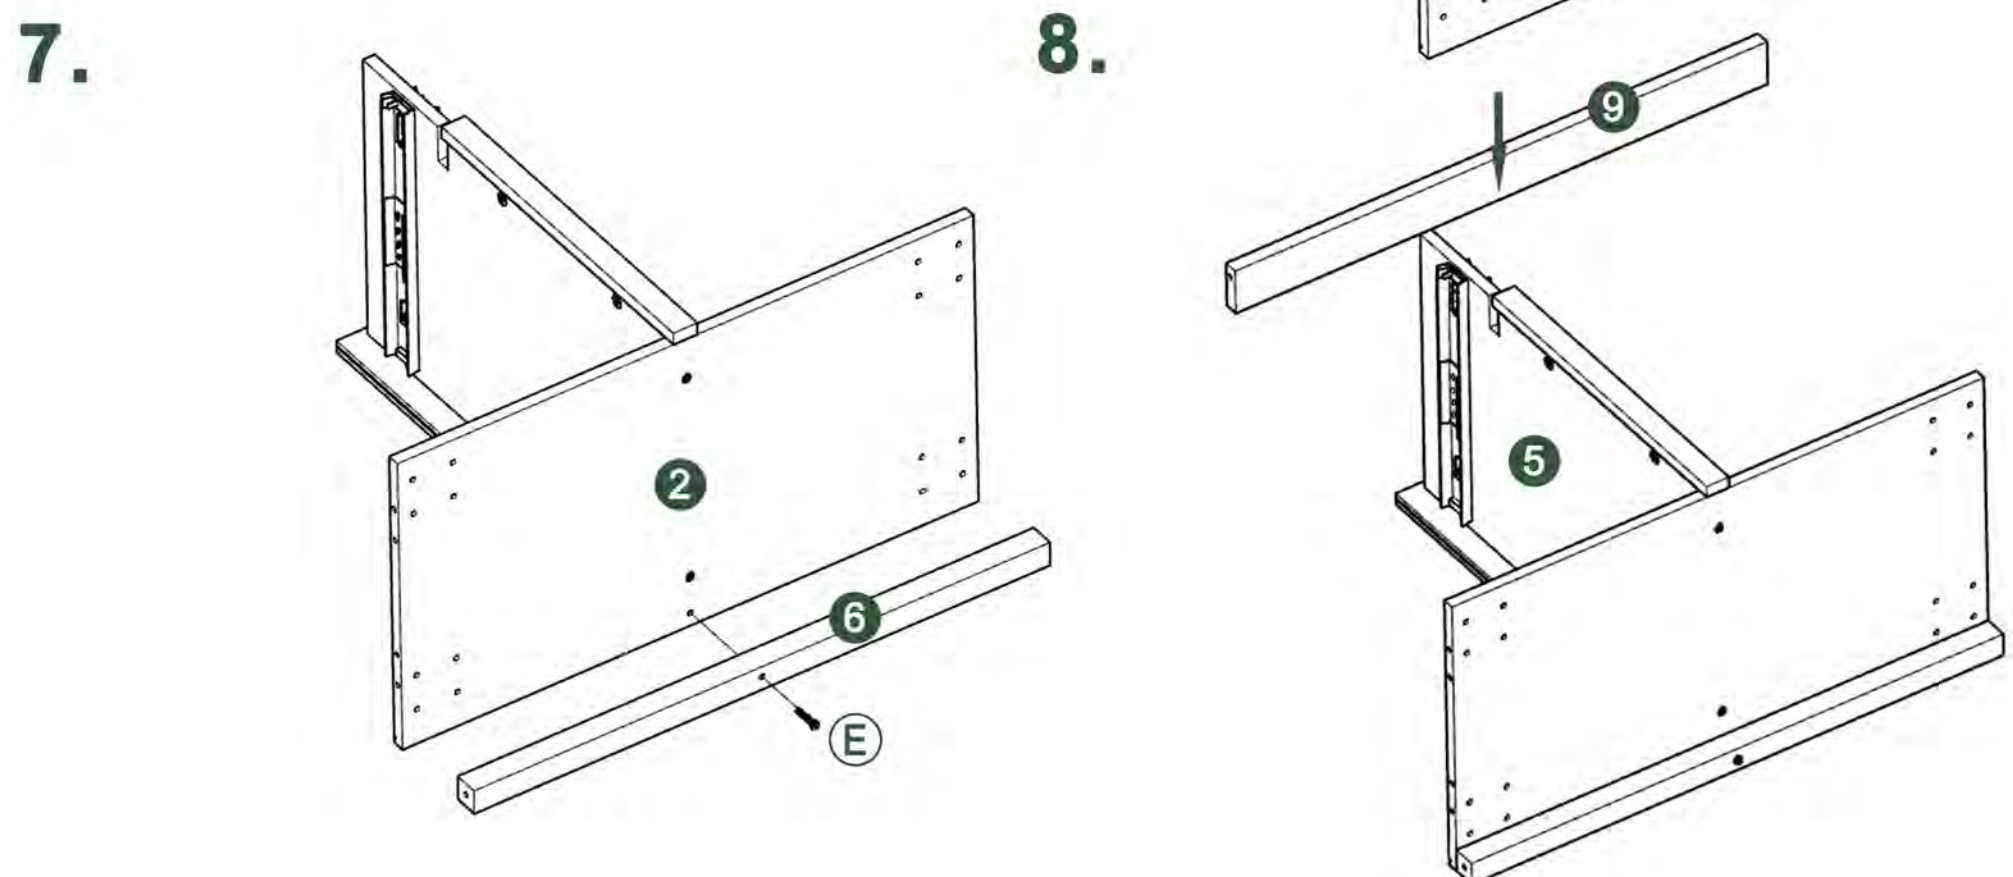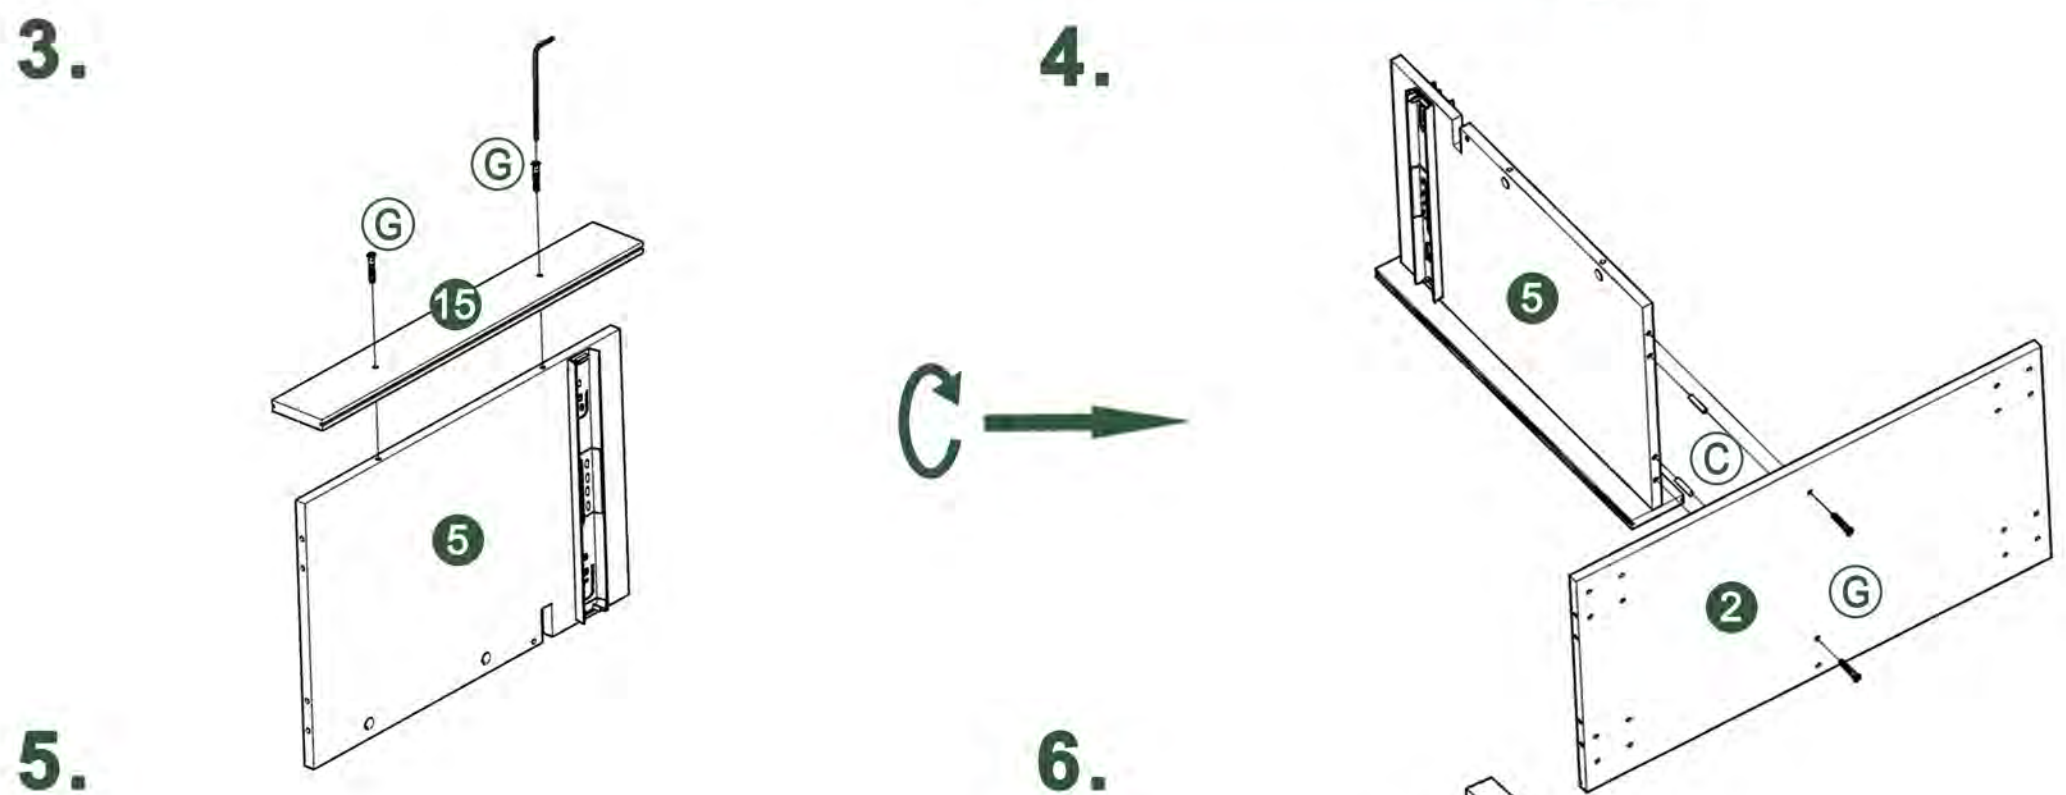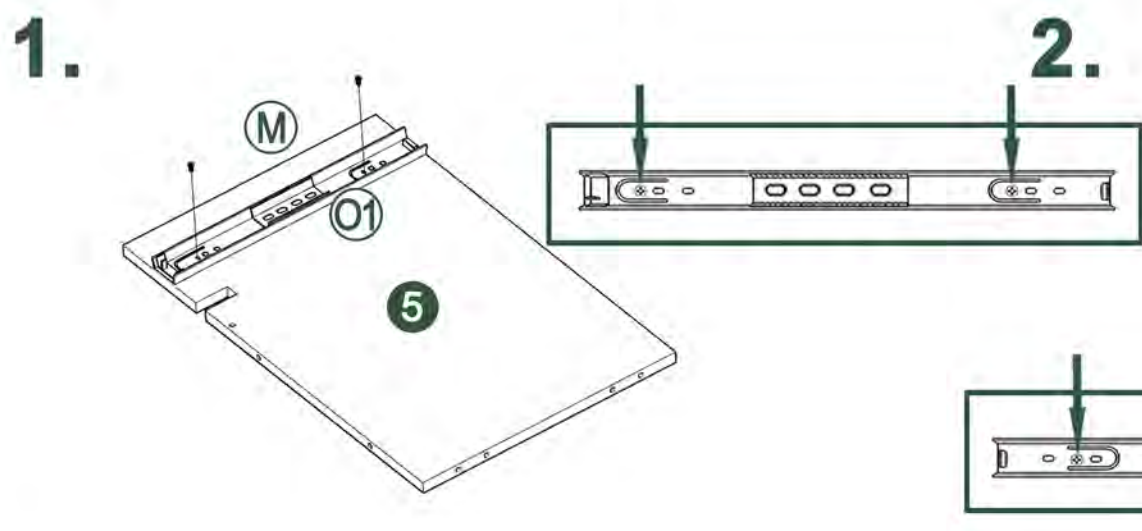


9.

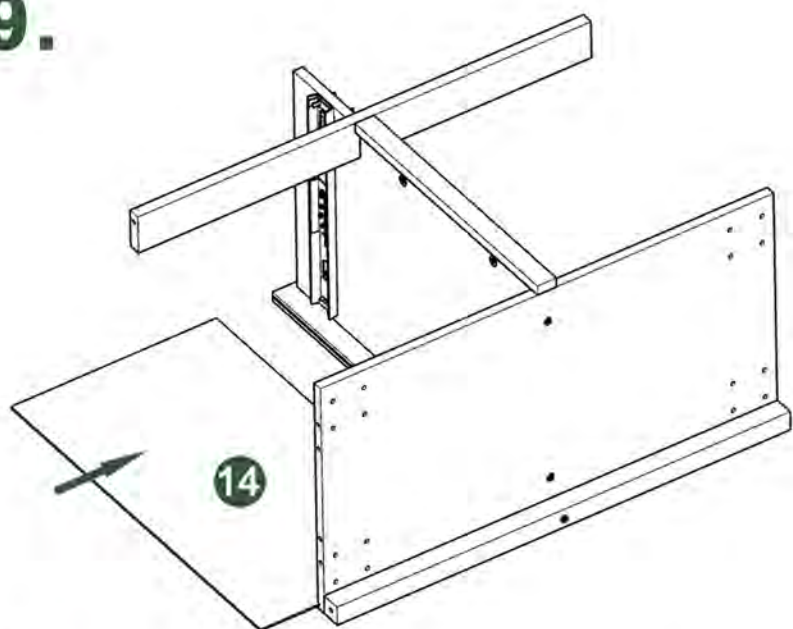


10.

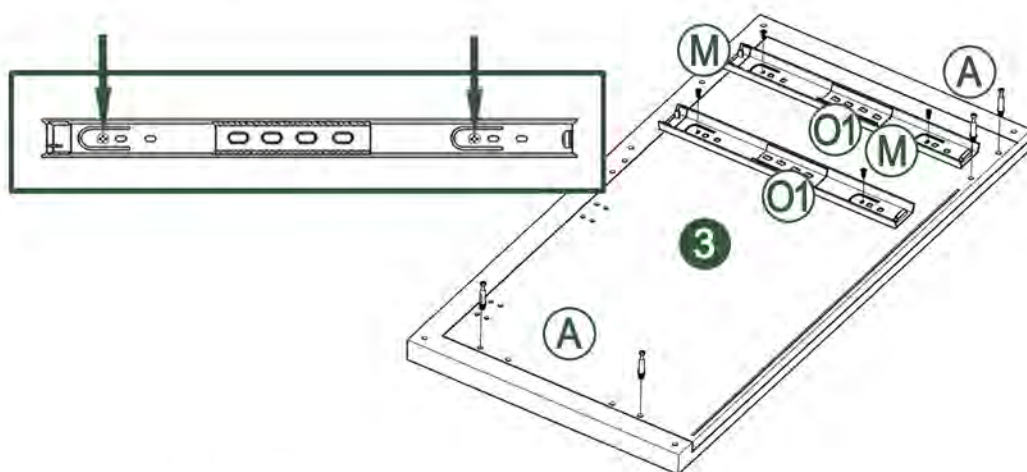


11.

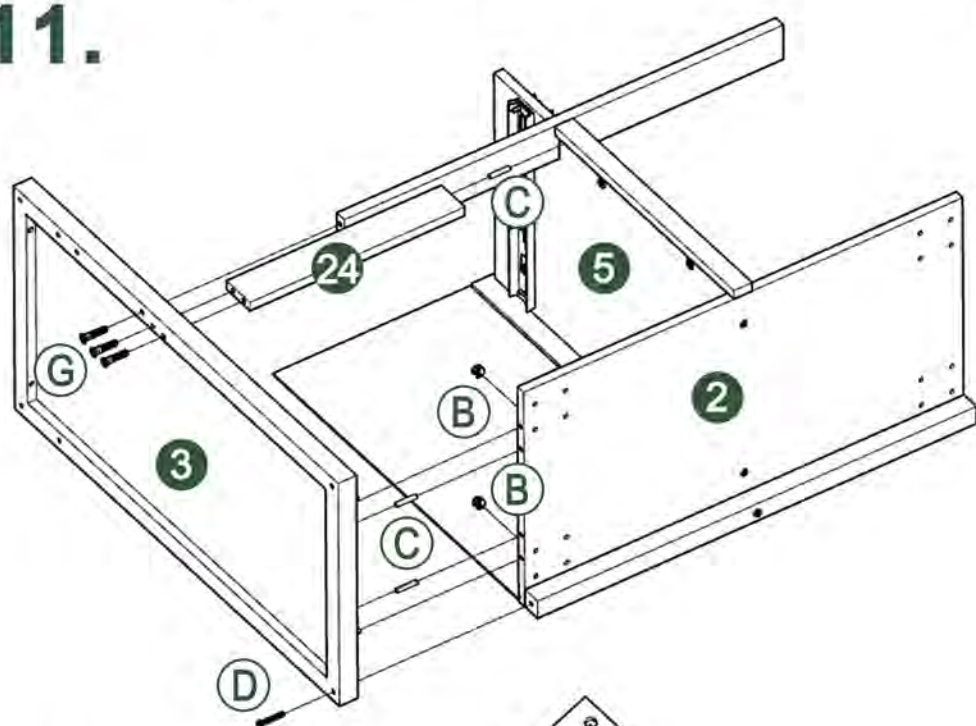


12.

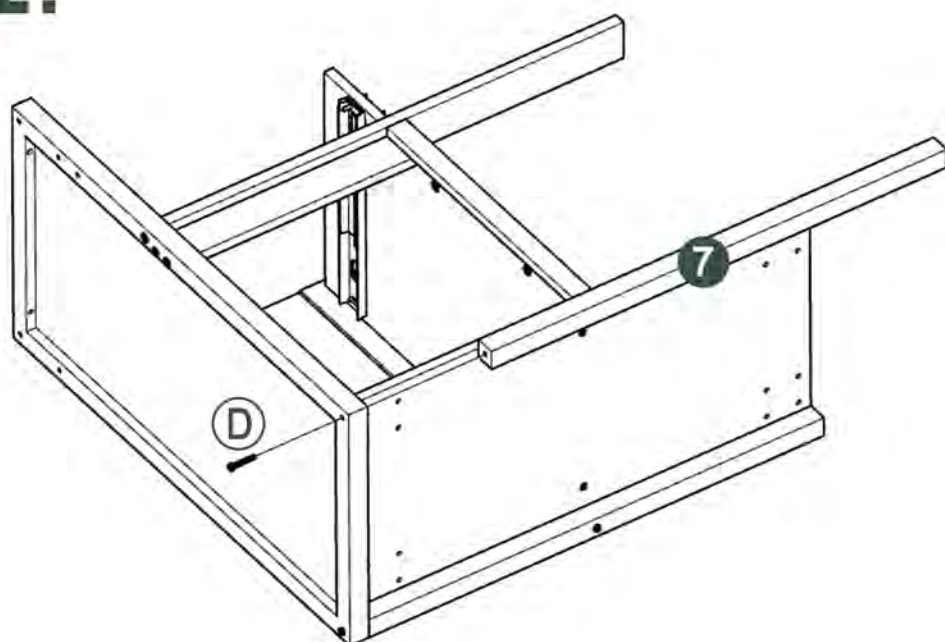


13.

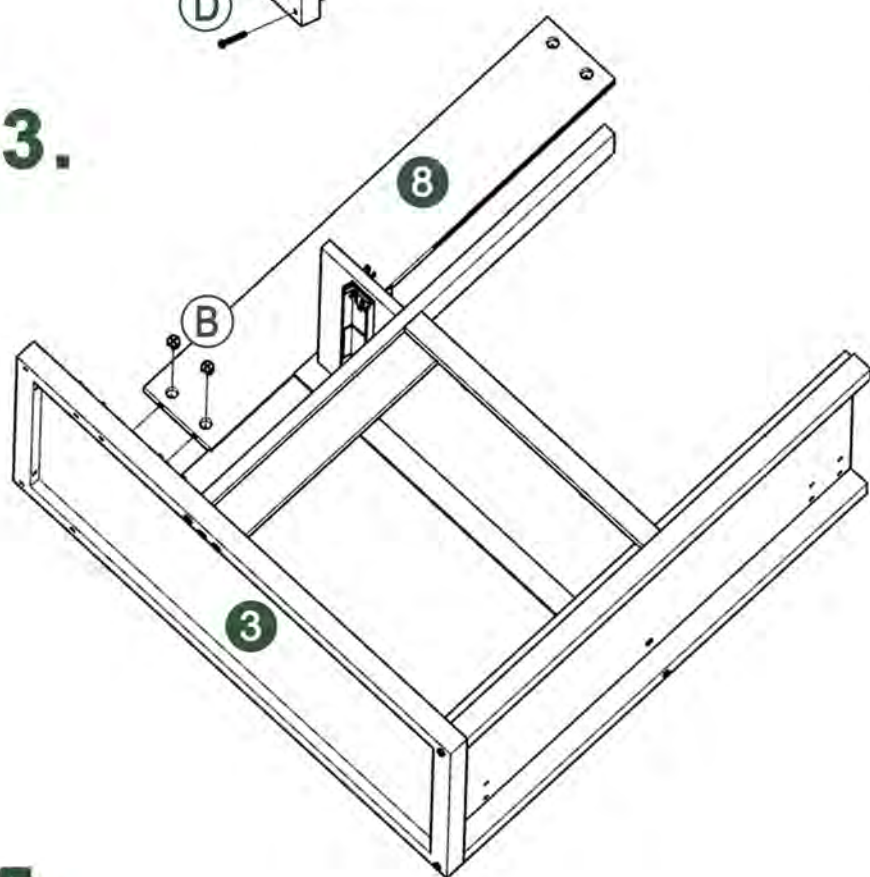


14.

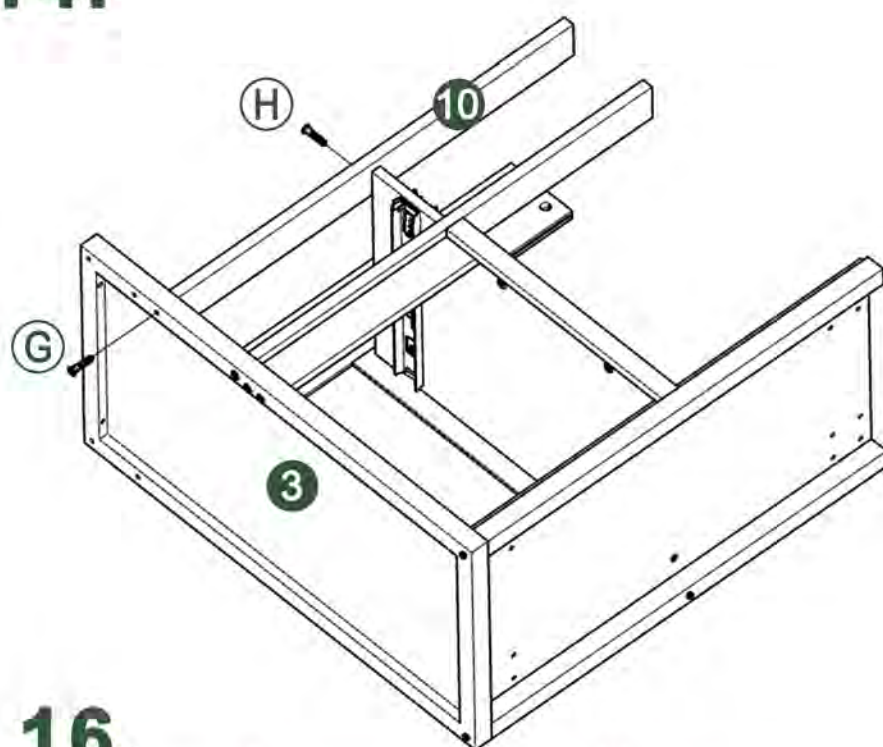


15.

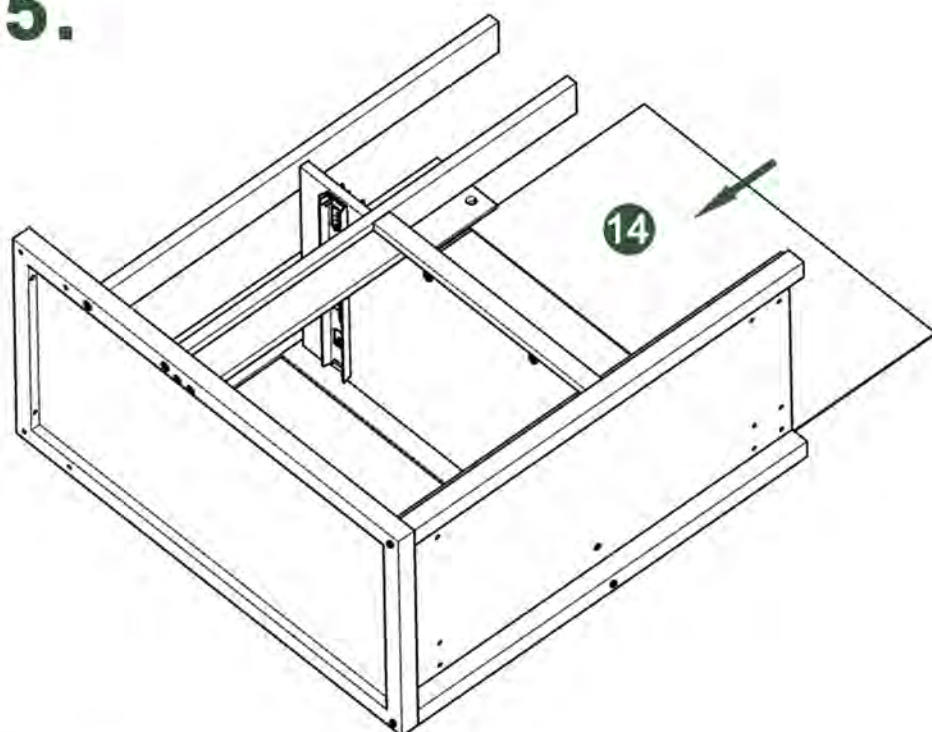


16.

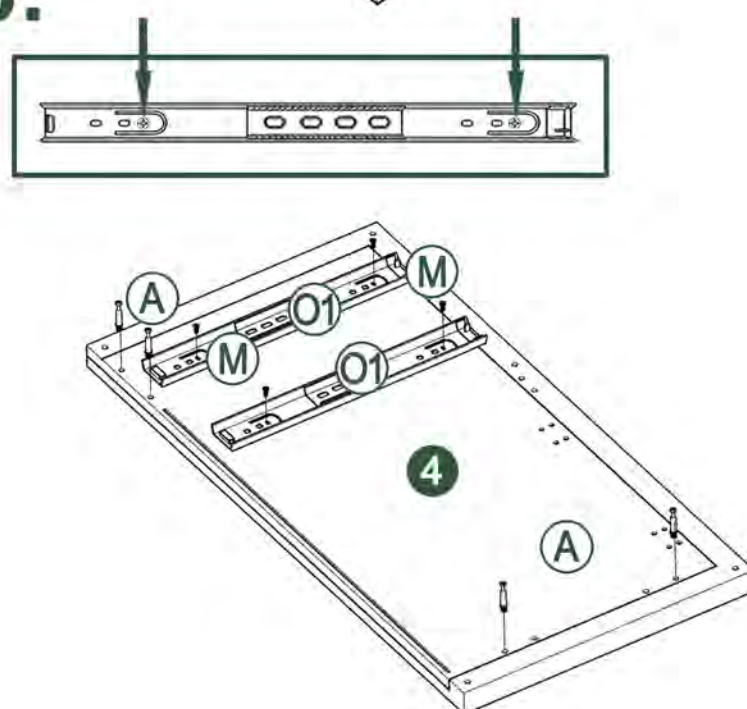


17.

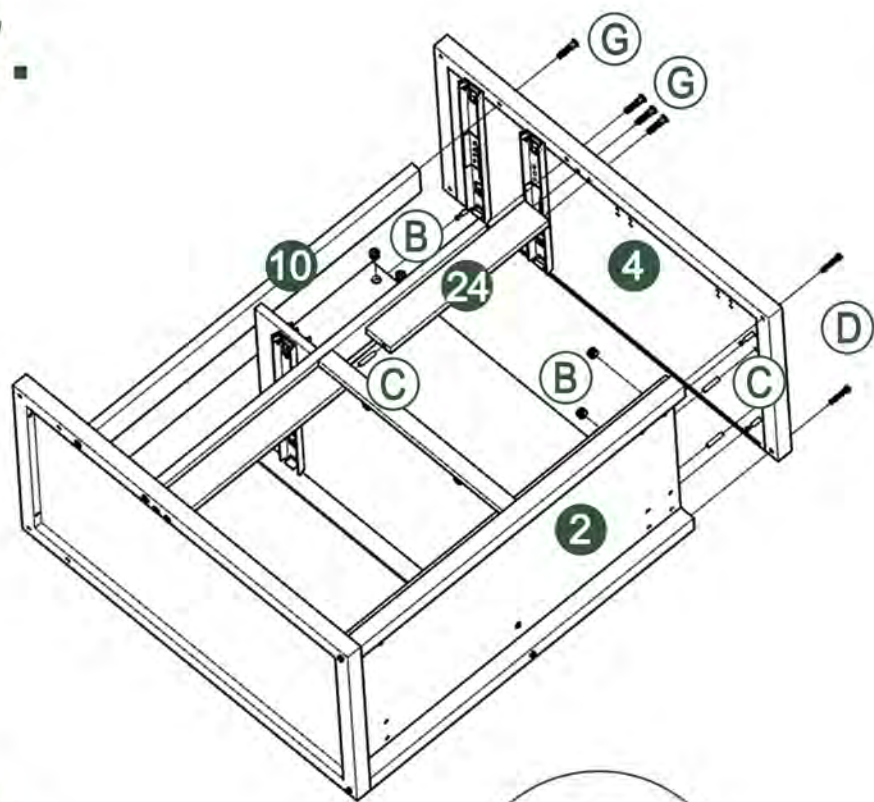


18.

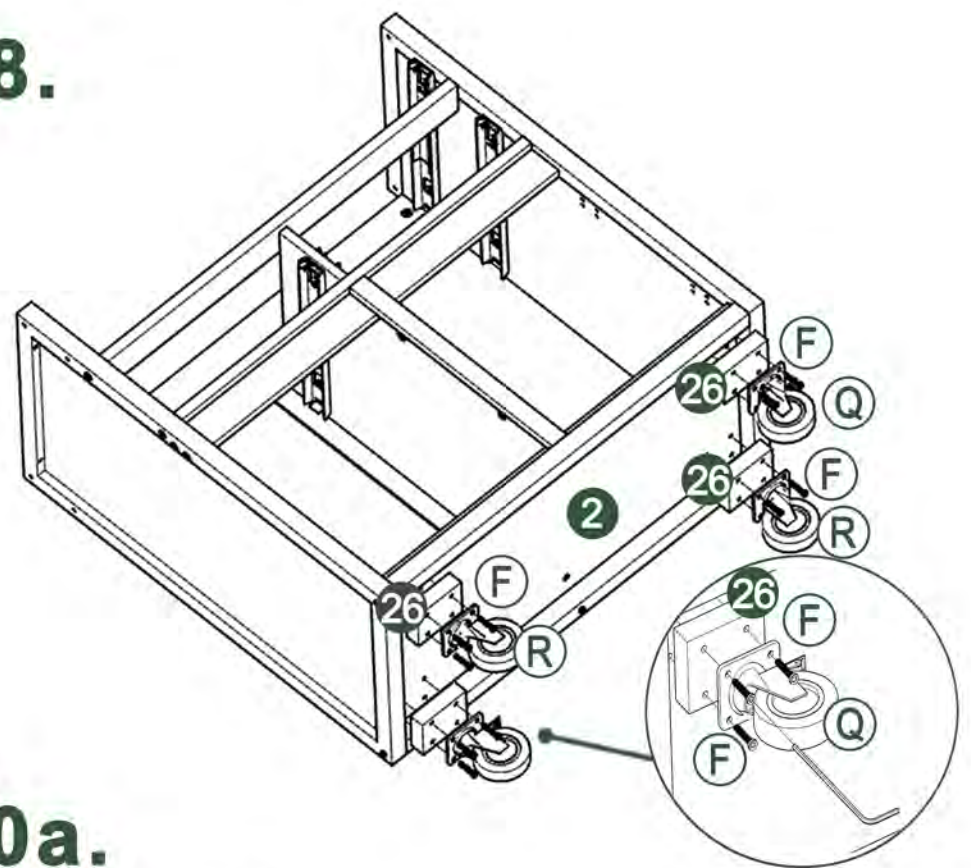


19.

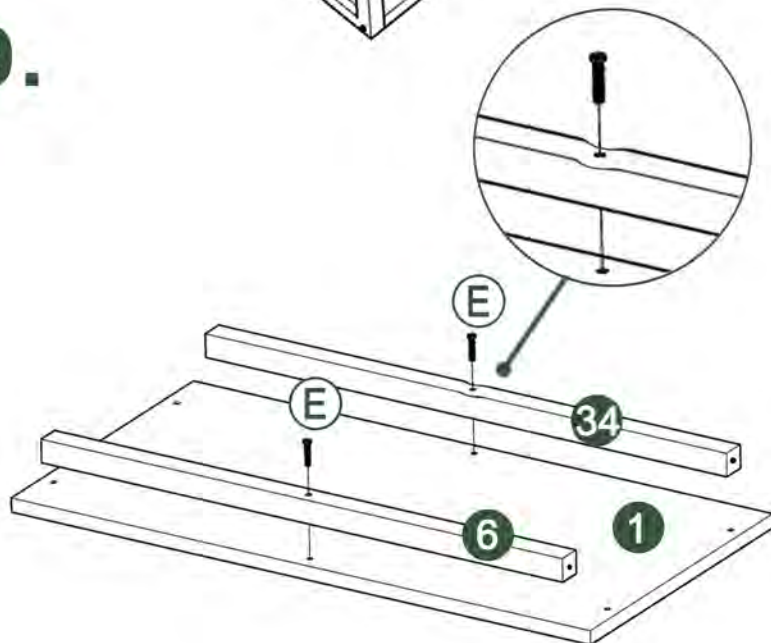


20a.

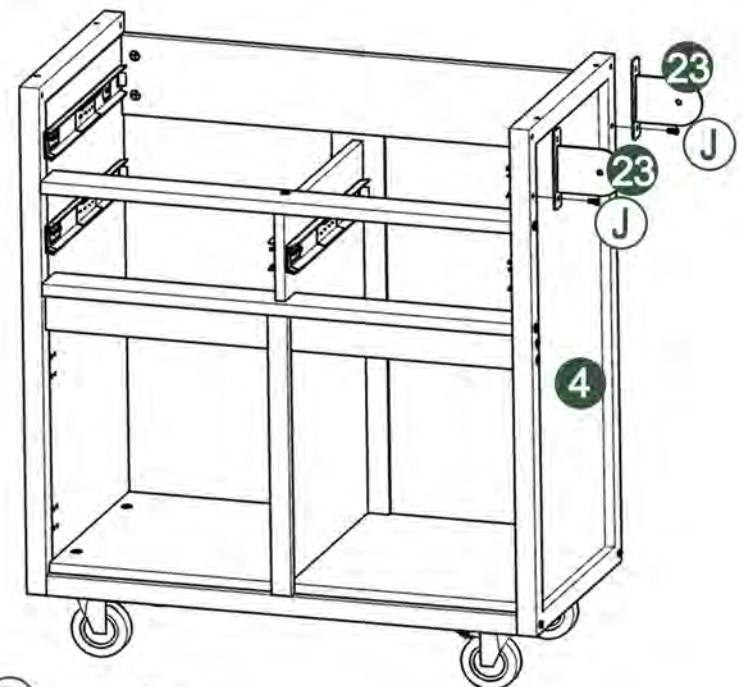


20b.

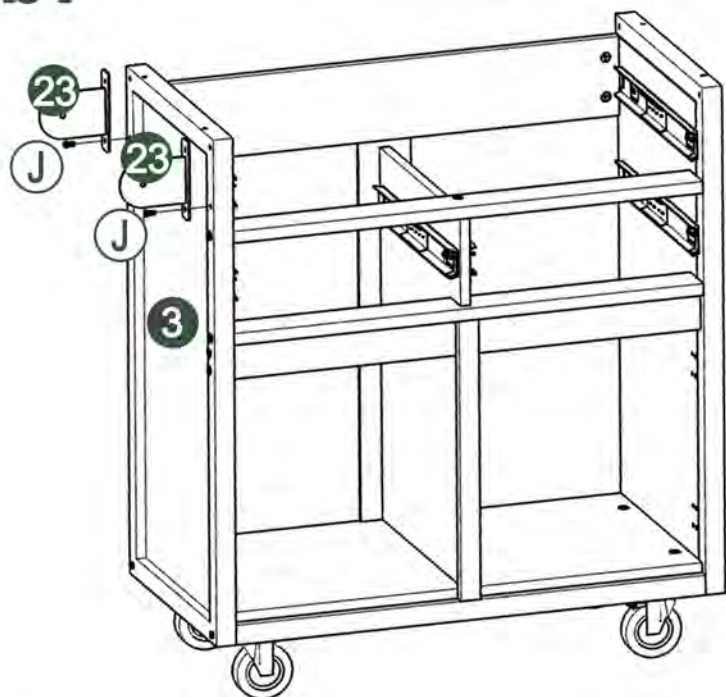


21.

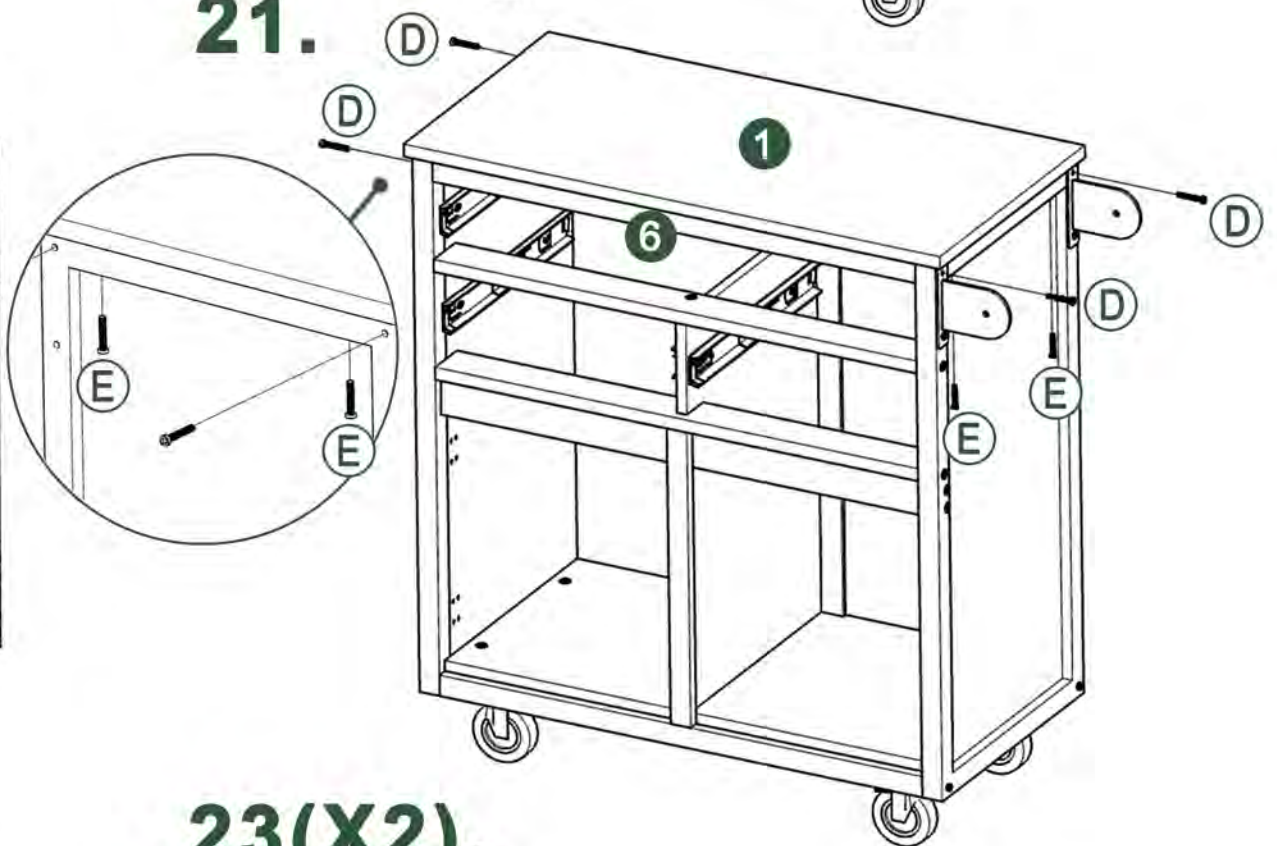


22.

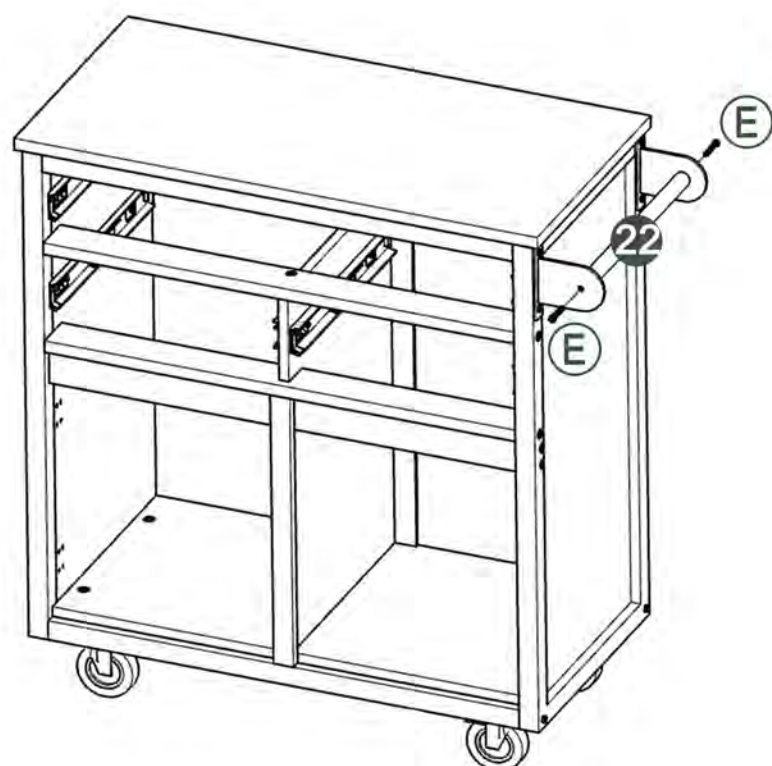



23(X2).

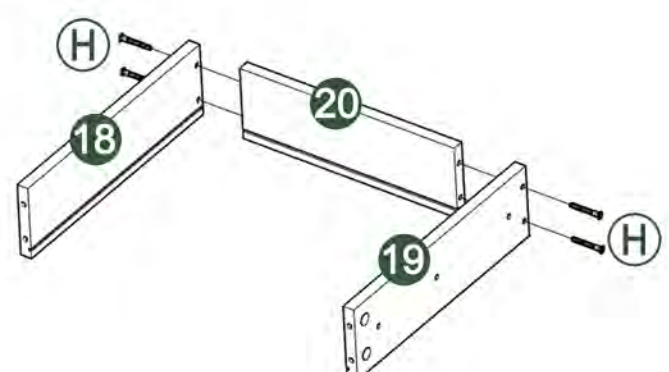


24(X2).

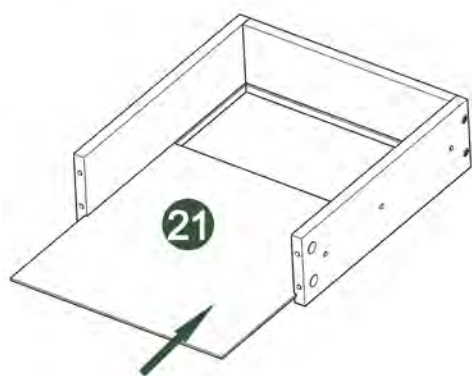



25.

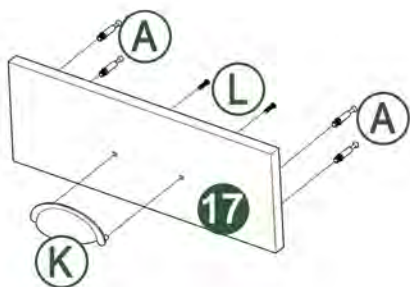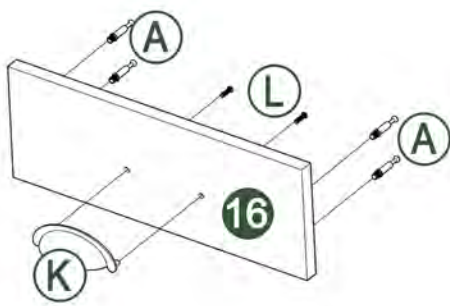


26(X2).

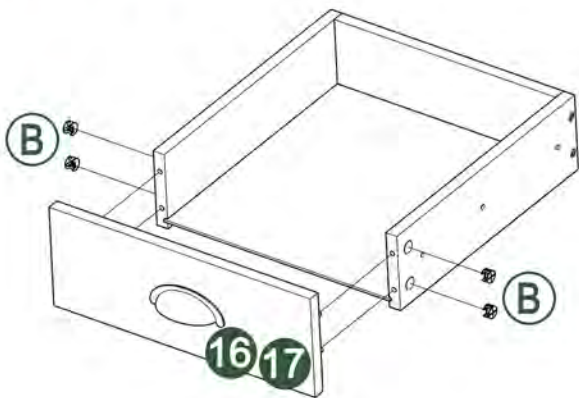


27(X2).

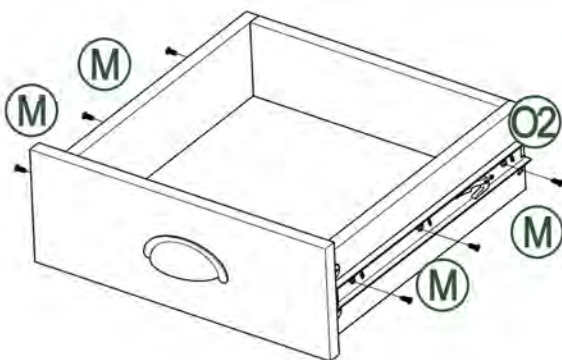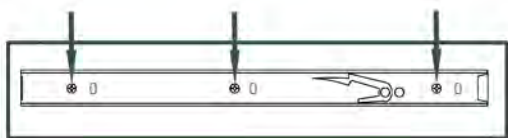


28.

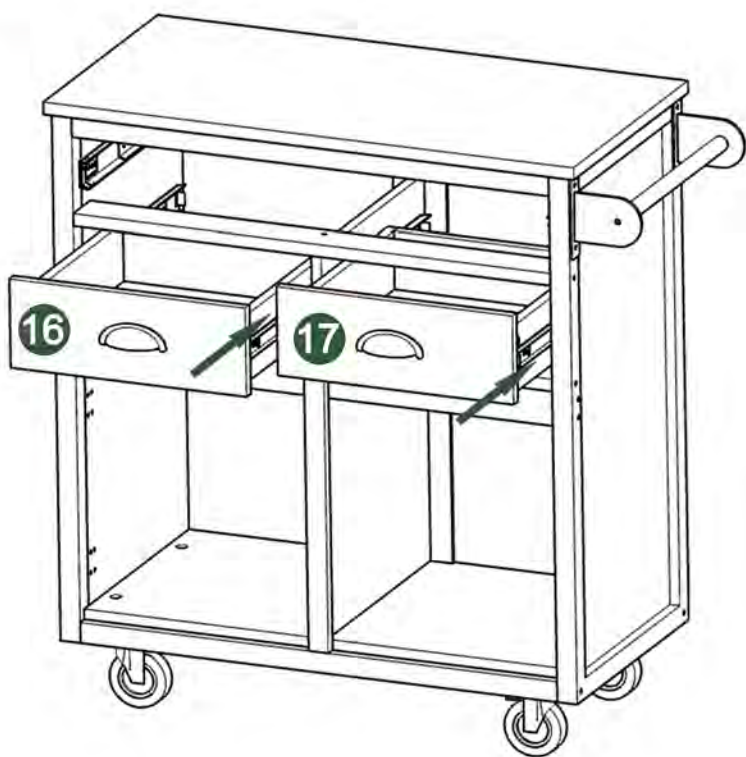


29.

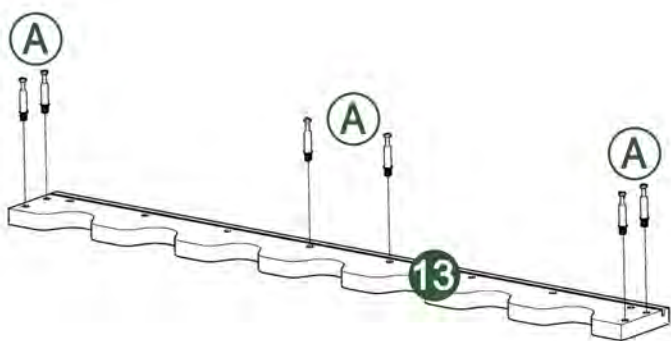


30.

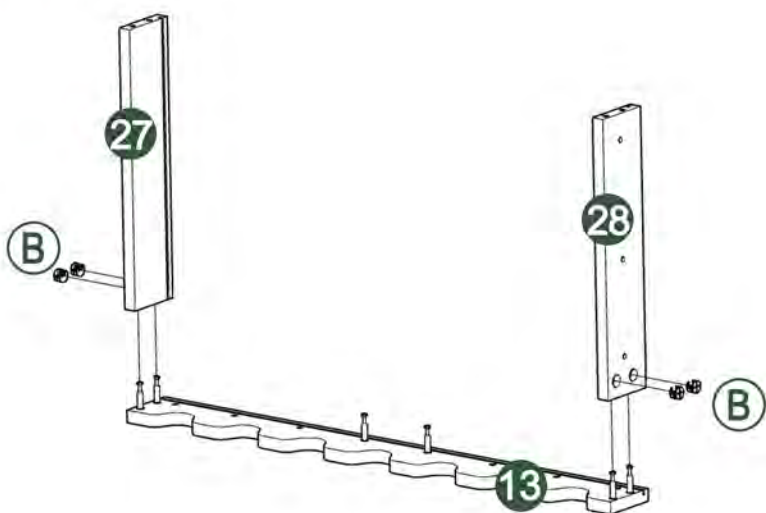


31.

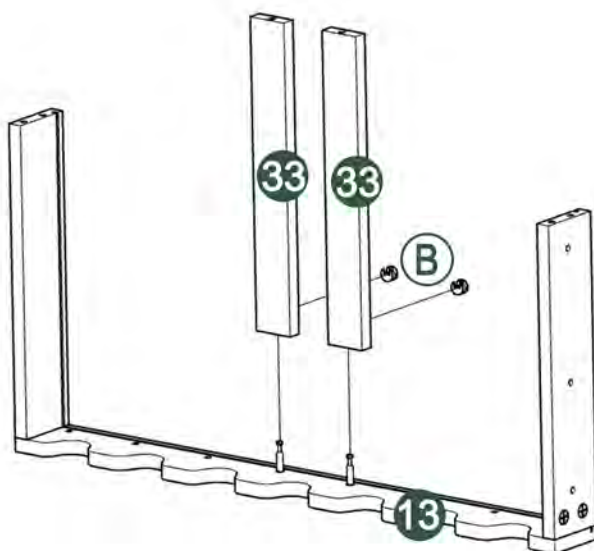


32.

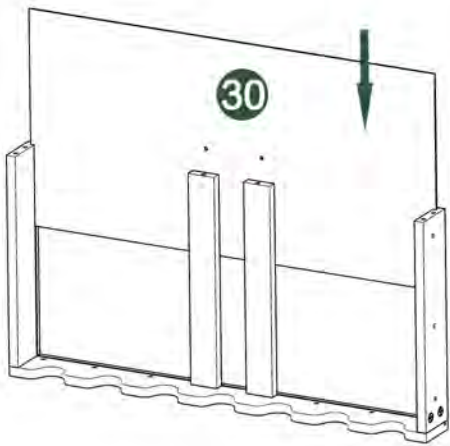


33.

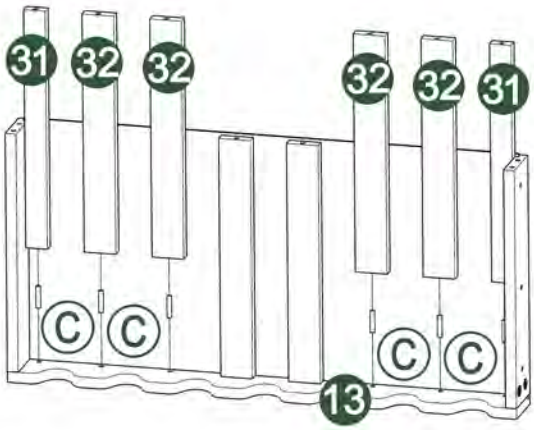



34.

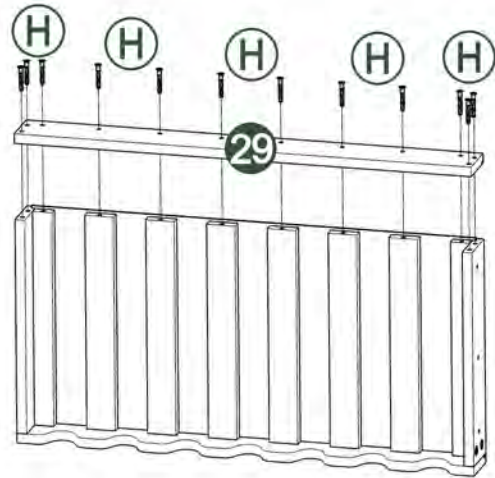


35.

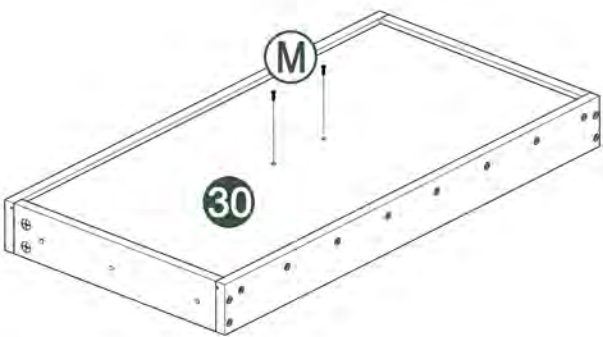


36.

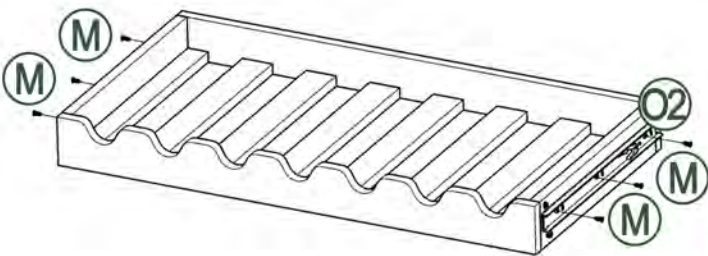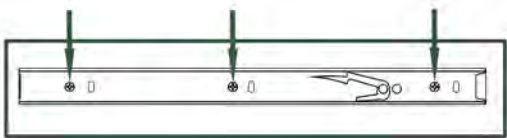


37.

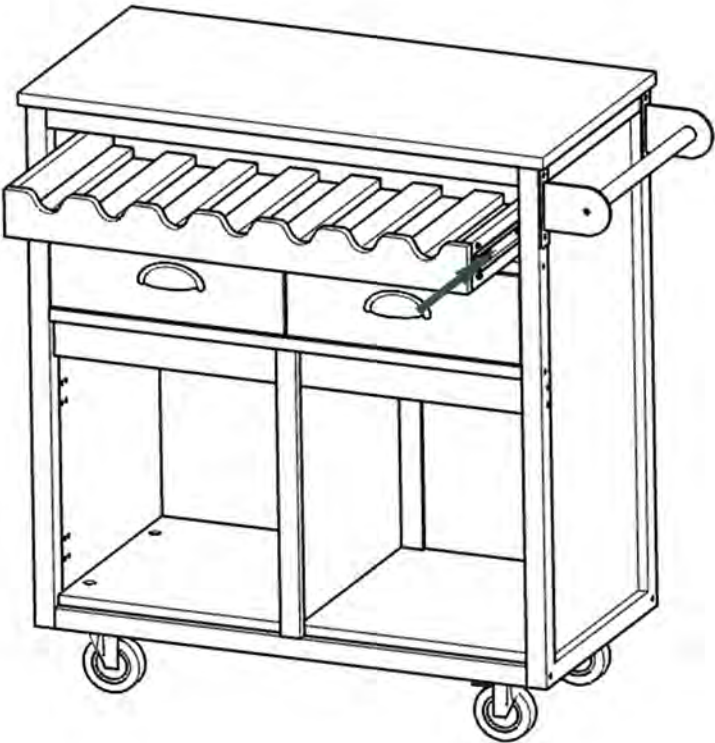


38.

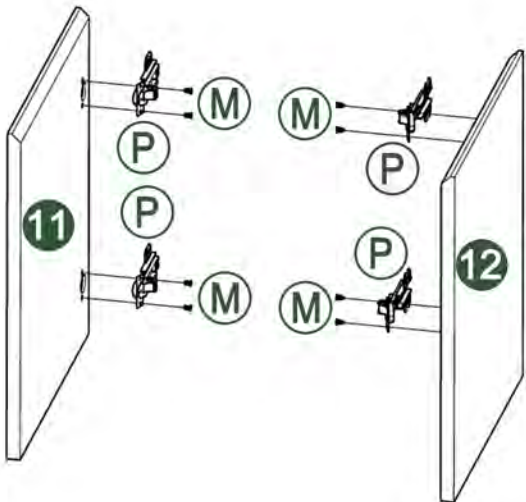

39.

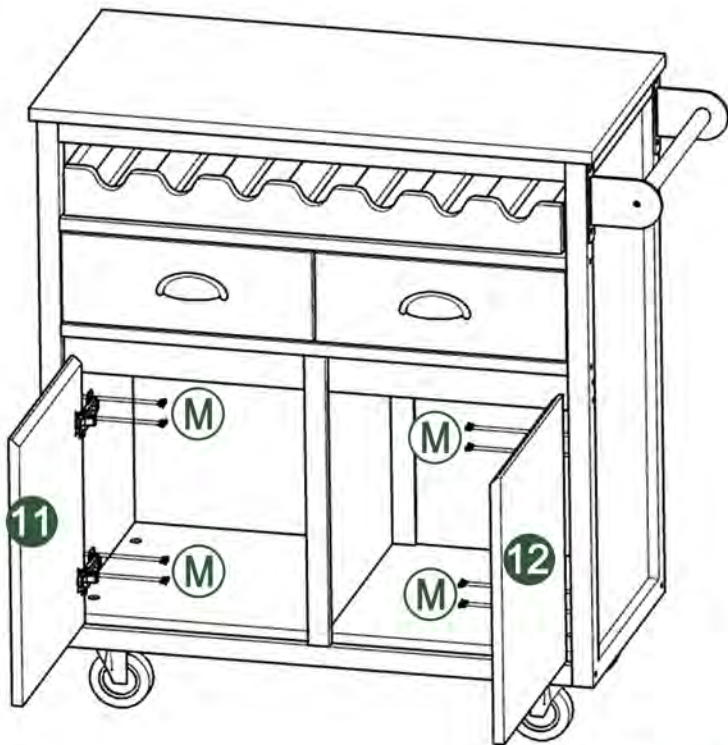

40.

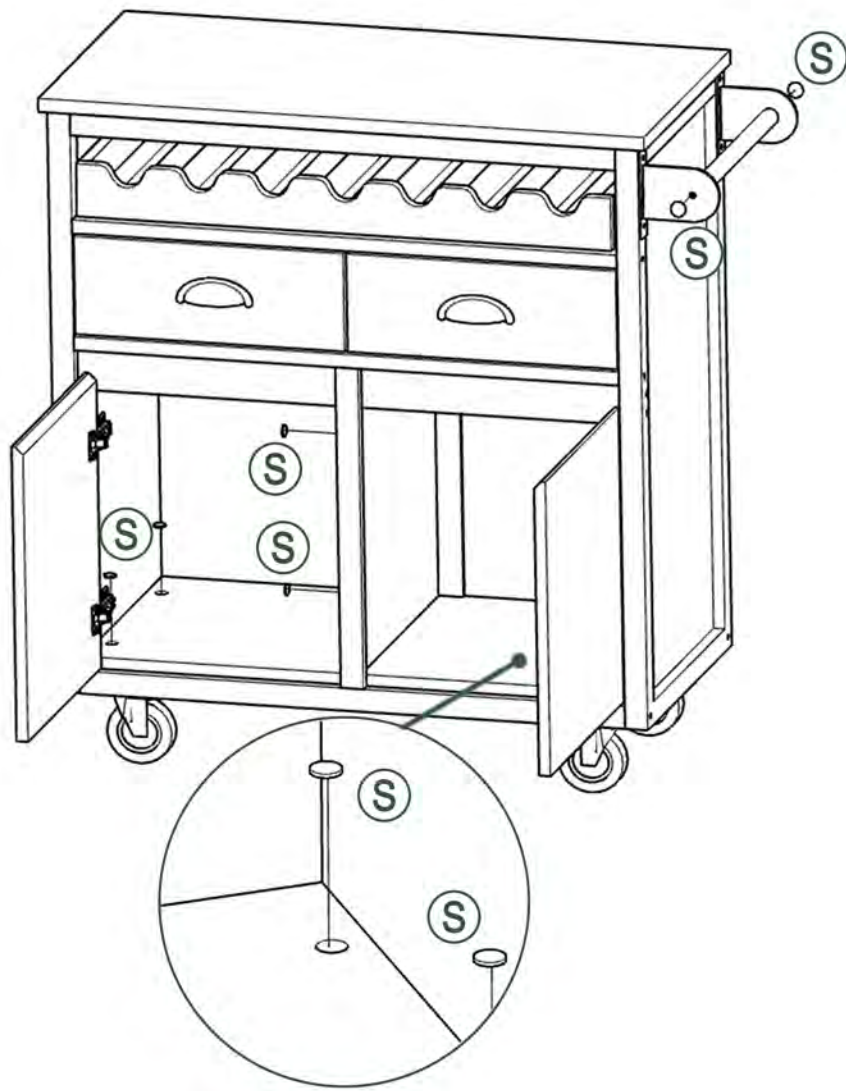

Scan the QR code to
share your review