



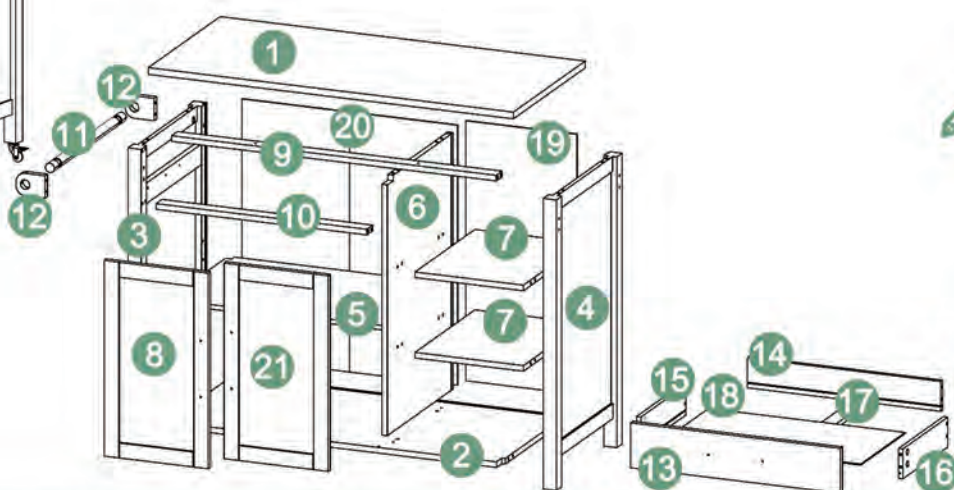

FKW103

SoBuy®

TOOLS:

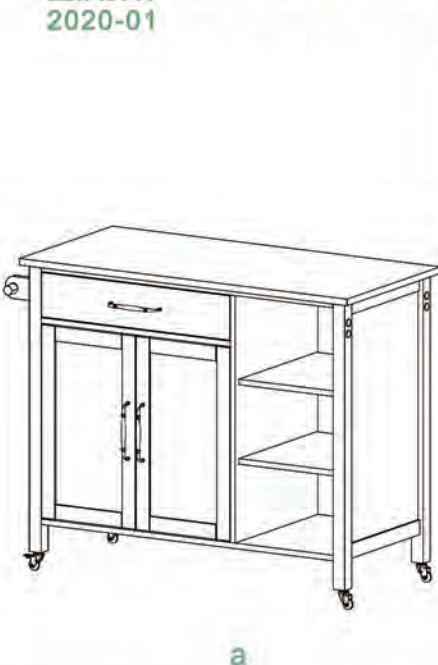

UNIT:MM
PACKAGE-A

1



1010×485×18

2



919×440×15

3



777×440×36

4



777×440×36

6



685×440×15

9




898×40×15

11




480×φ25

19



695×307×3

20

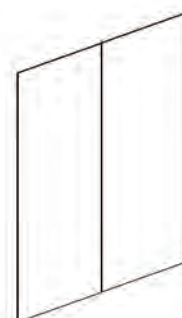

695×596×3

UNIT:MM
PACKAGE-B

5



600×405×12

7

×2



400×300×12

8



523×288×15

10



583×40×15

12

×2



80×60×17

13



580×120×15

14



535×80×12

15



300×80×12

16



300×80×12

17



288×40×12

18



544×297×3

21



523×288×15

UNIT:MM
PACKAGE-A

A

×27



M6×34.5

B

×27



Φ15×9.5

C

×6



M4×45

D

×6



M4×30

E

×2



M4×25

F

×24



Φ6×30

G


×4



Φ5×25

H


×2

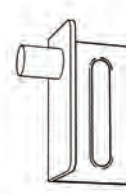

Φ5×18×13

J

×2

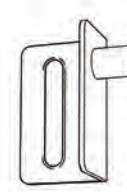

Φ5×18×13

K



45×15×14

L

×2



35×12.5

M

×14



10×10





Pour en savoir plus:
www.quefairedemesdechets.fr


Stand:05.2020





BOLT INSTALLATION AS BELOW:

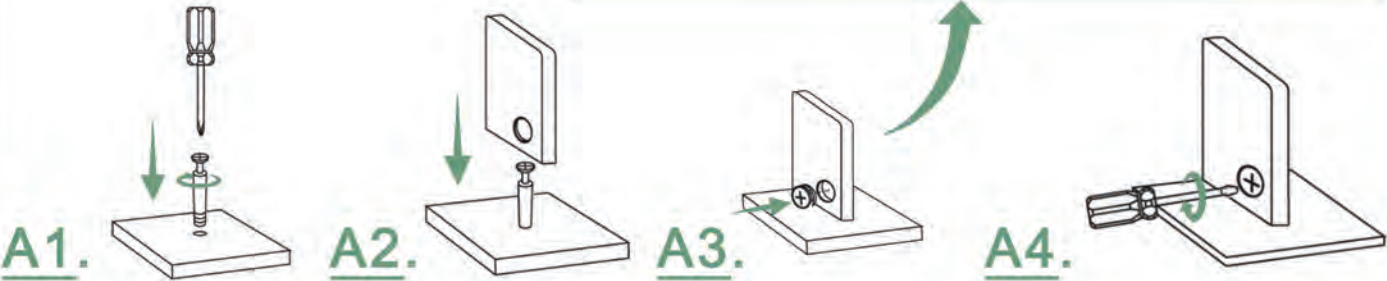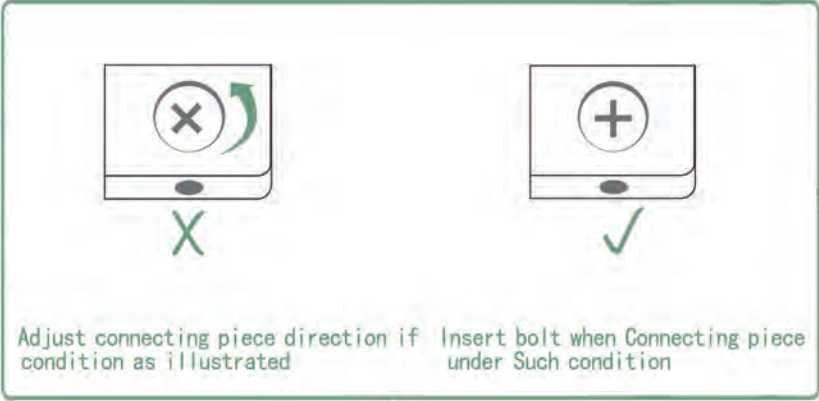


BACKPLATE BUCKLE INSTALLATION AS BELOW:

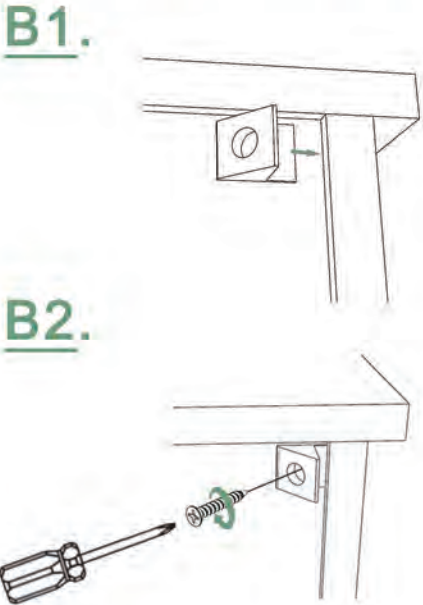


SPIALE INSTALLATION AS BELOW:

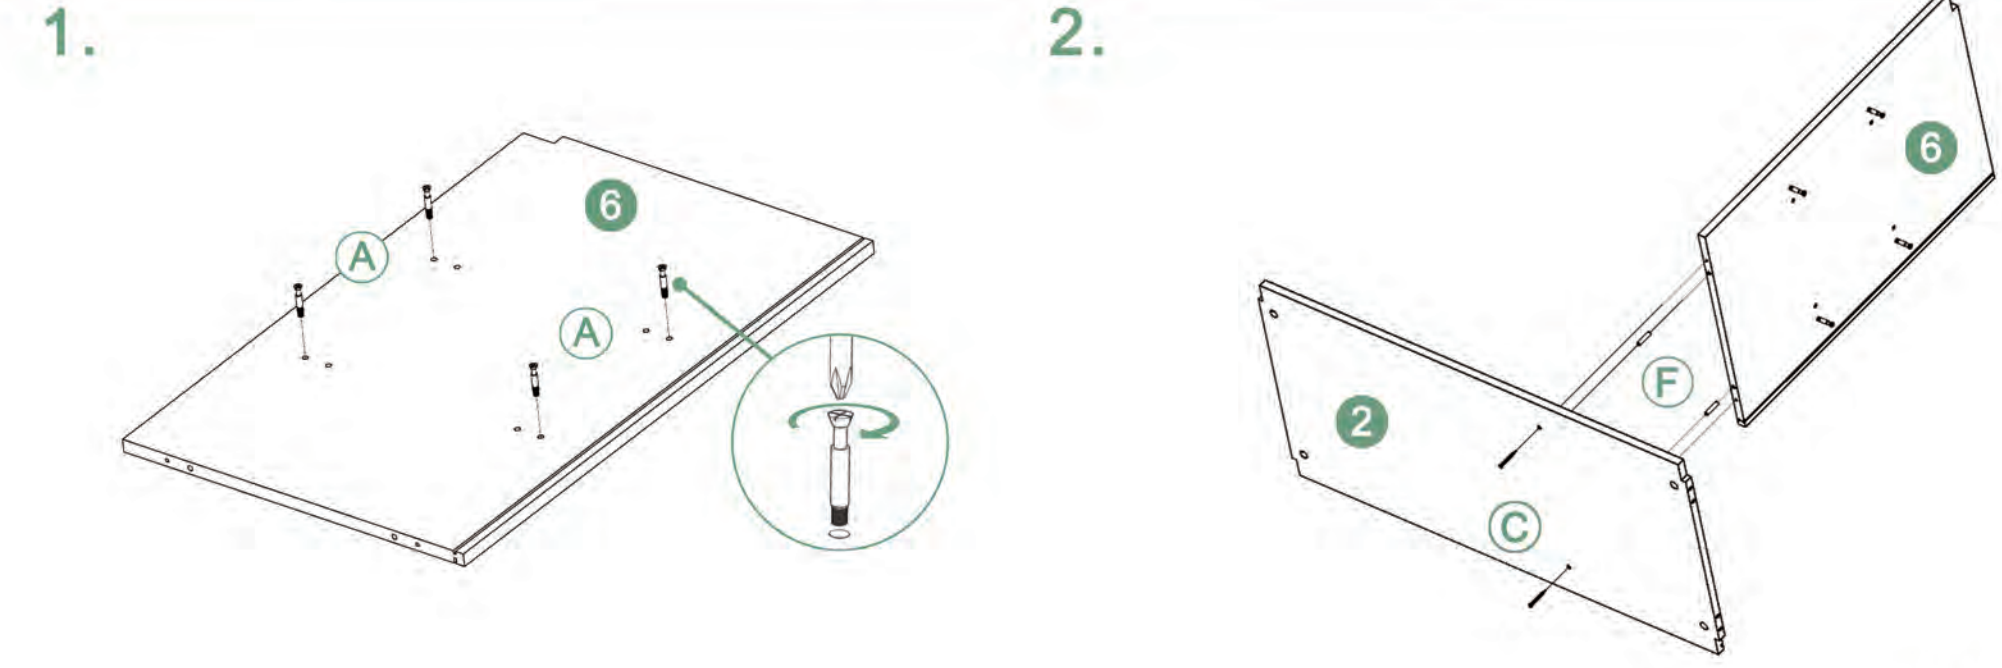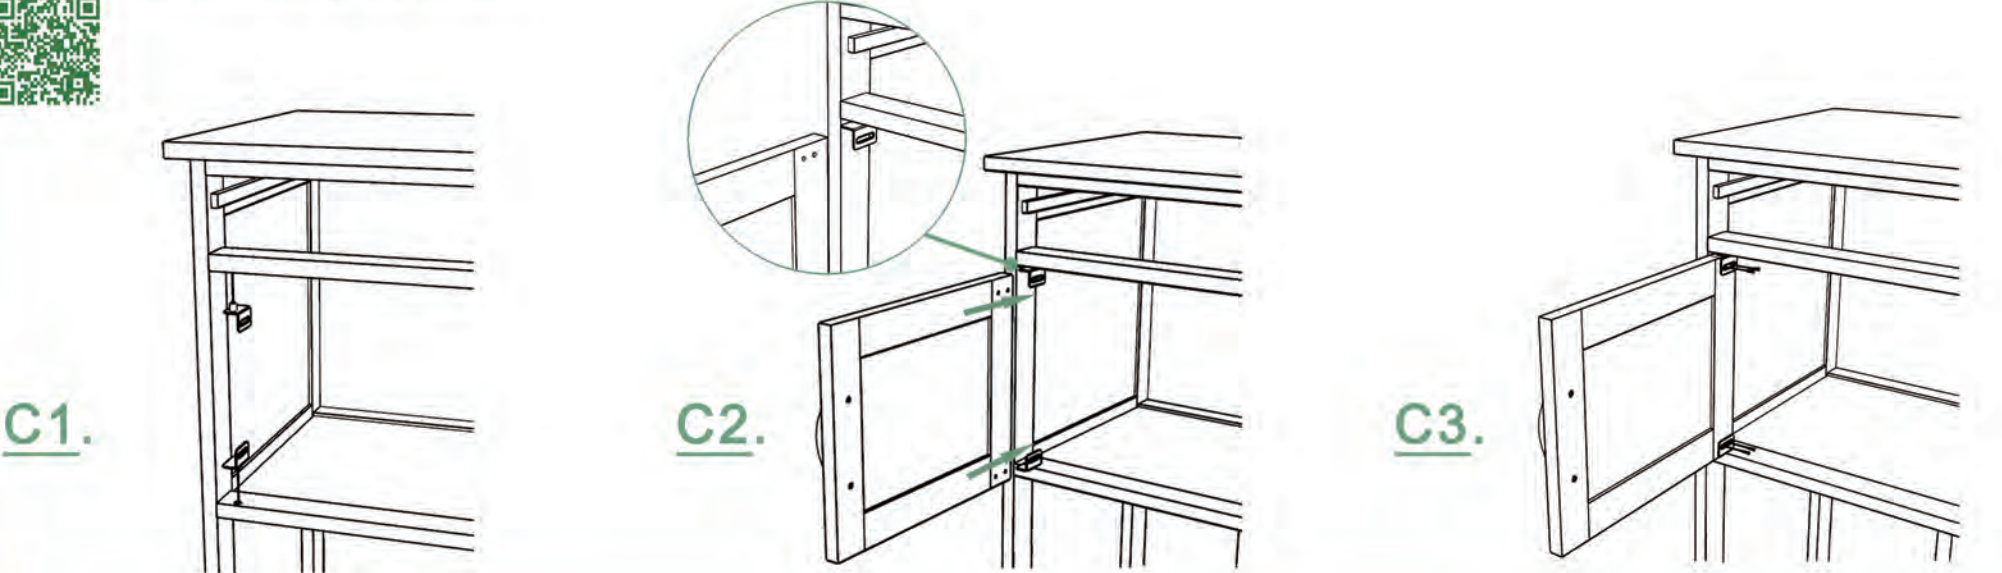


3.

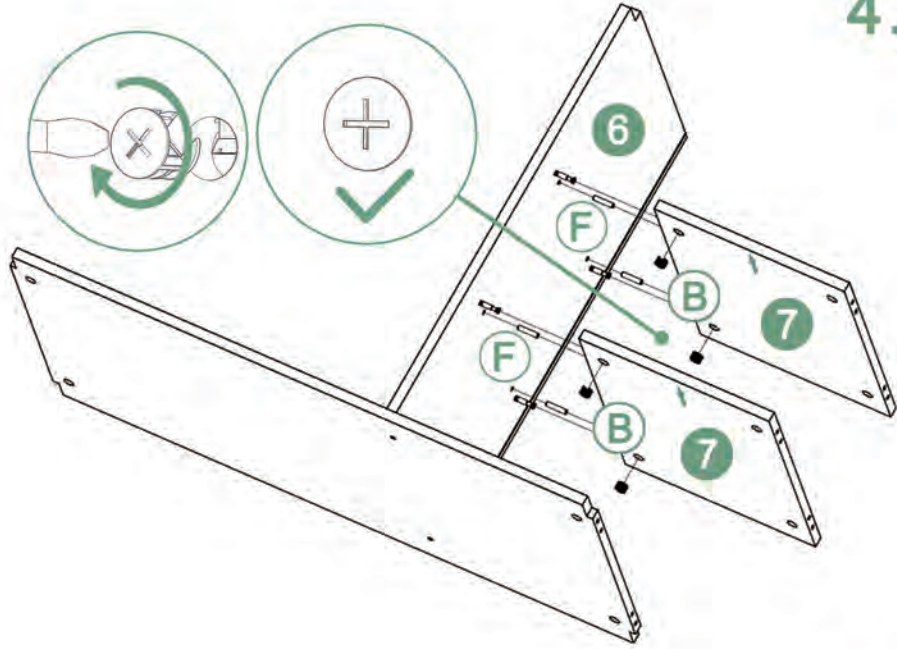


4.

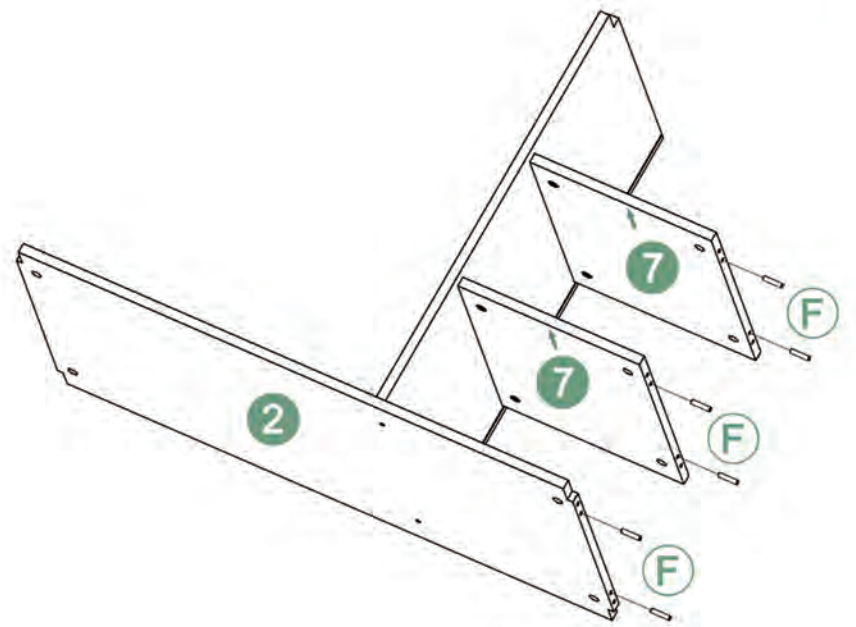


5.

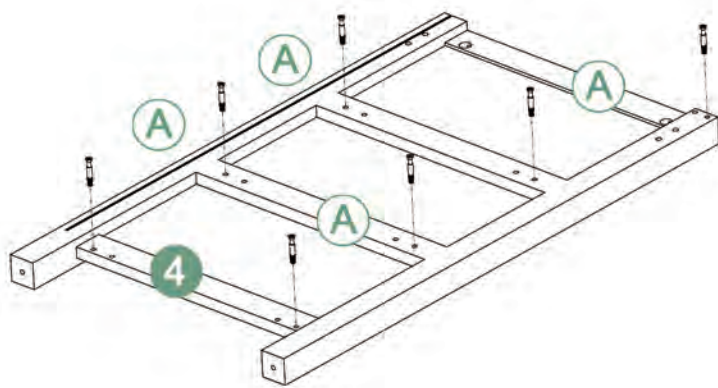


6.

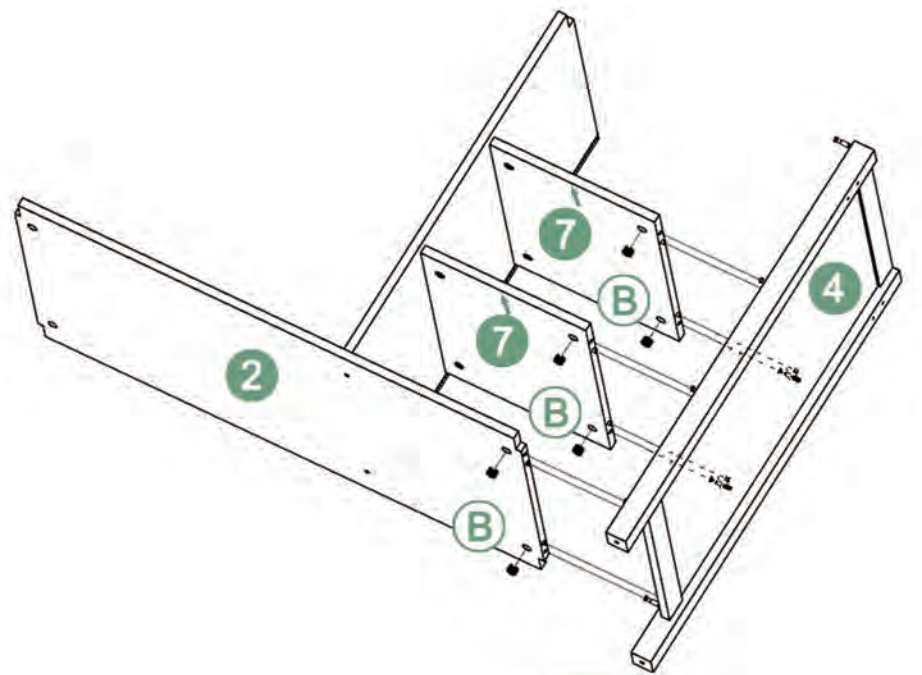


7.

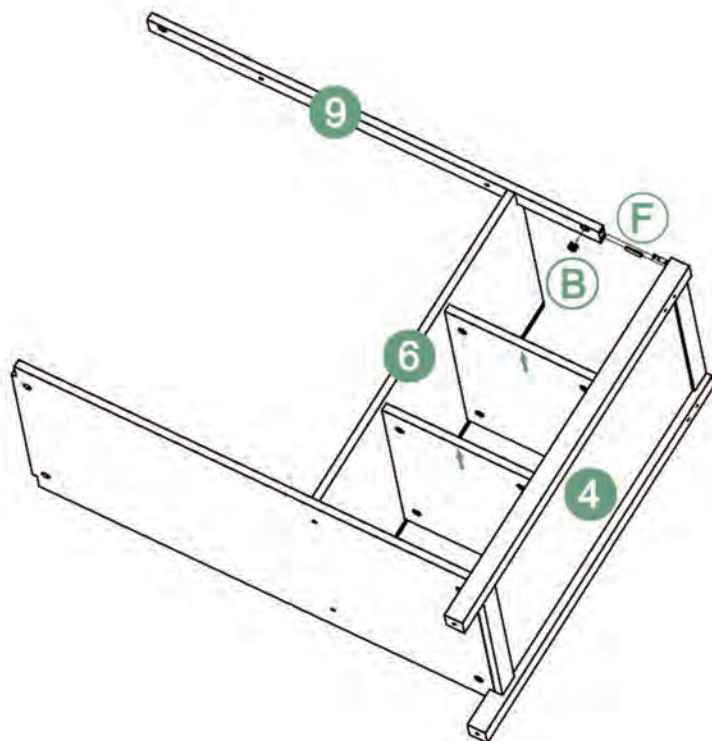


8.

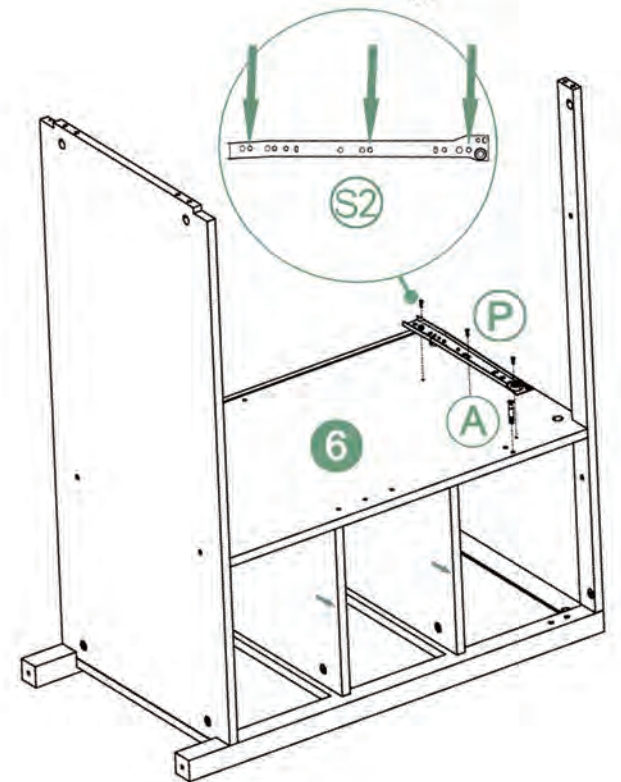


9.

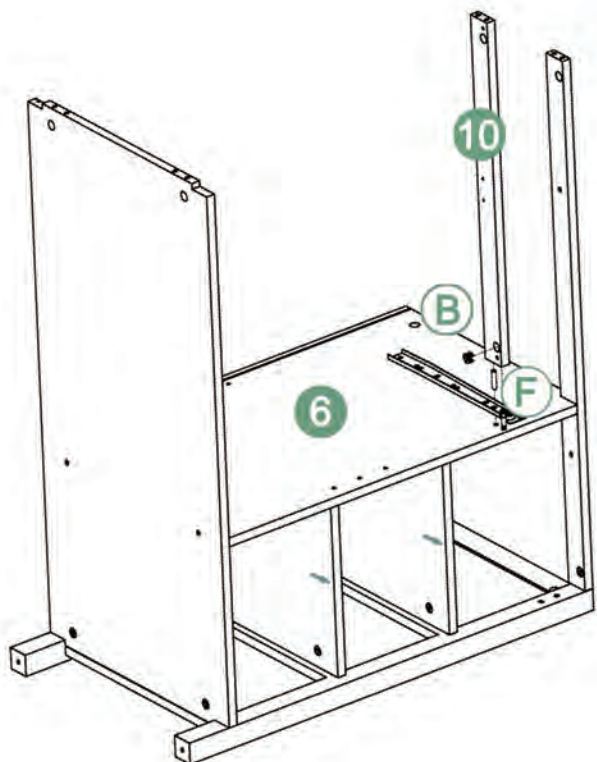


10.

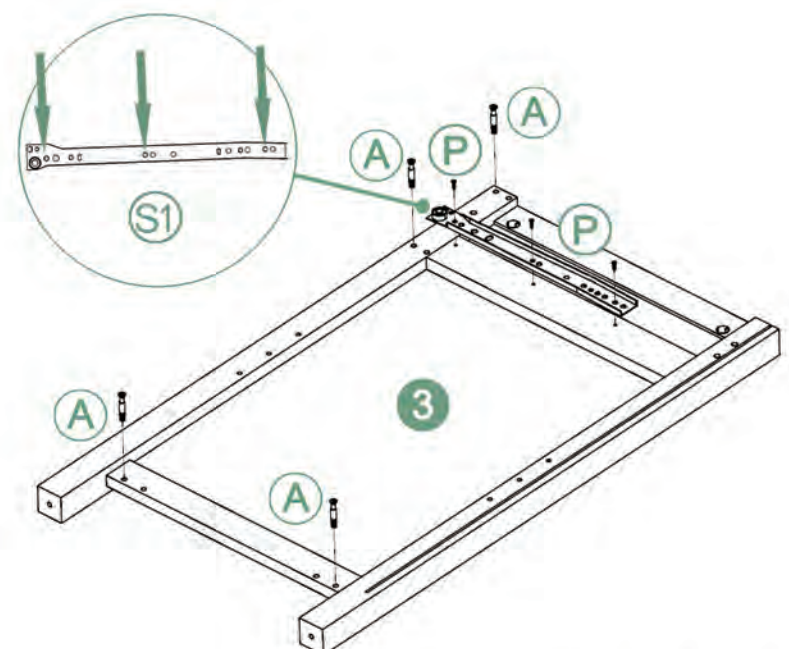


11.

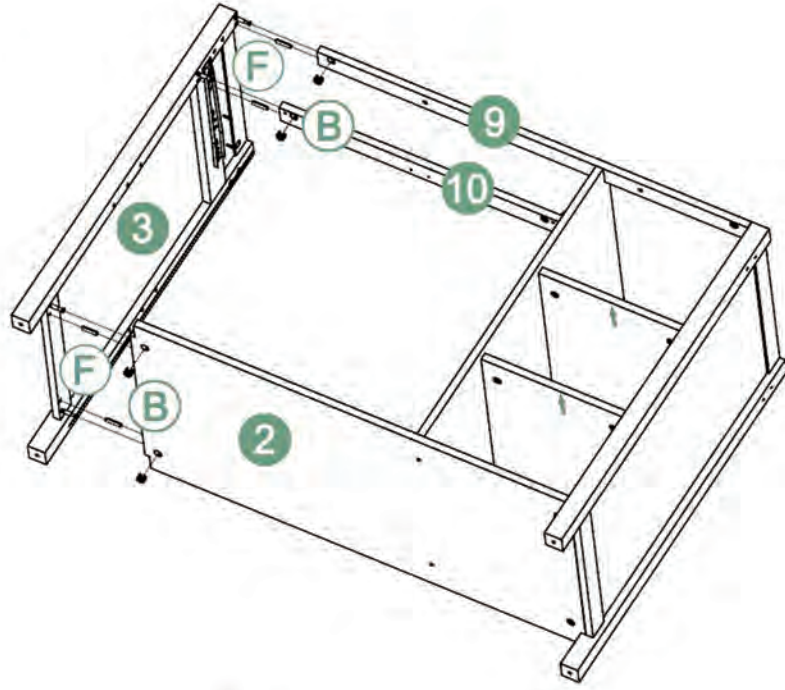


12a.

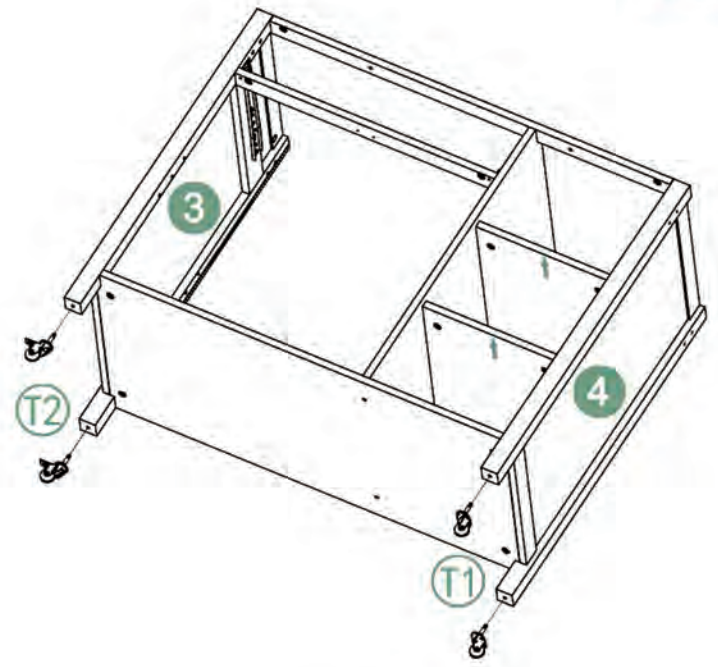


13a.

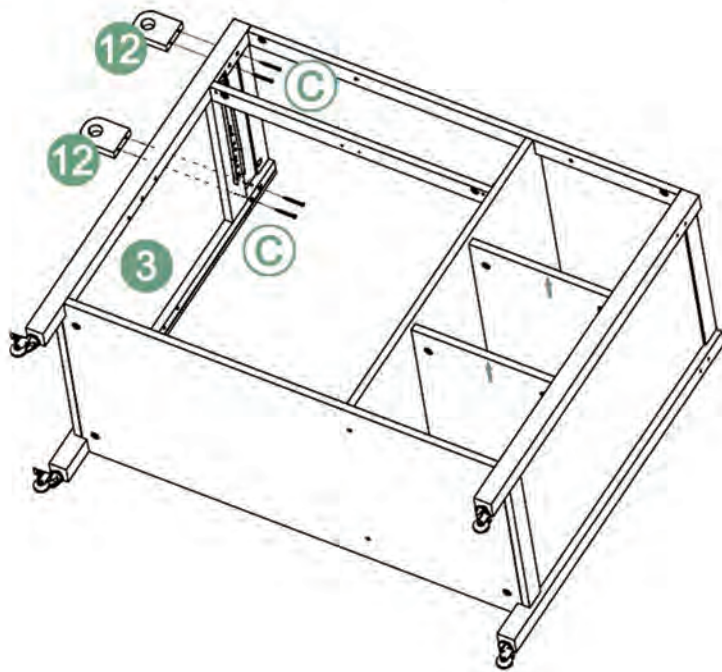


14.

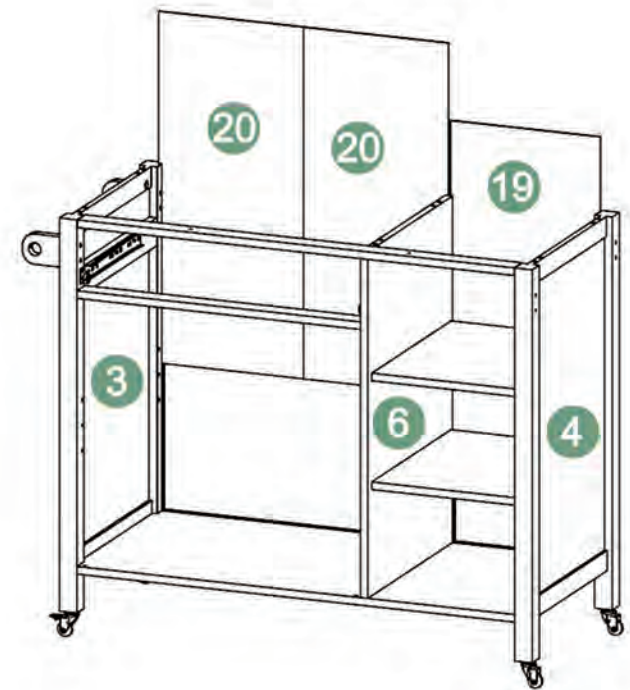


15.

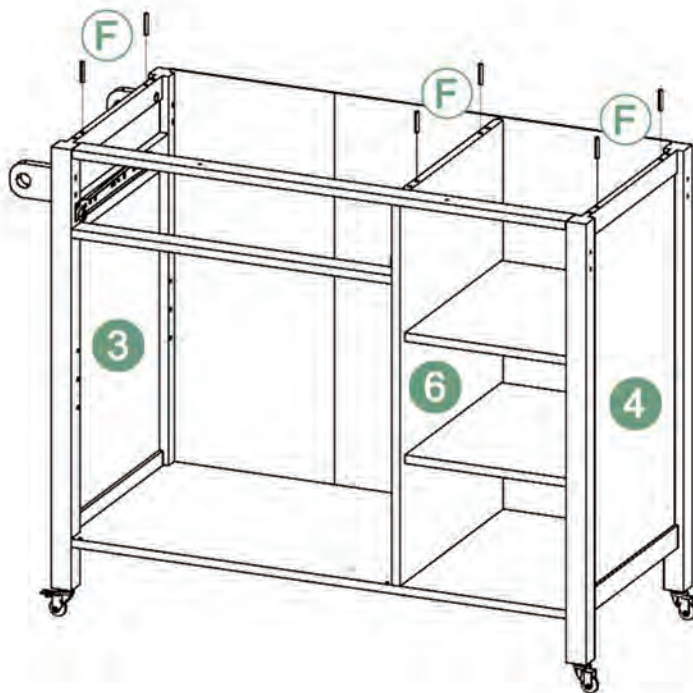


16.

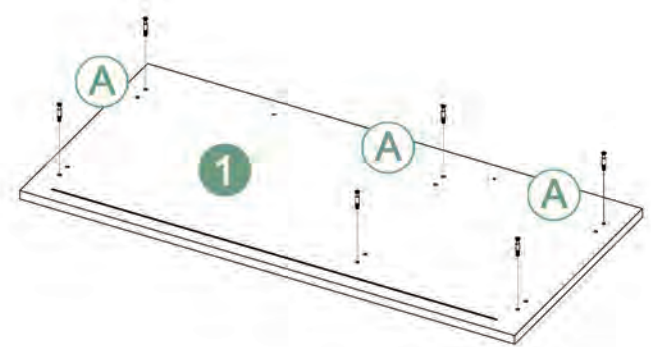


17.

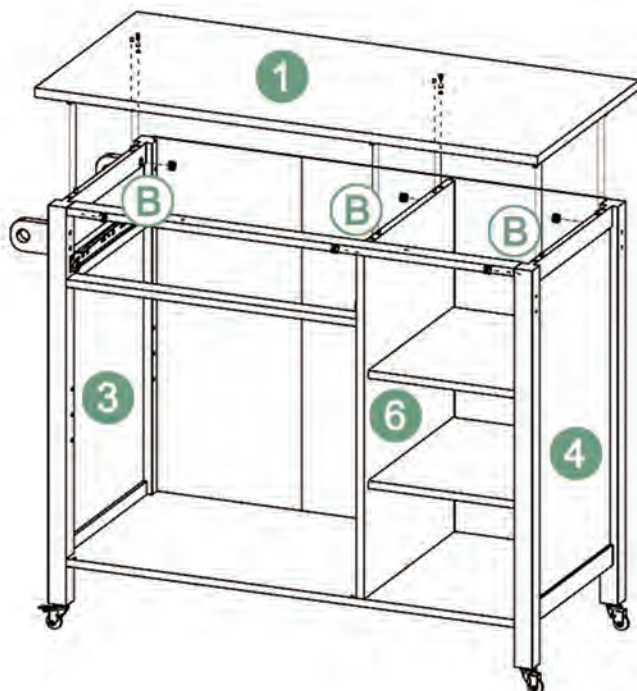


18.

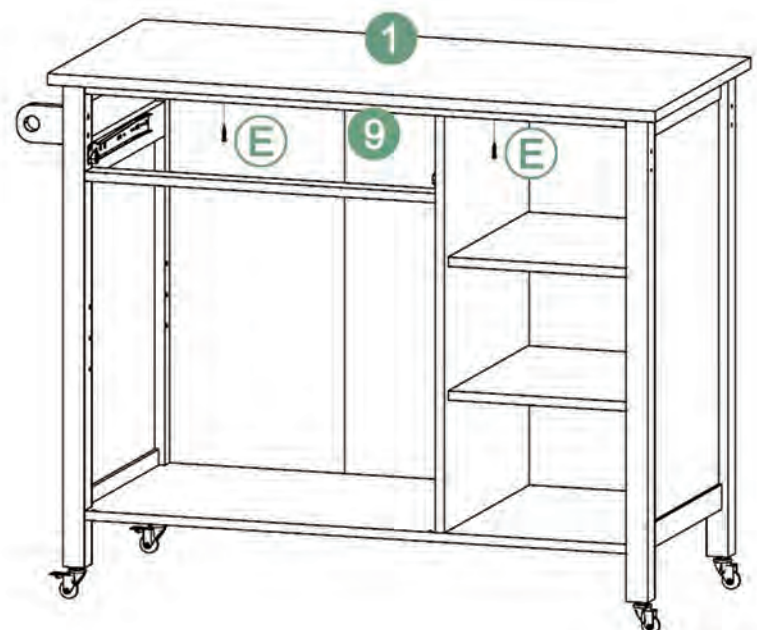


19.

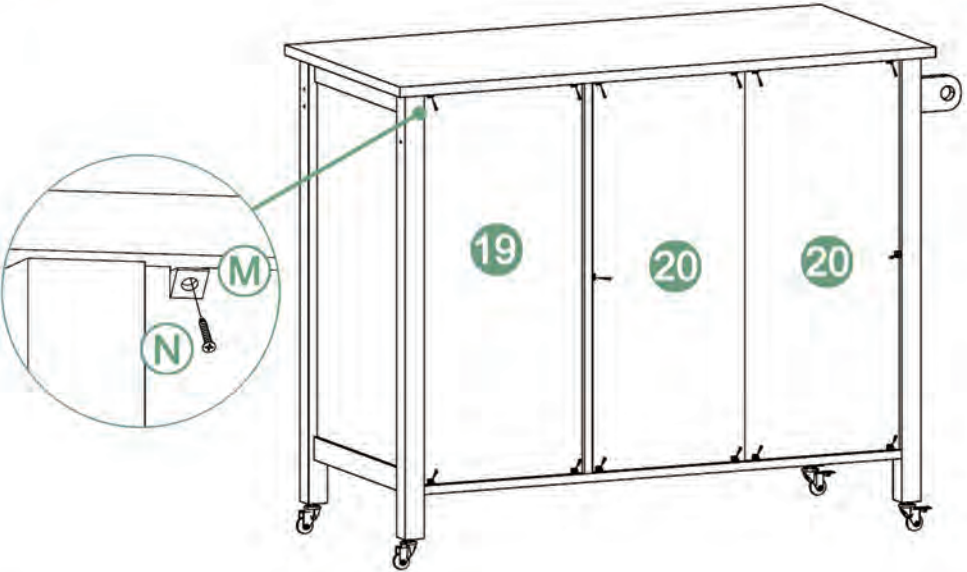


20.

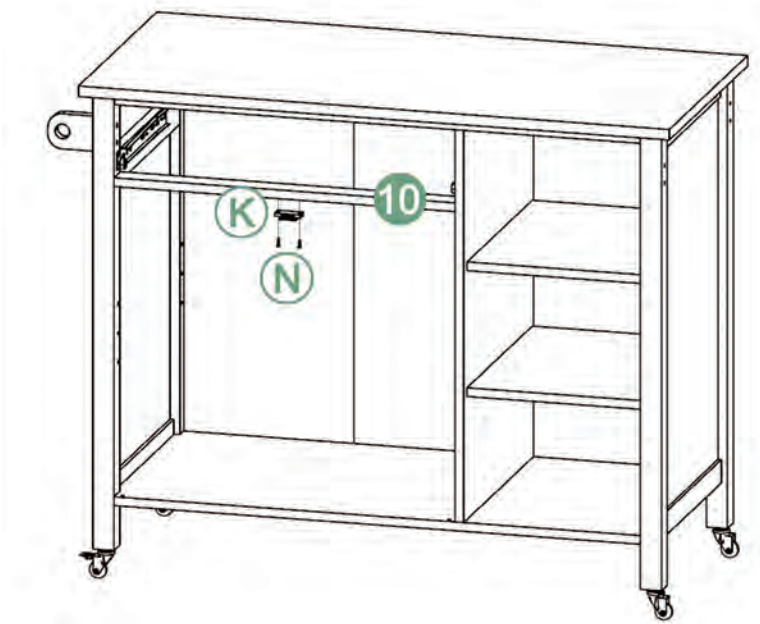


21.

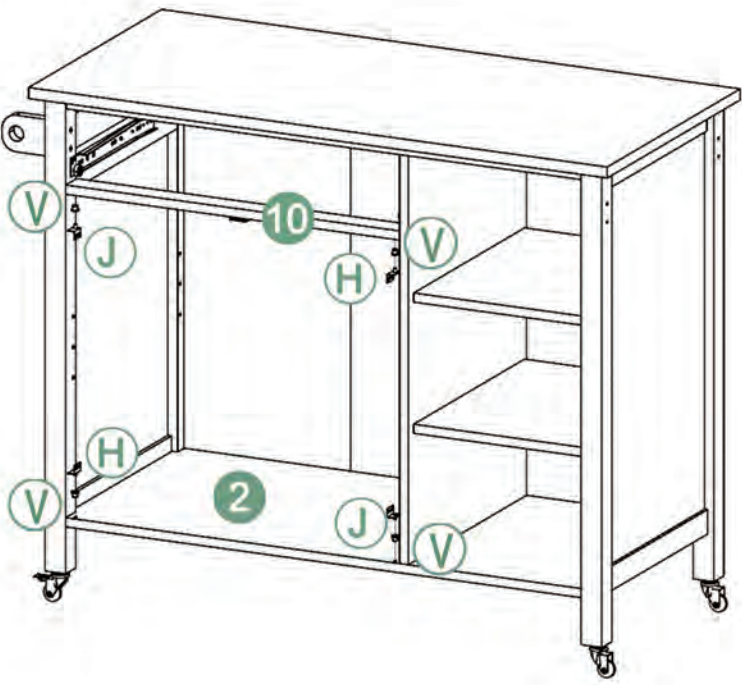


22.

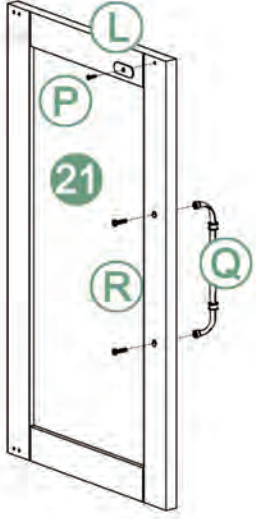


23.

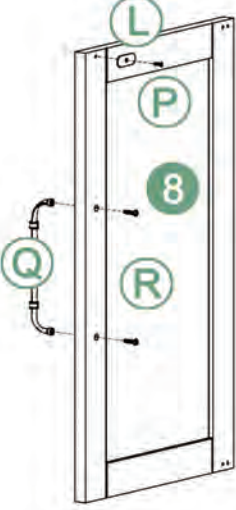


24.

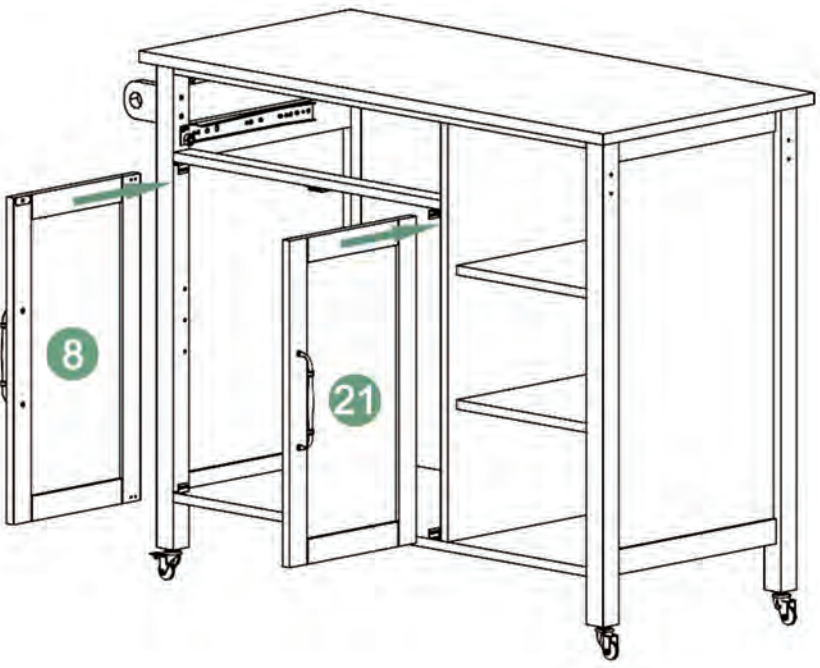


25.

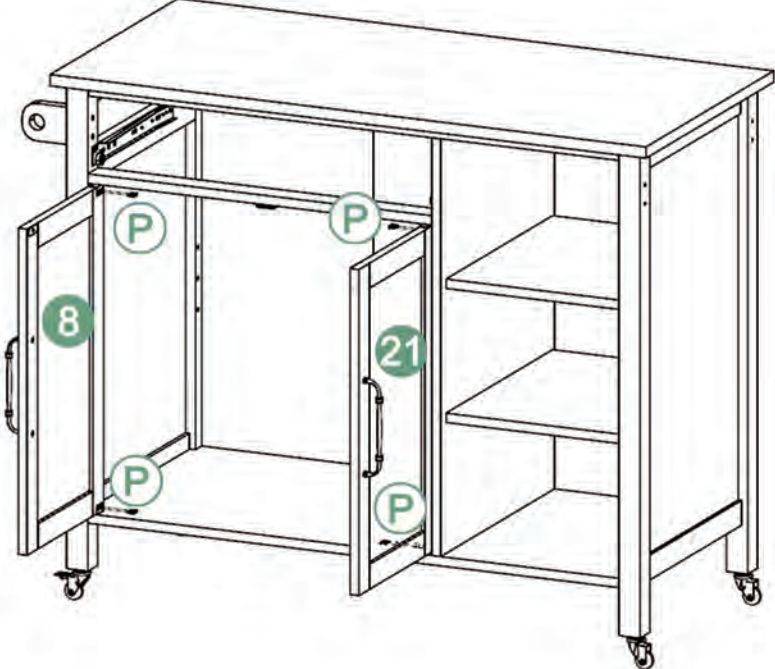

26.

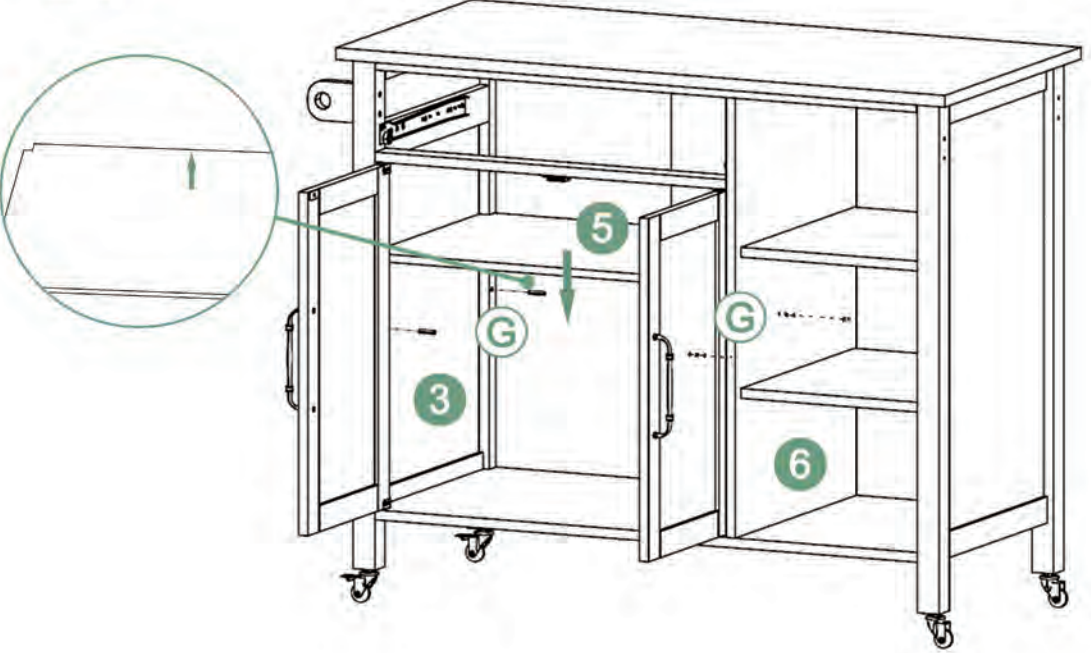


27a.

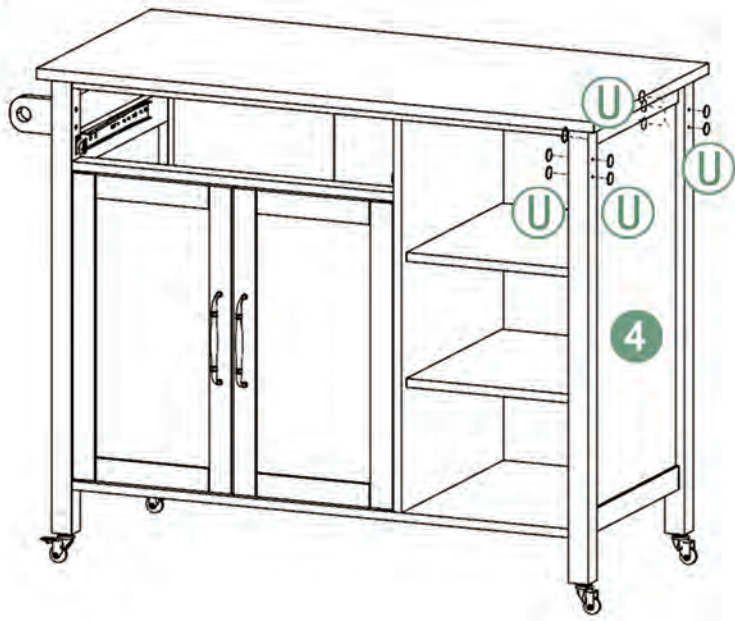


28a.




29.

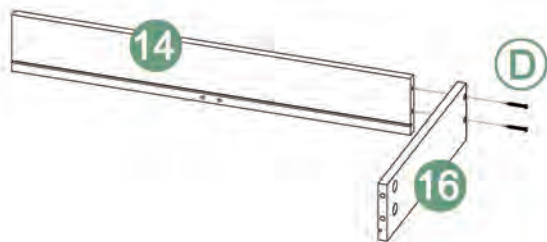


30.

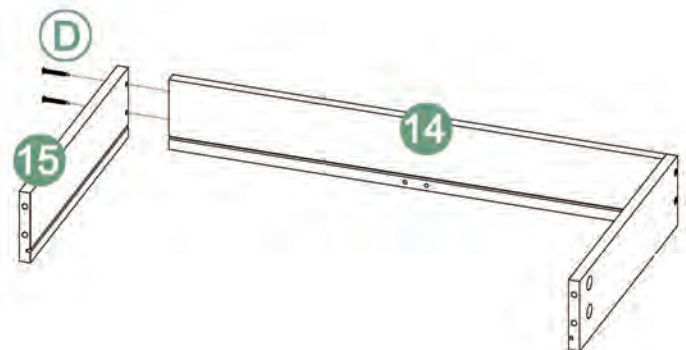


31.

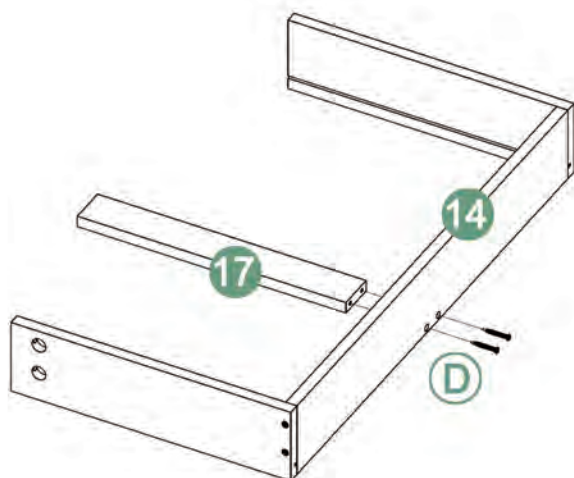


32.

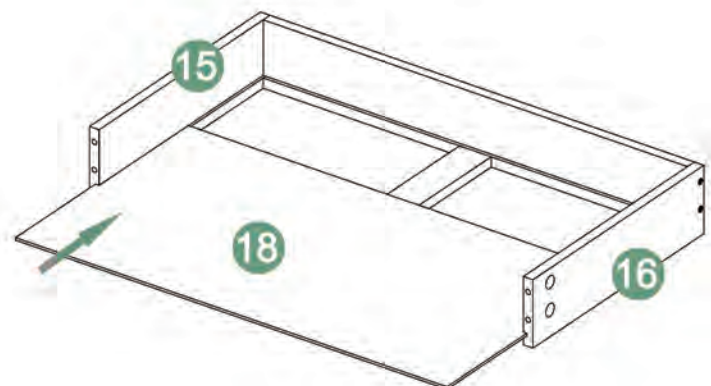


33.

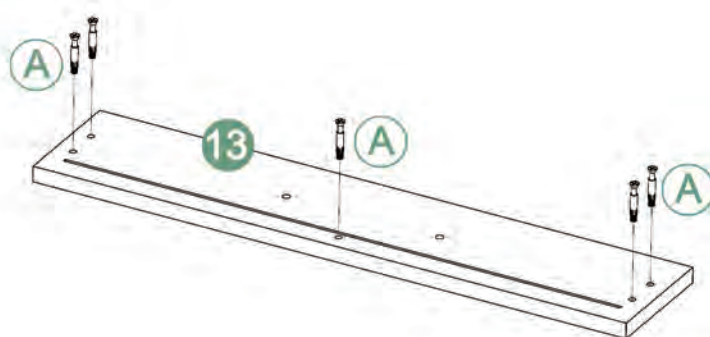


34.

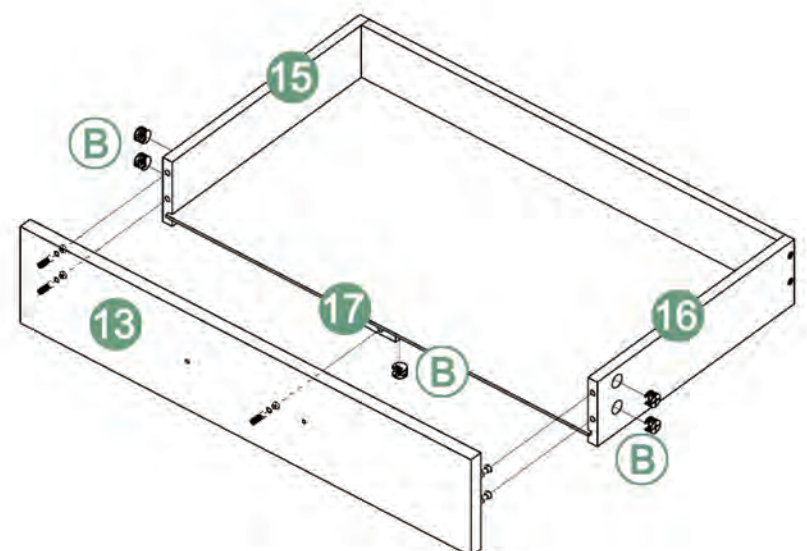


35.

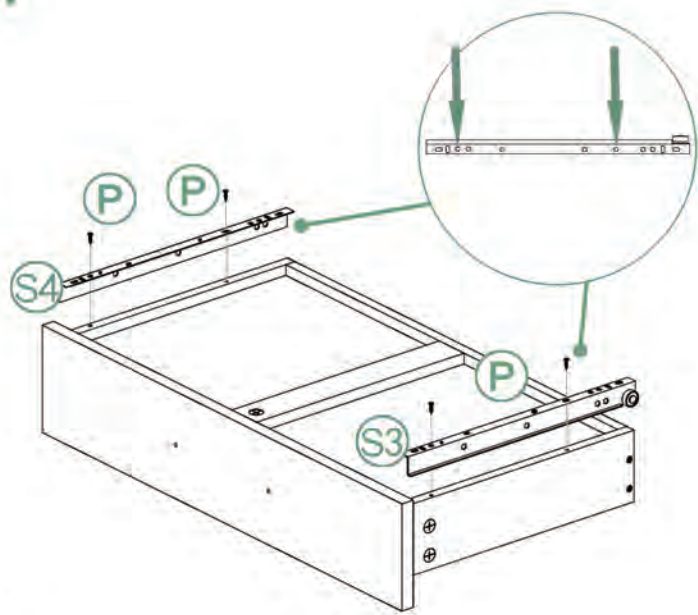


36.

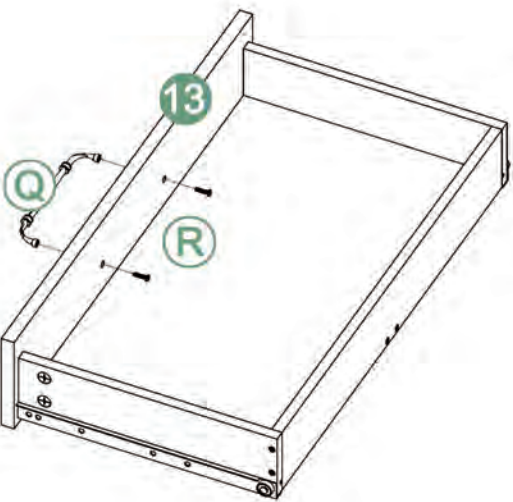


37a.

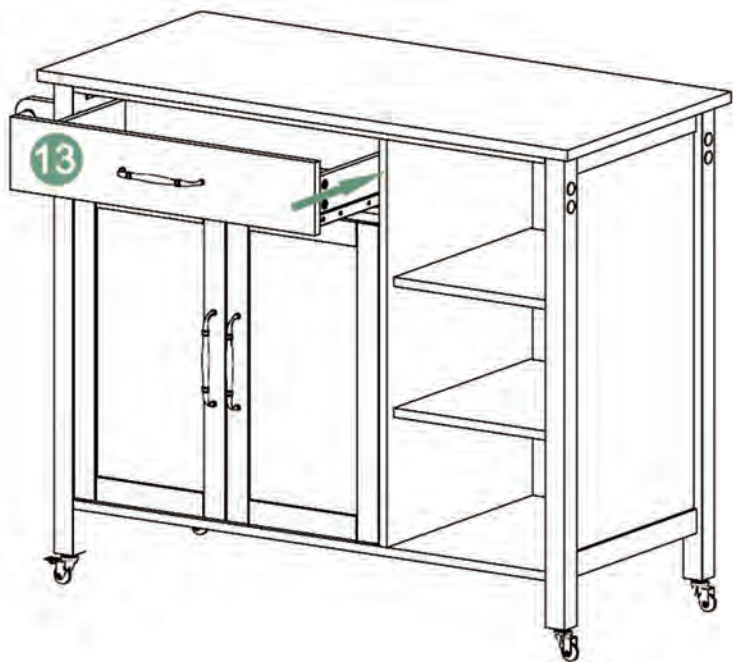


12b.

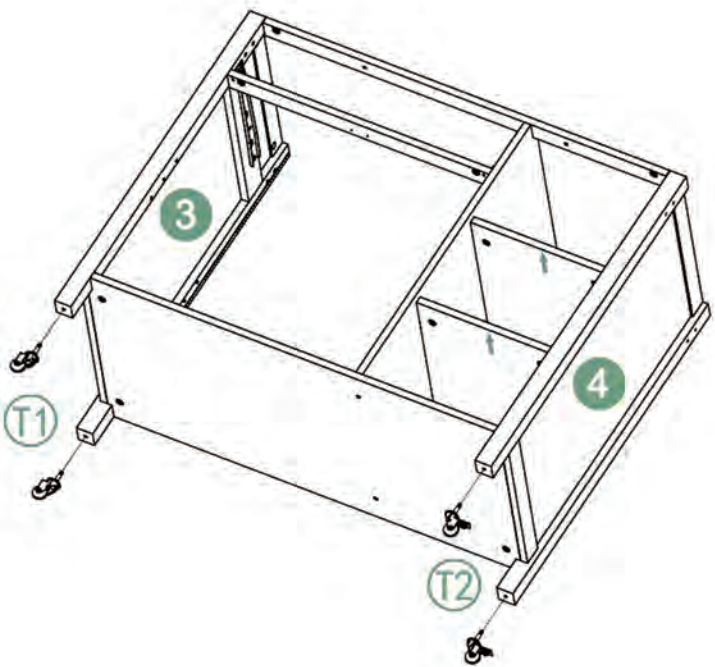


13b.

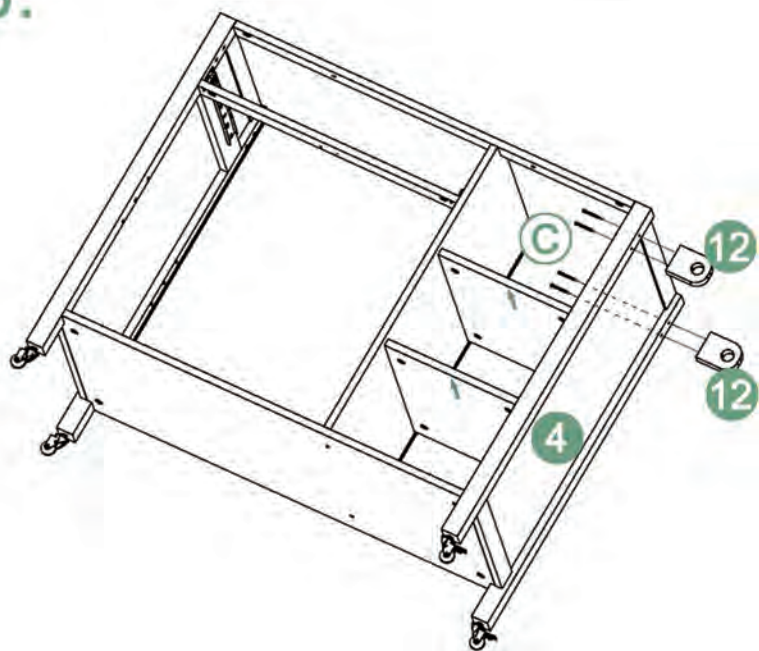

27b.

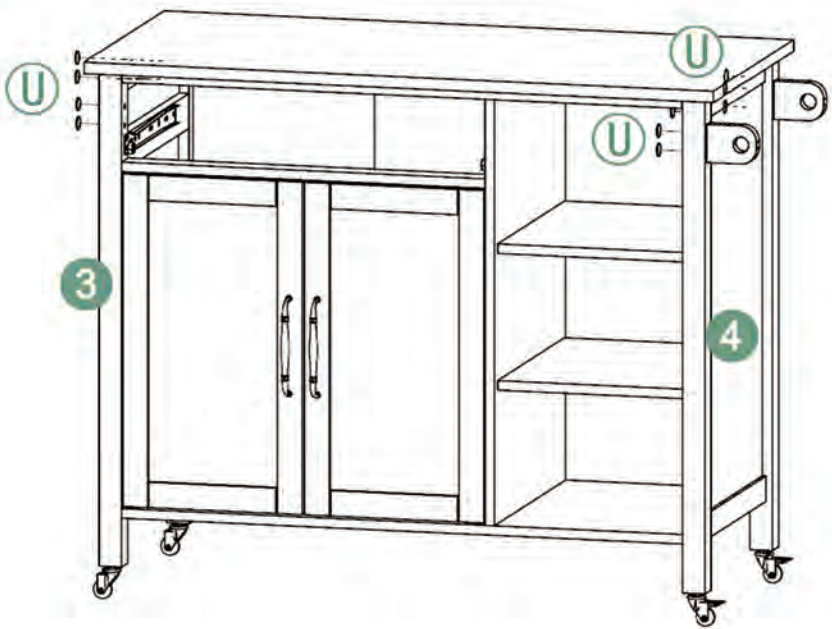

28b.

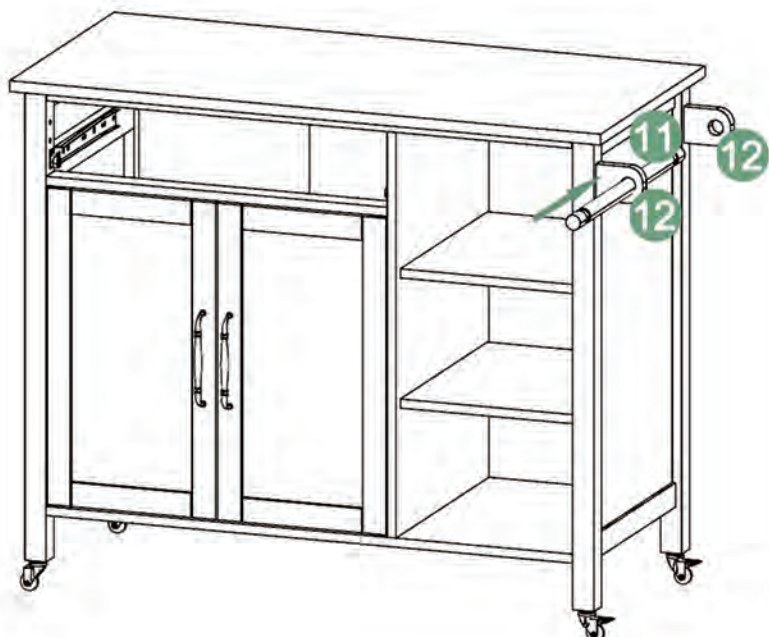

37b.

