


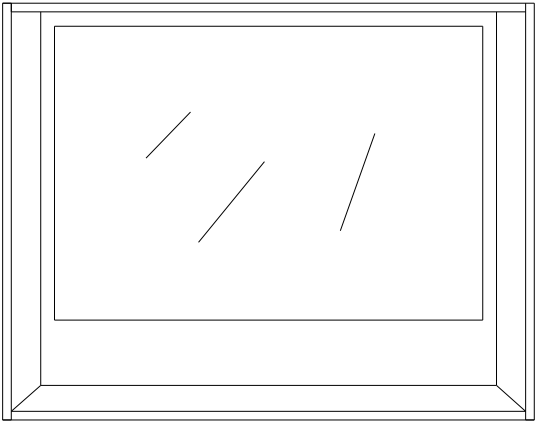


BZR198



SoBuy




TOOLS:




Pour en savoir plus:
www.quefairedemesdechets.fr

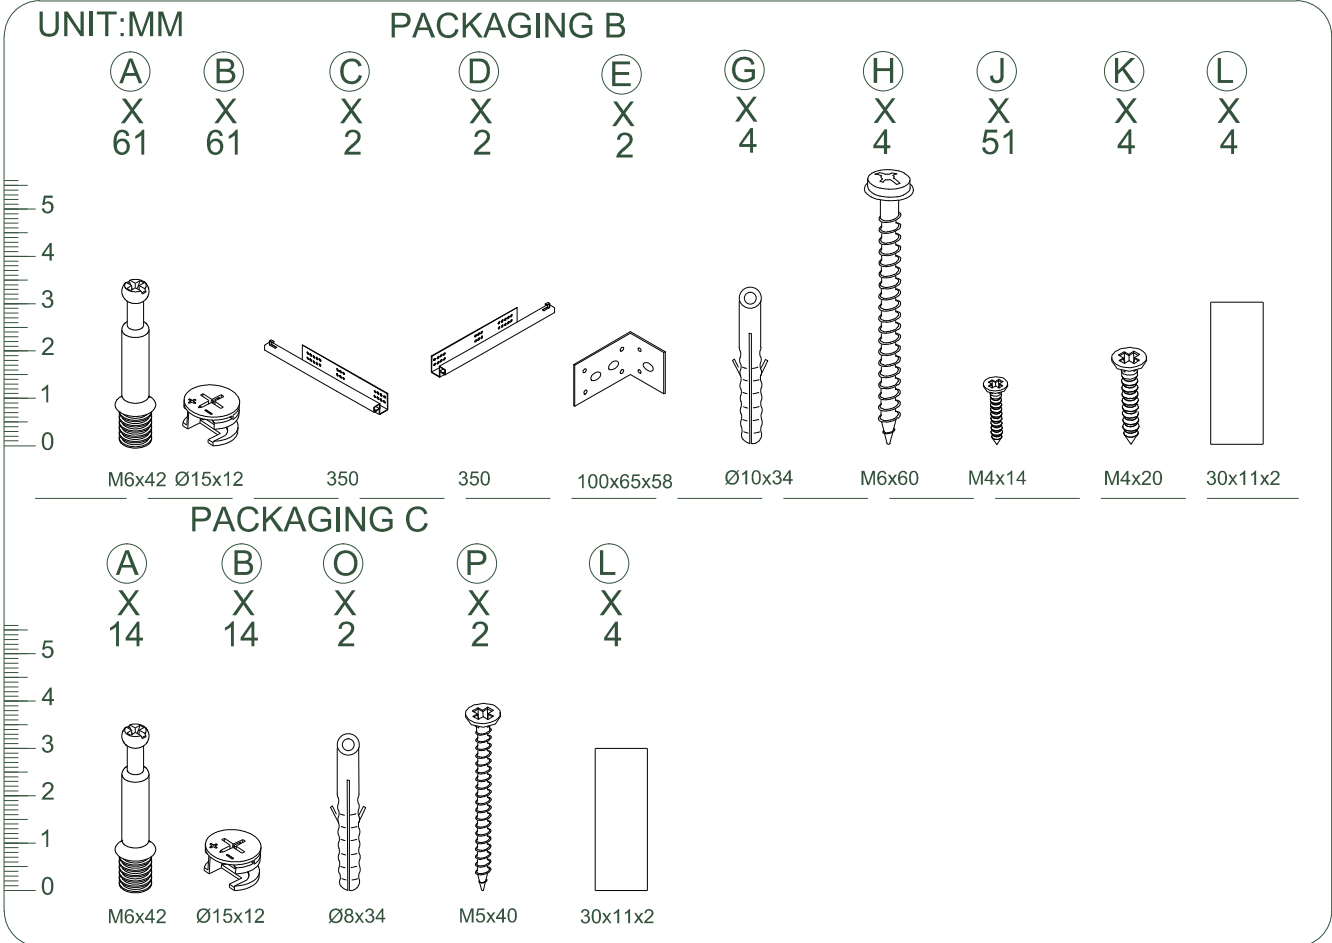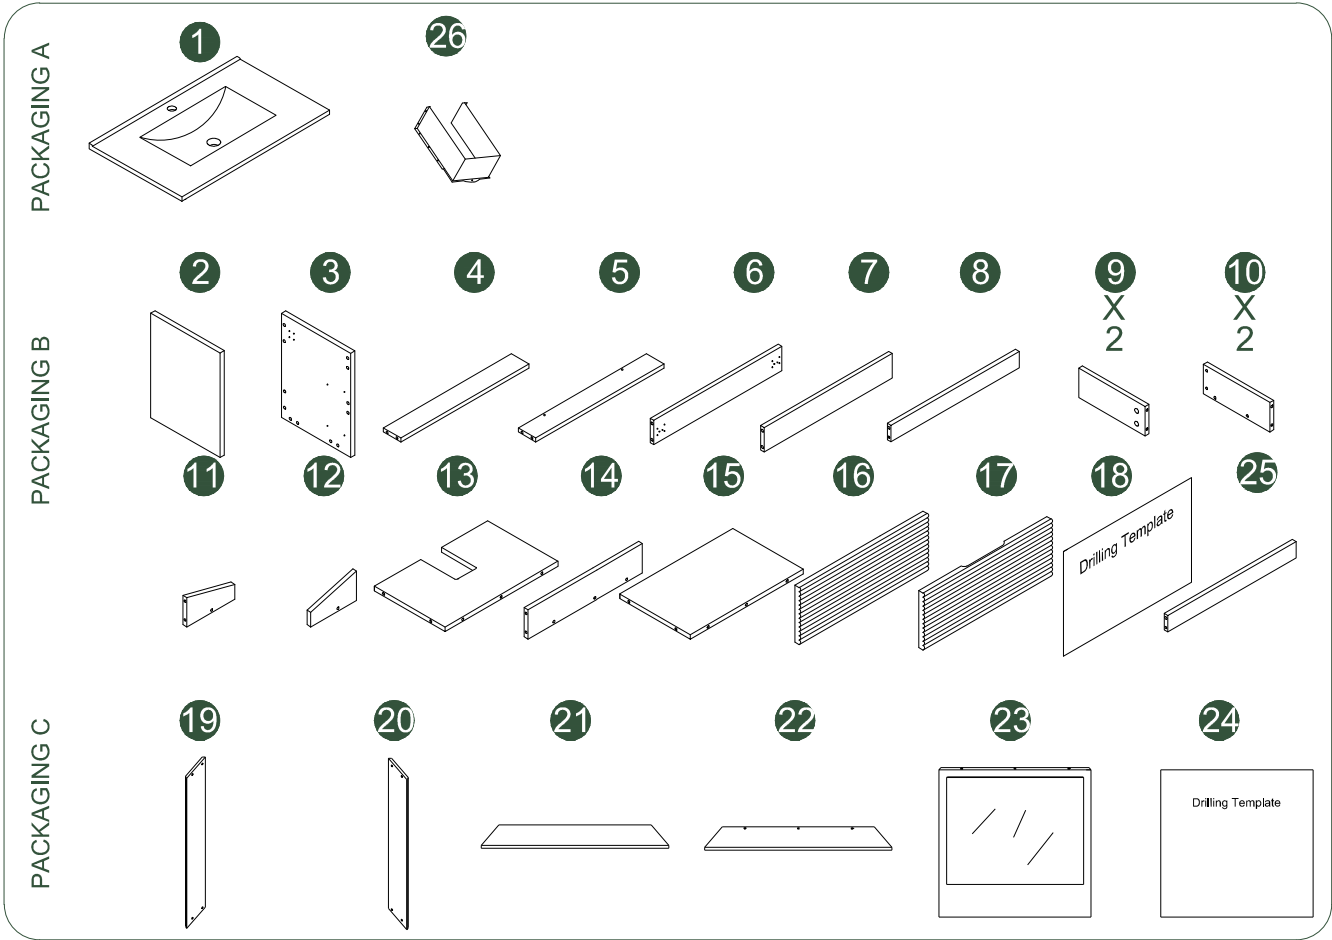


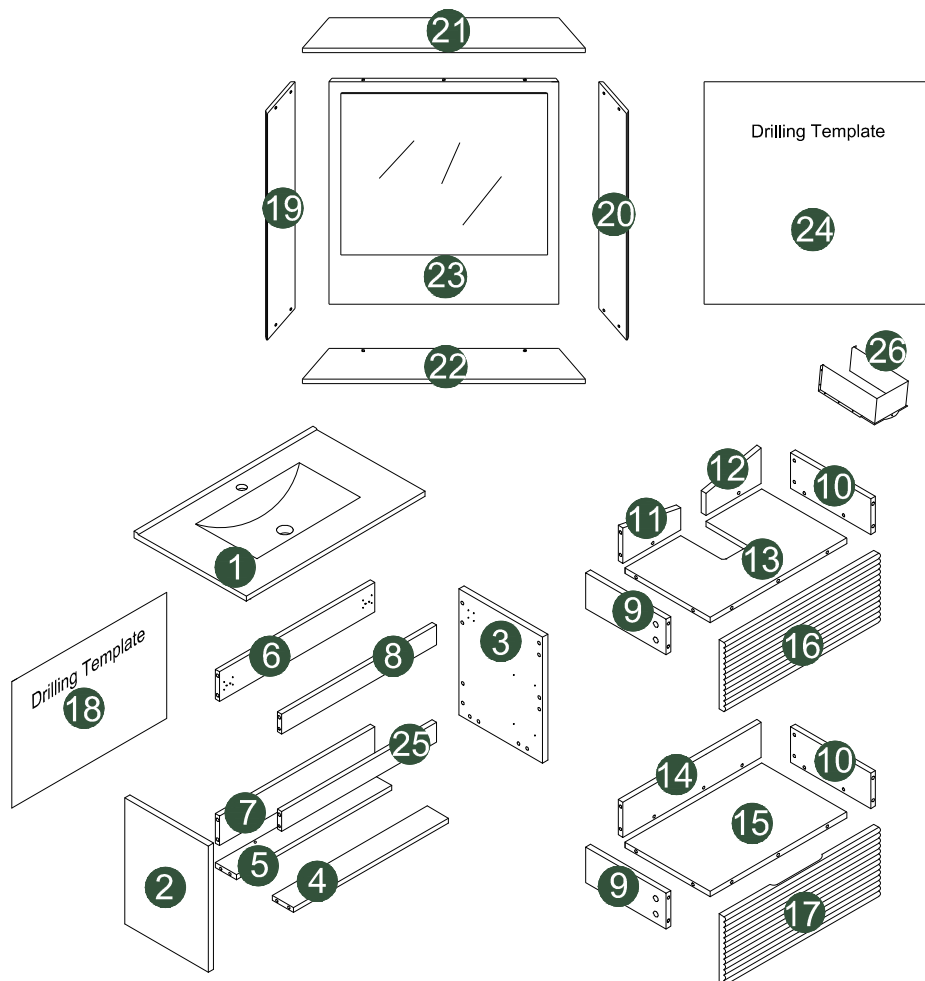


BOLT INSTALLATION AS BELOW:

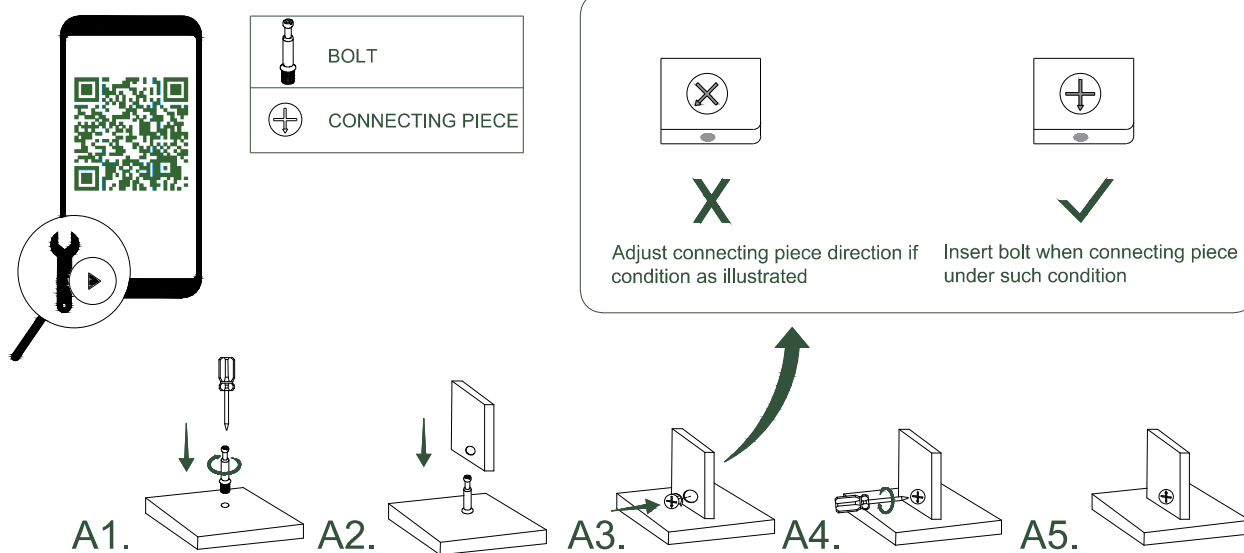


1.

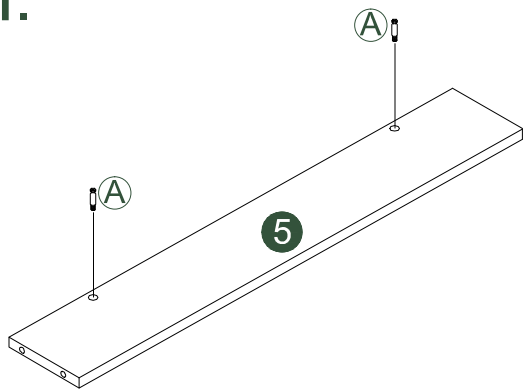


2.

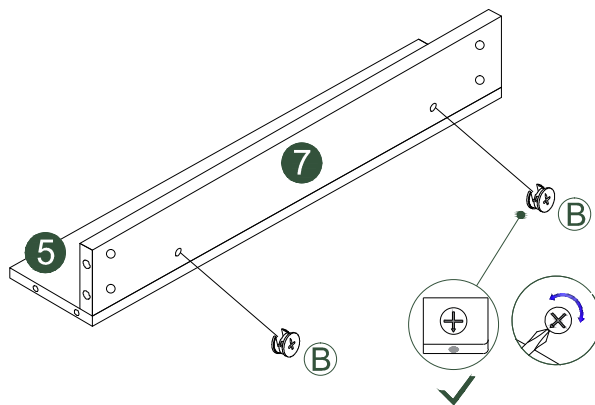


3.

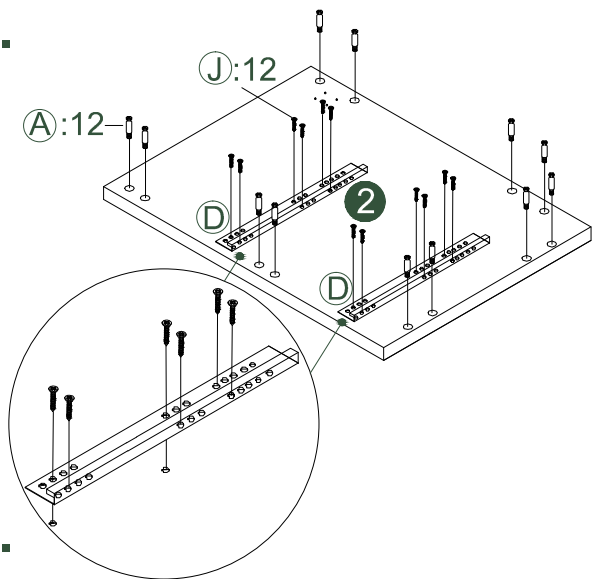


4.

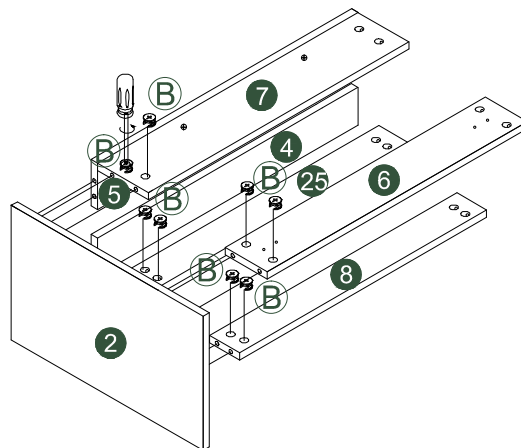


5.

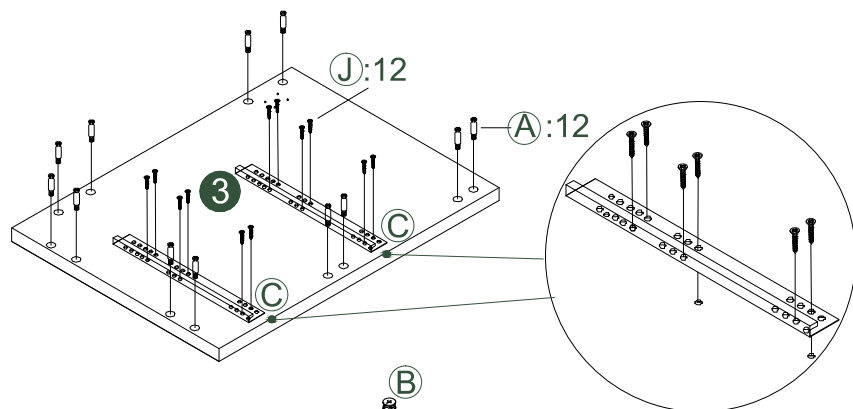


6.

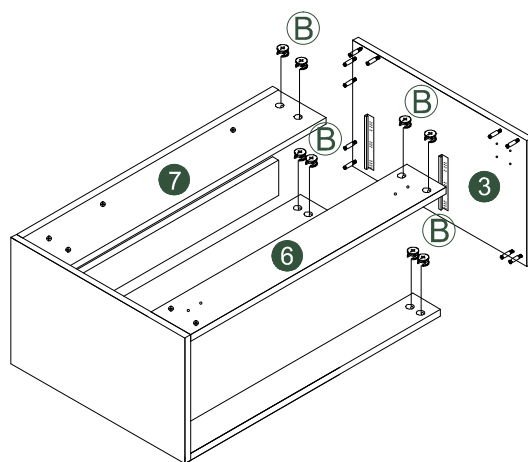


7.

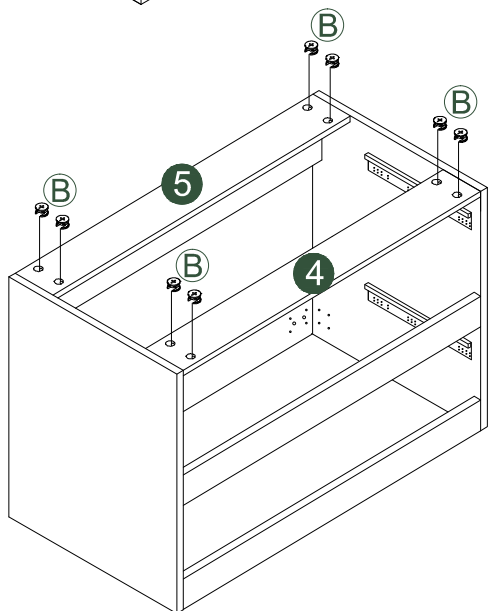


8.

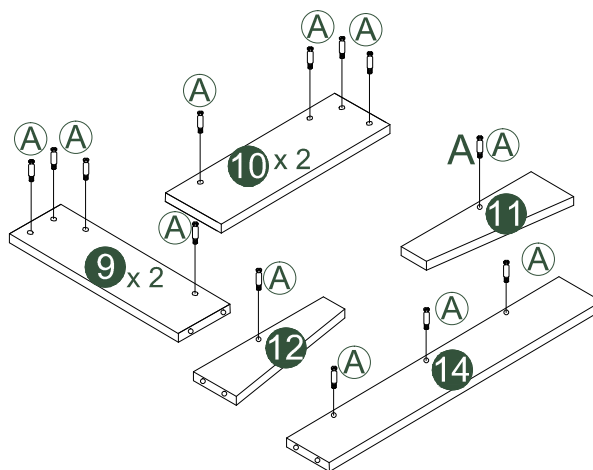


9.

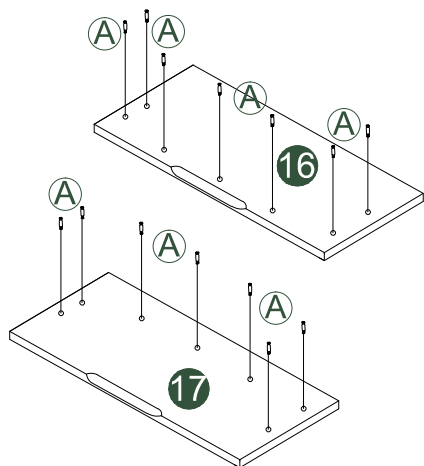


10.

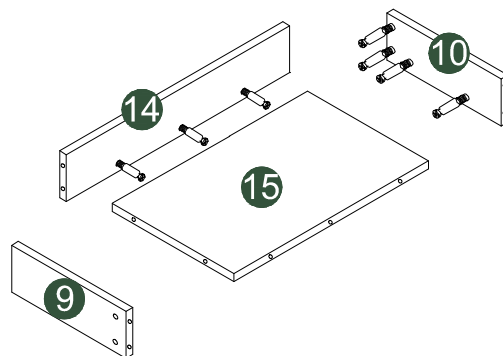


11.

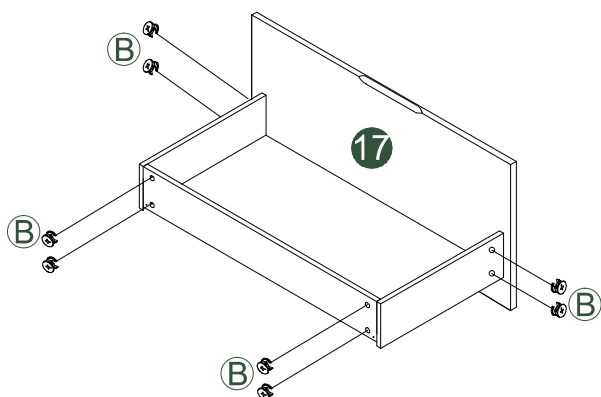


12.

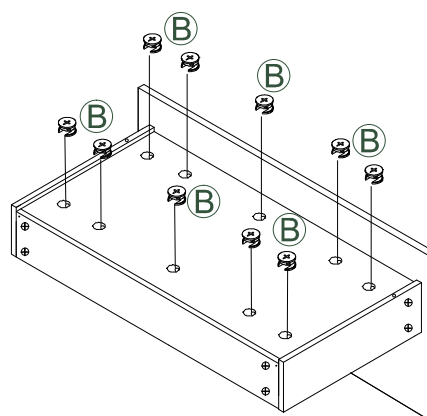


13.

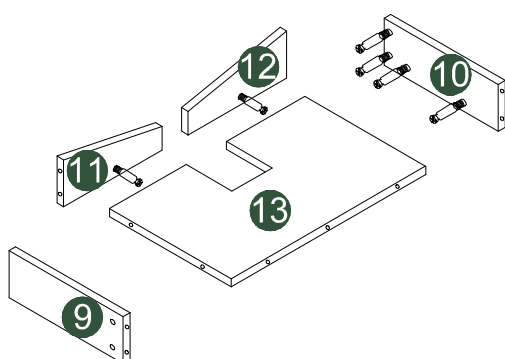


14.

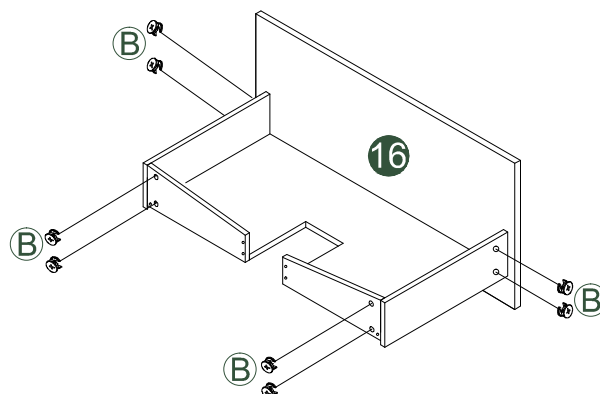


15.

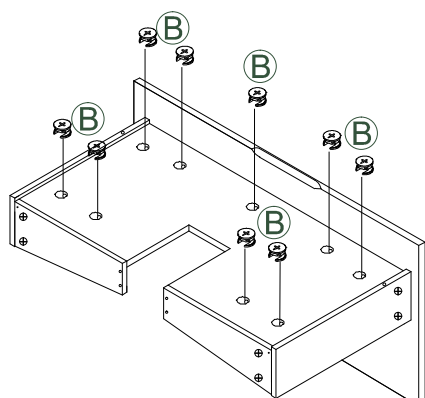


16.

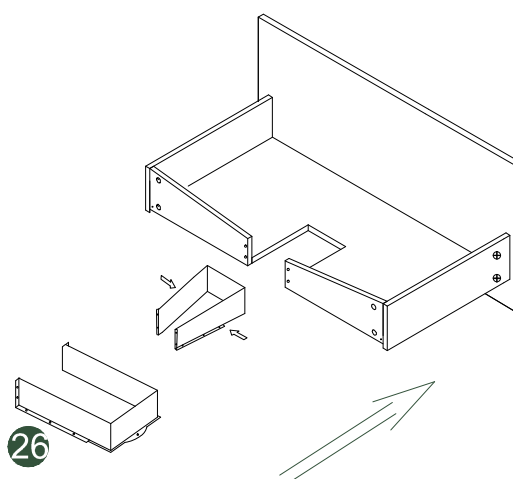


17.

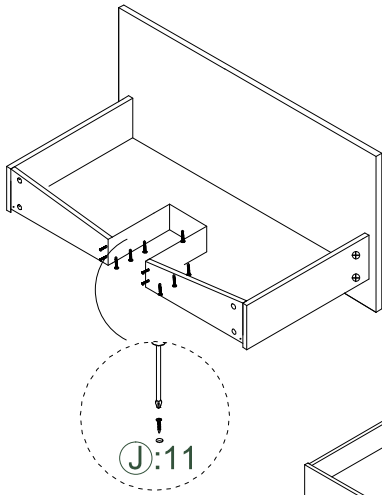

18.

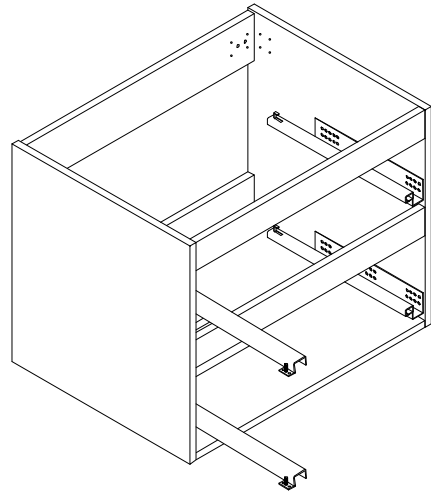


19.

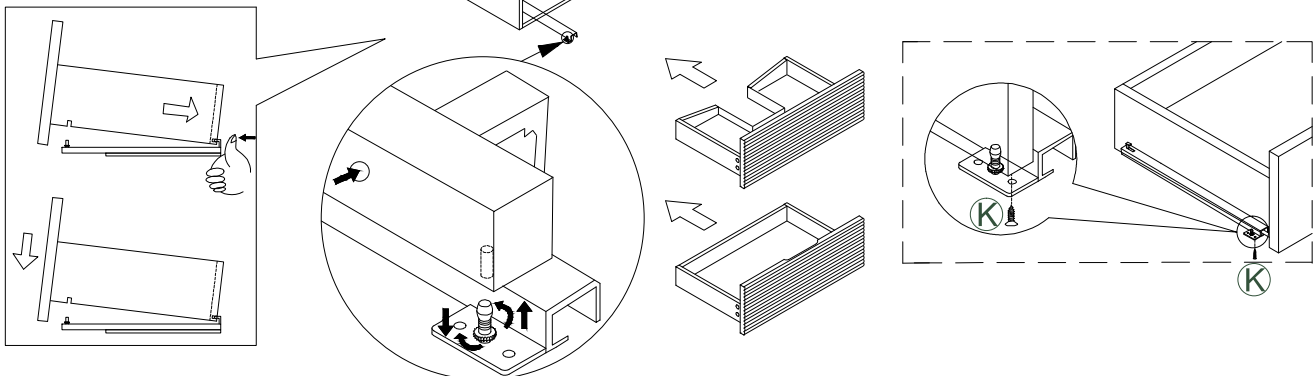


Adjust the drawers up and down


20.

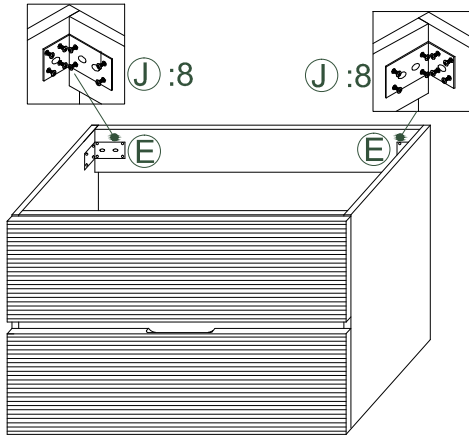


21.

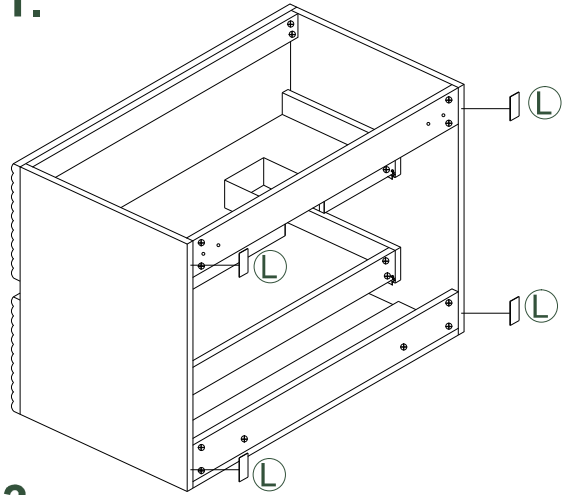


22.

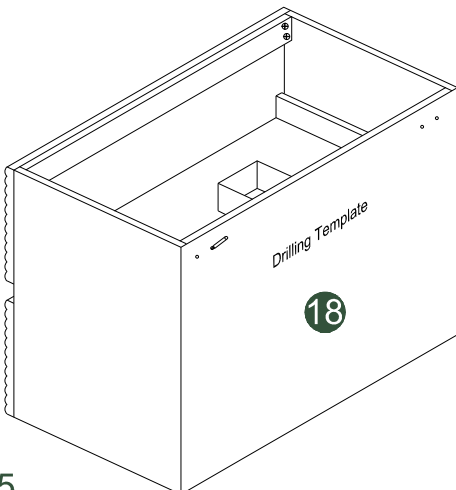


23.

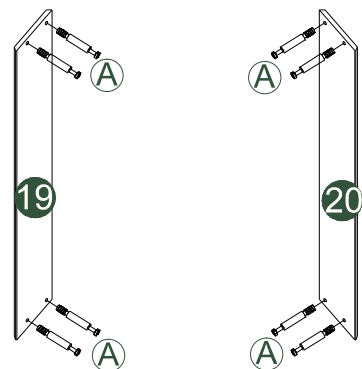


24.

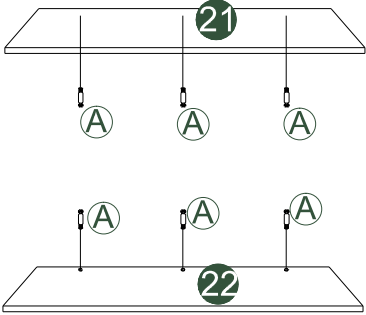


25.

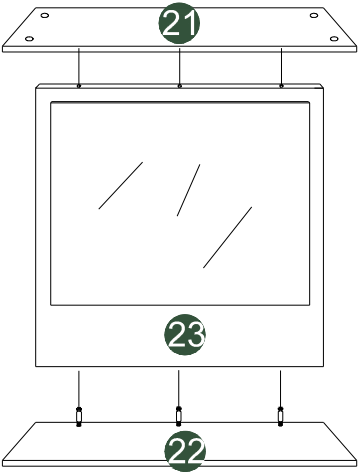


26.

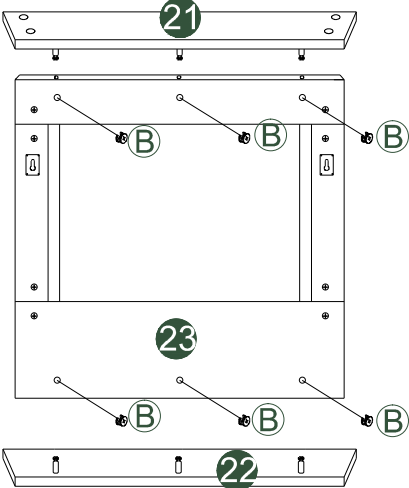


27.

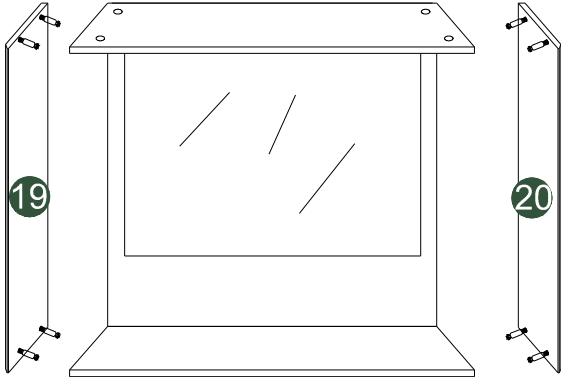


28.

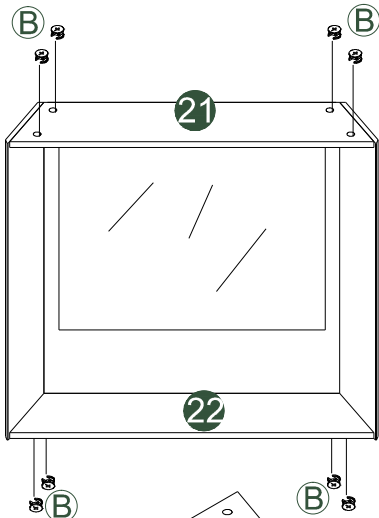


29.

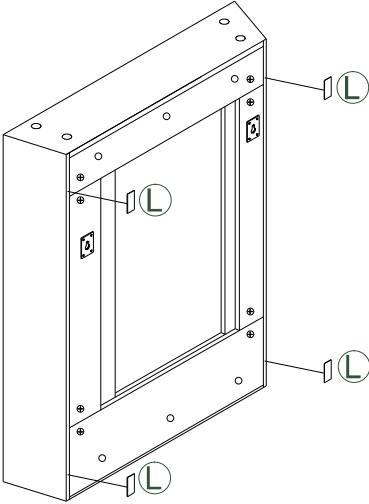


30.

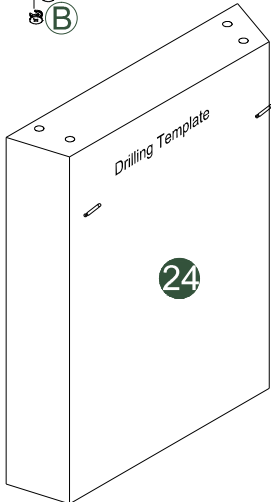


31.

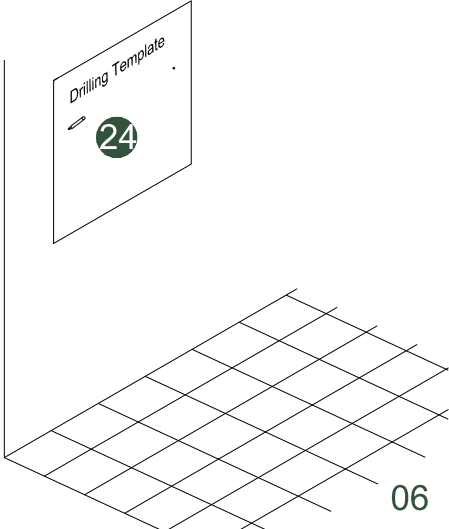


32.

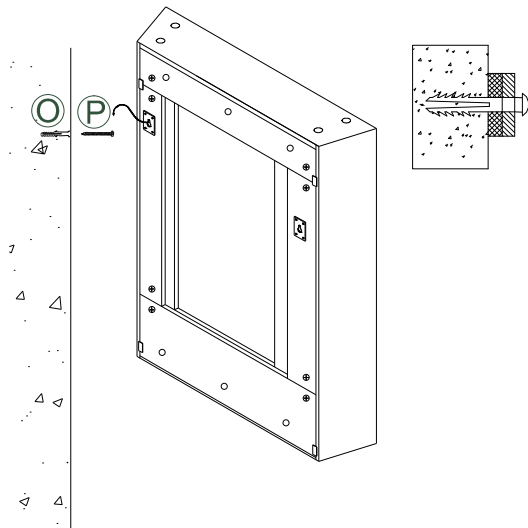


33.

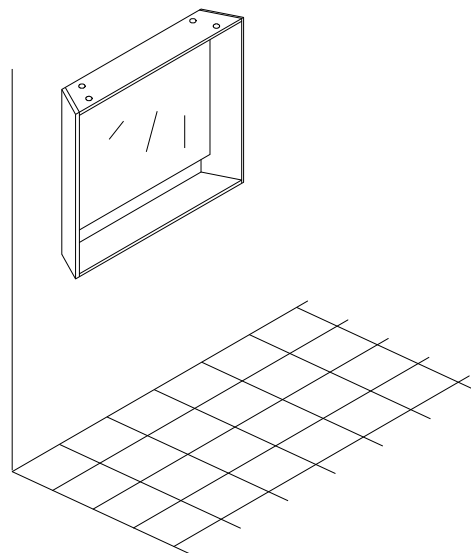


34.

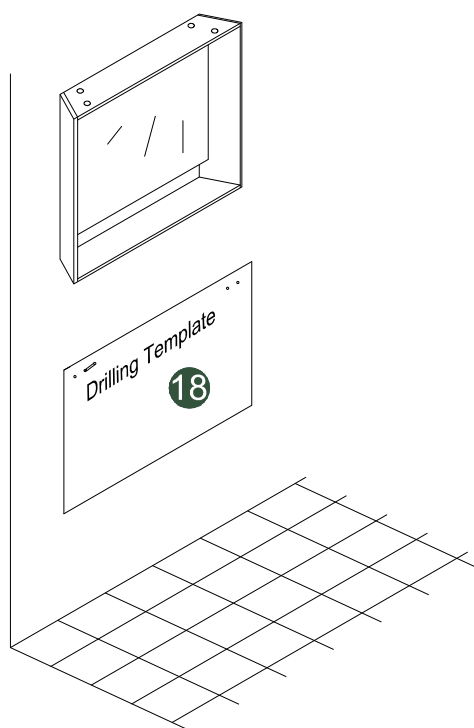

35.

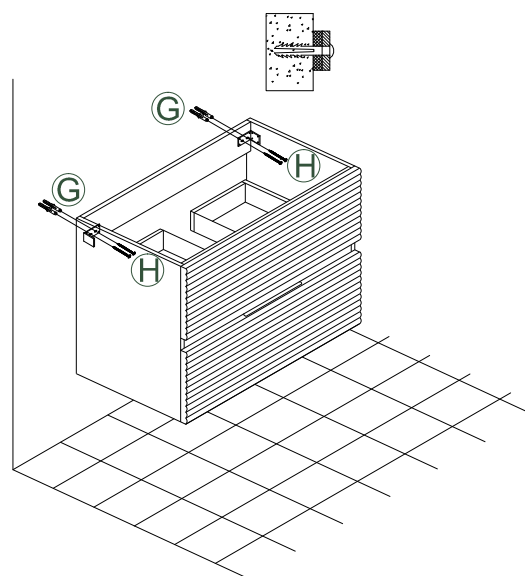

36.

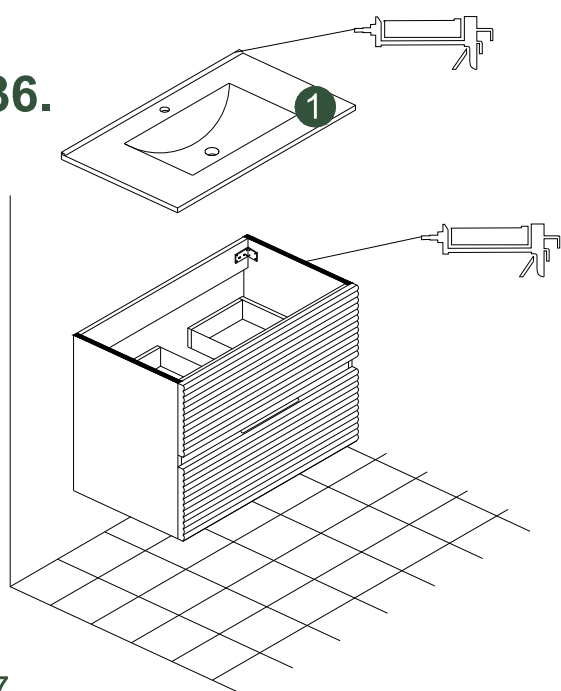

37.

