


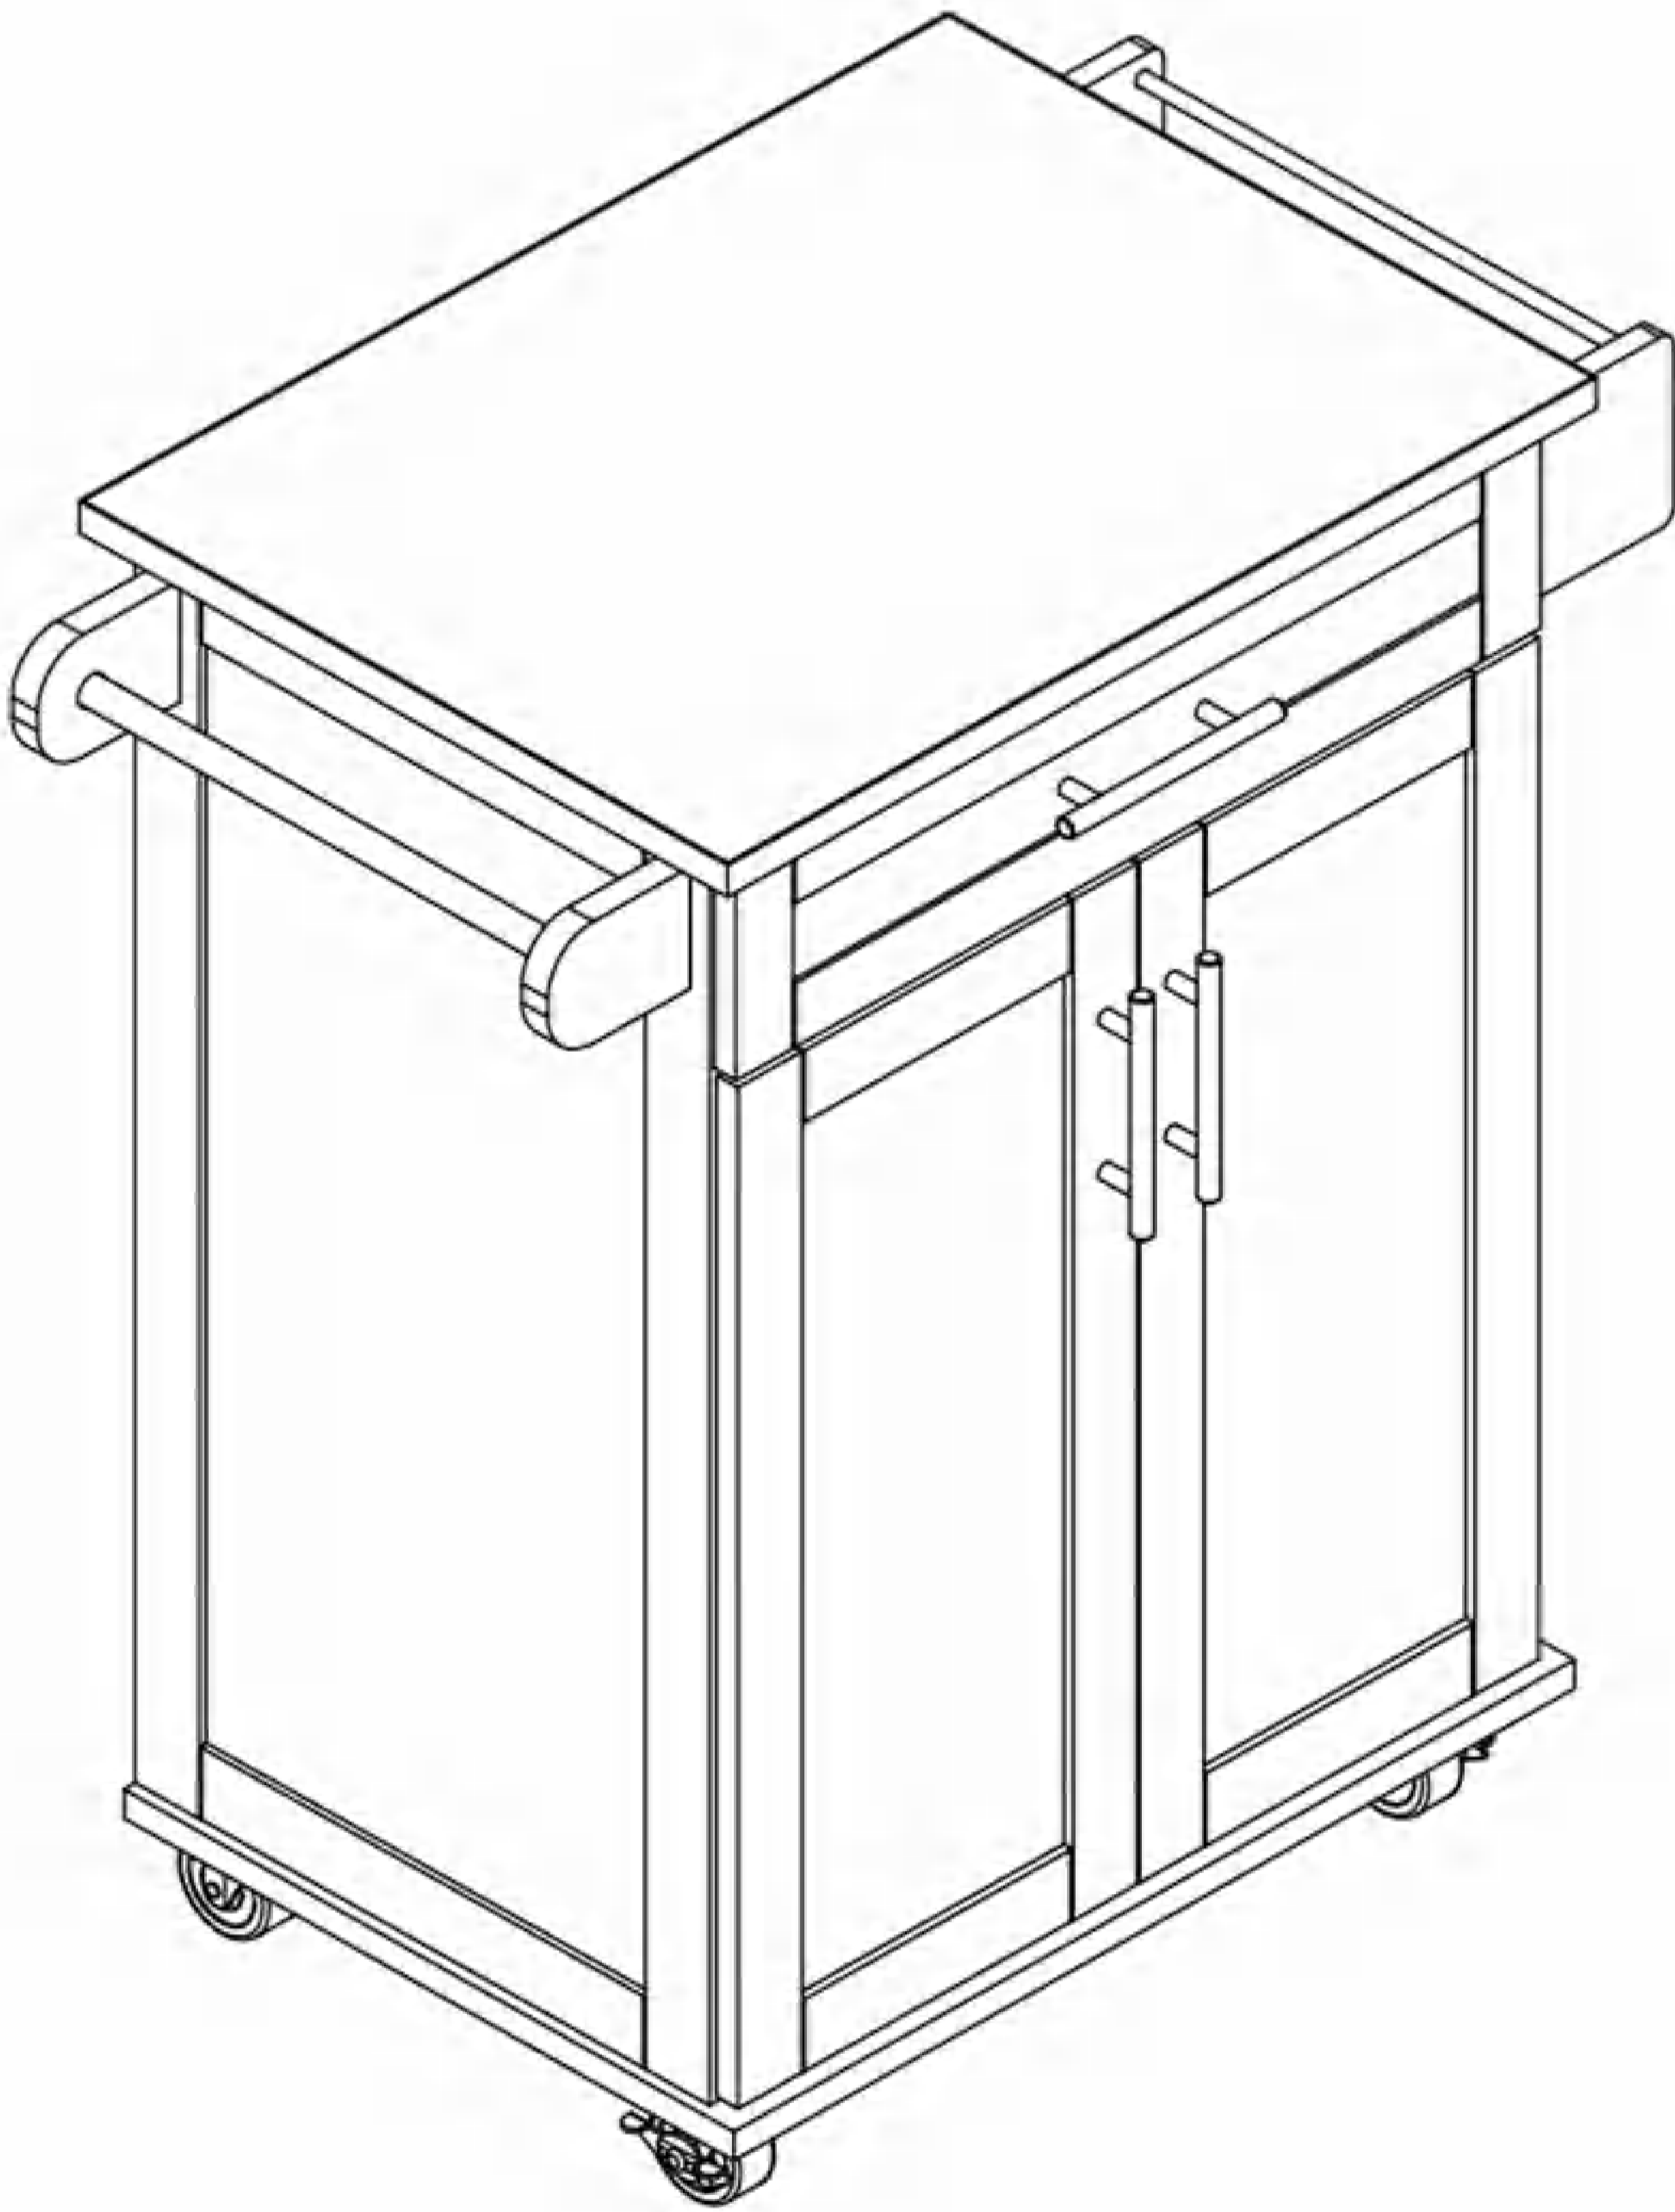


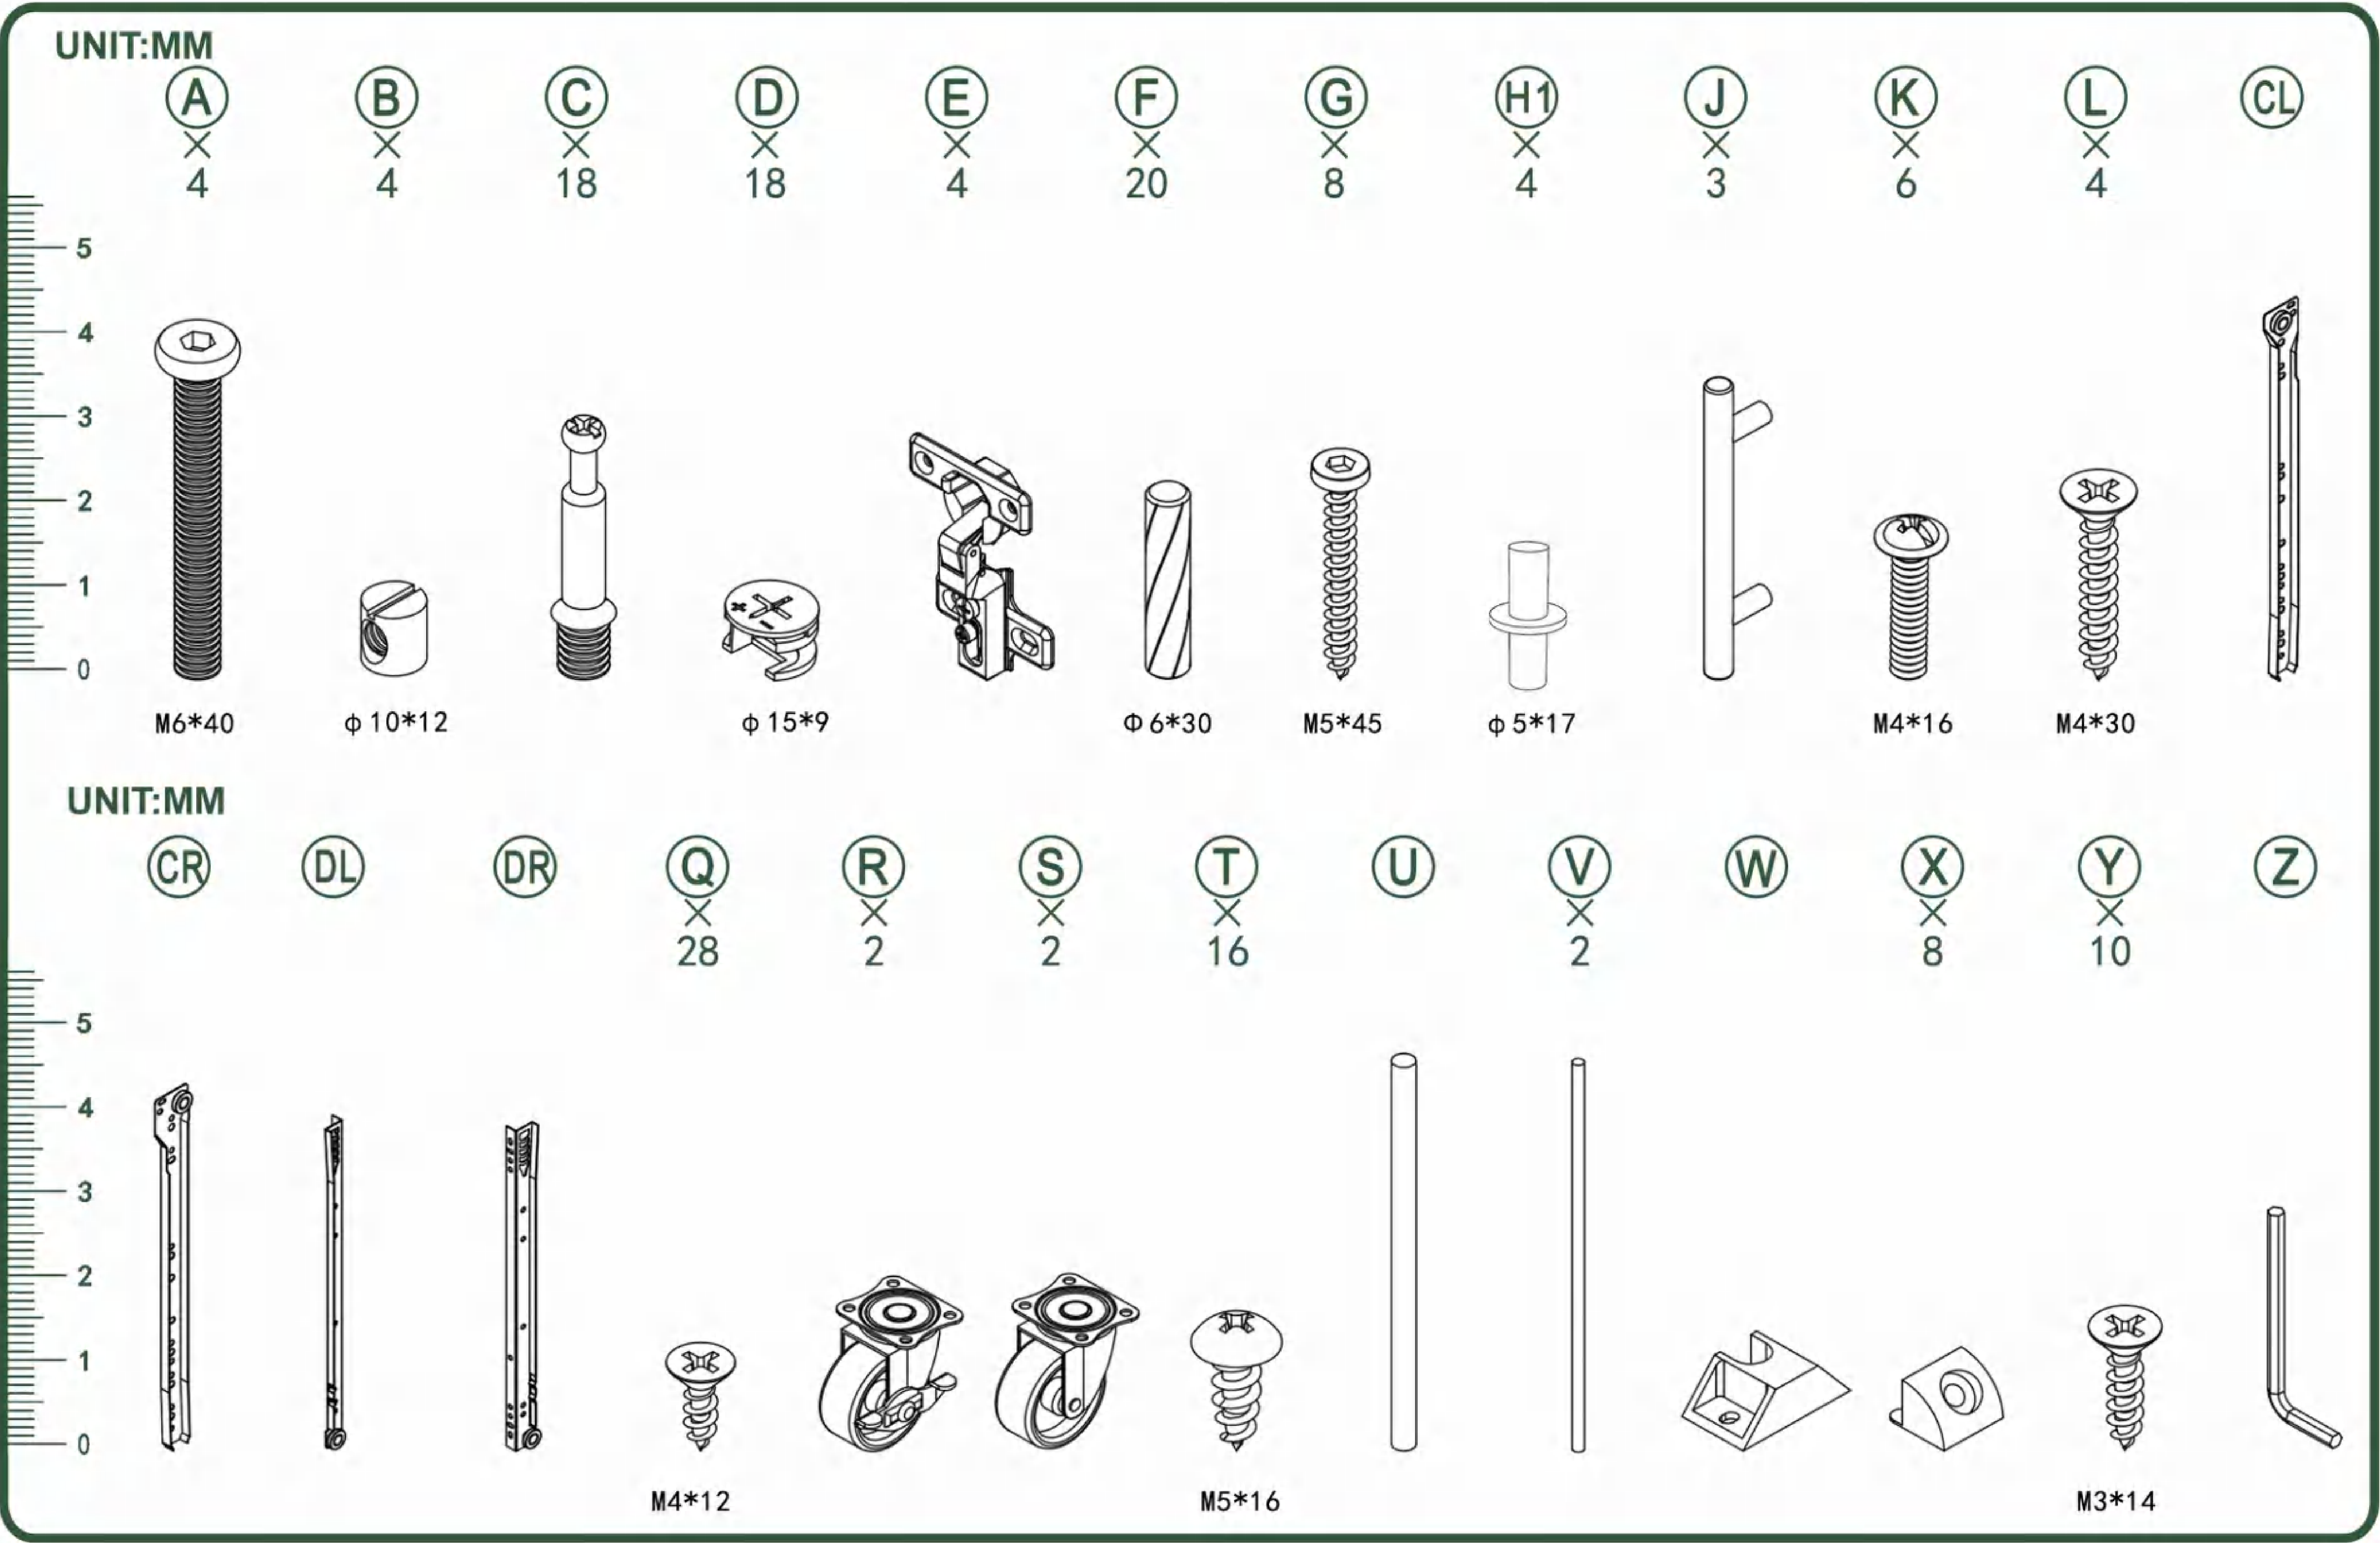


FKW110

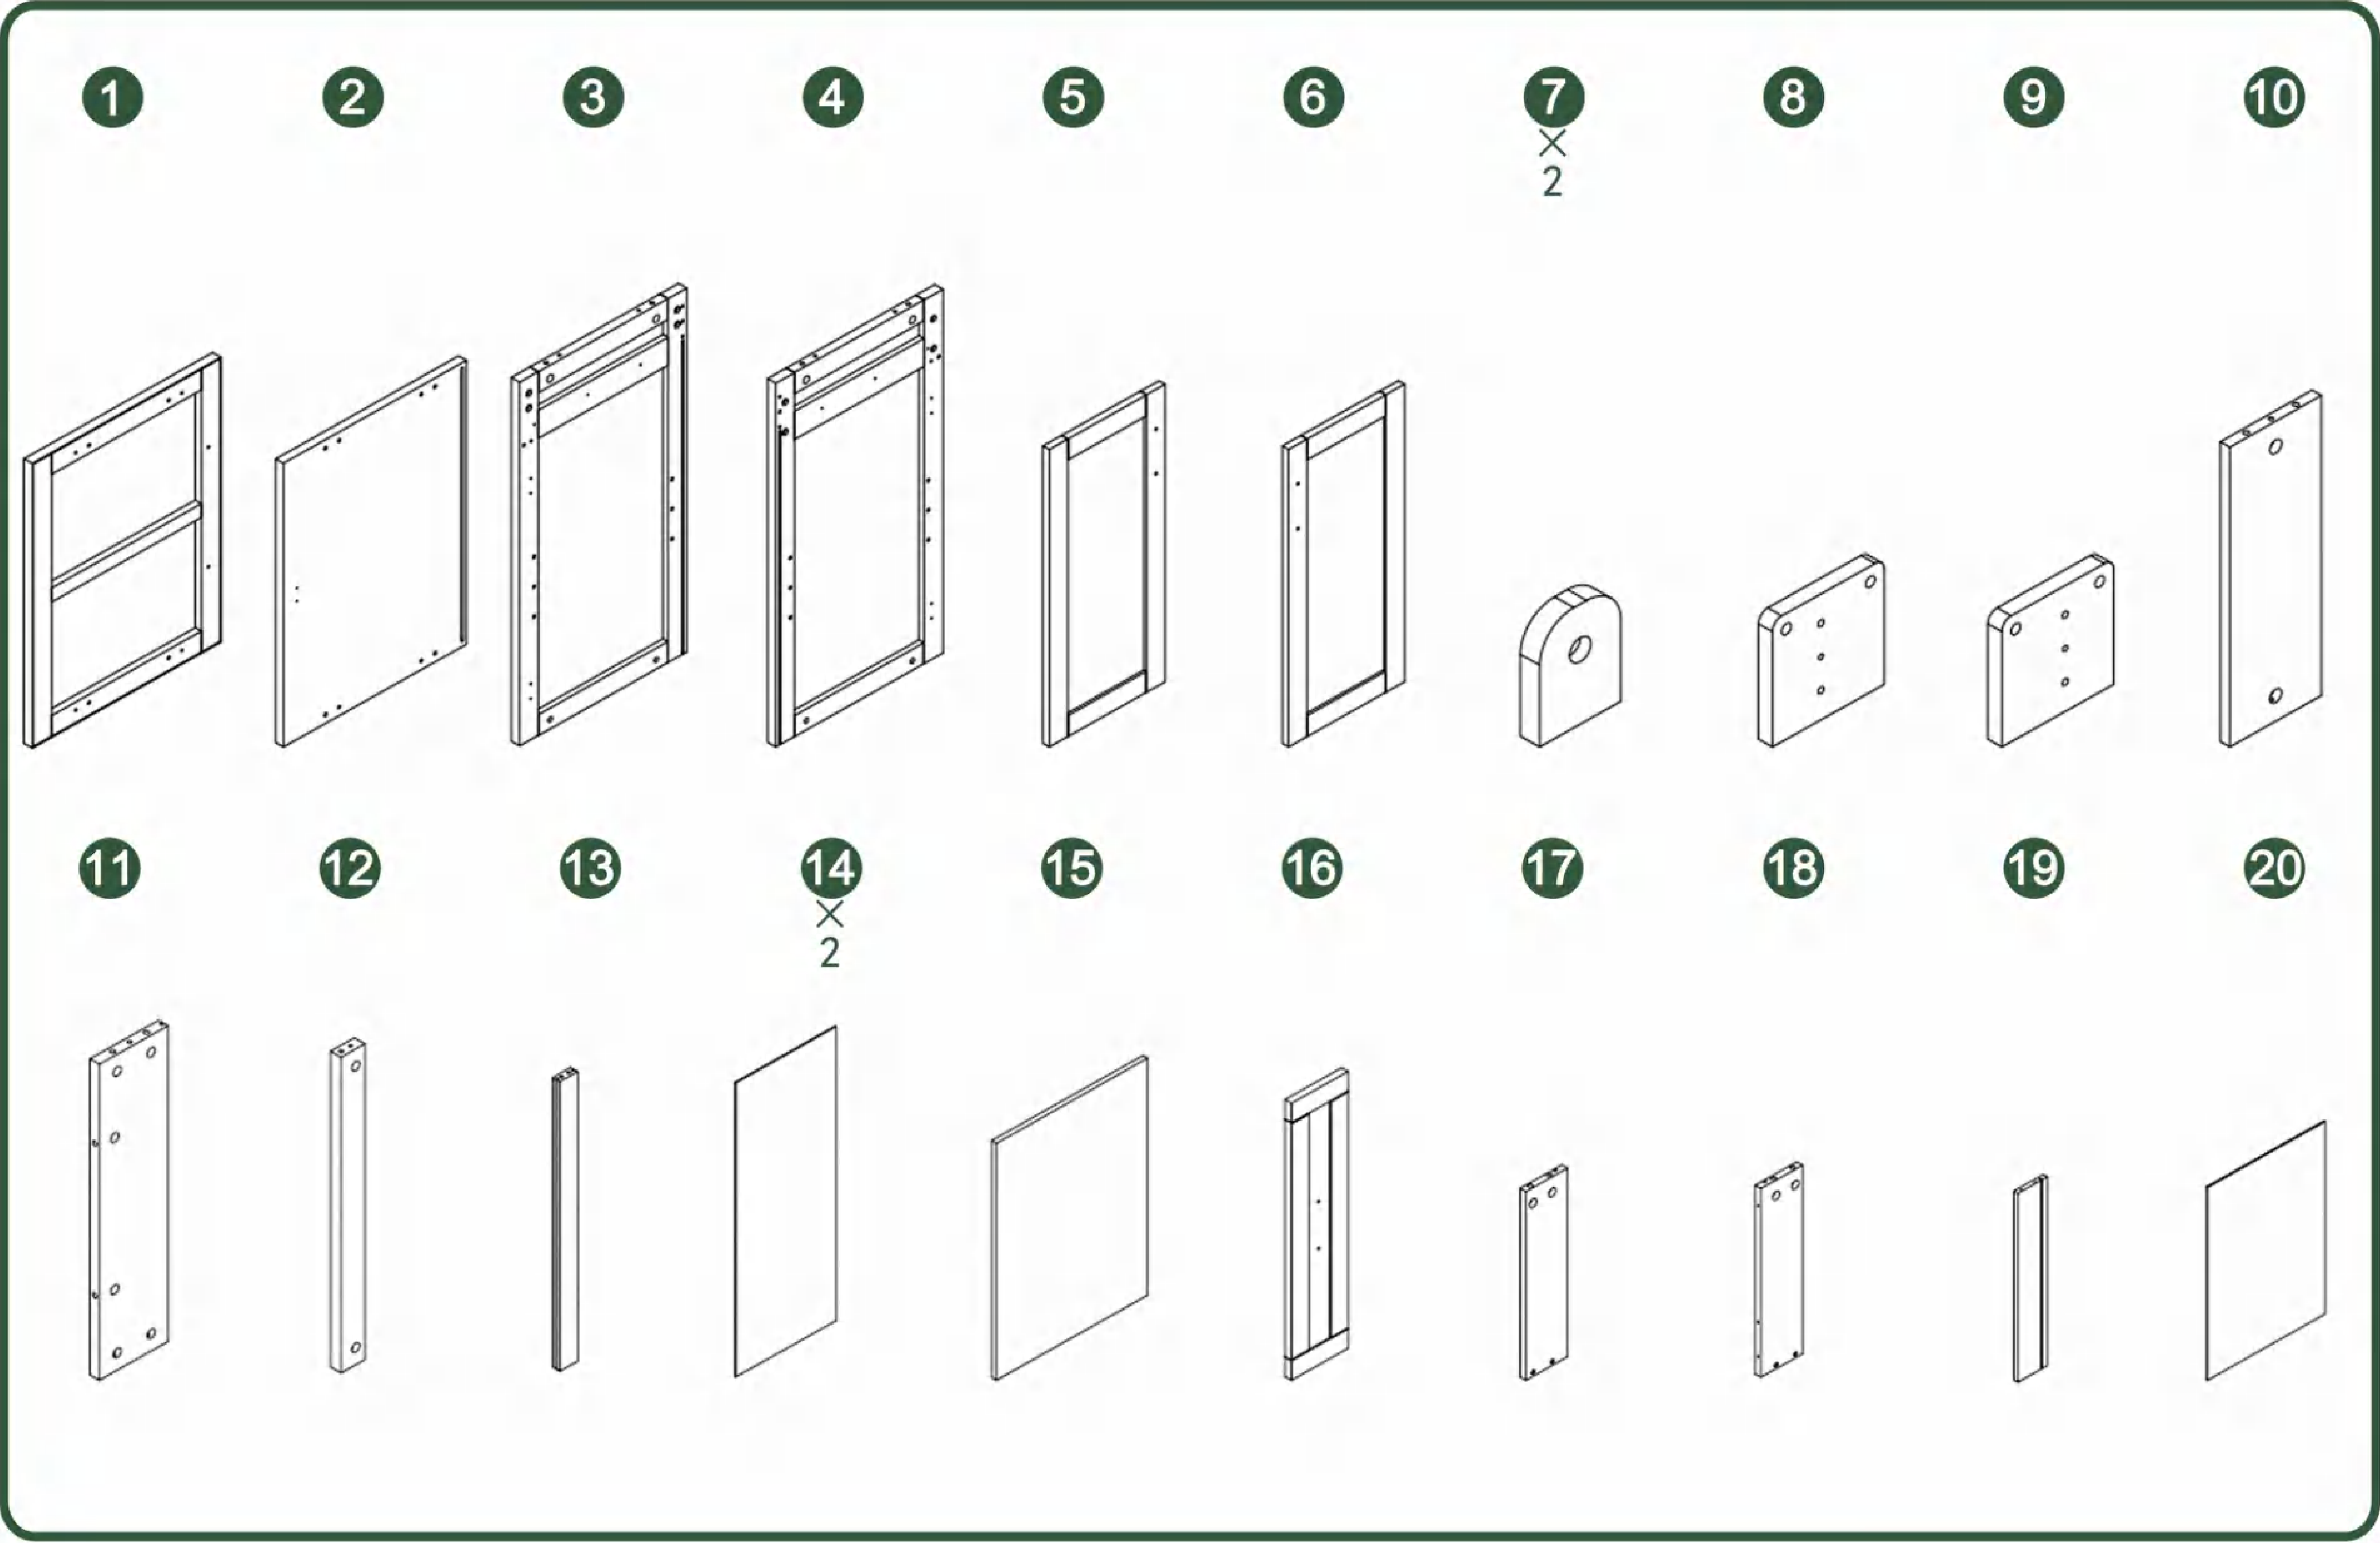


TOOLS:

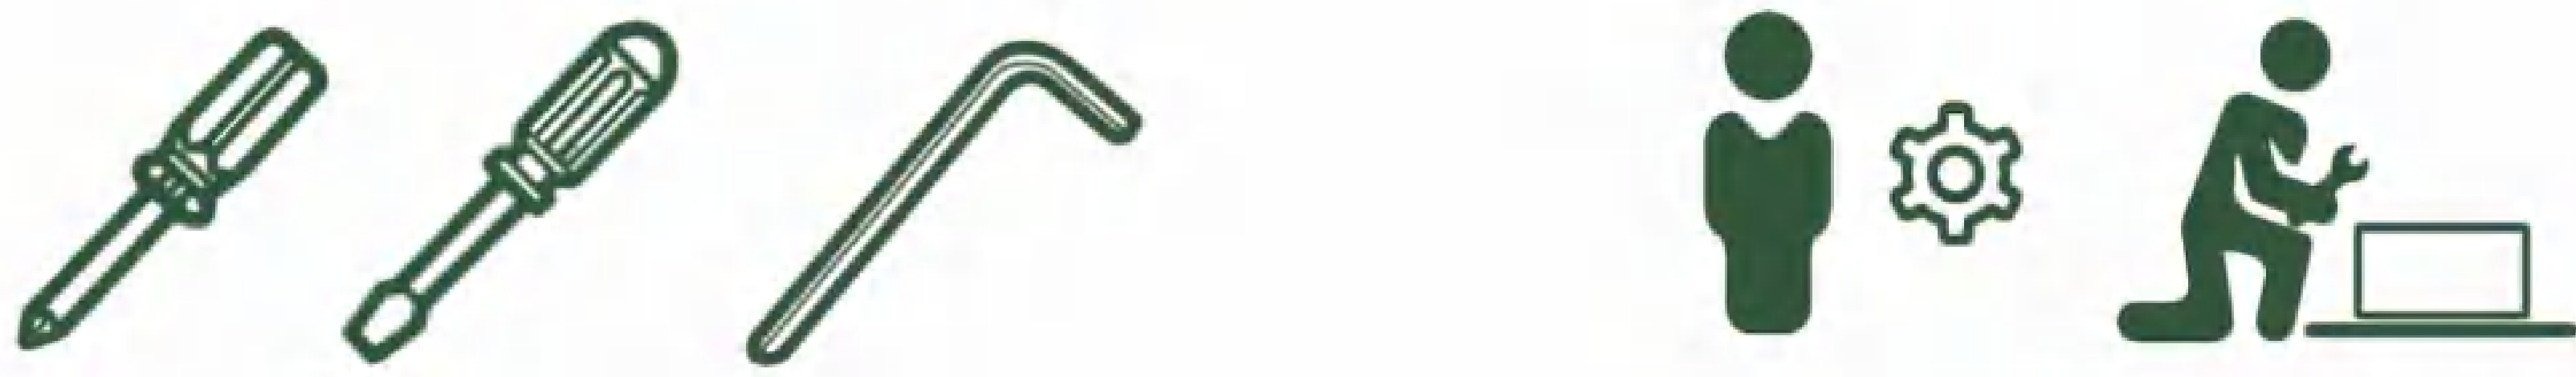


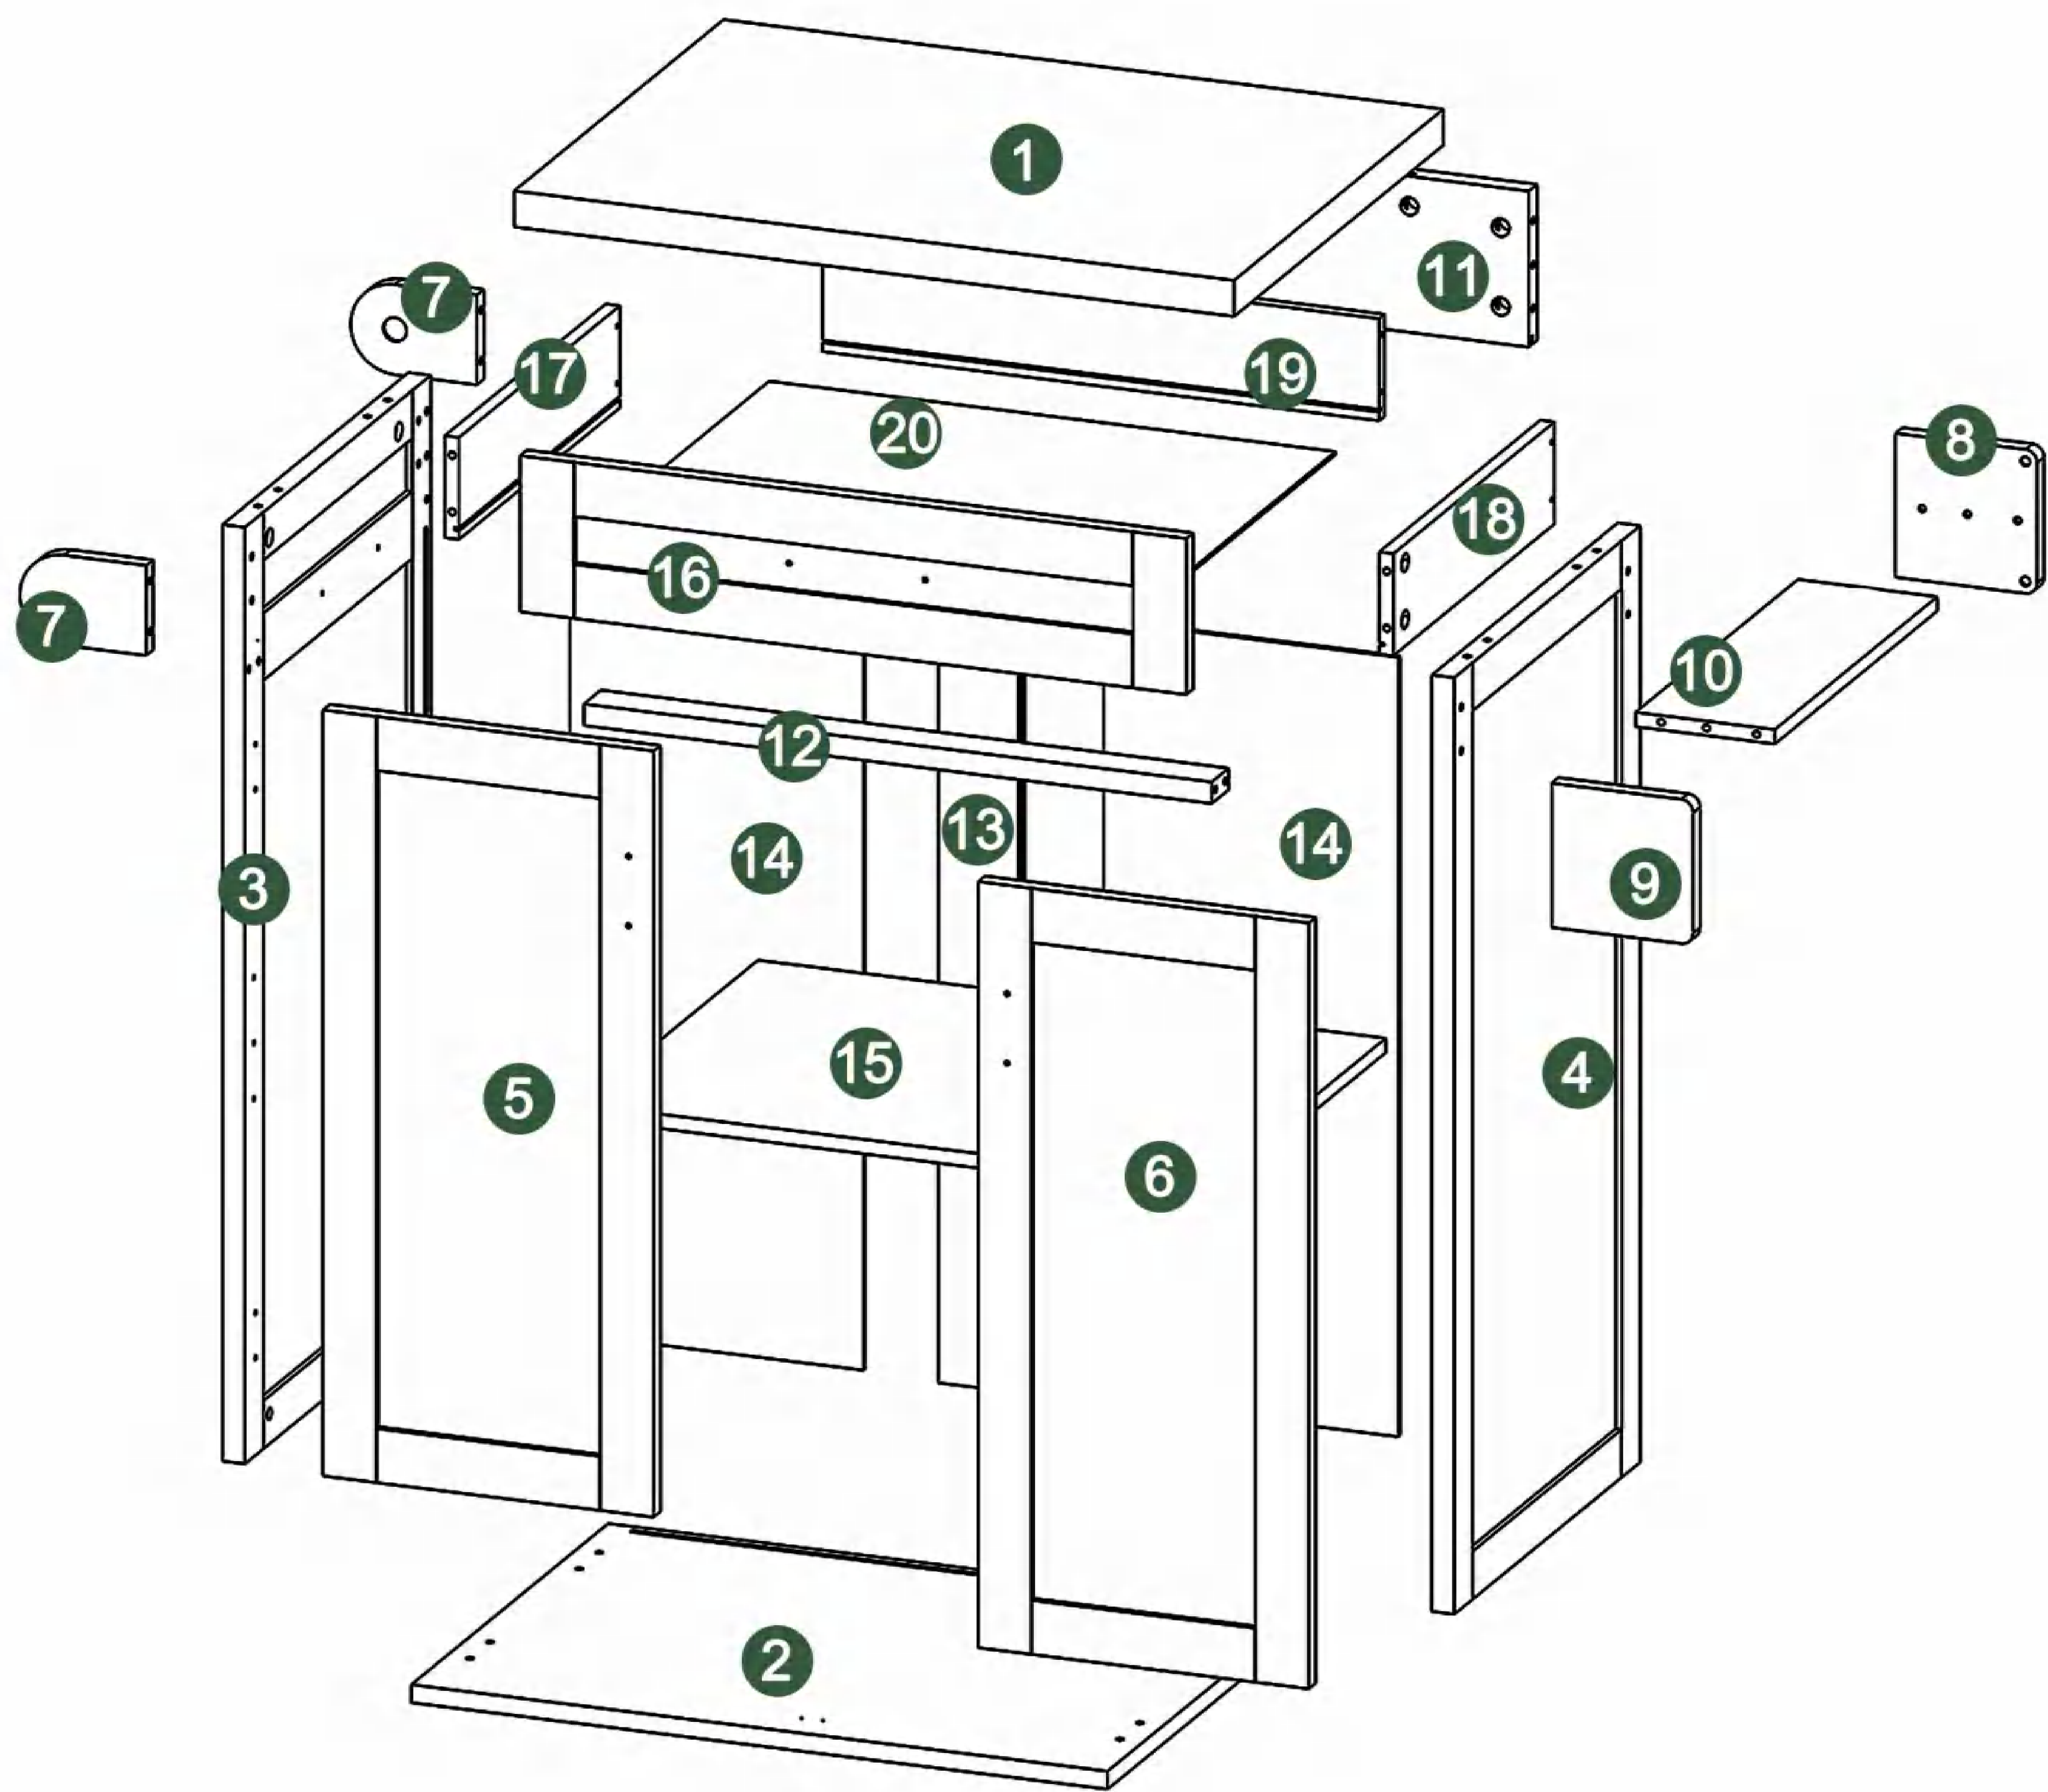


# BOLT INSTALLATION AS BELOW:

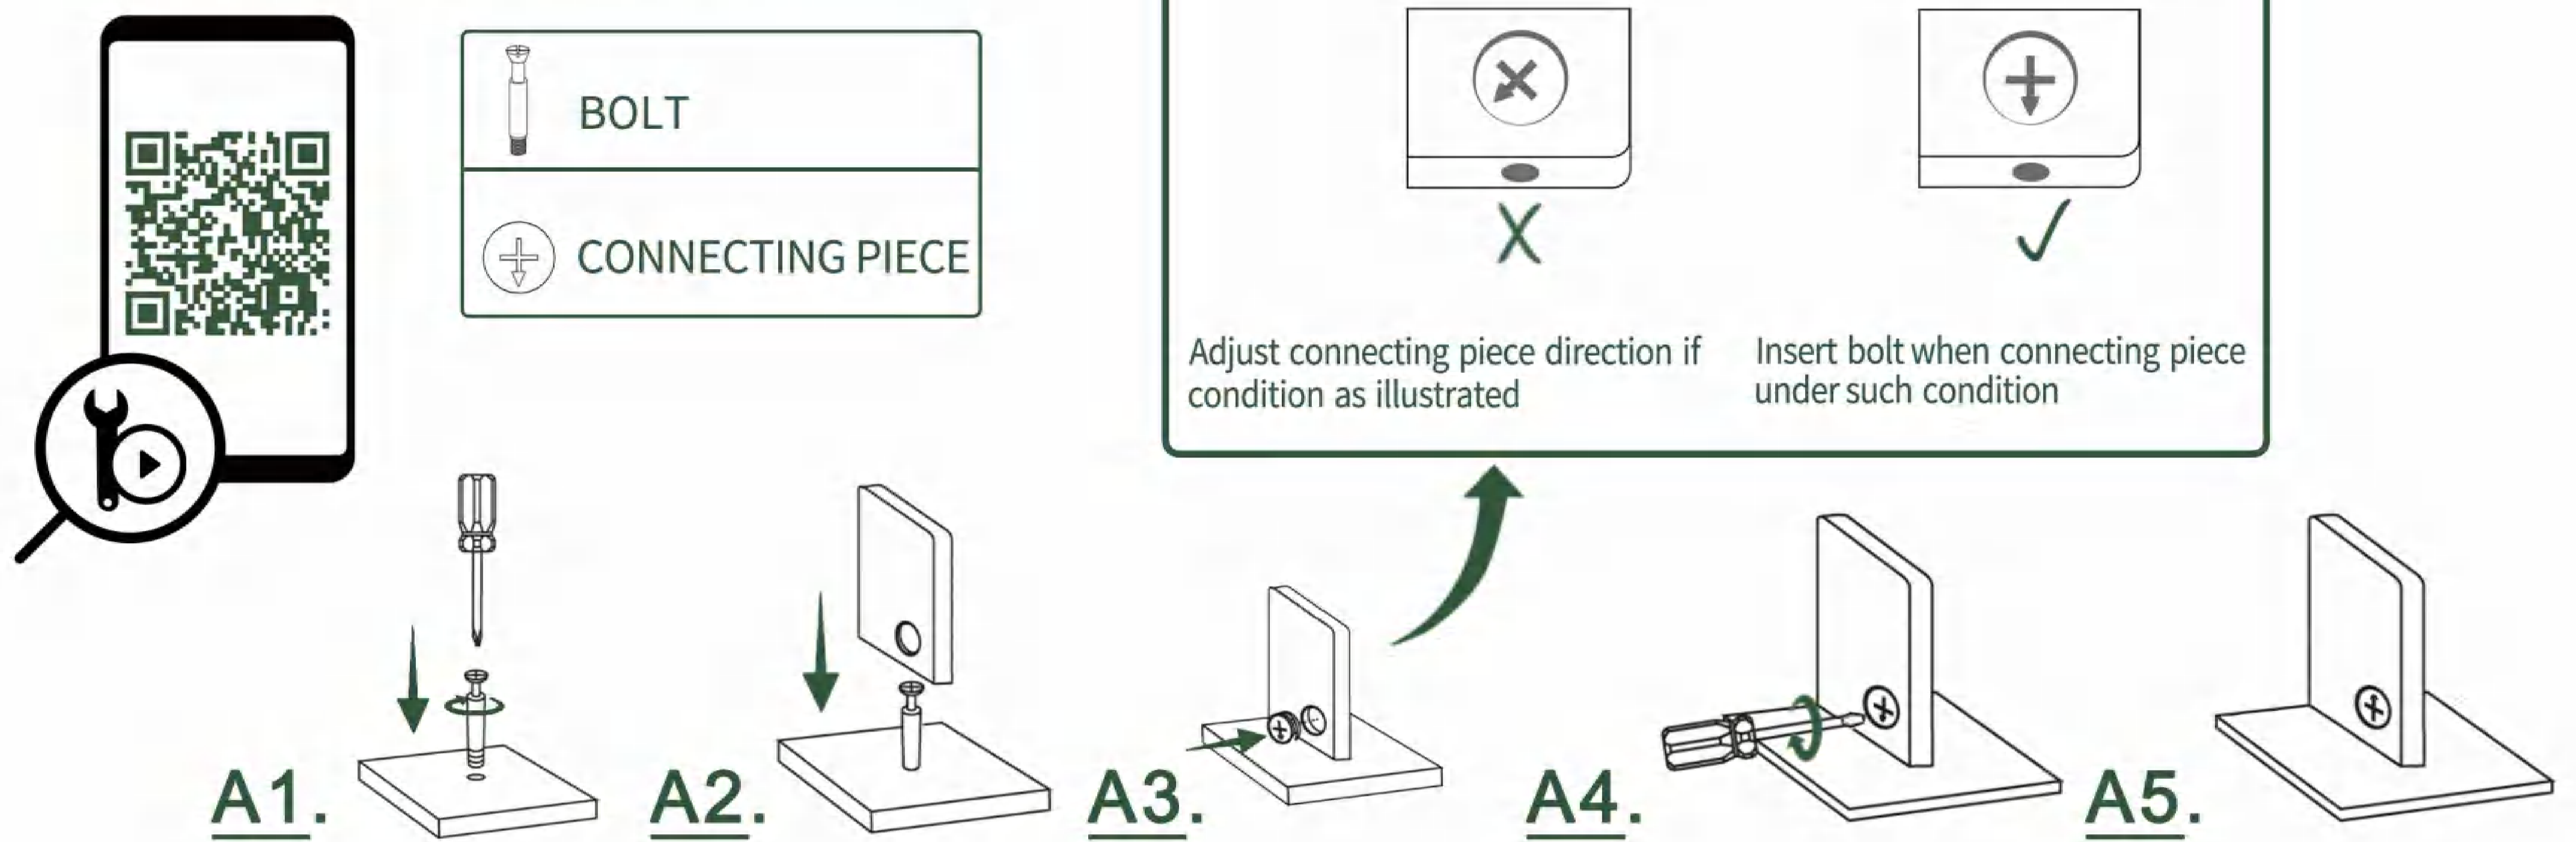


1.

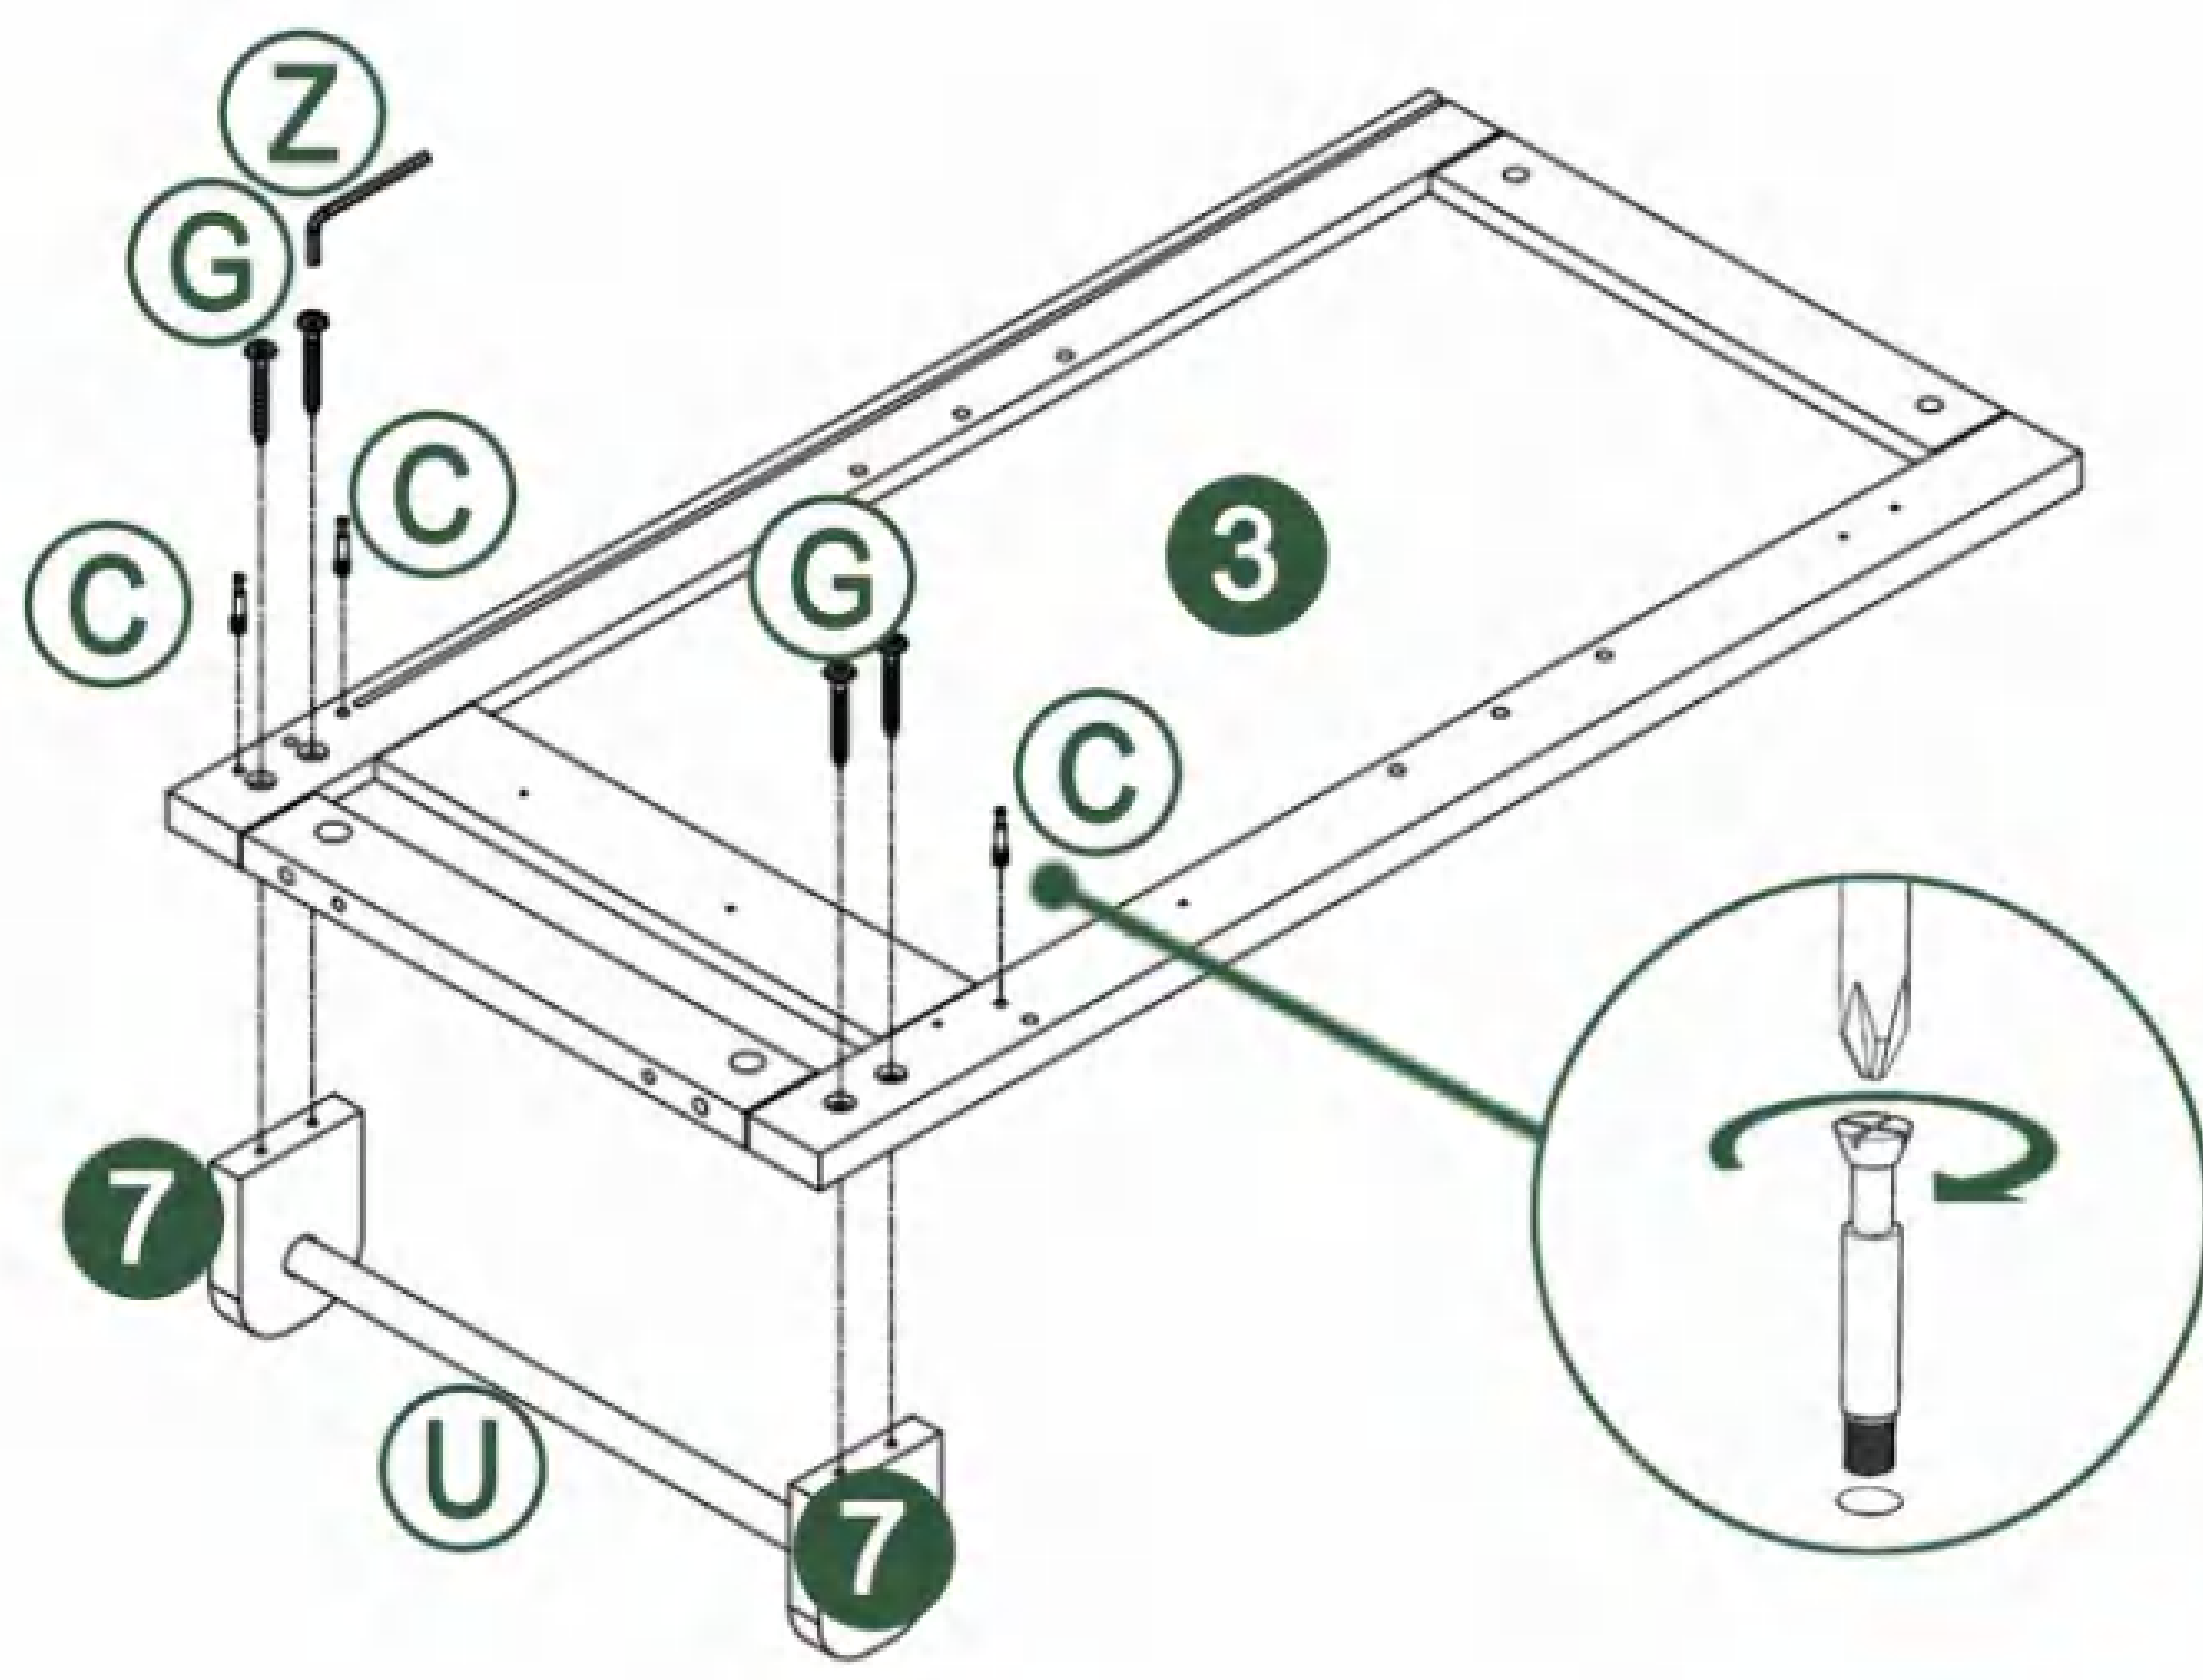


2.

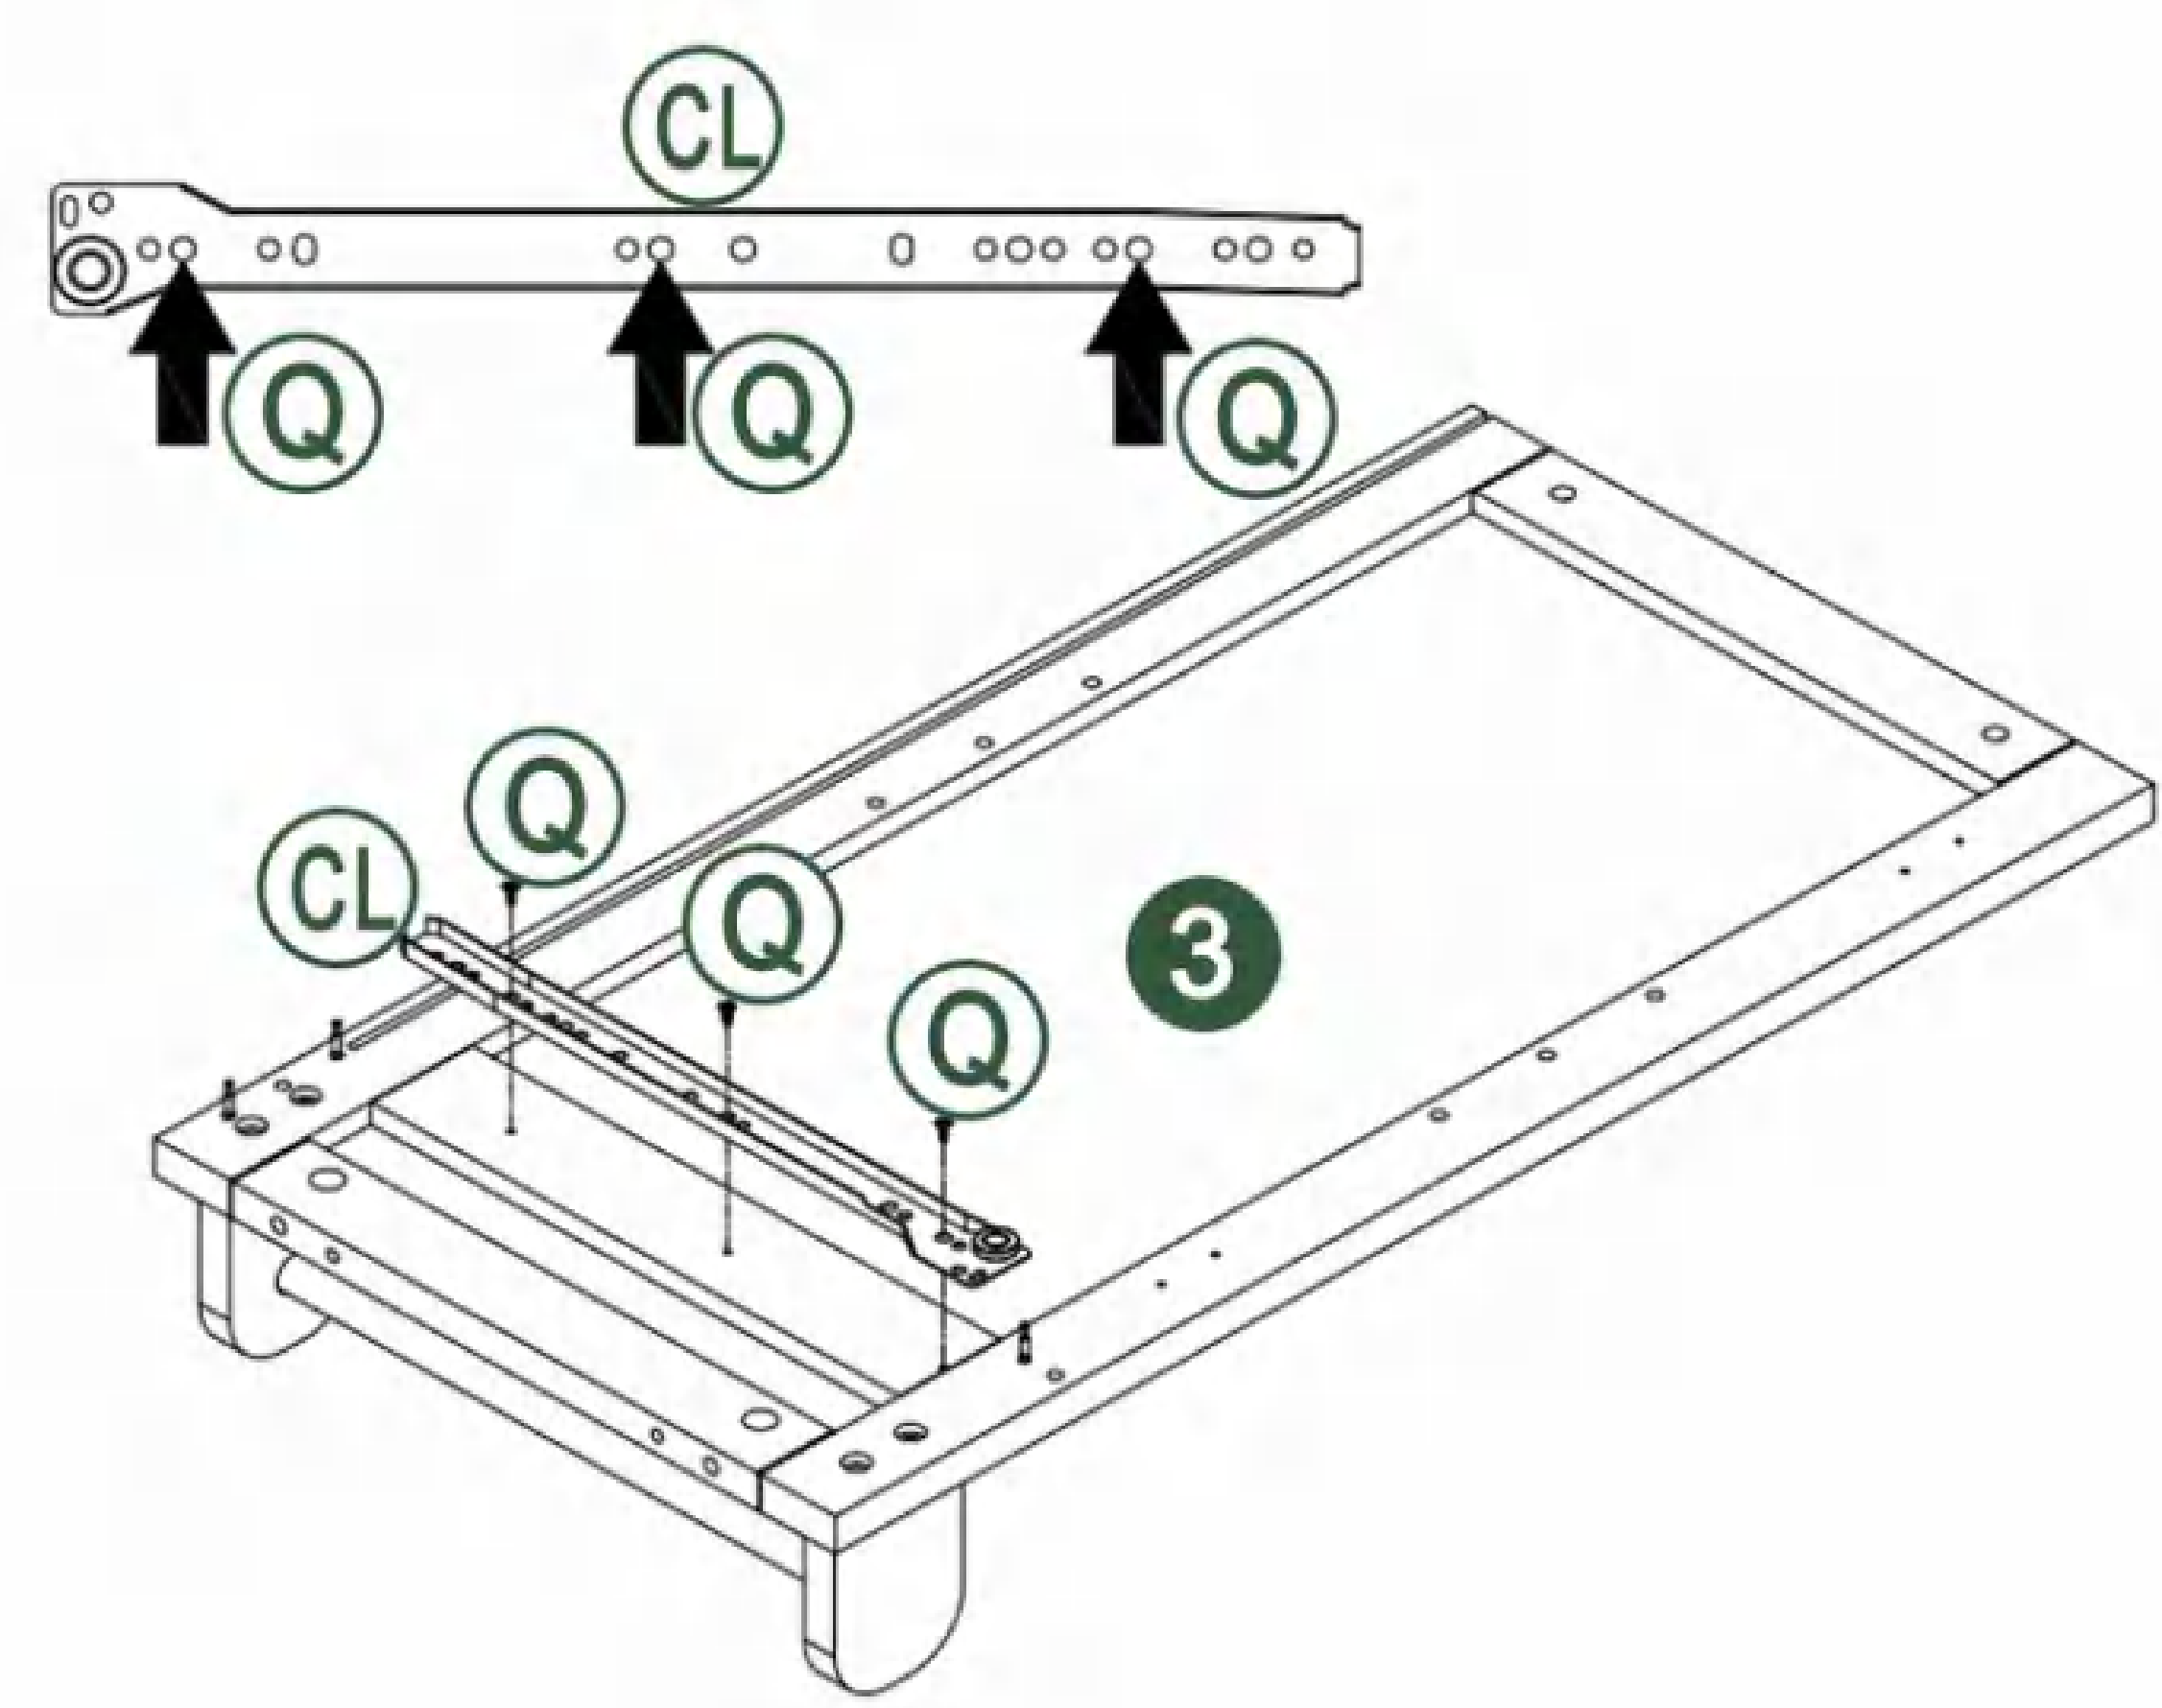


3.

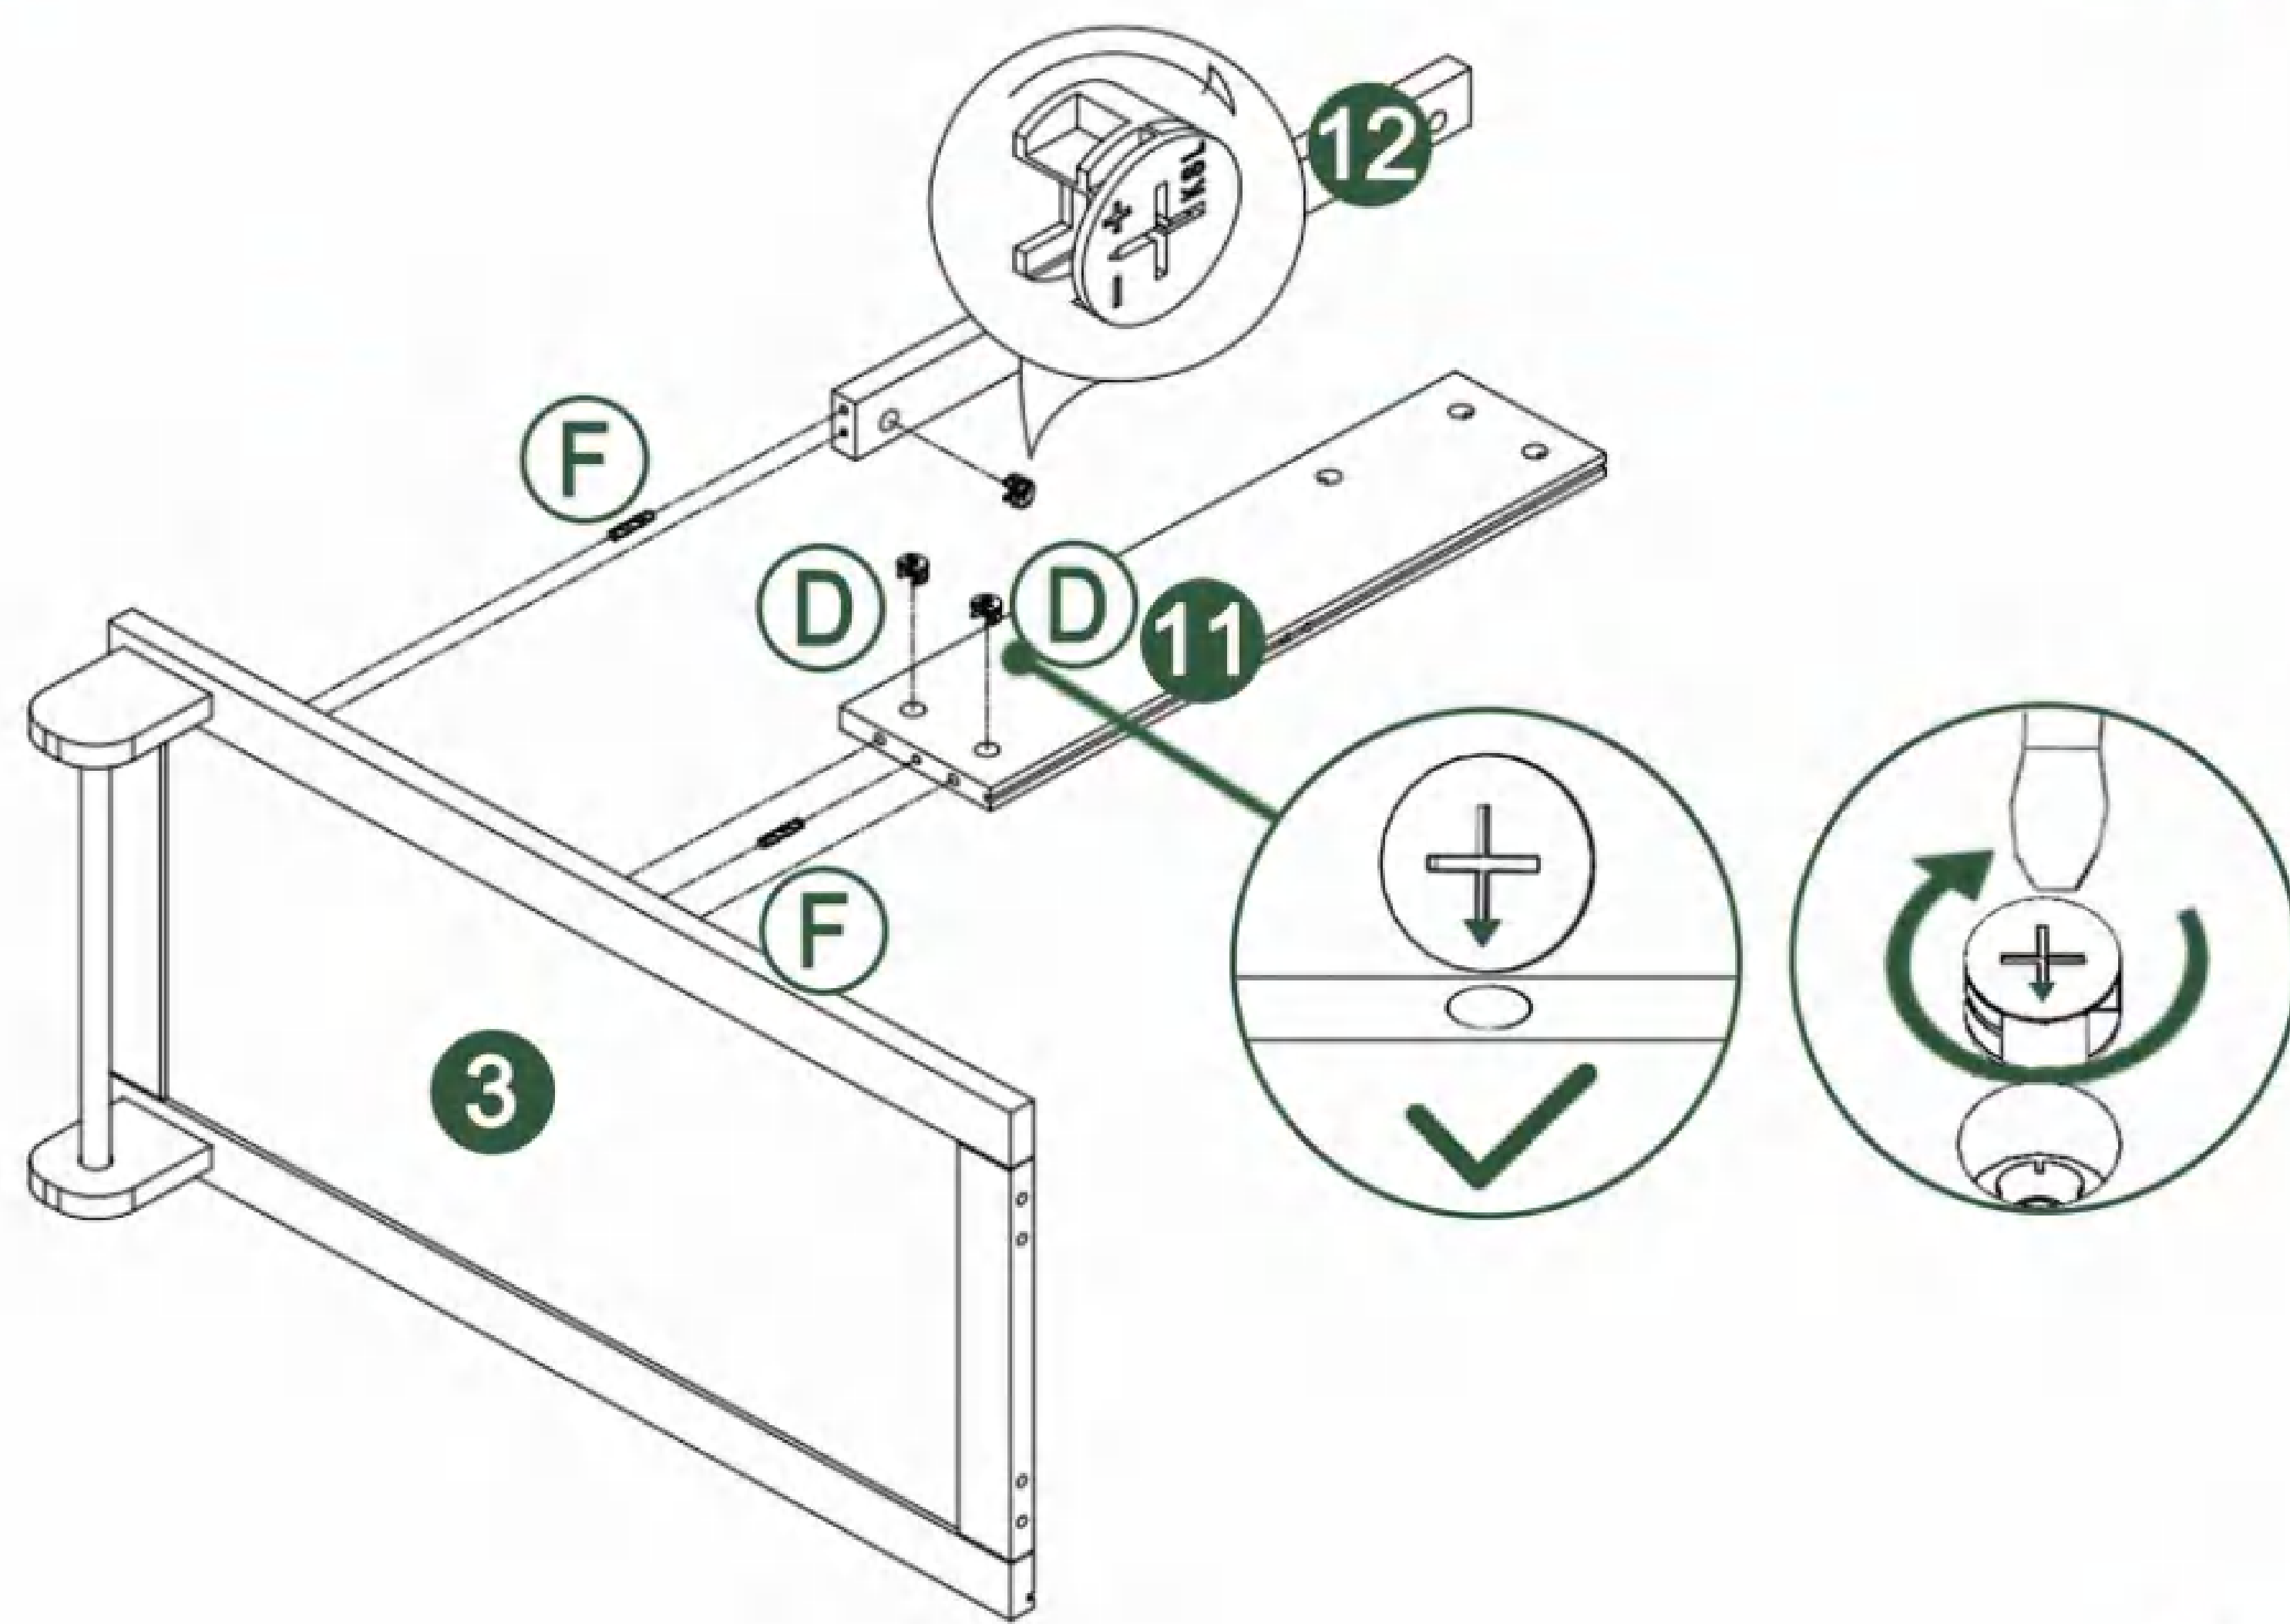


4.

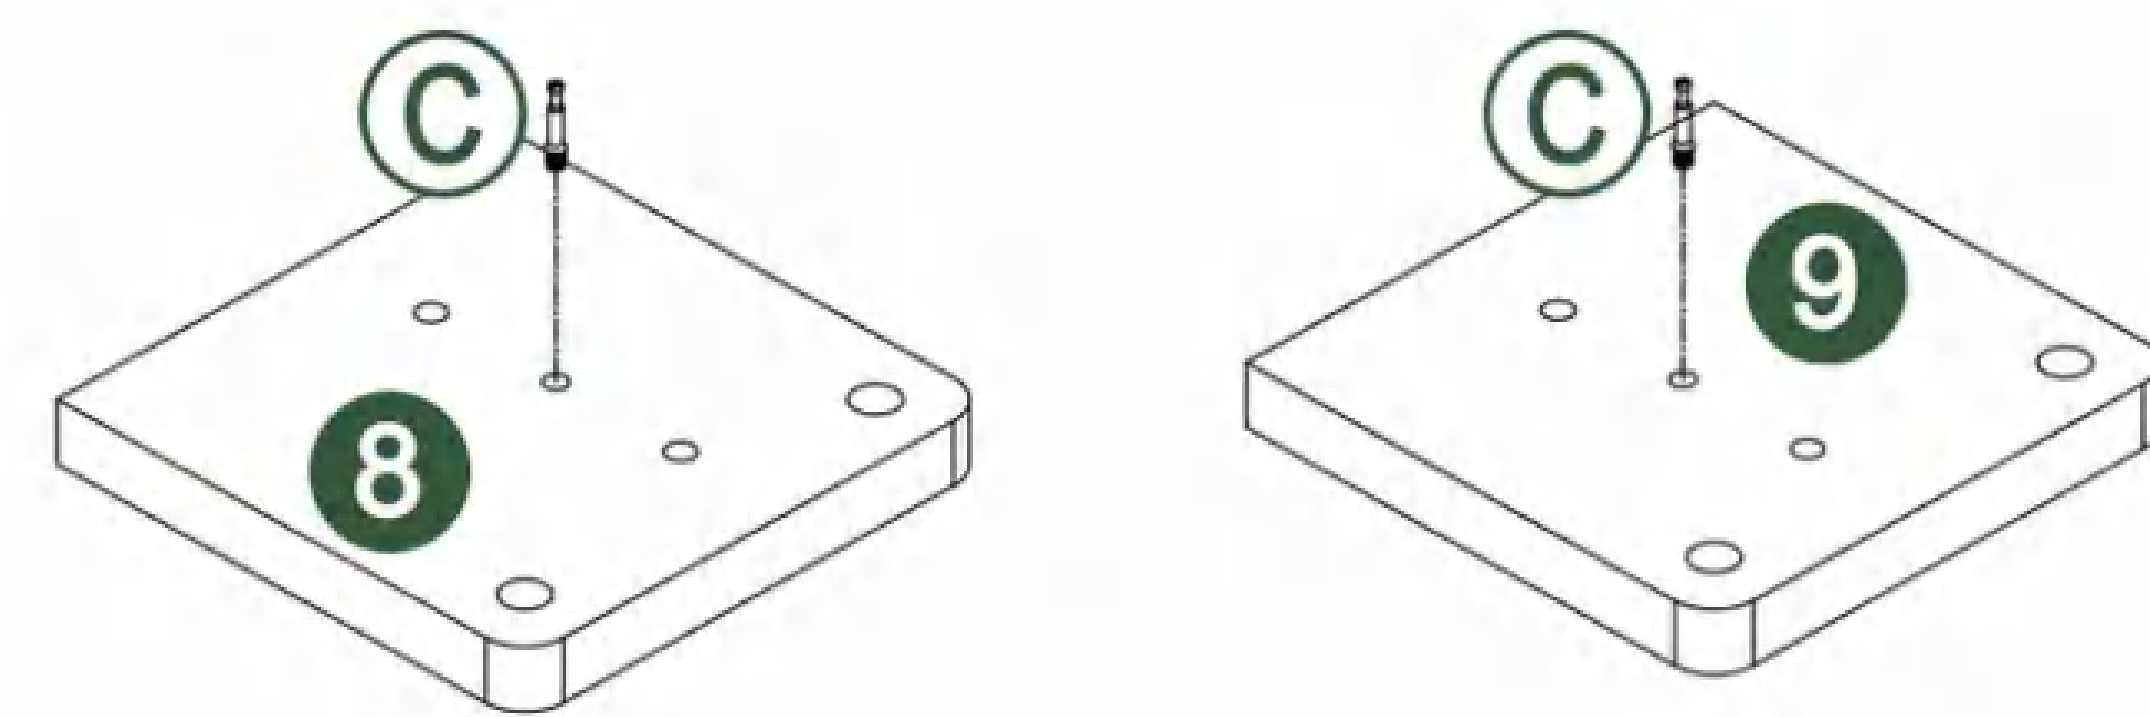


5.

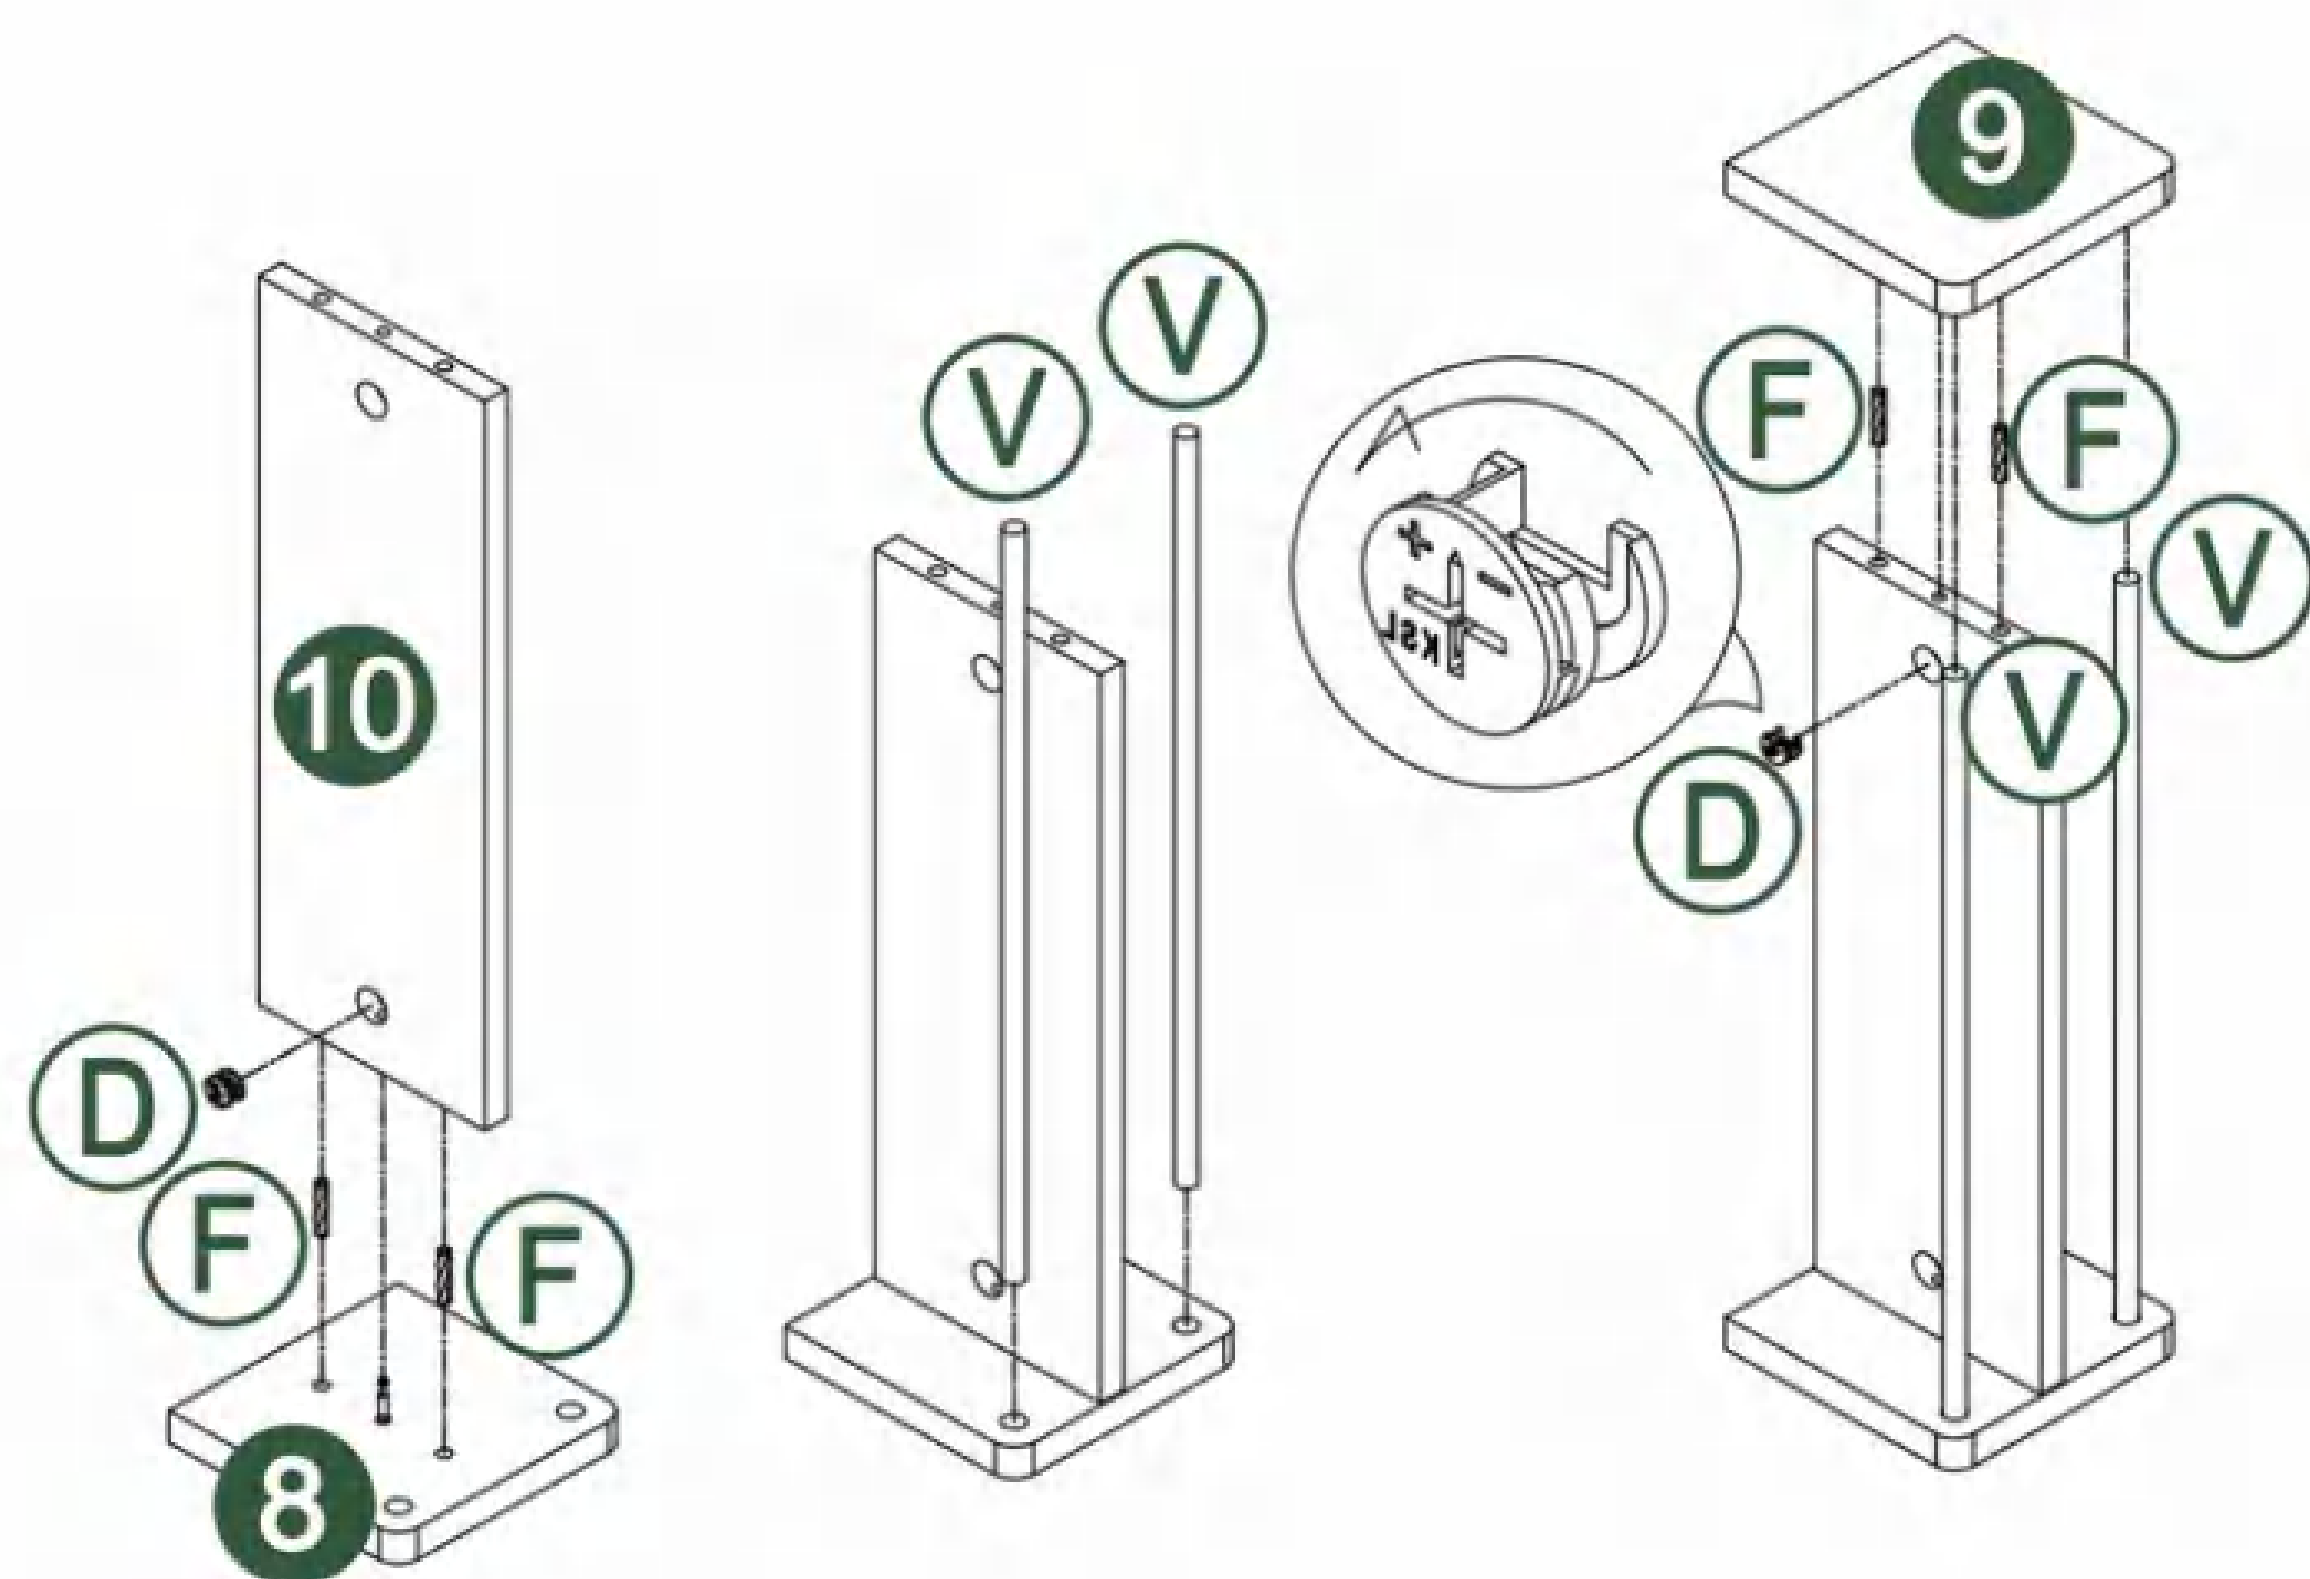


6.

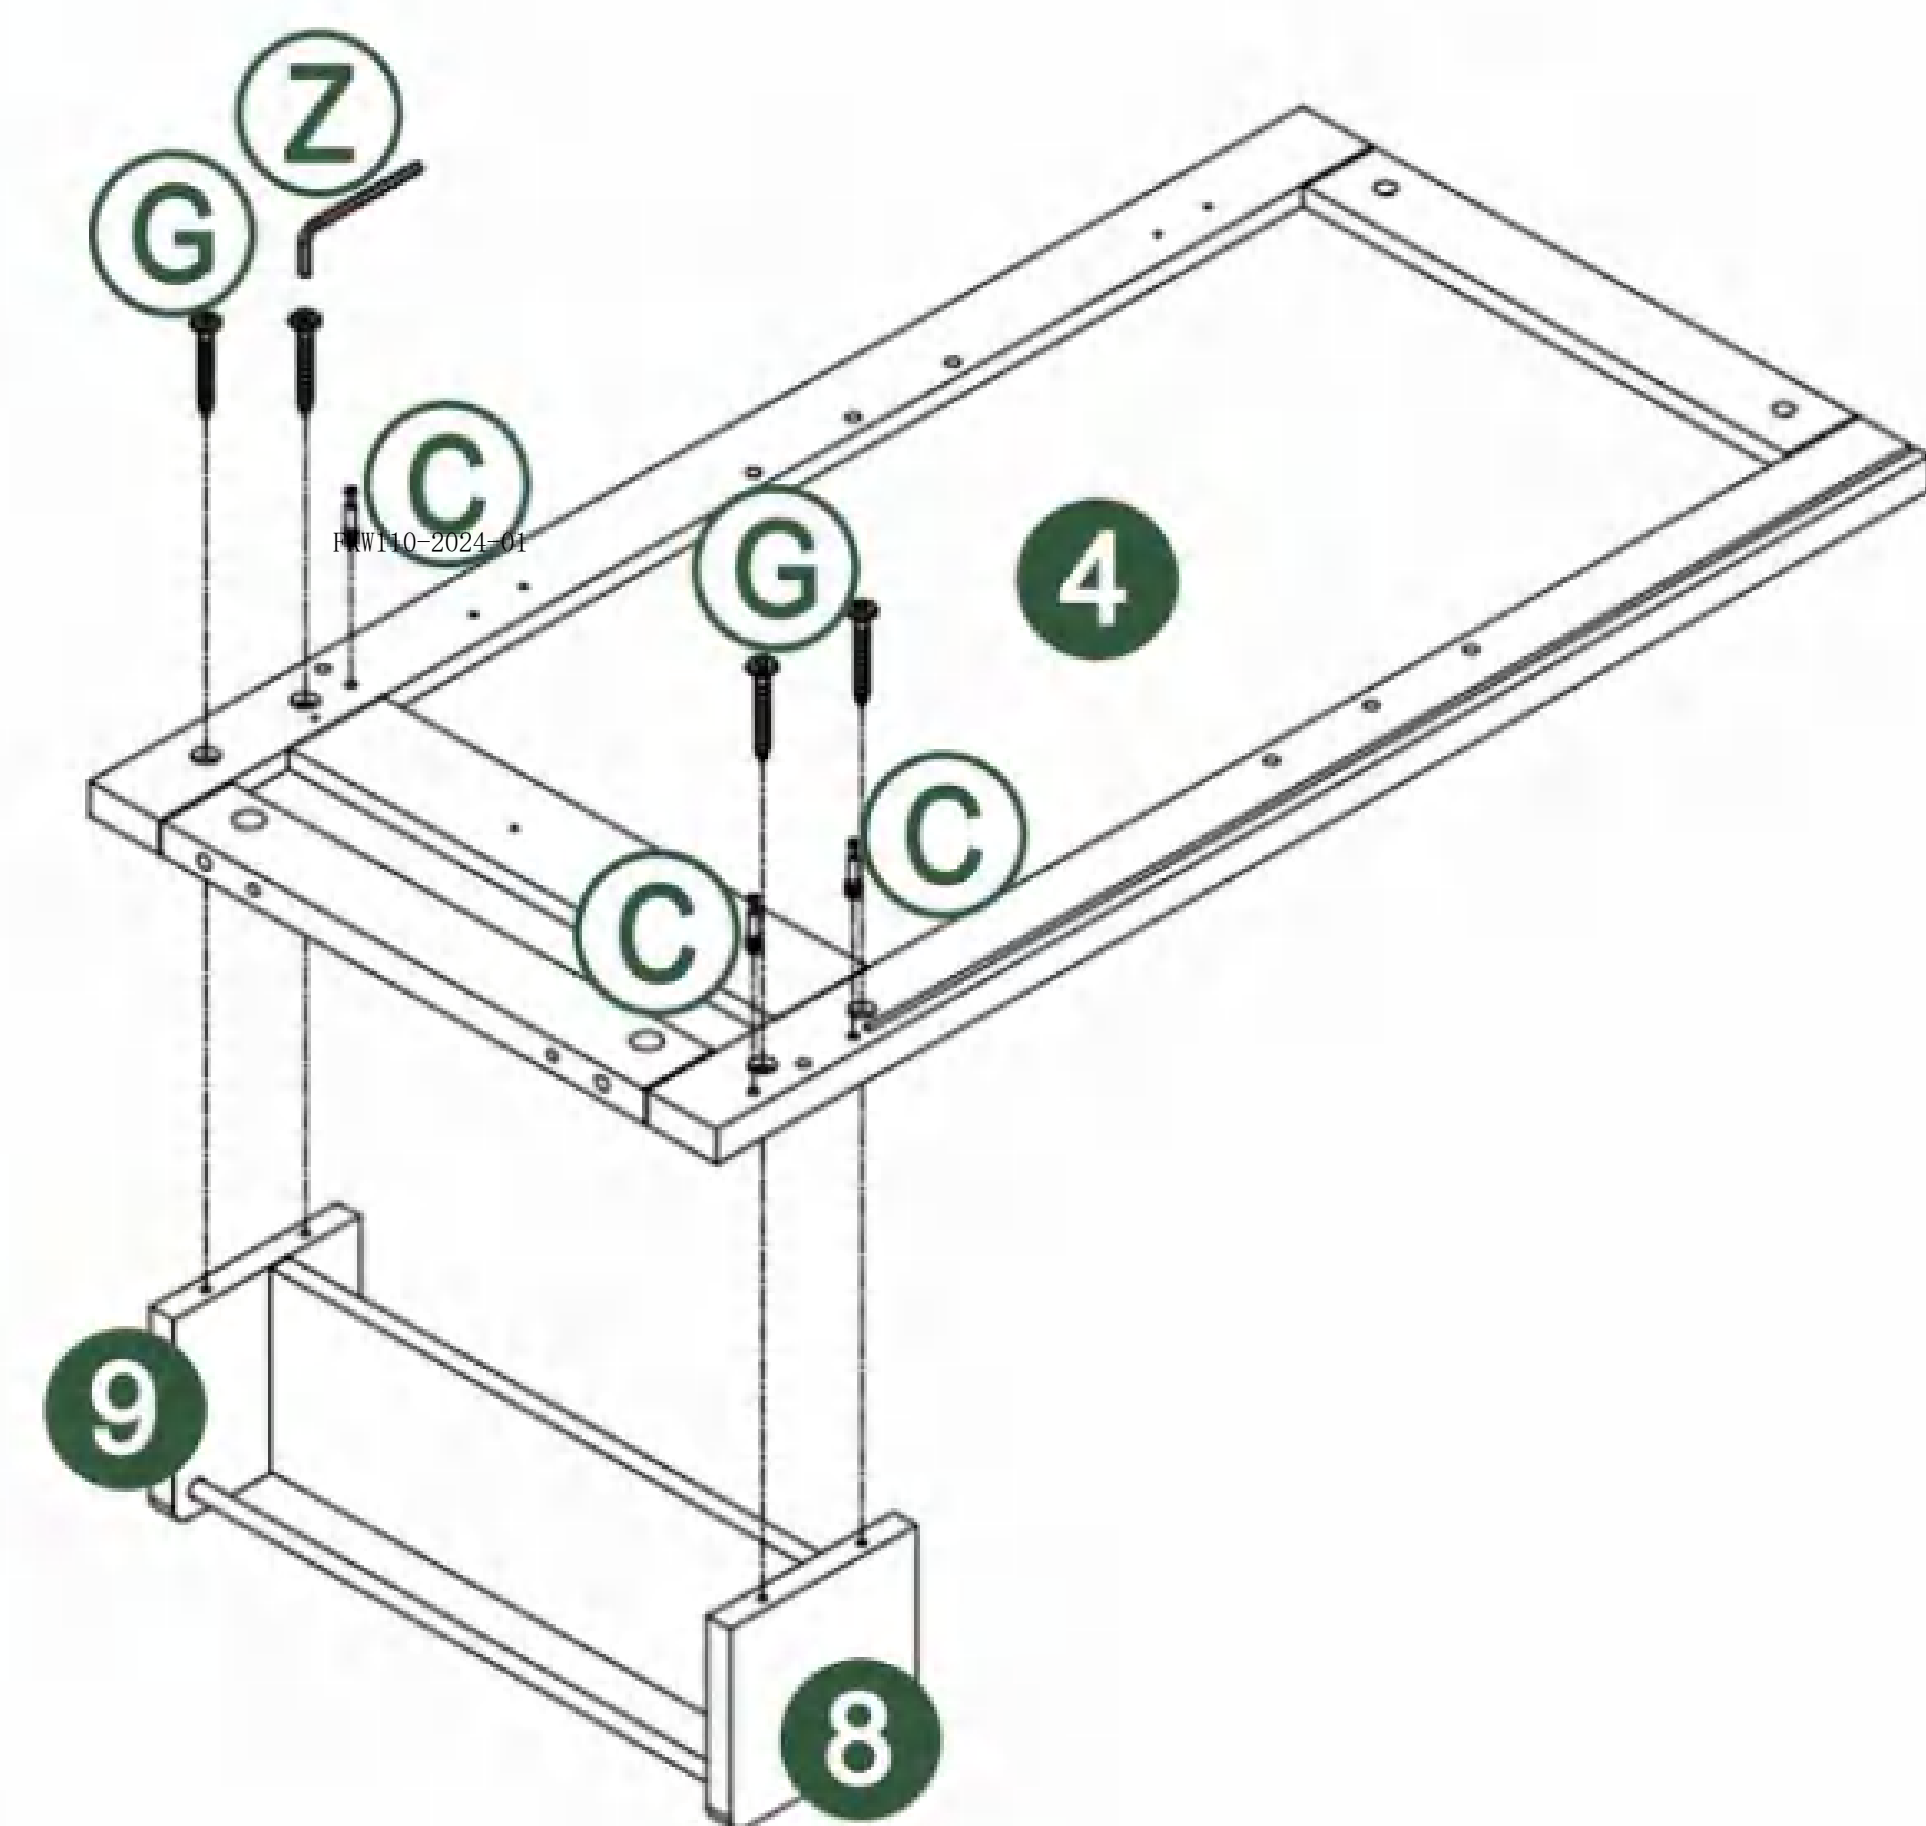


7.

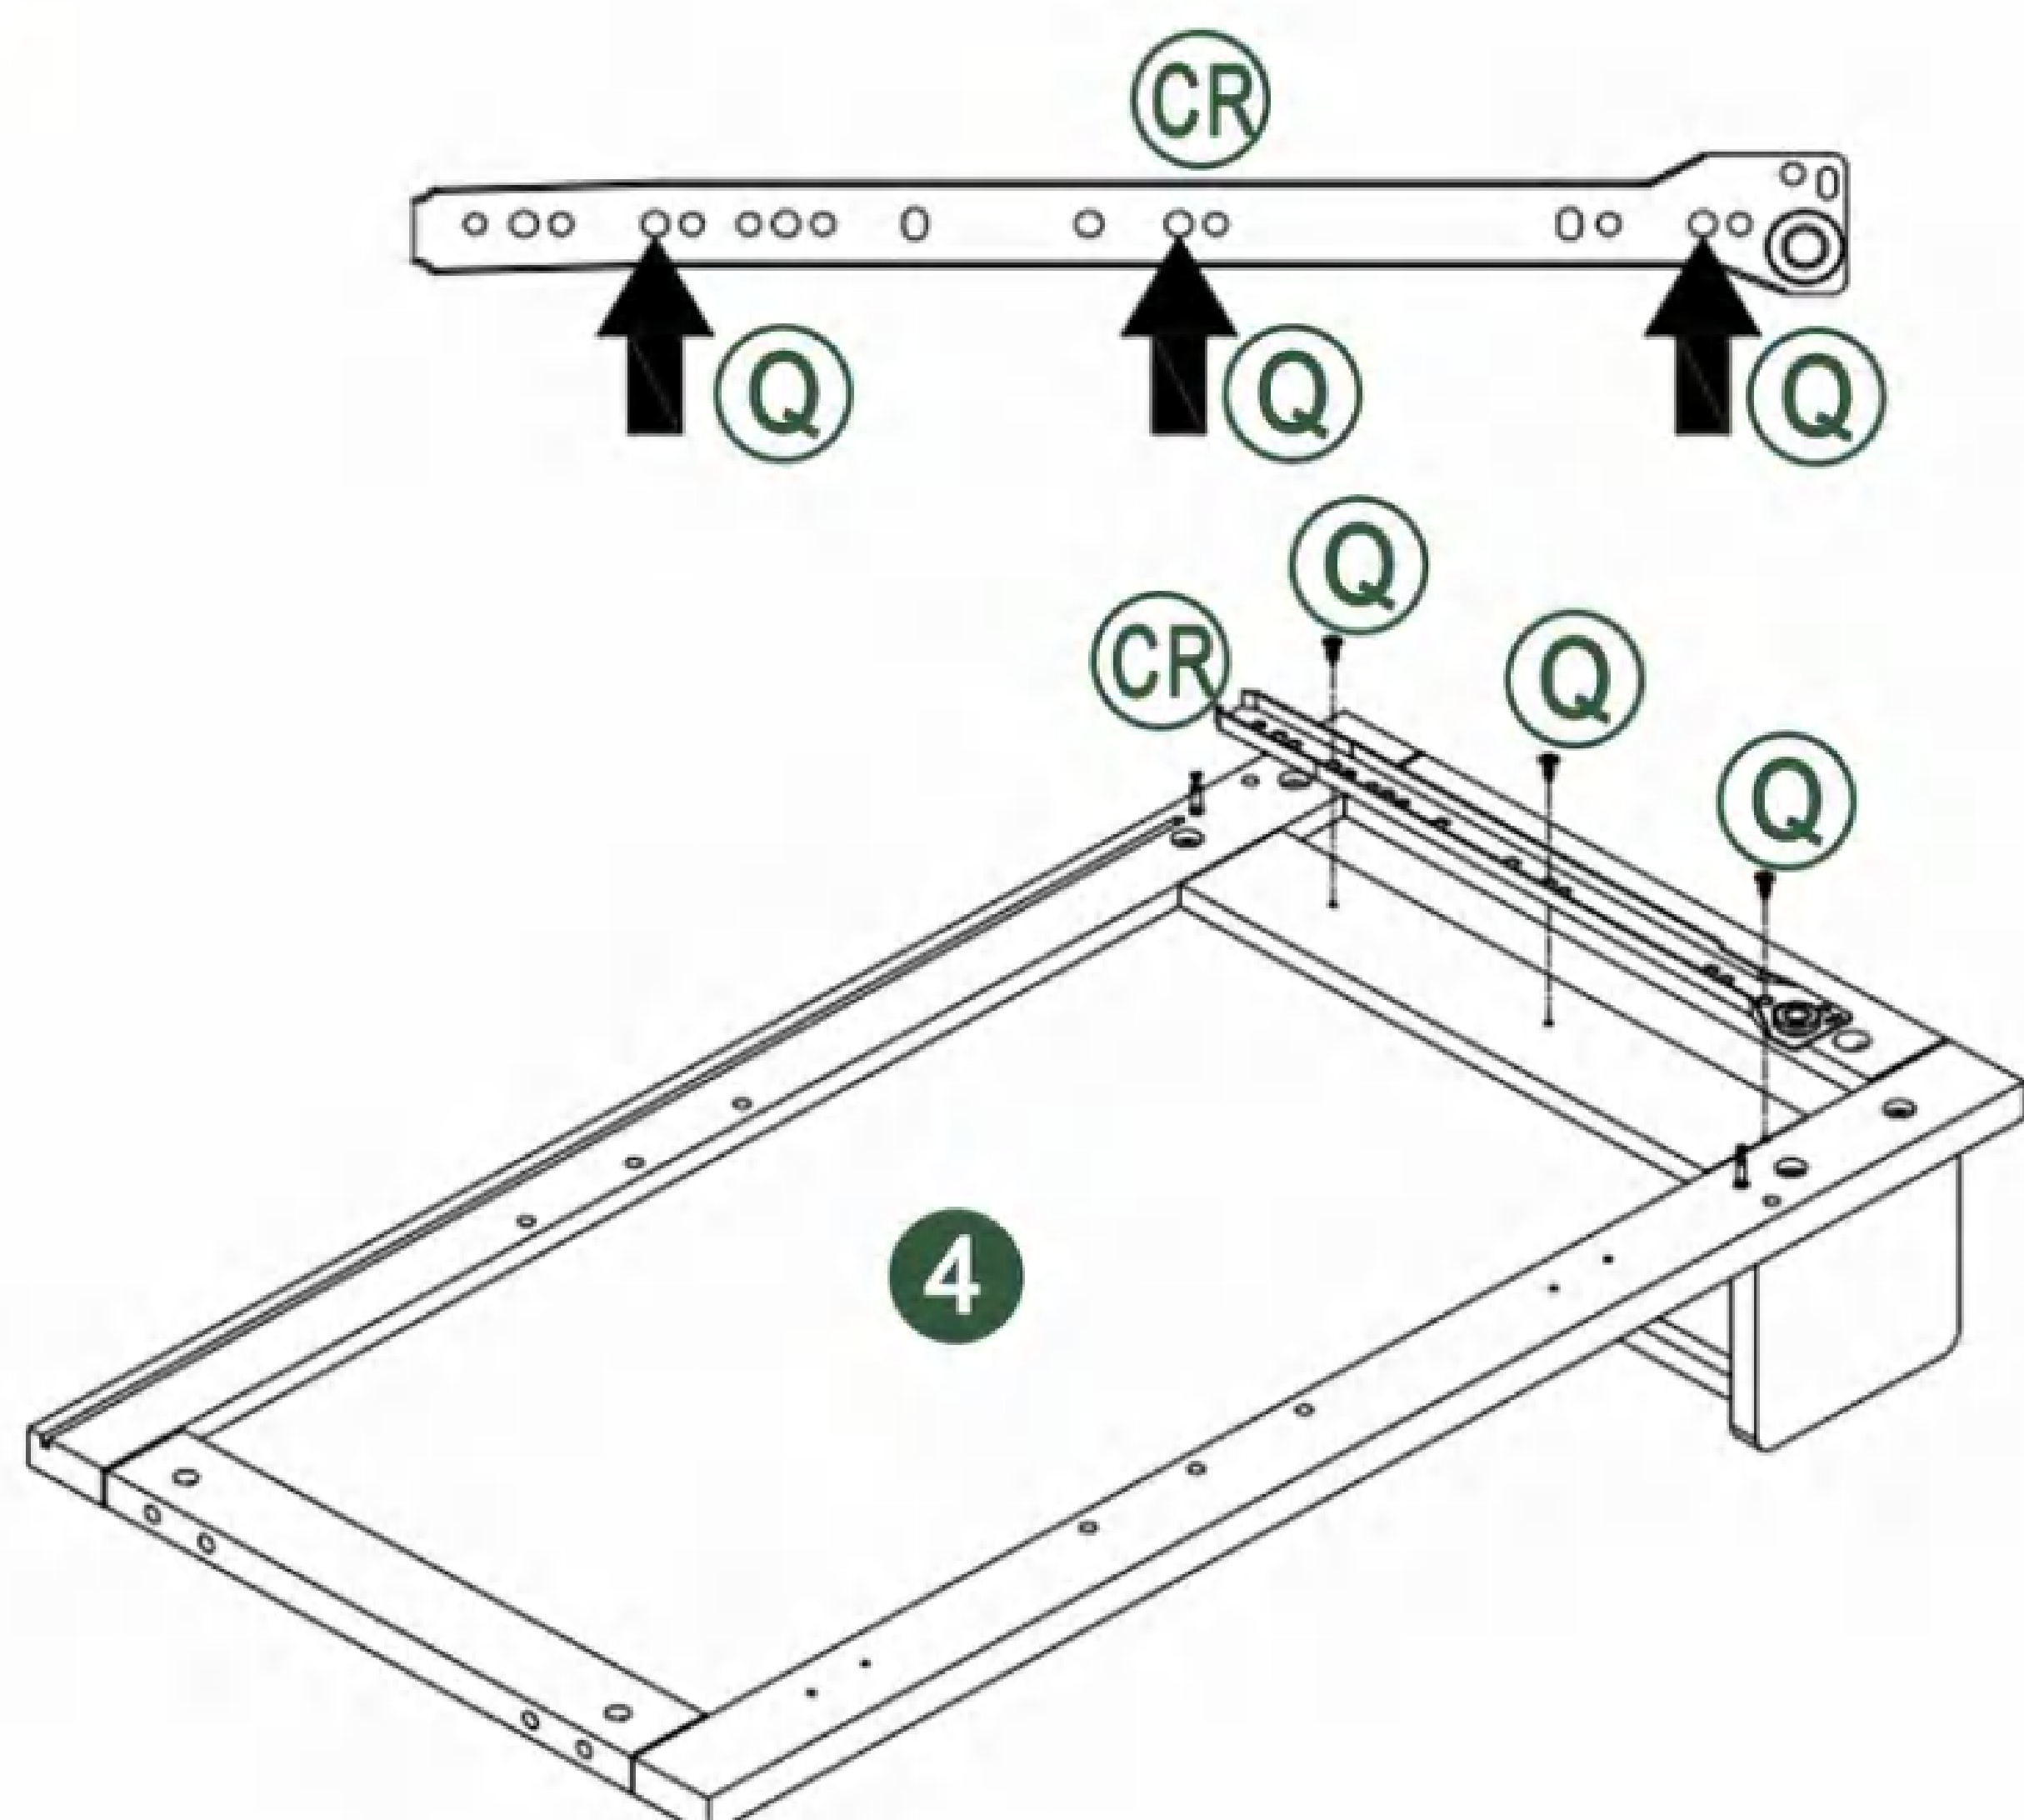


8.

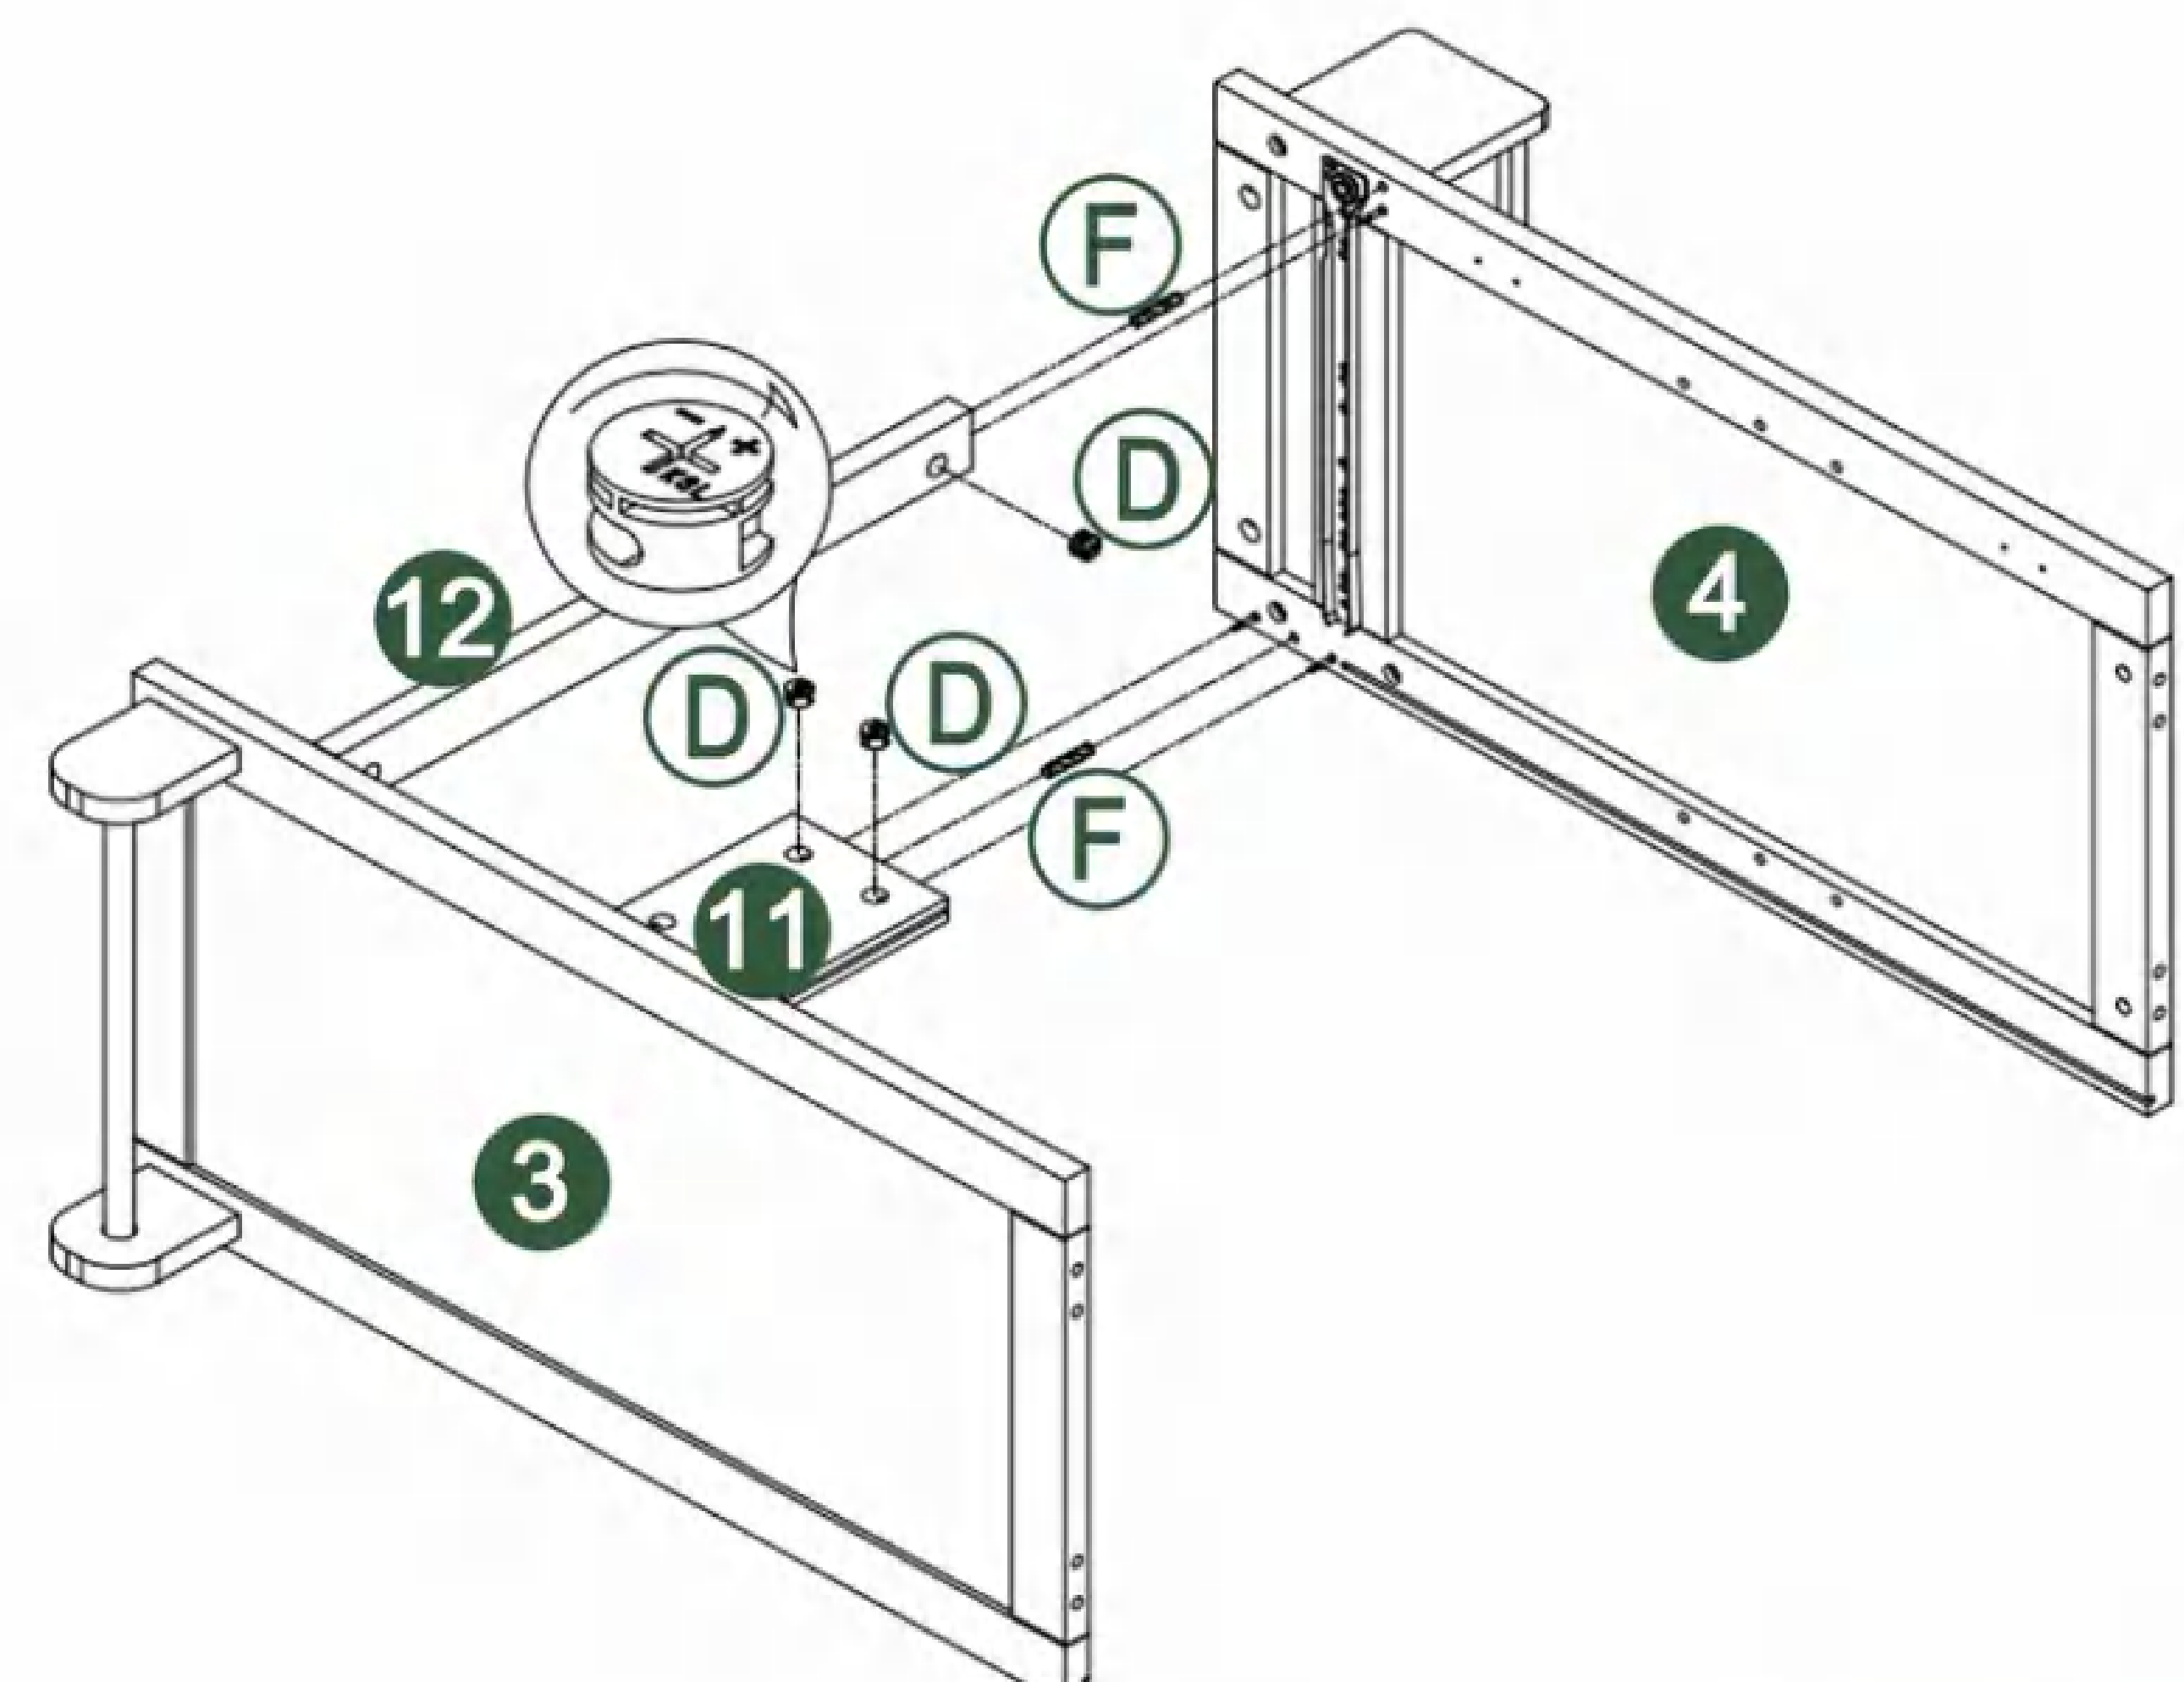


9.

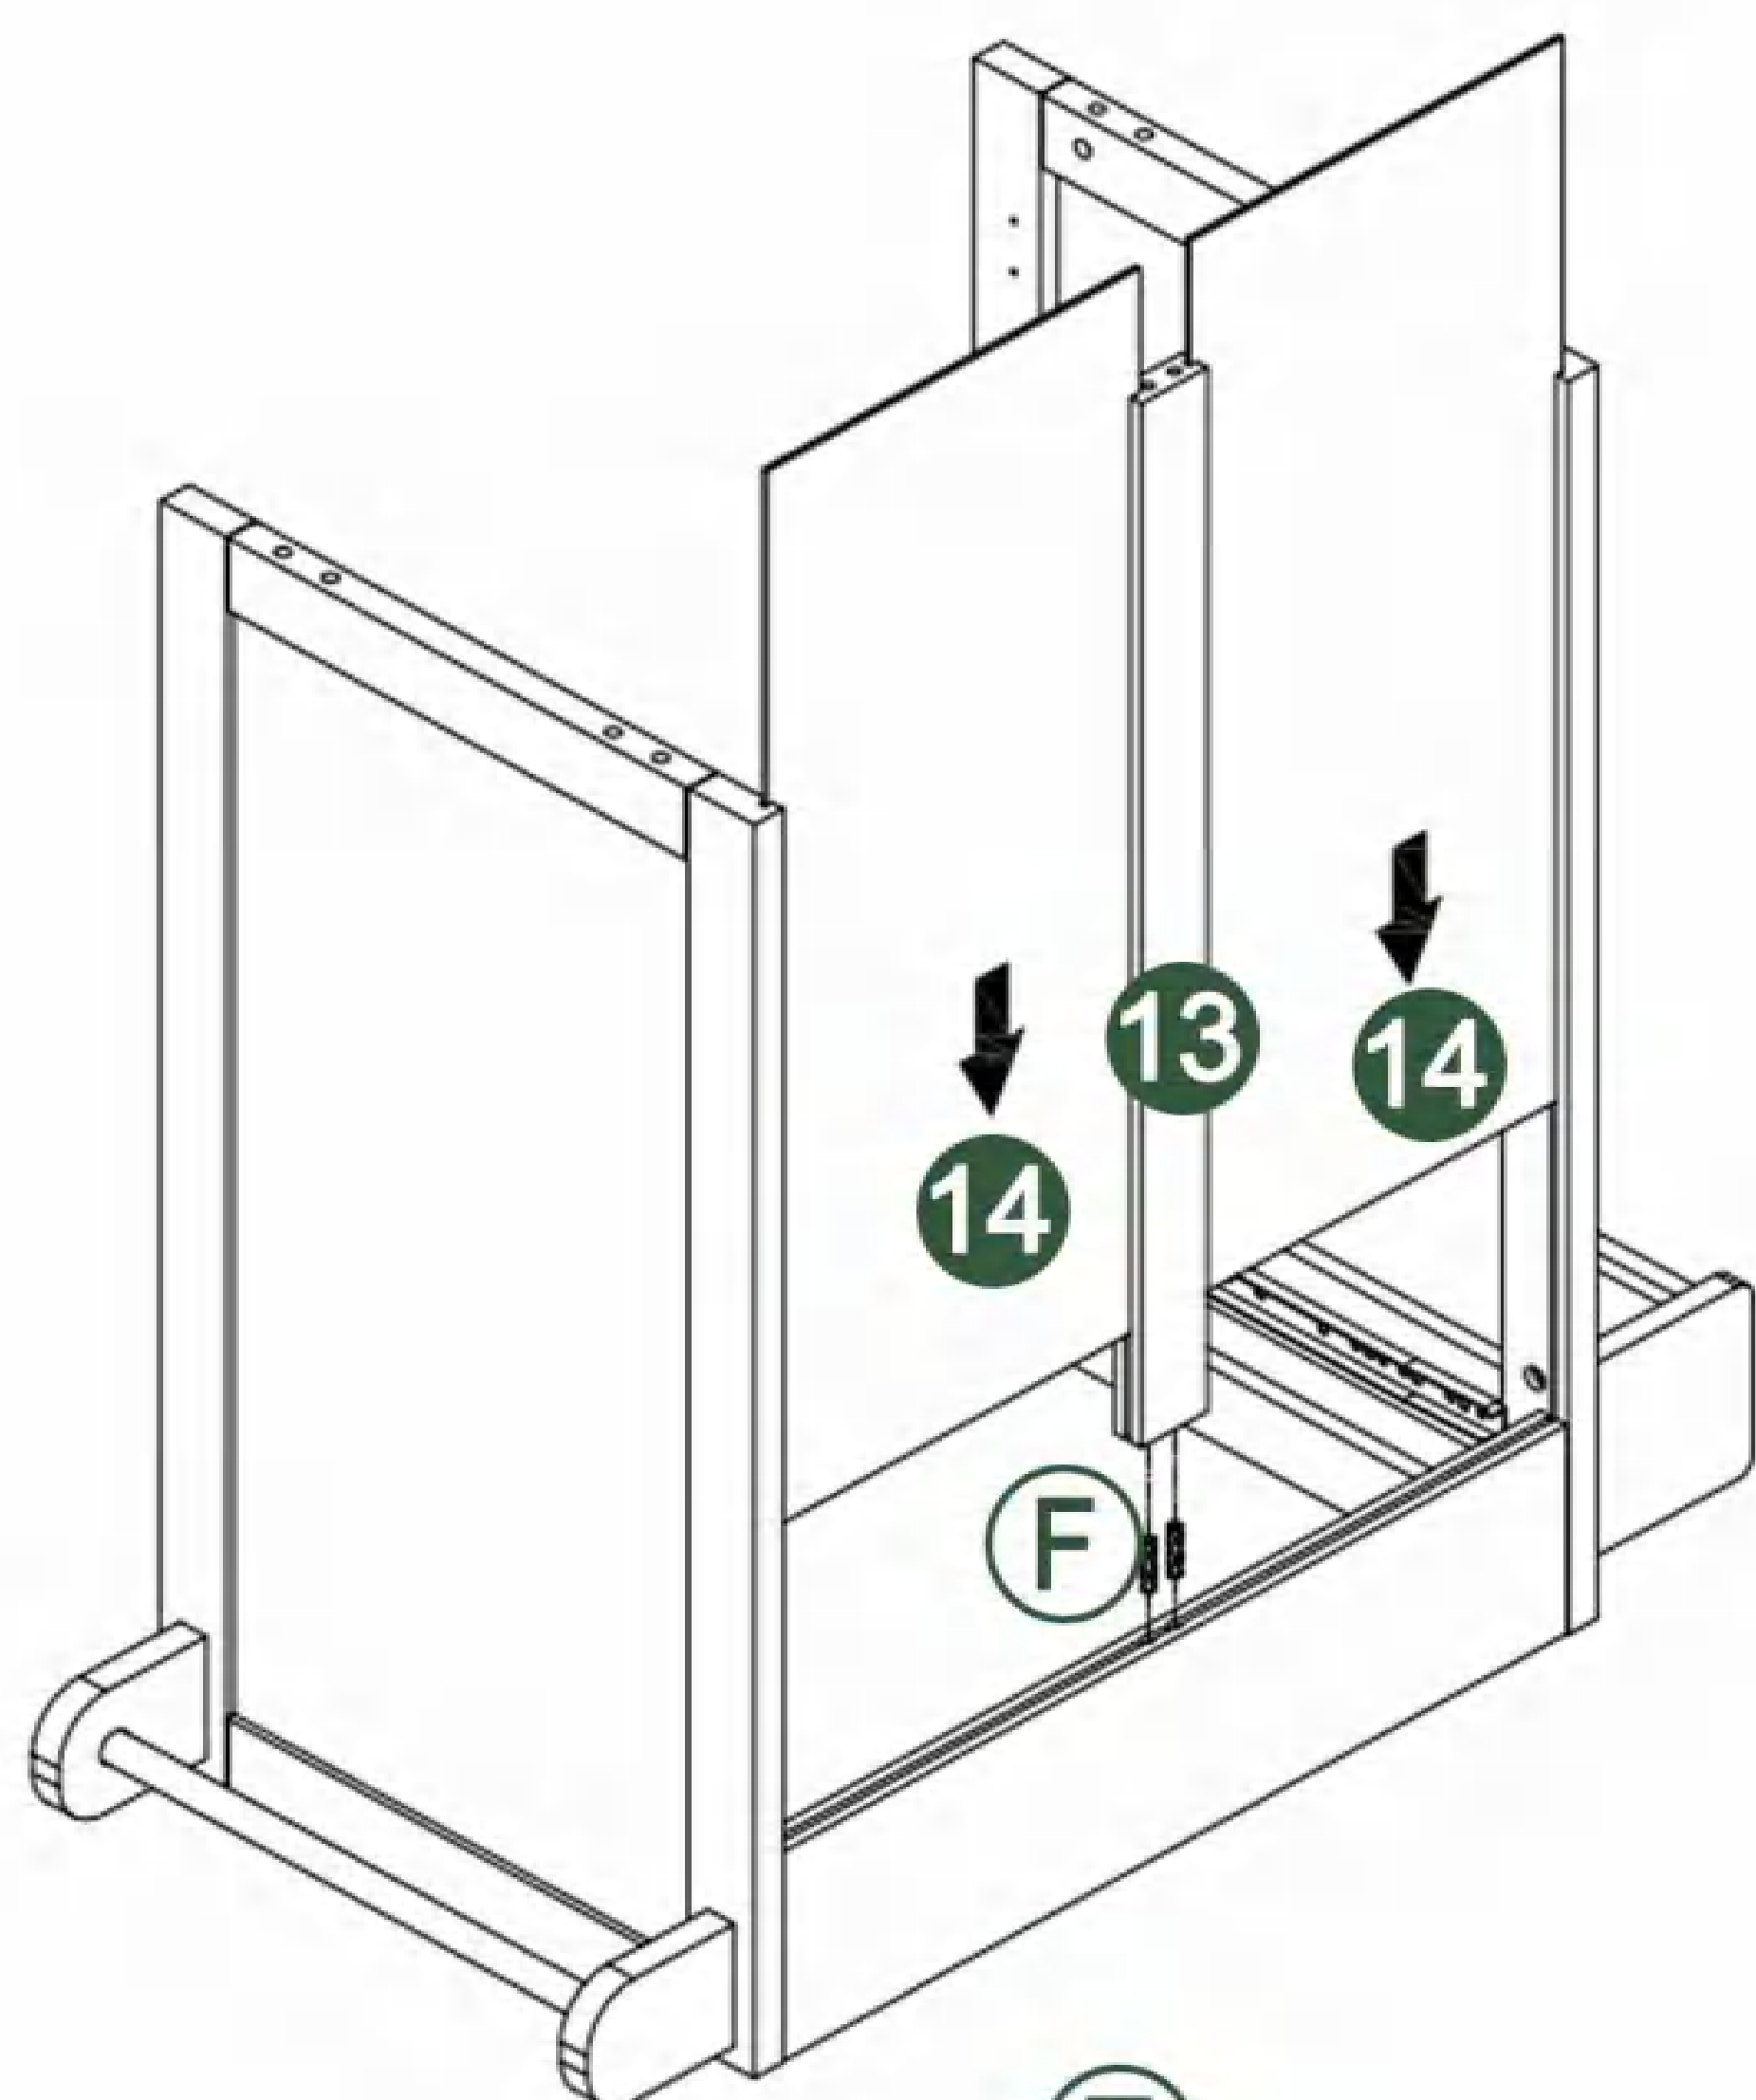


10.

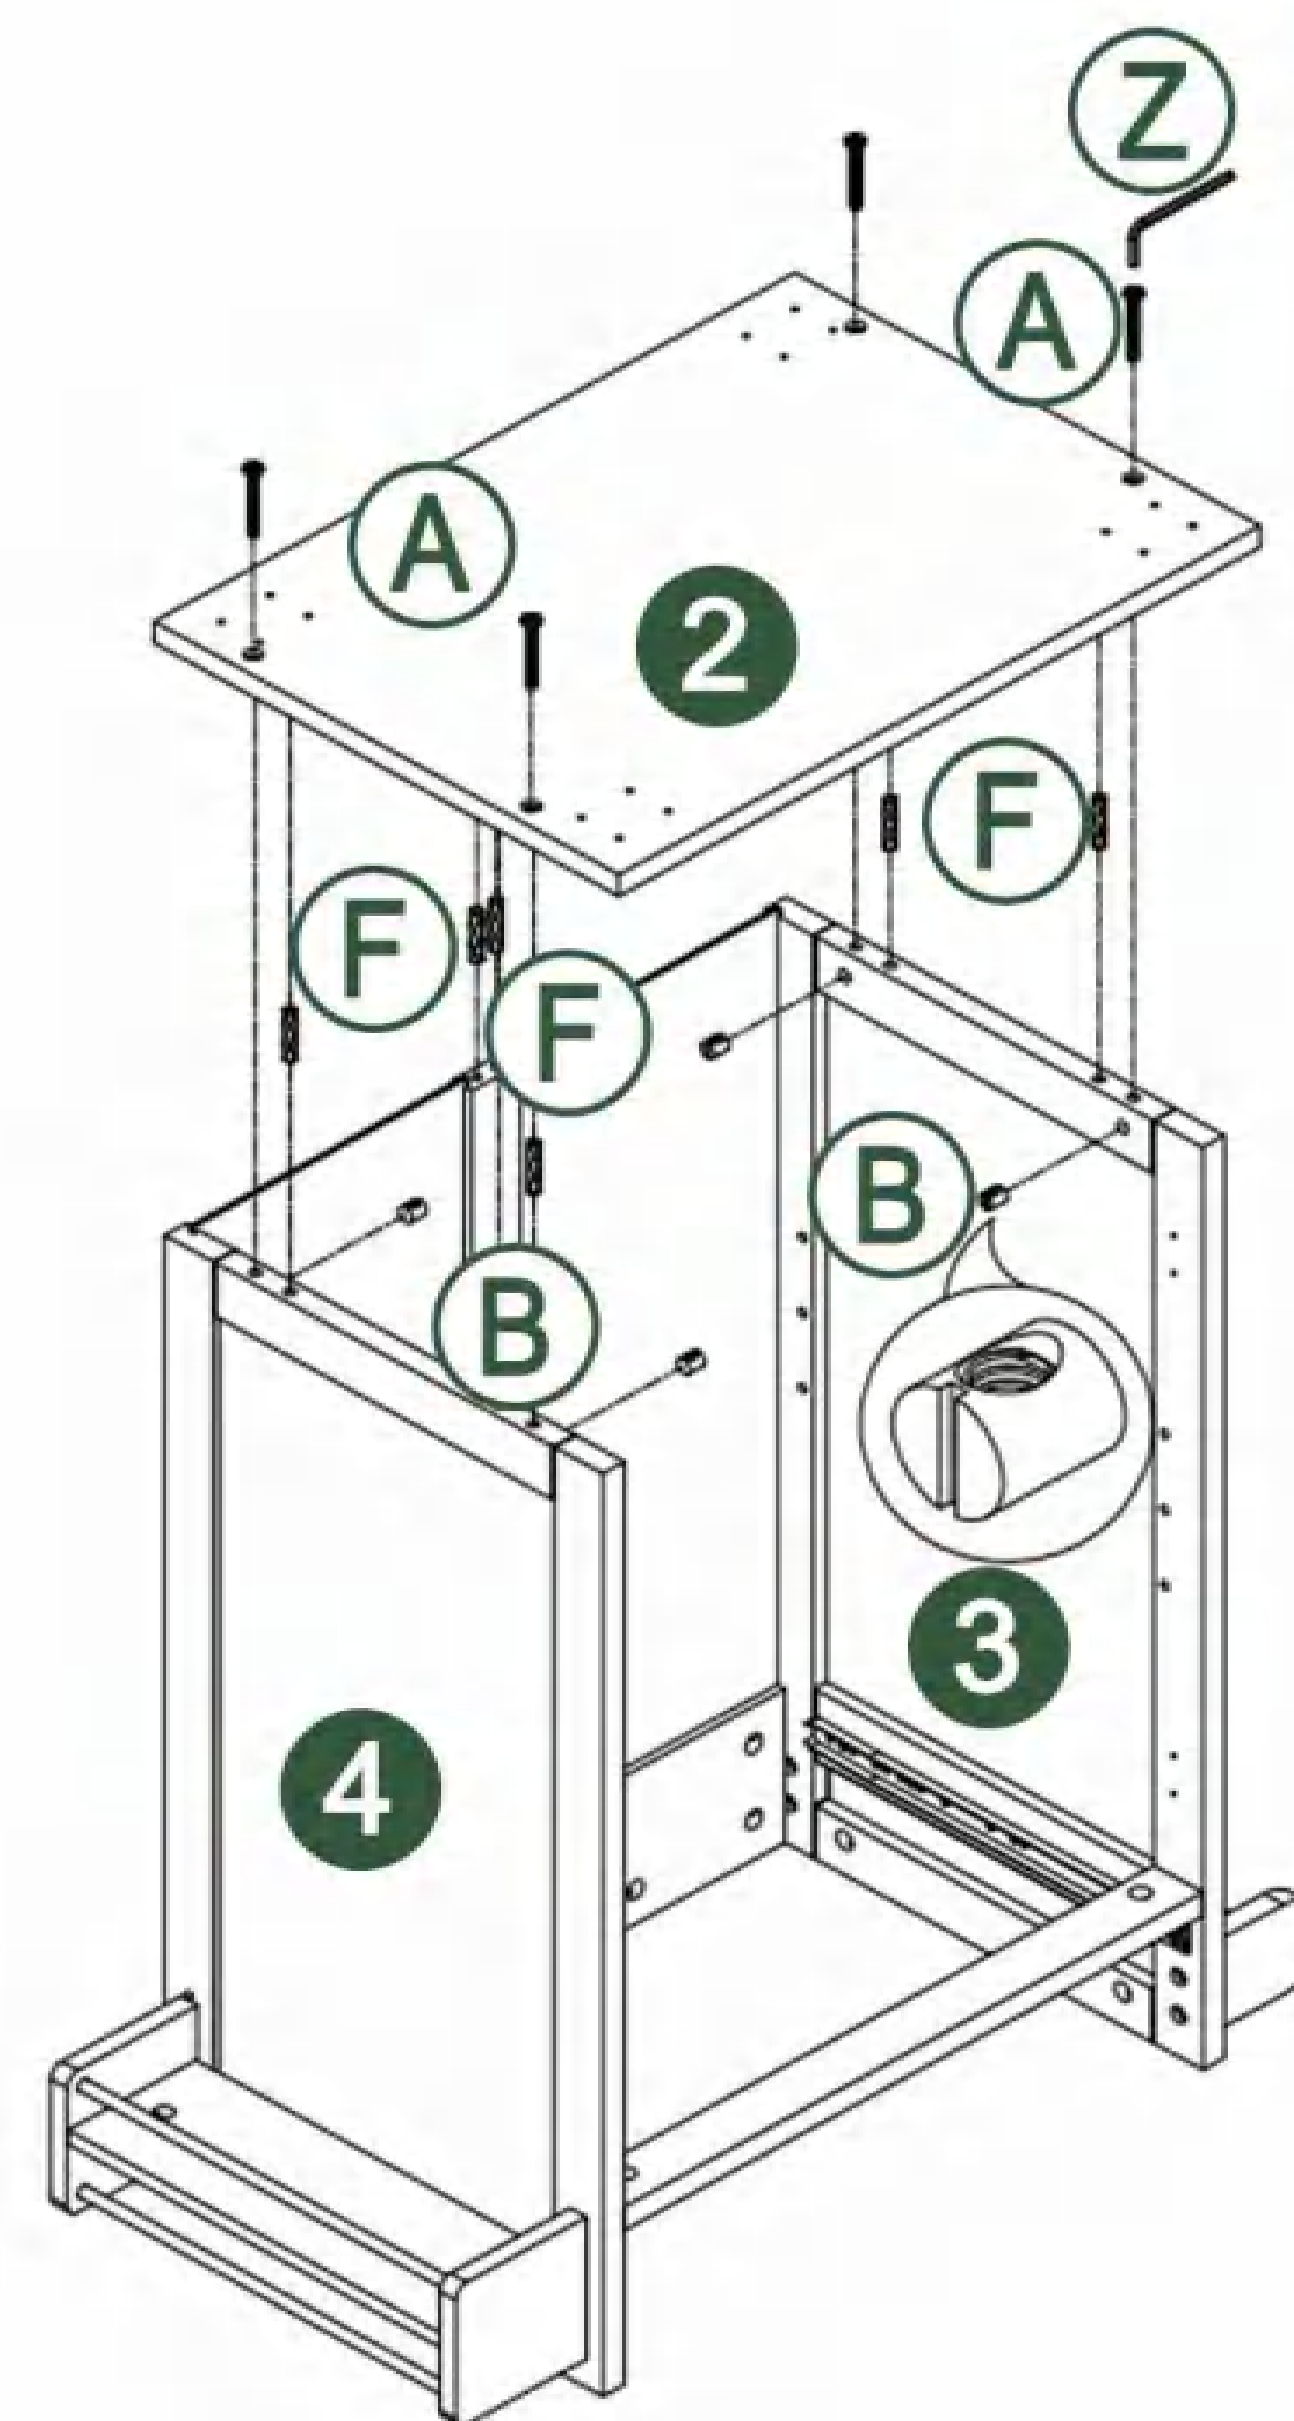


11.

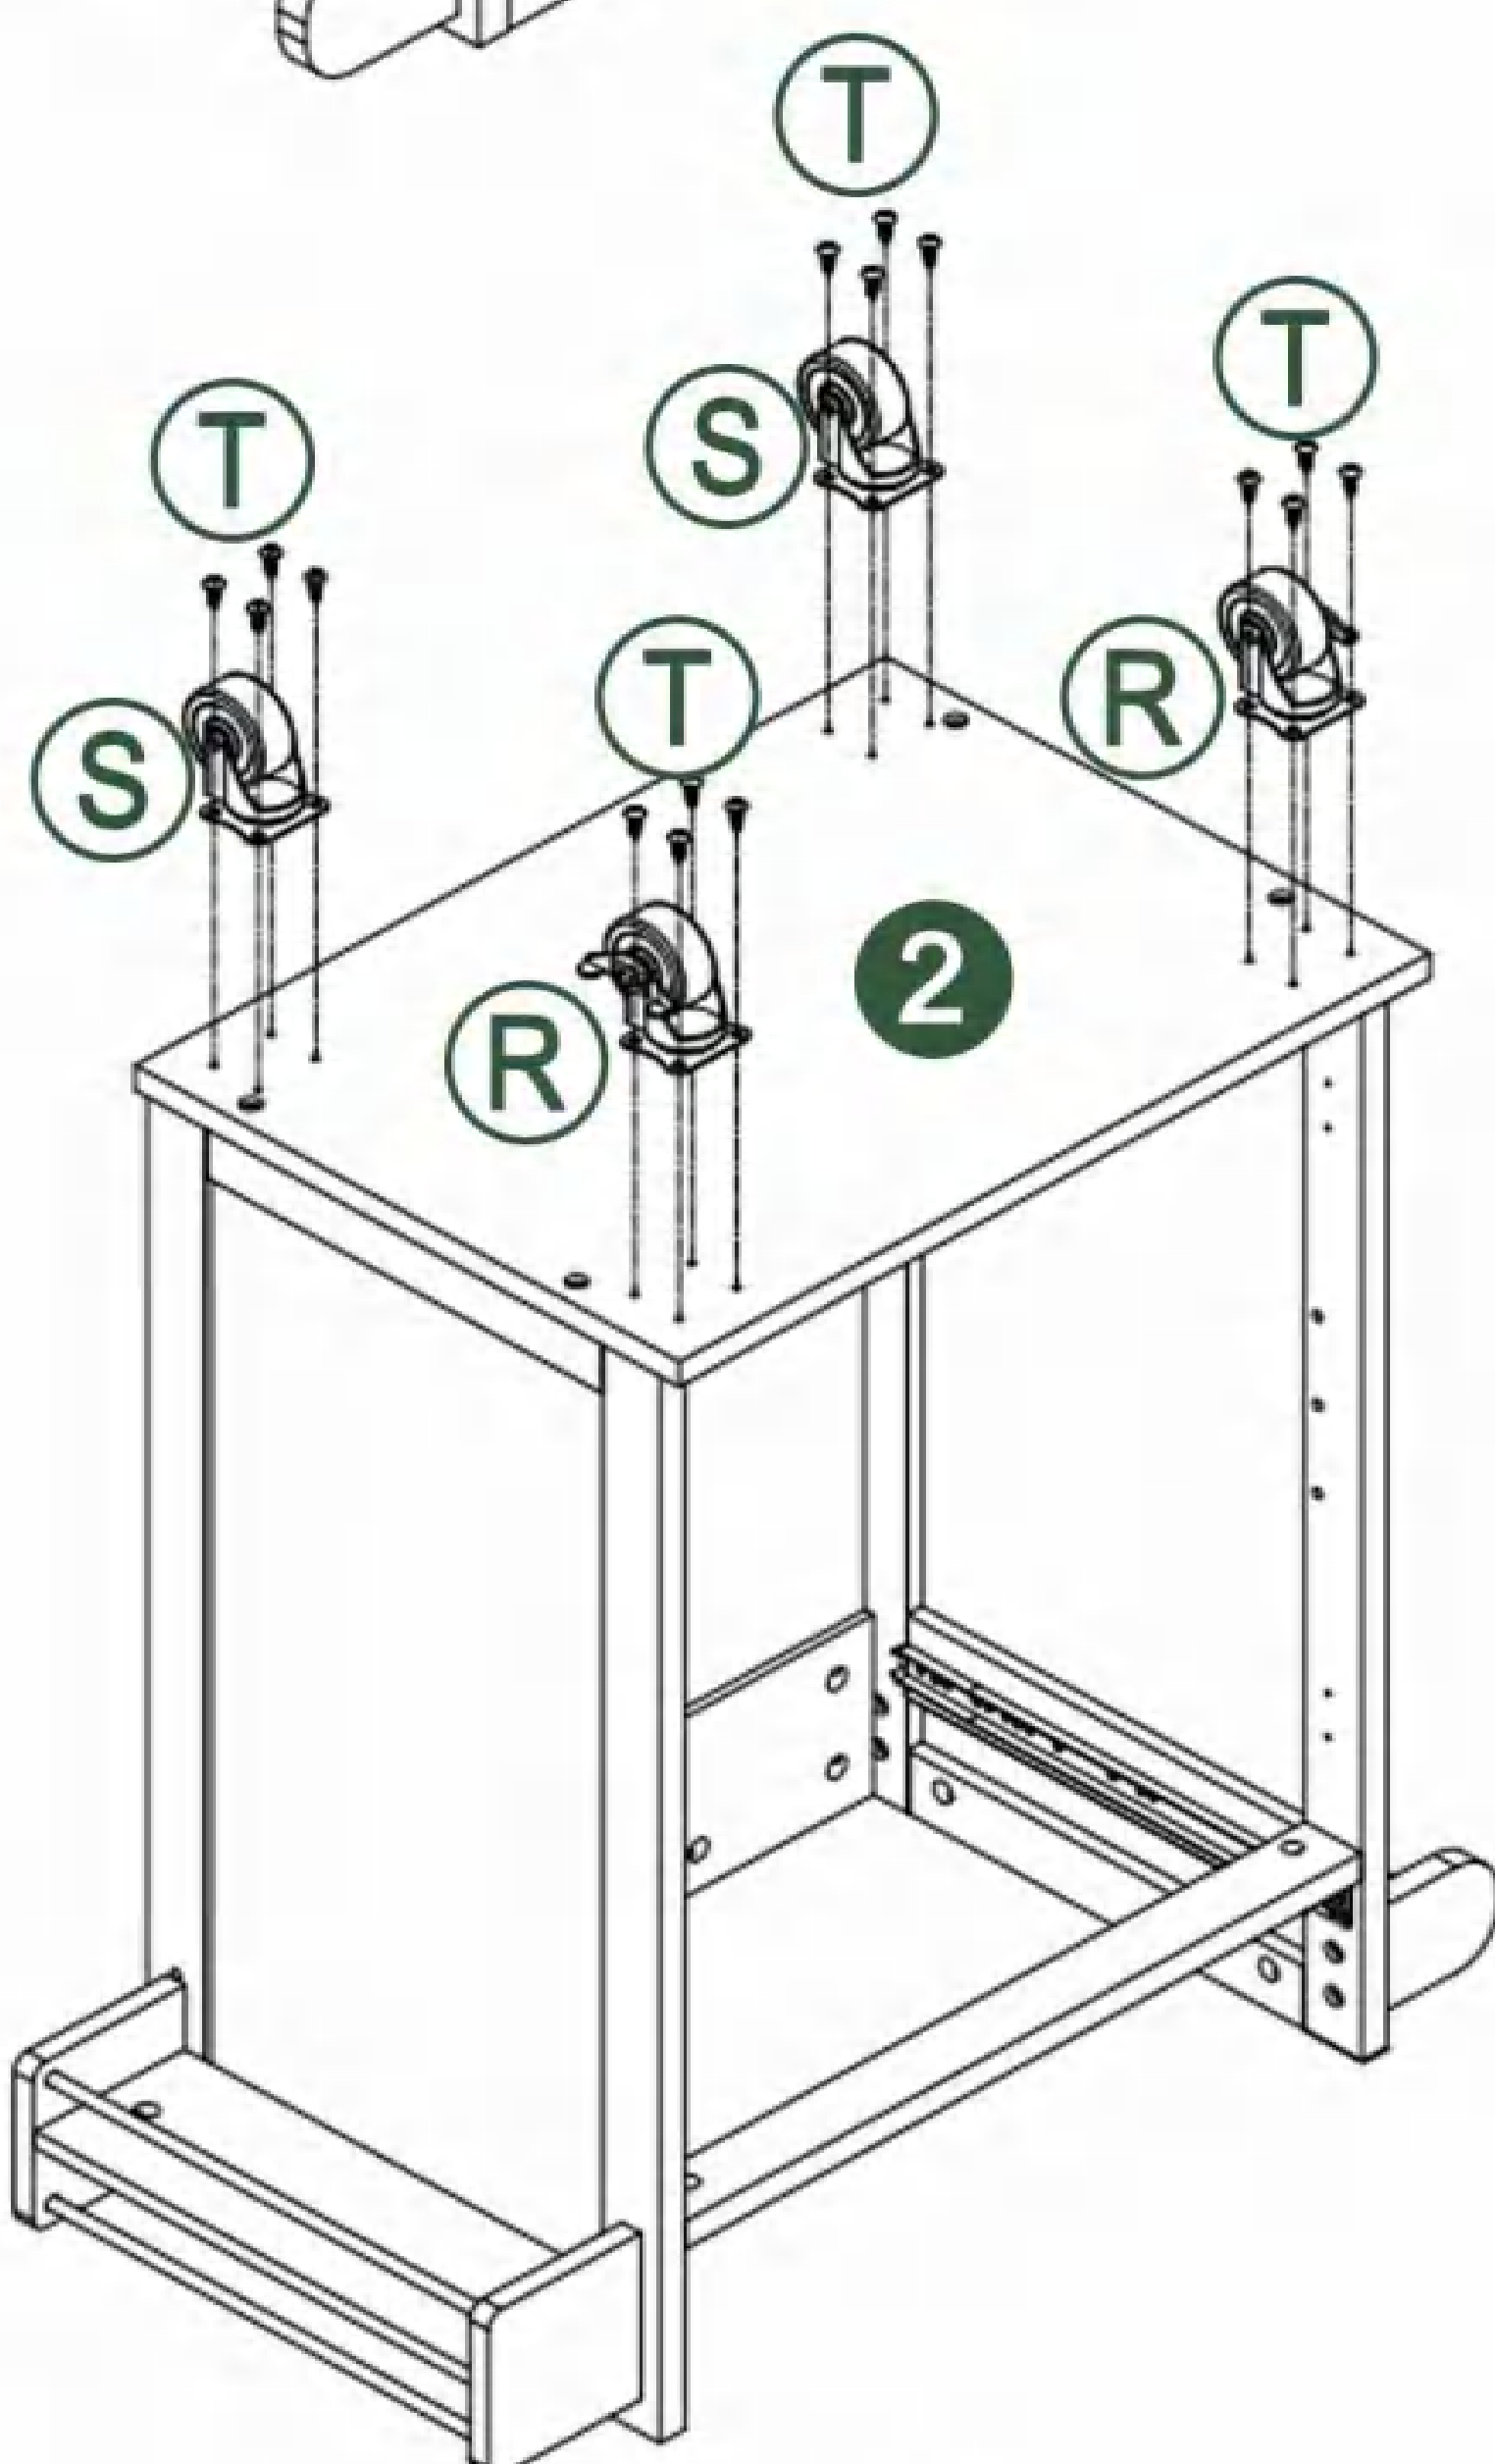


12.

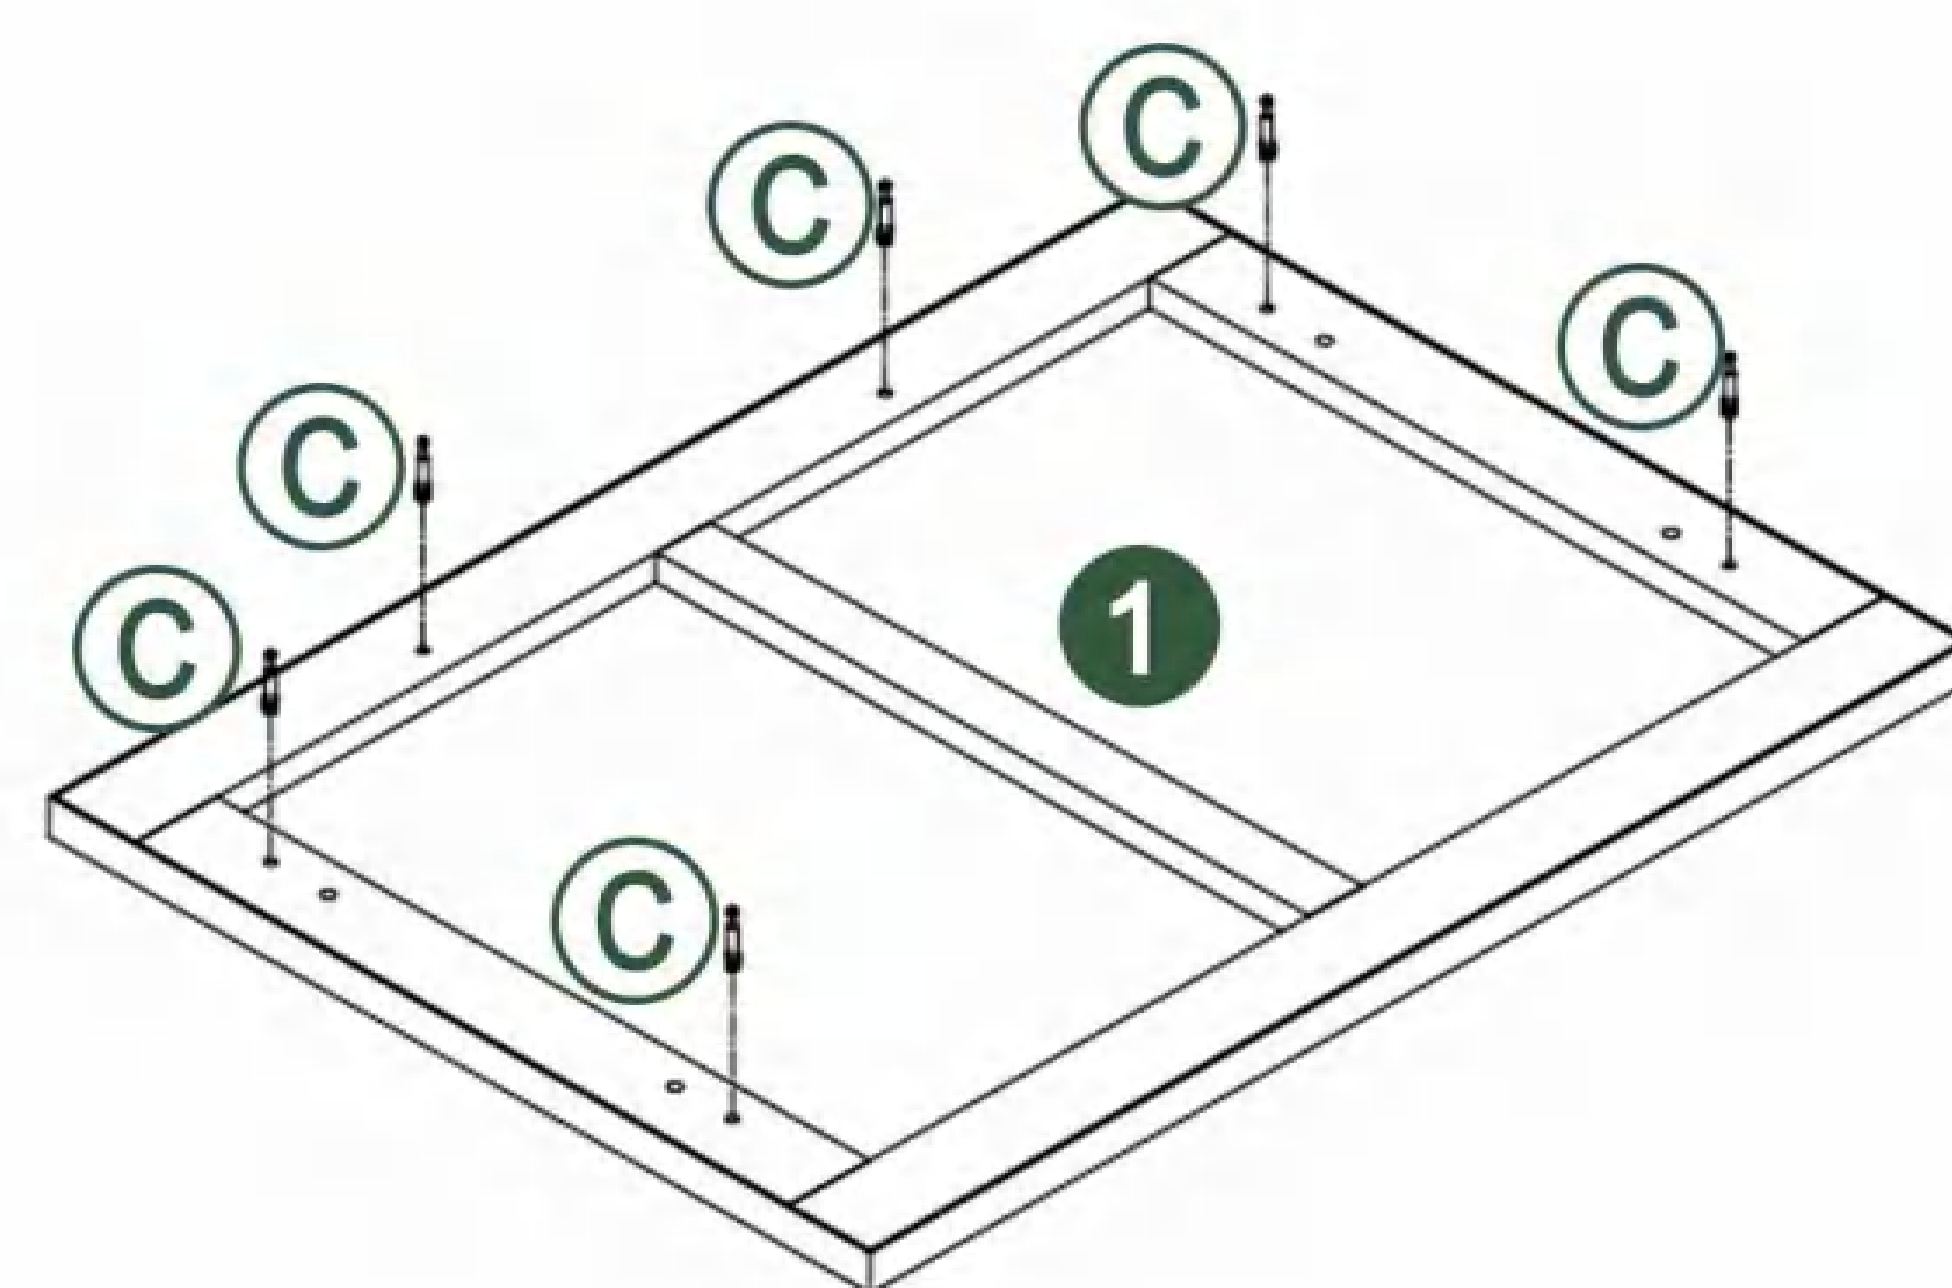



13.

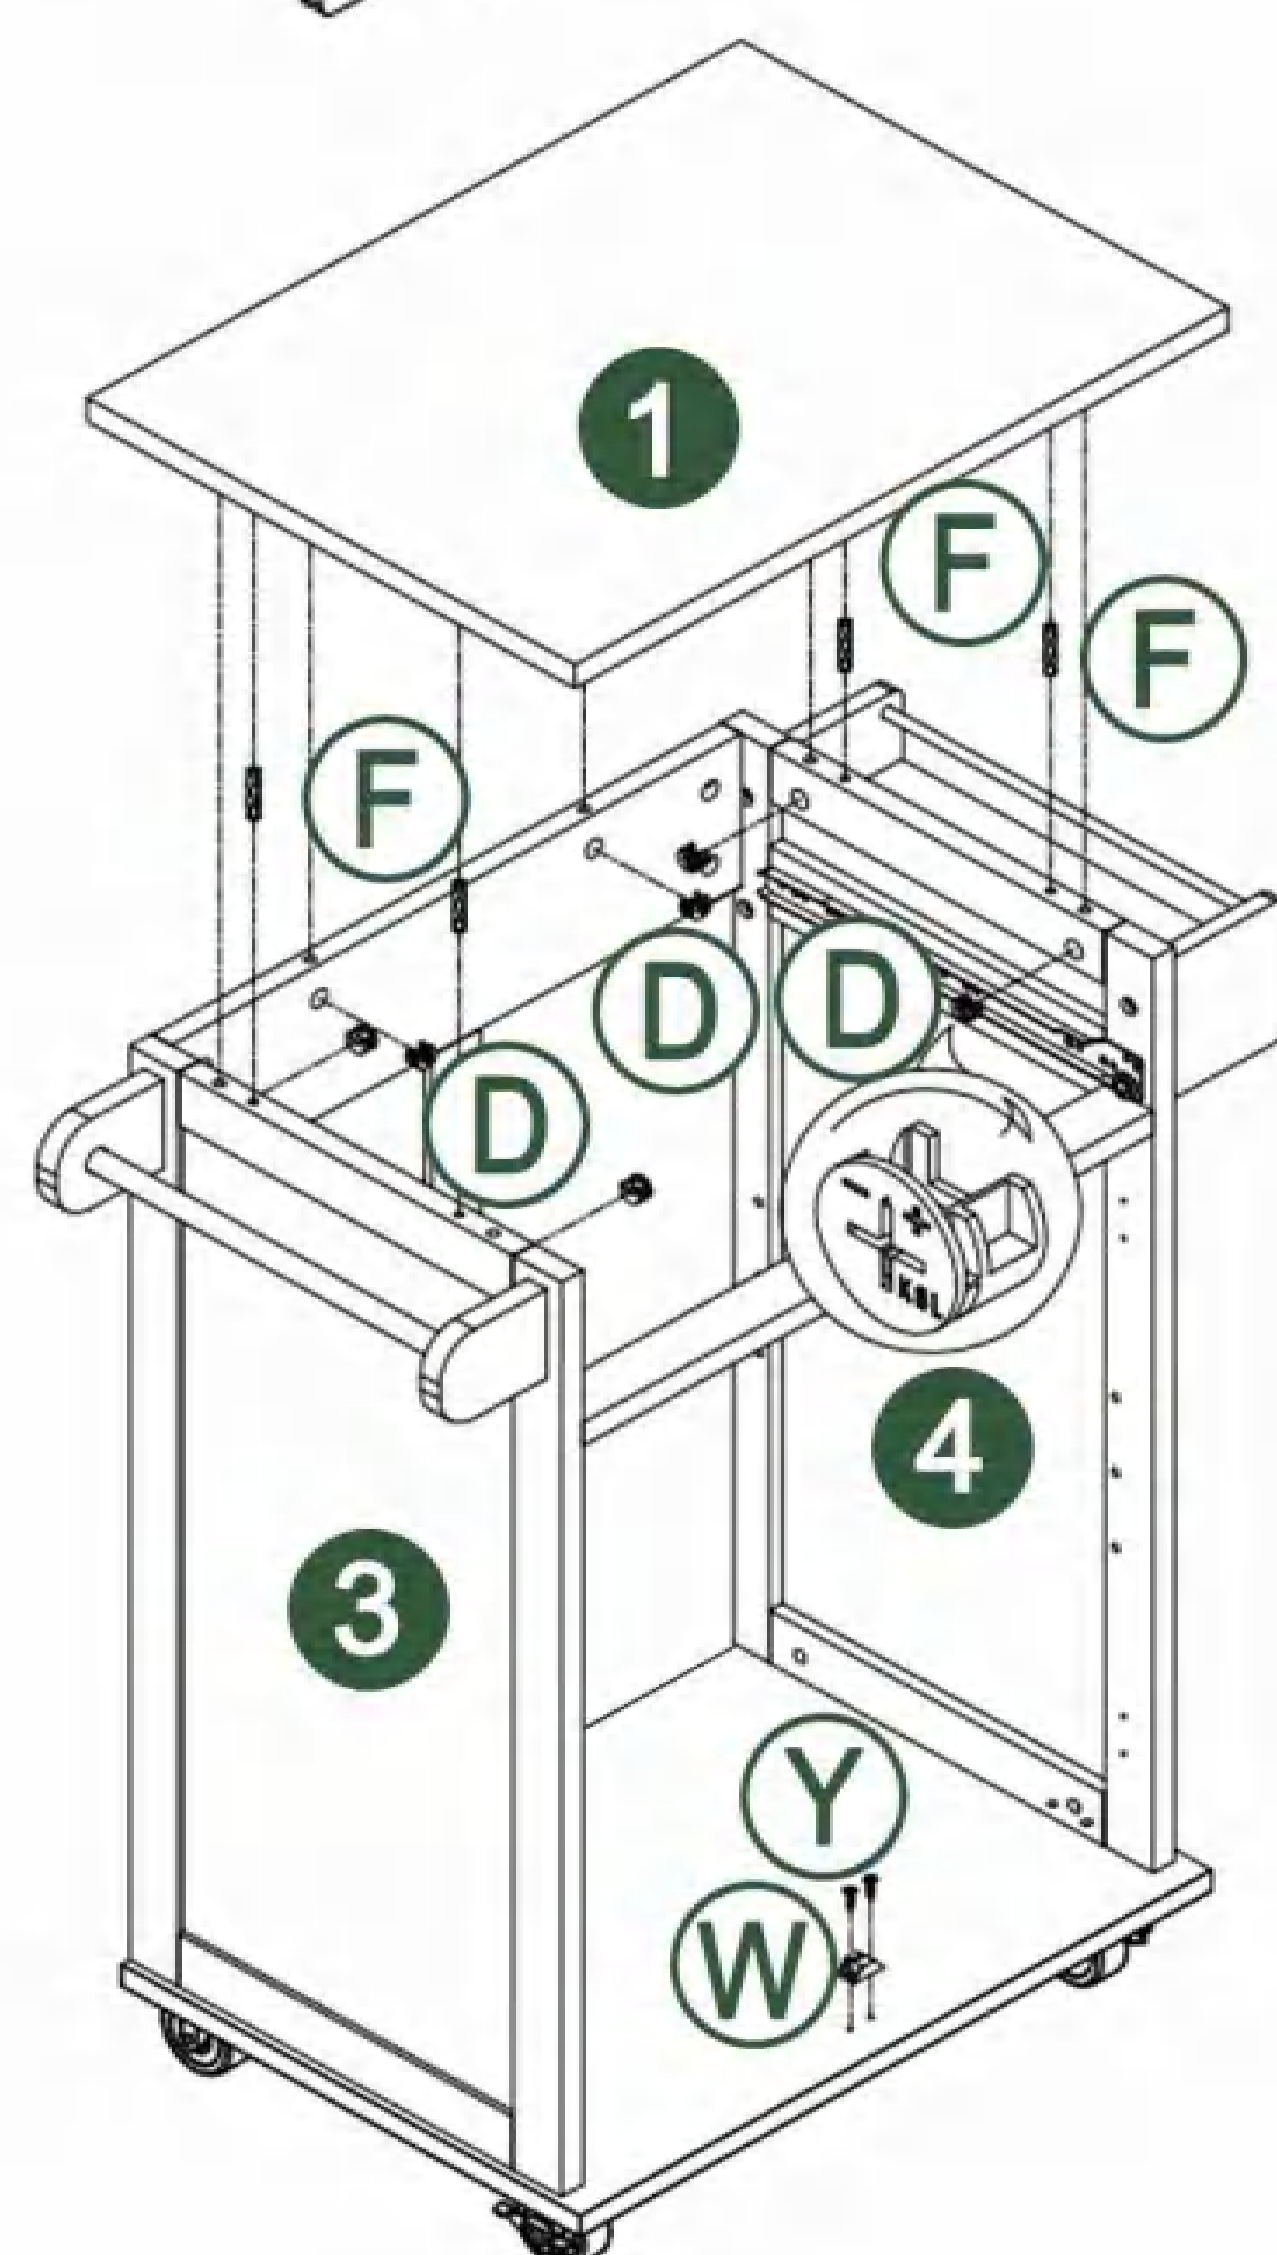


14.

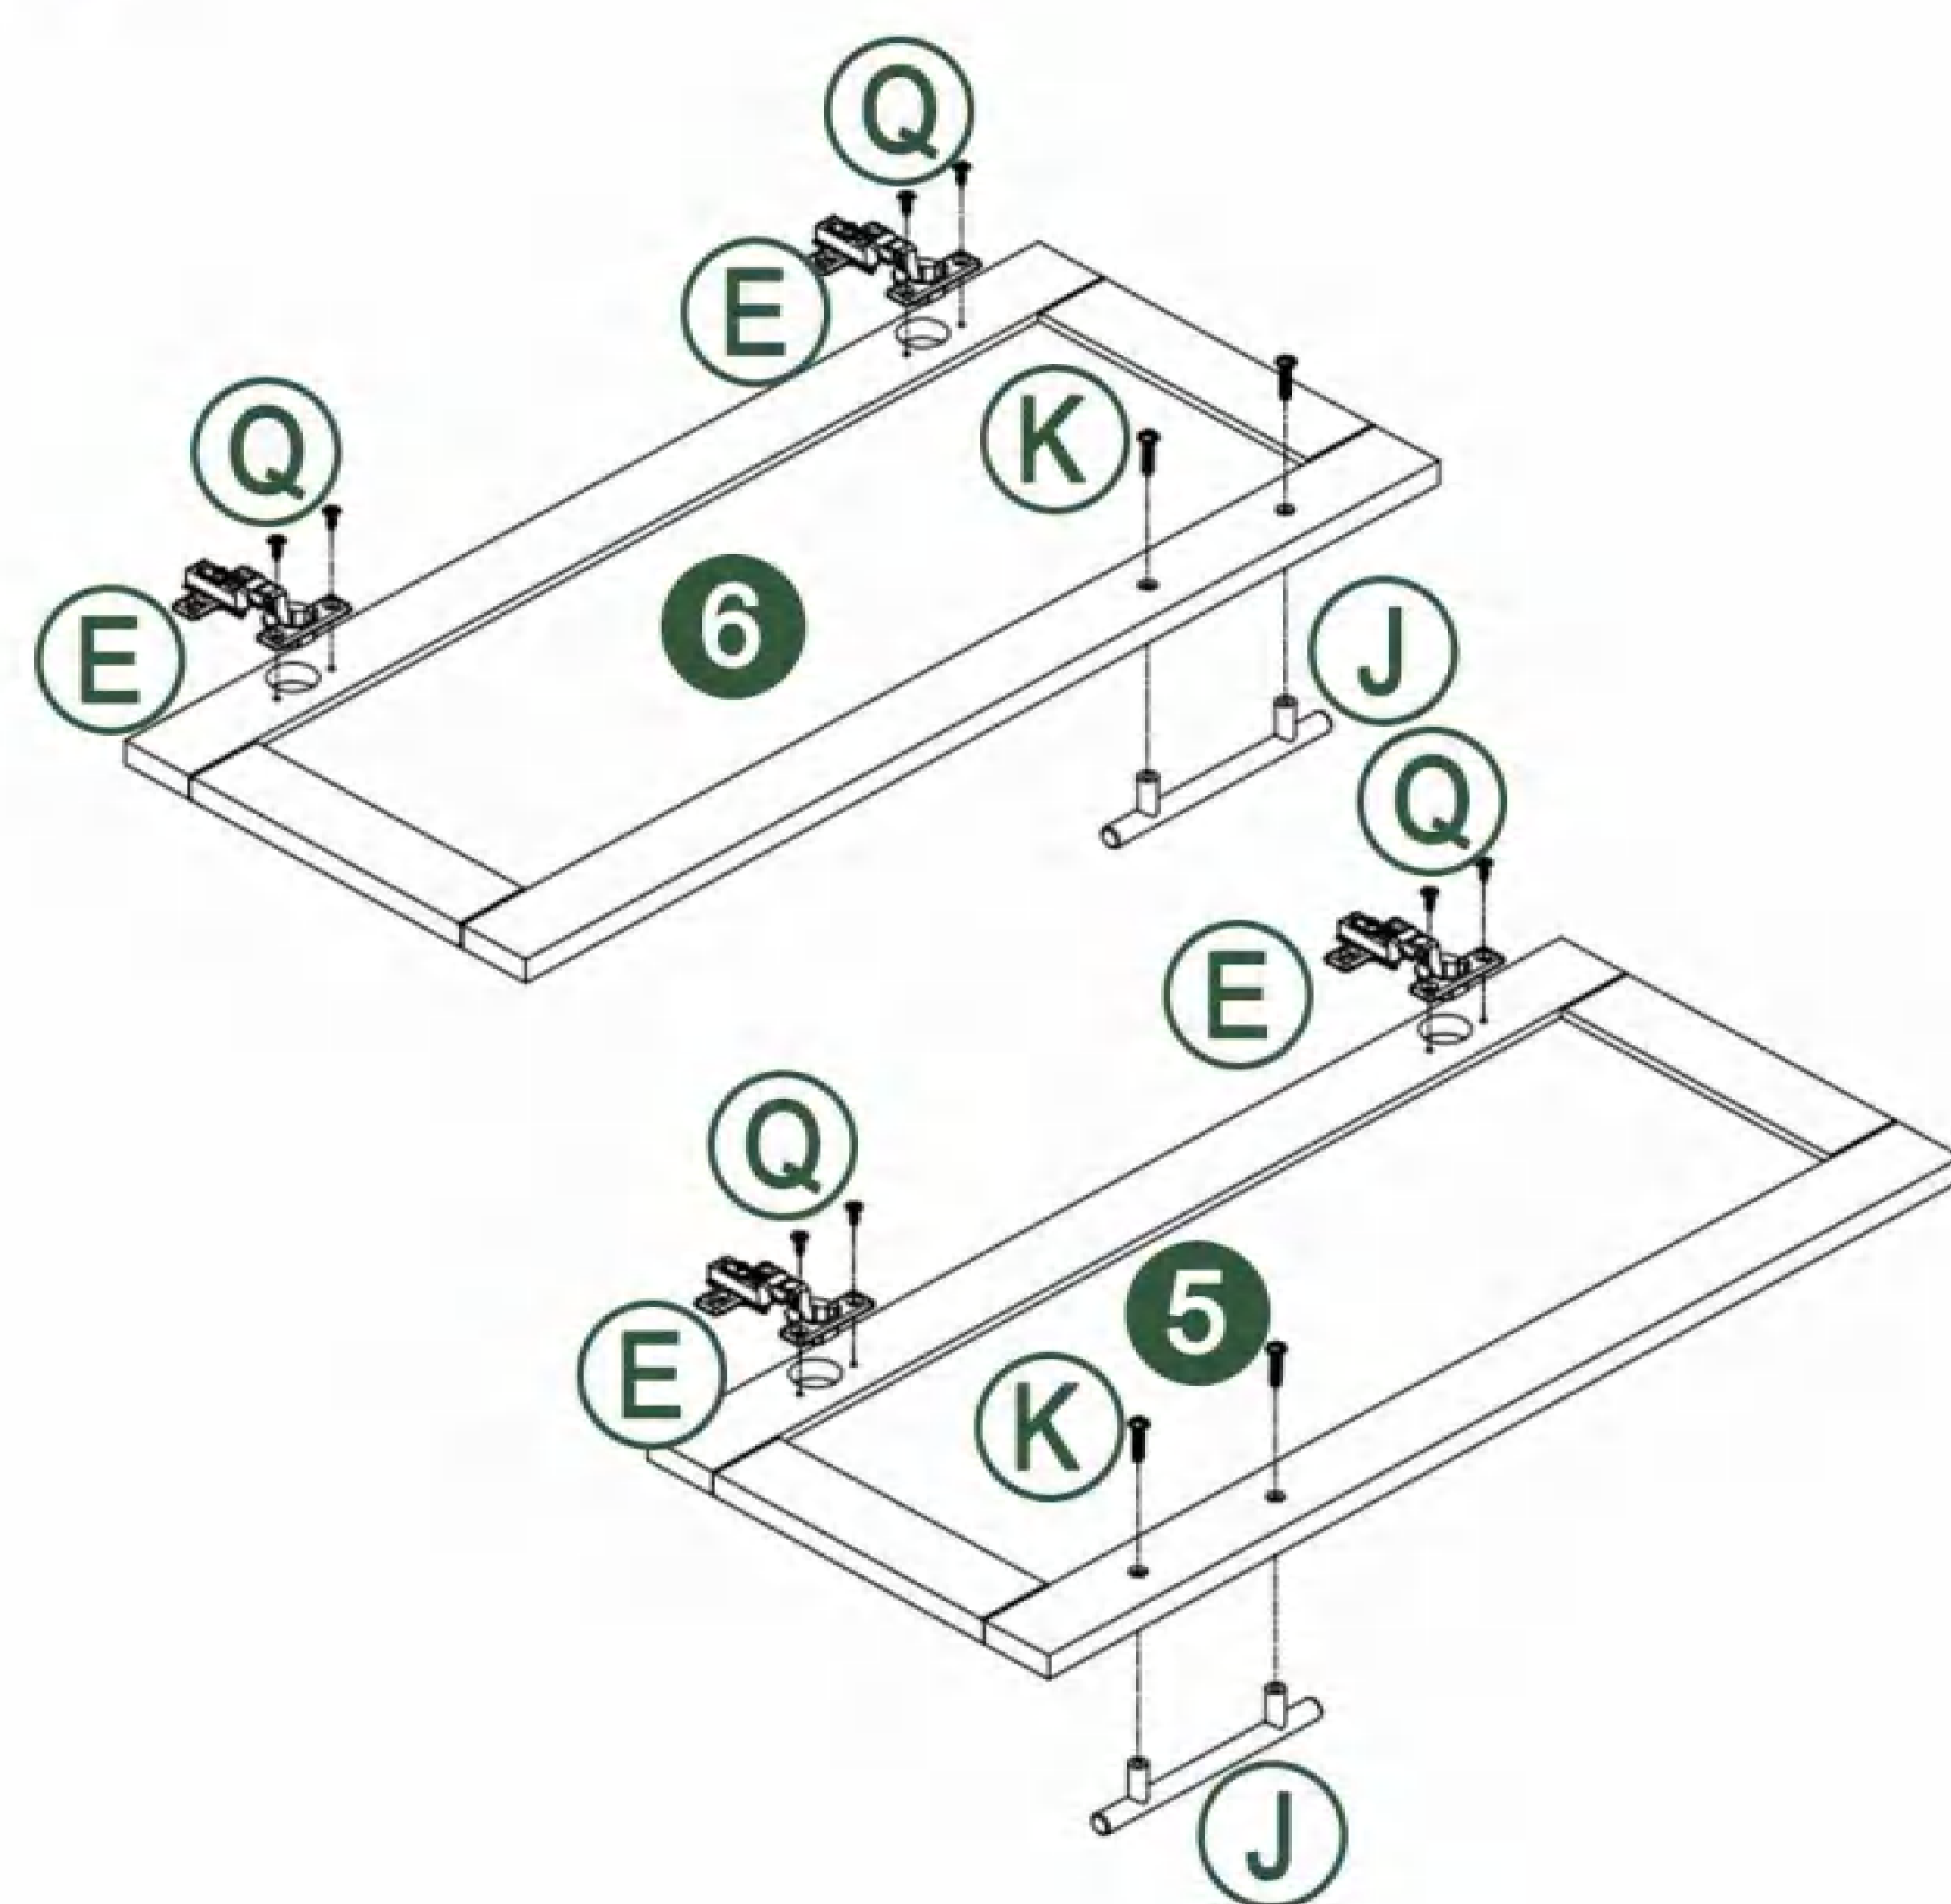


15.

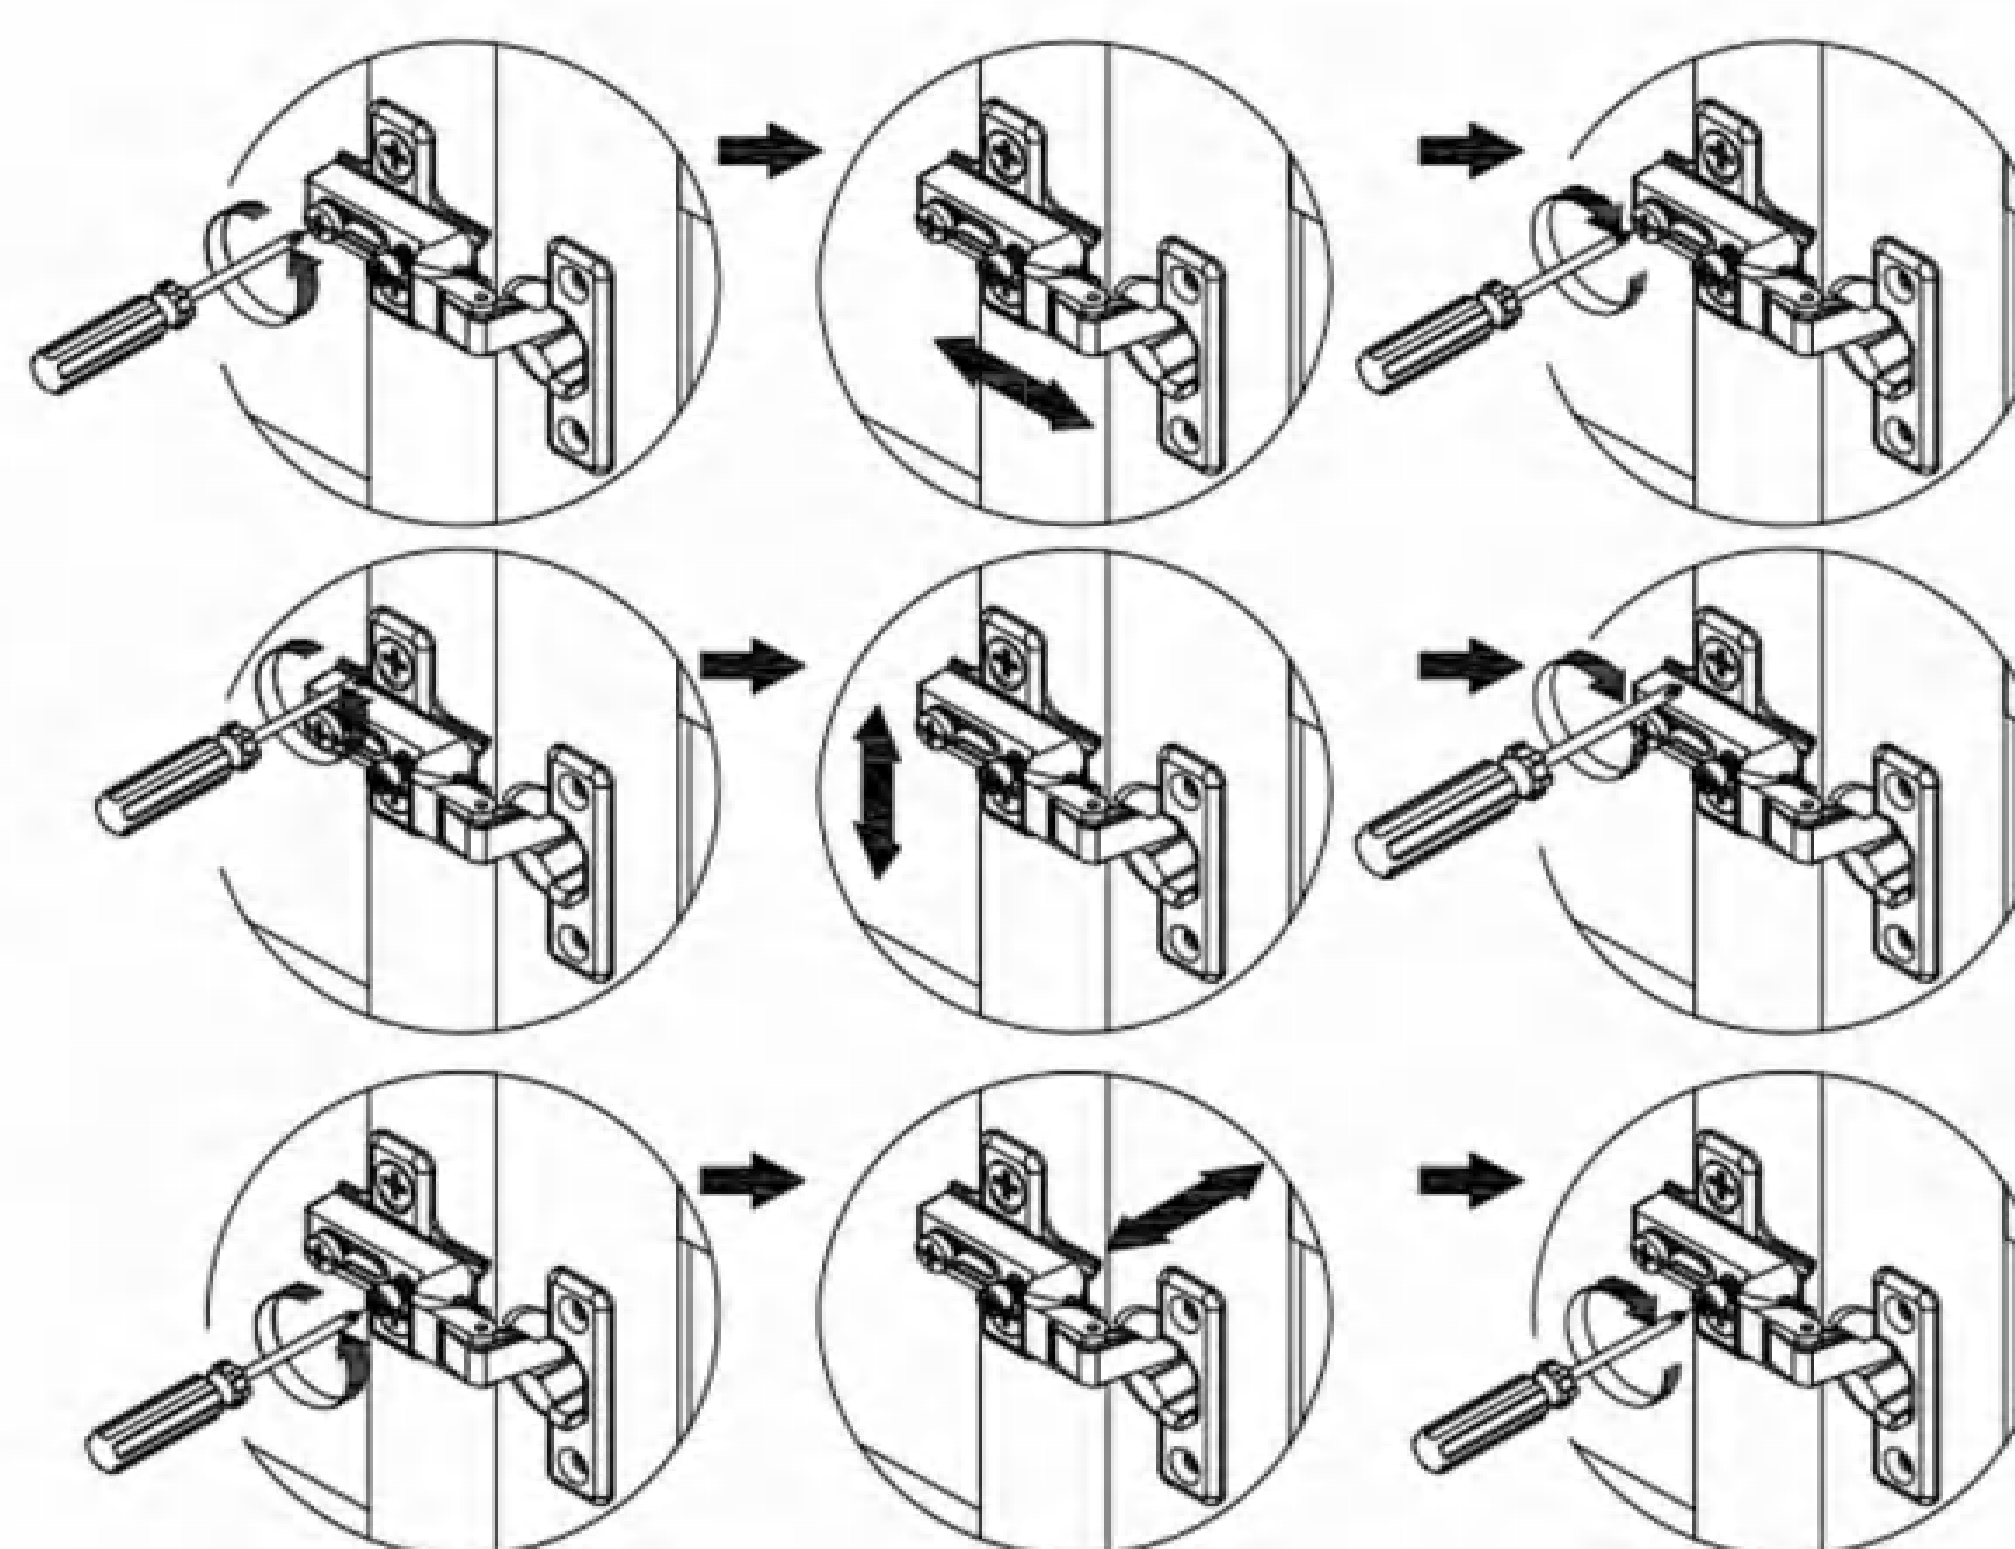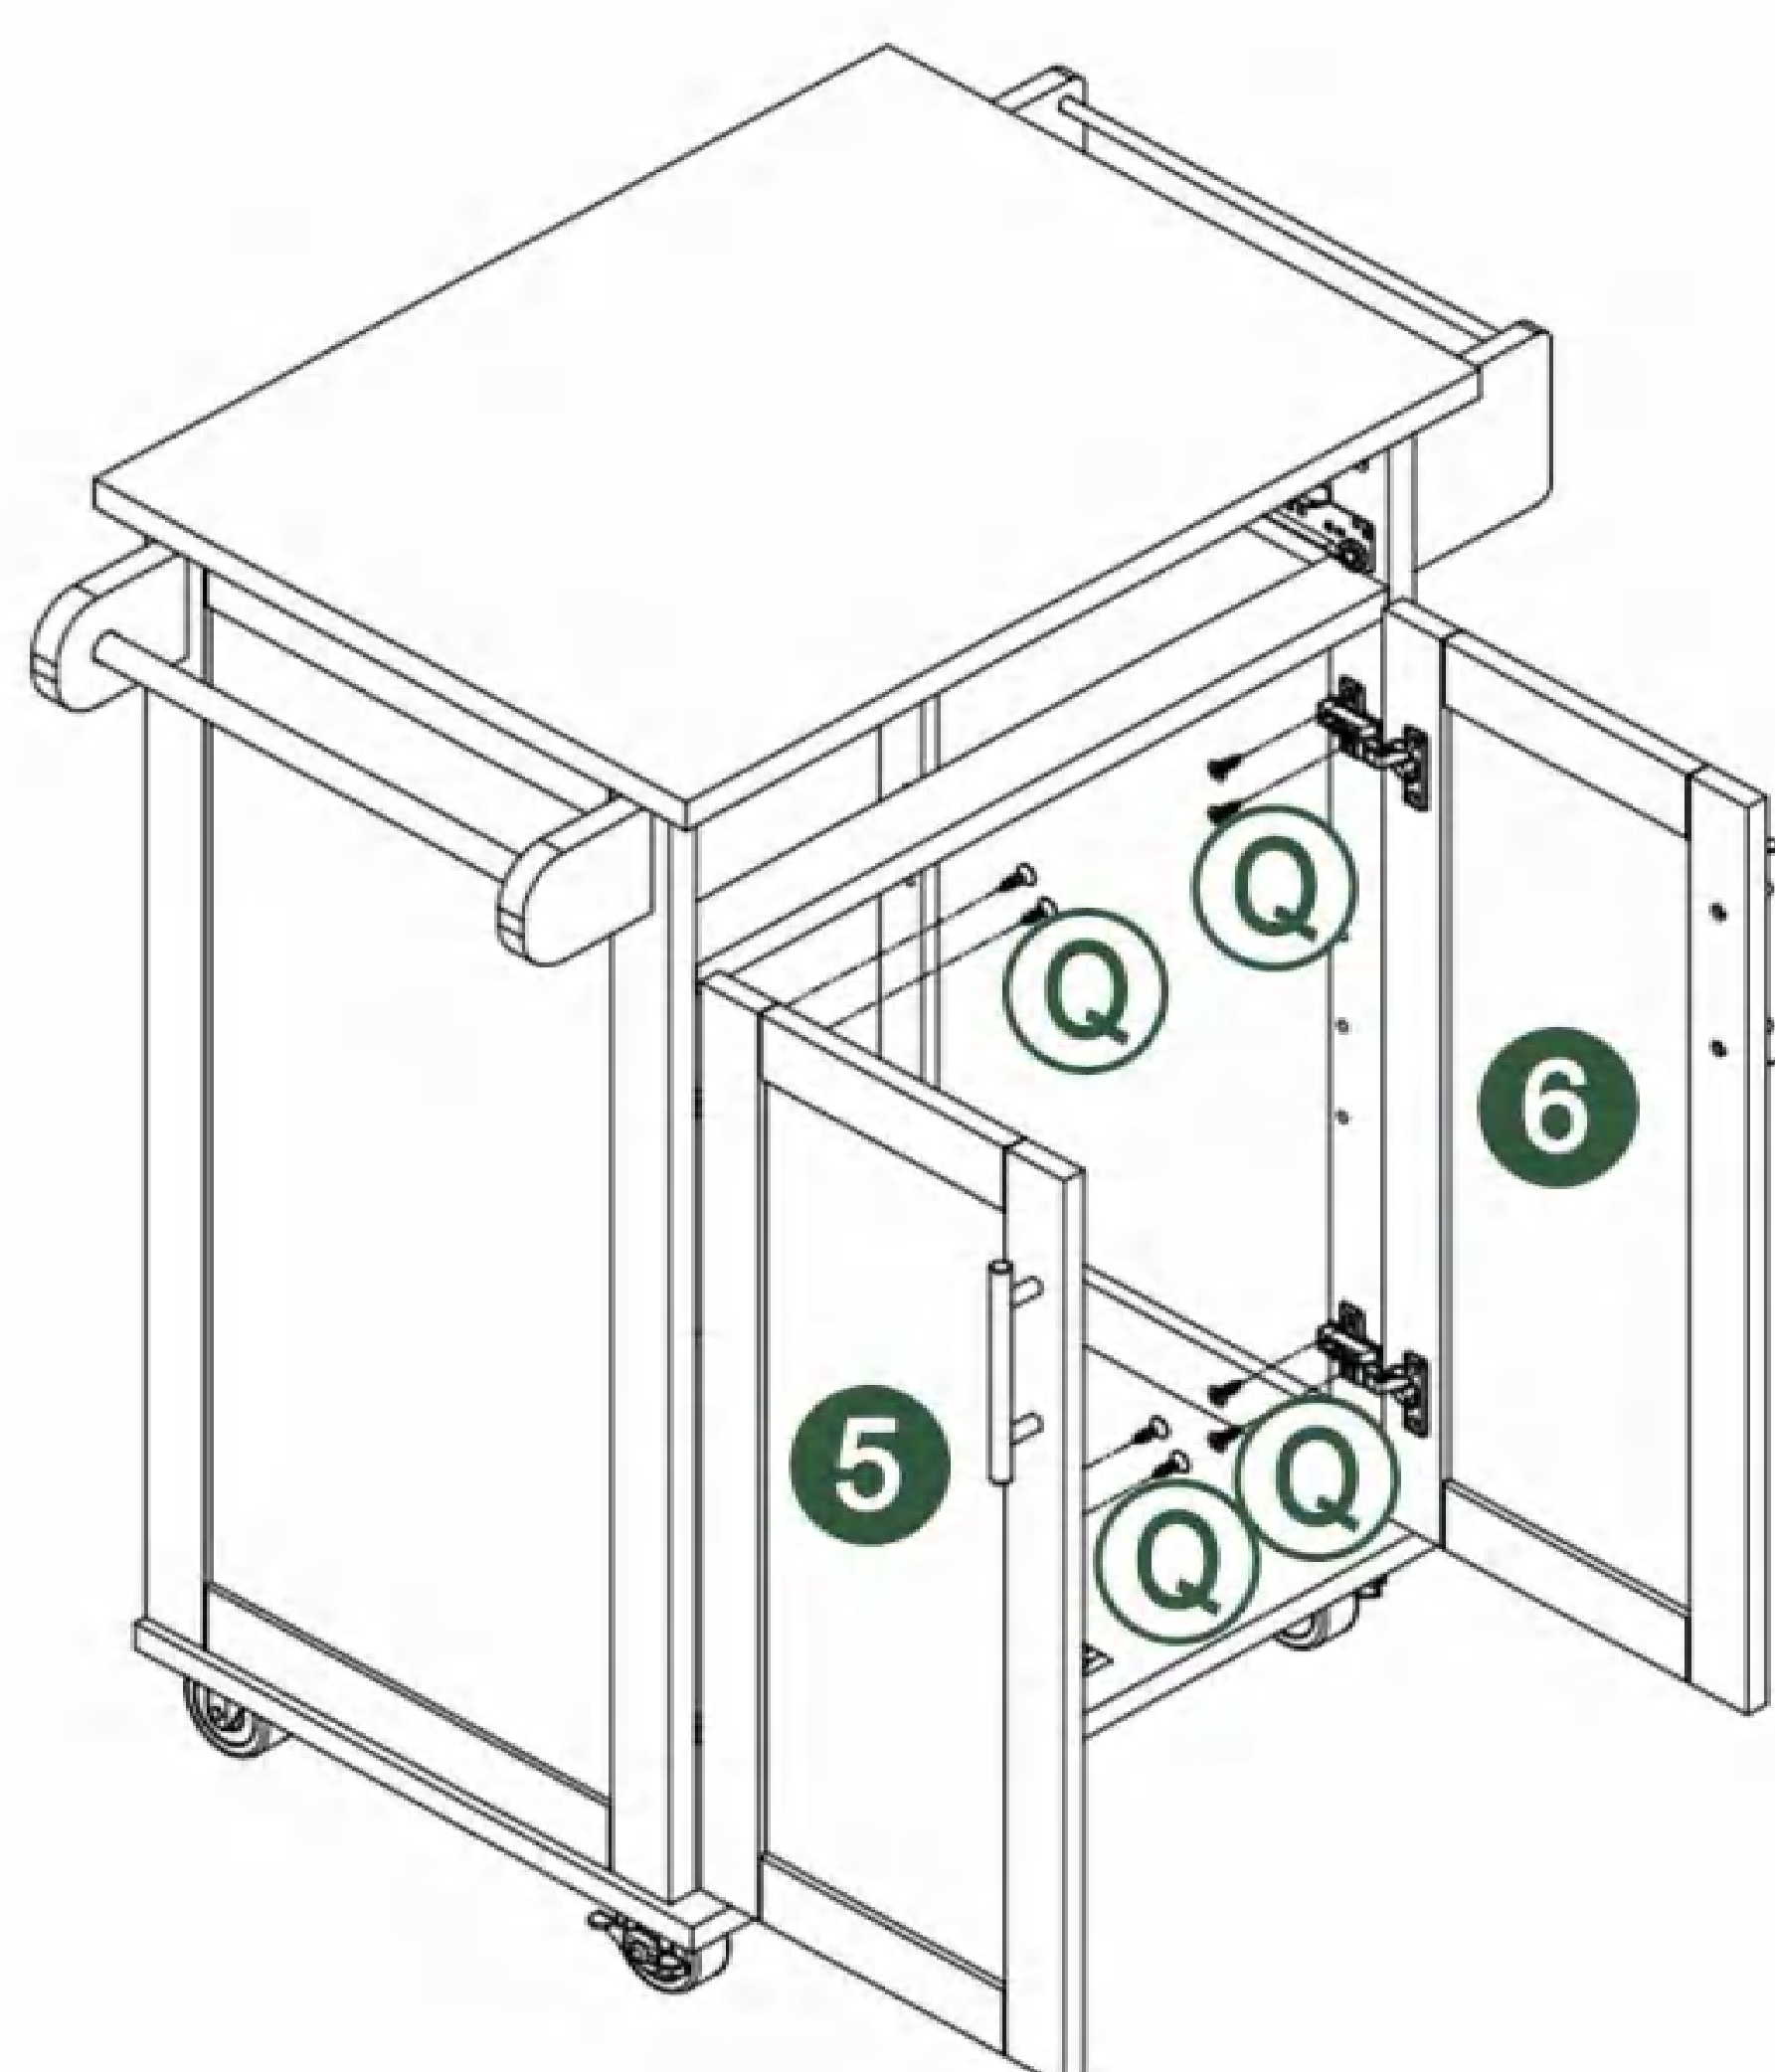


16.

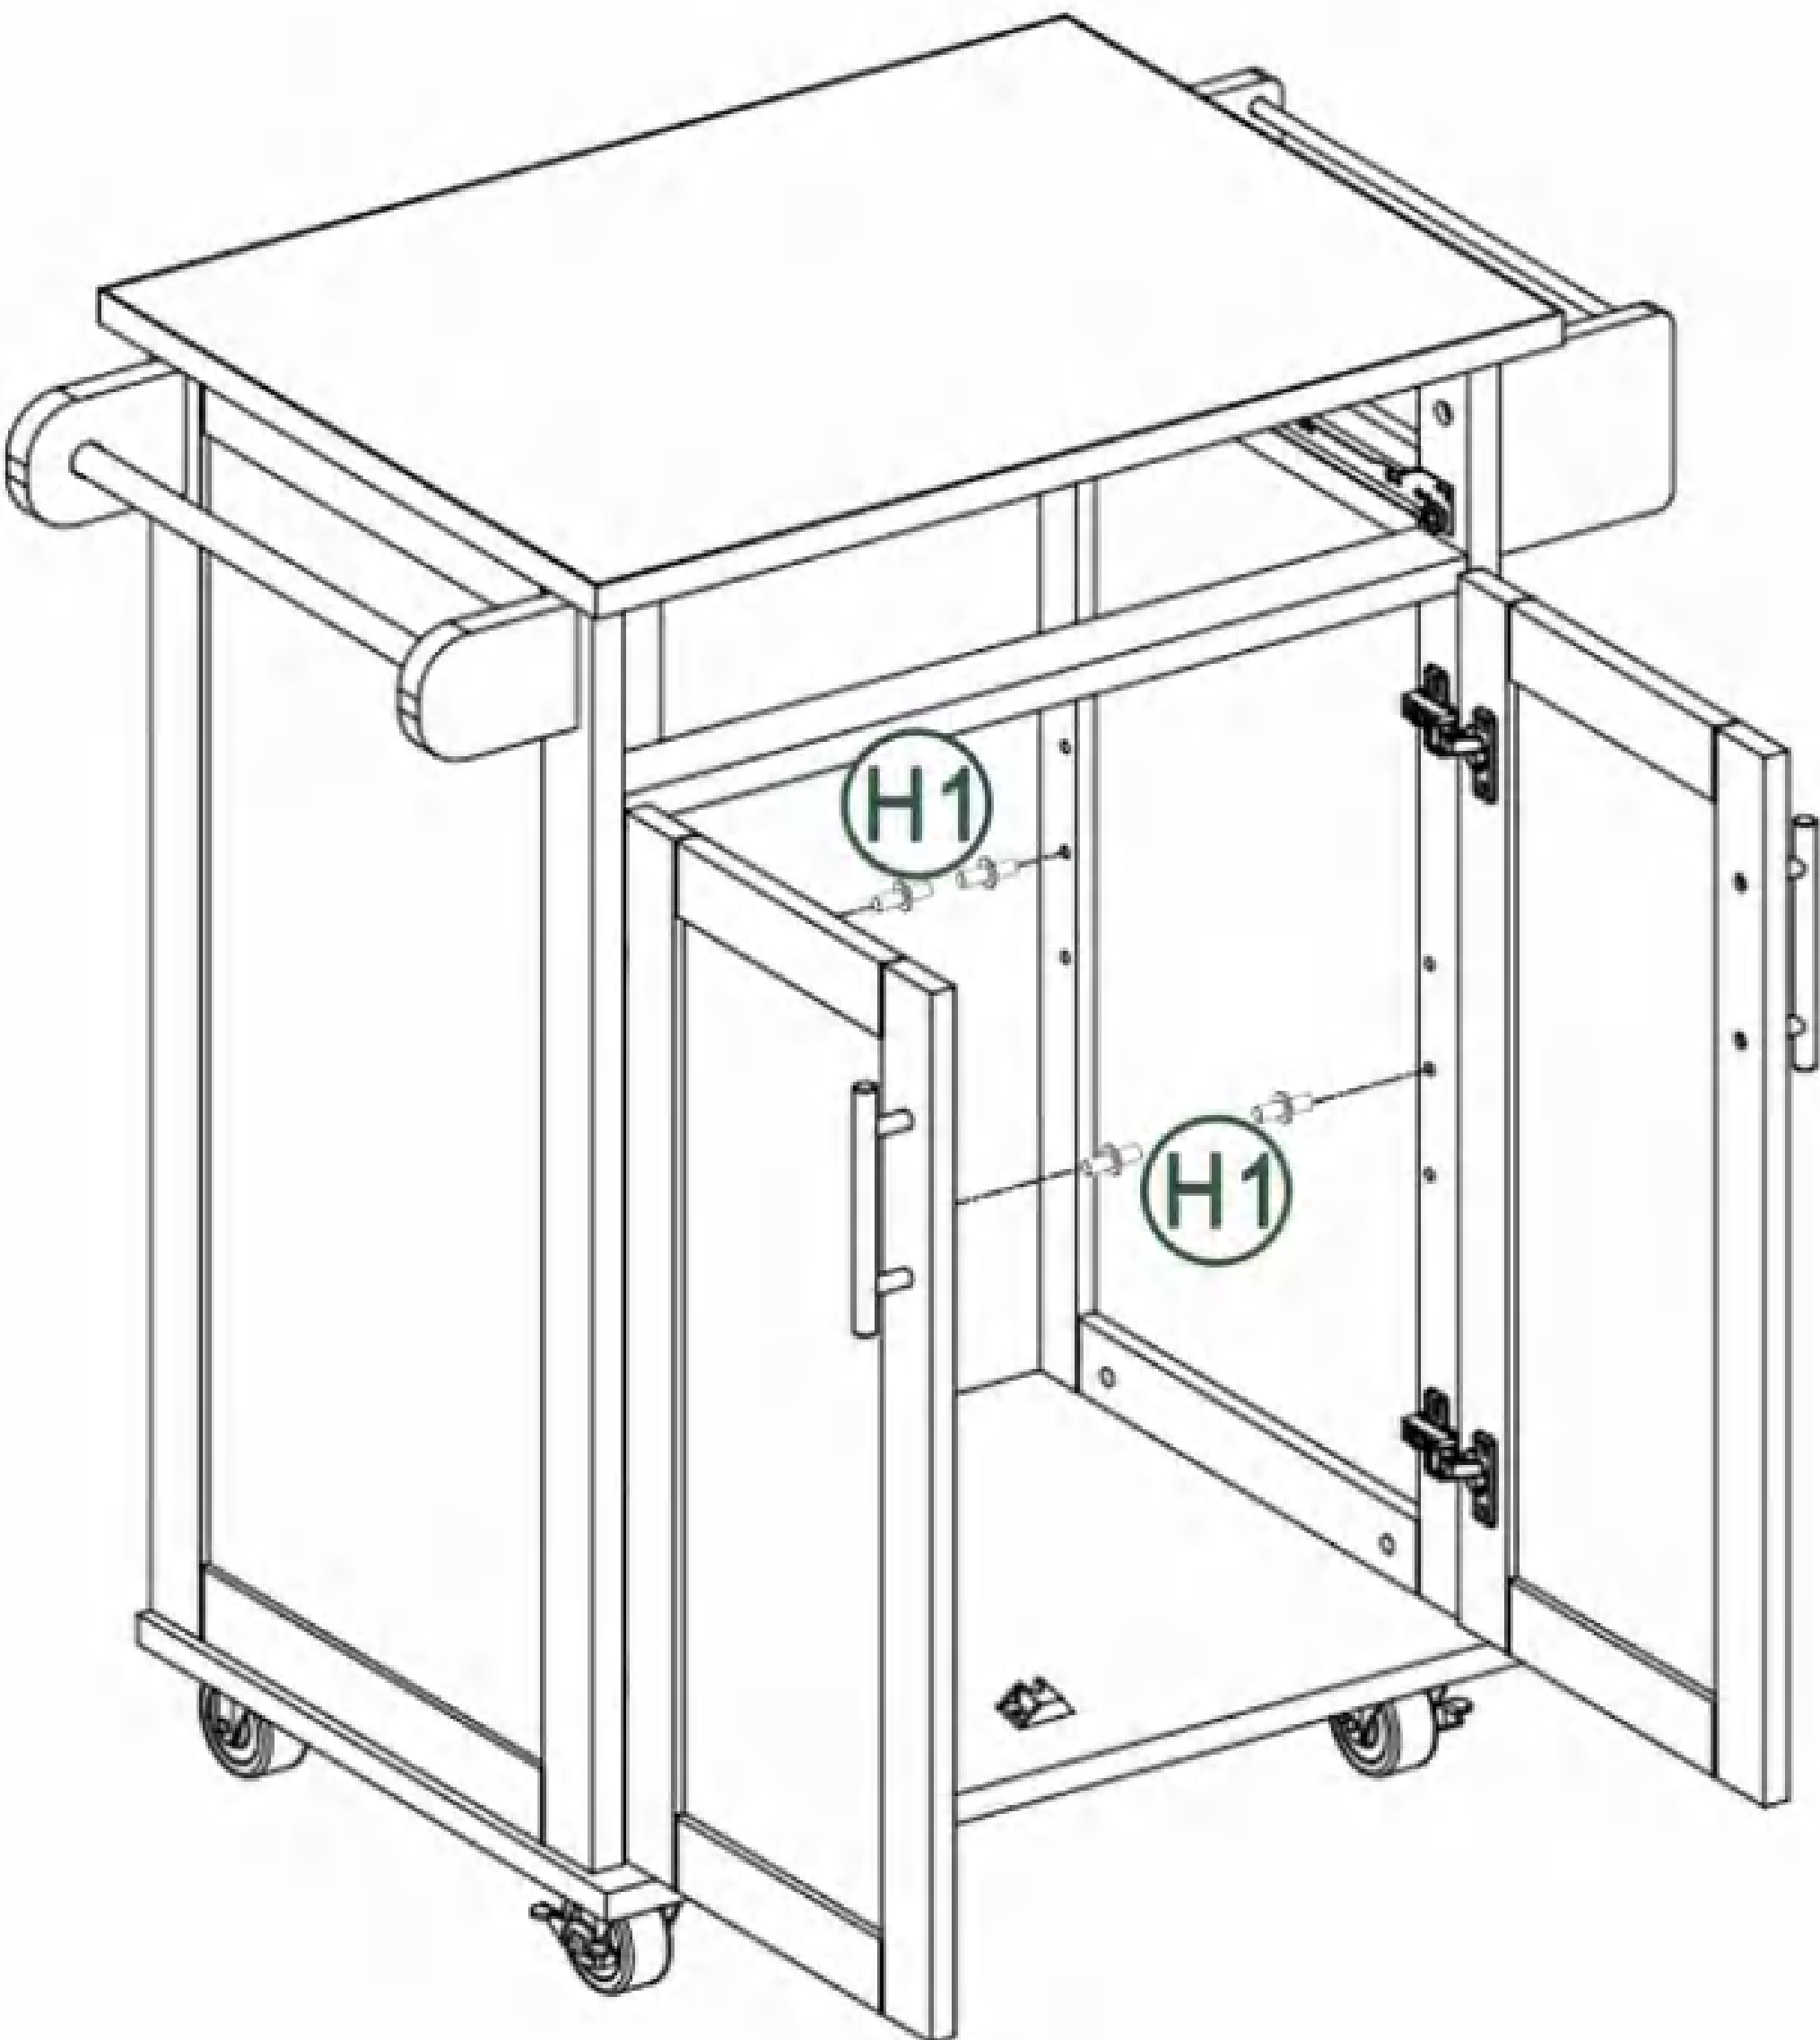


17.

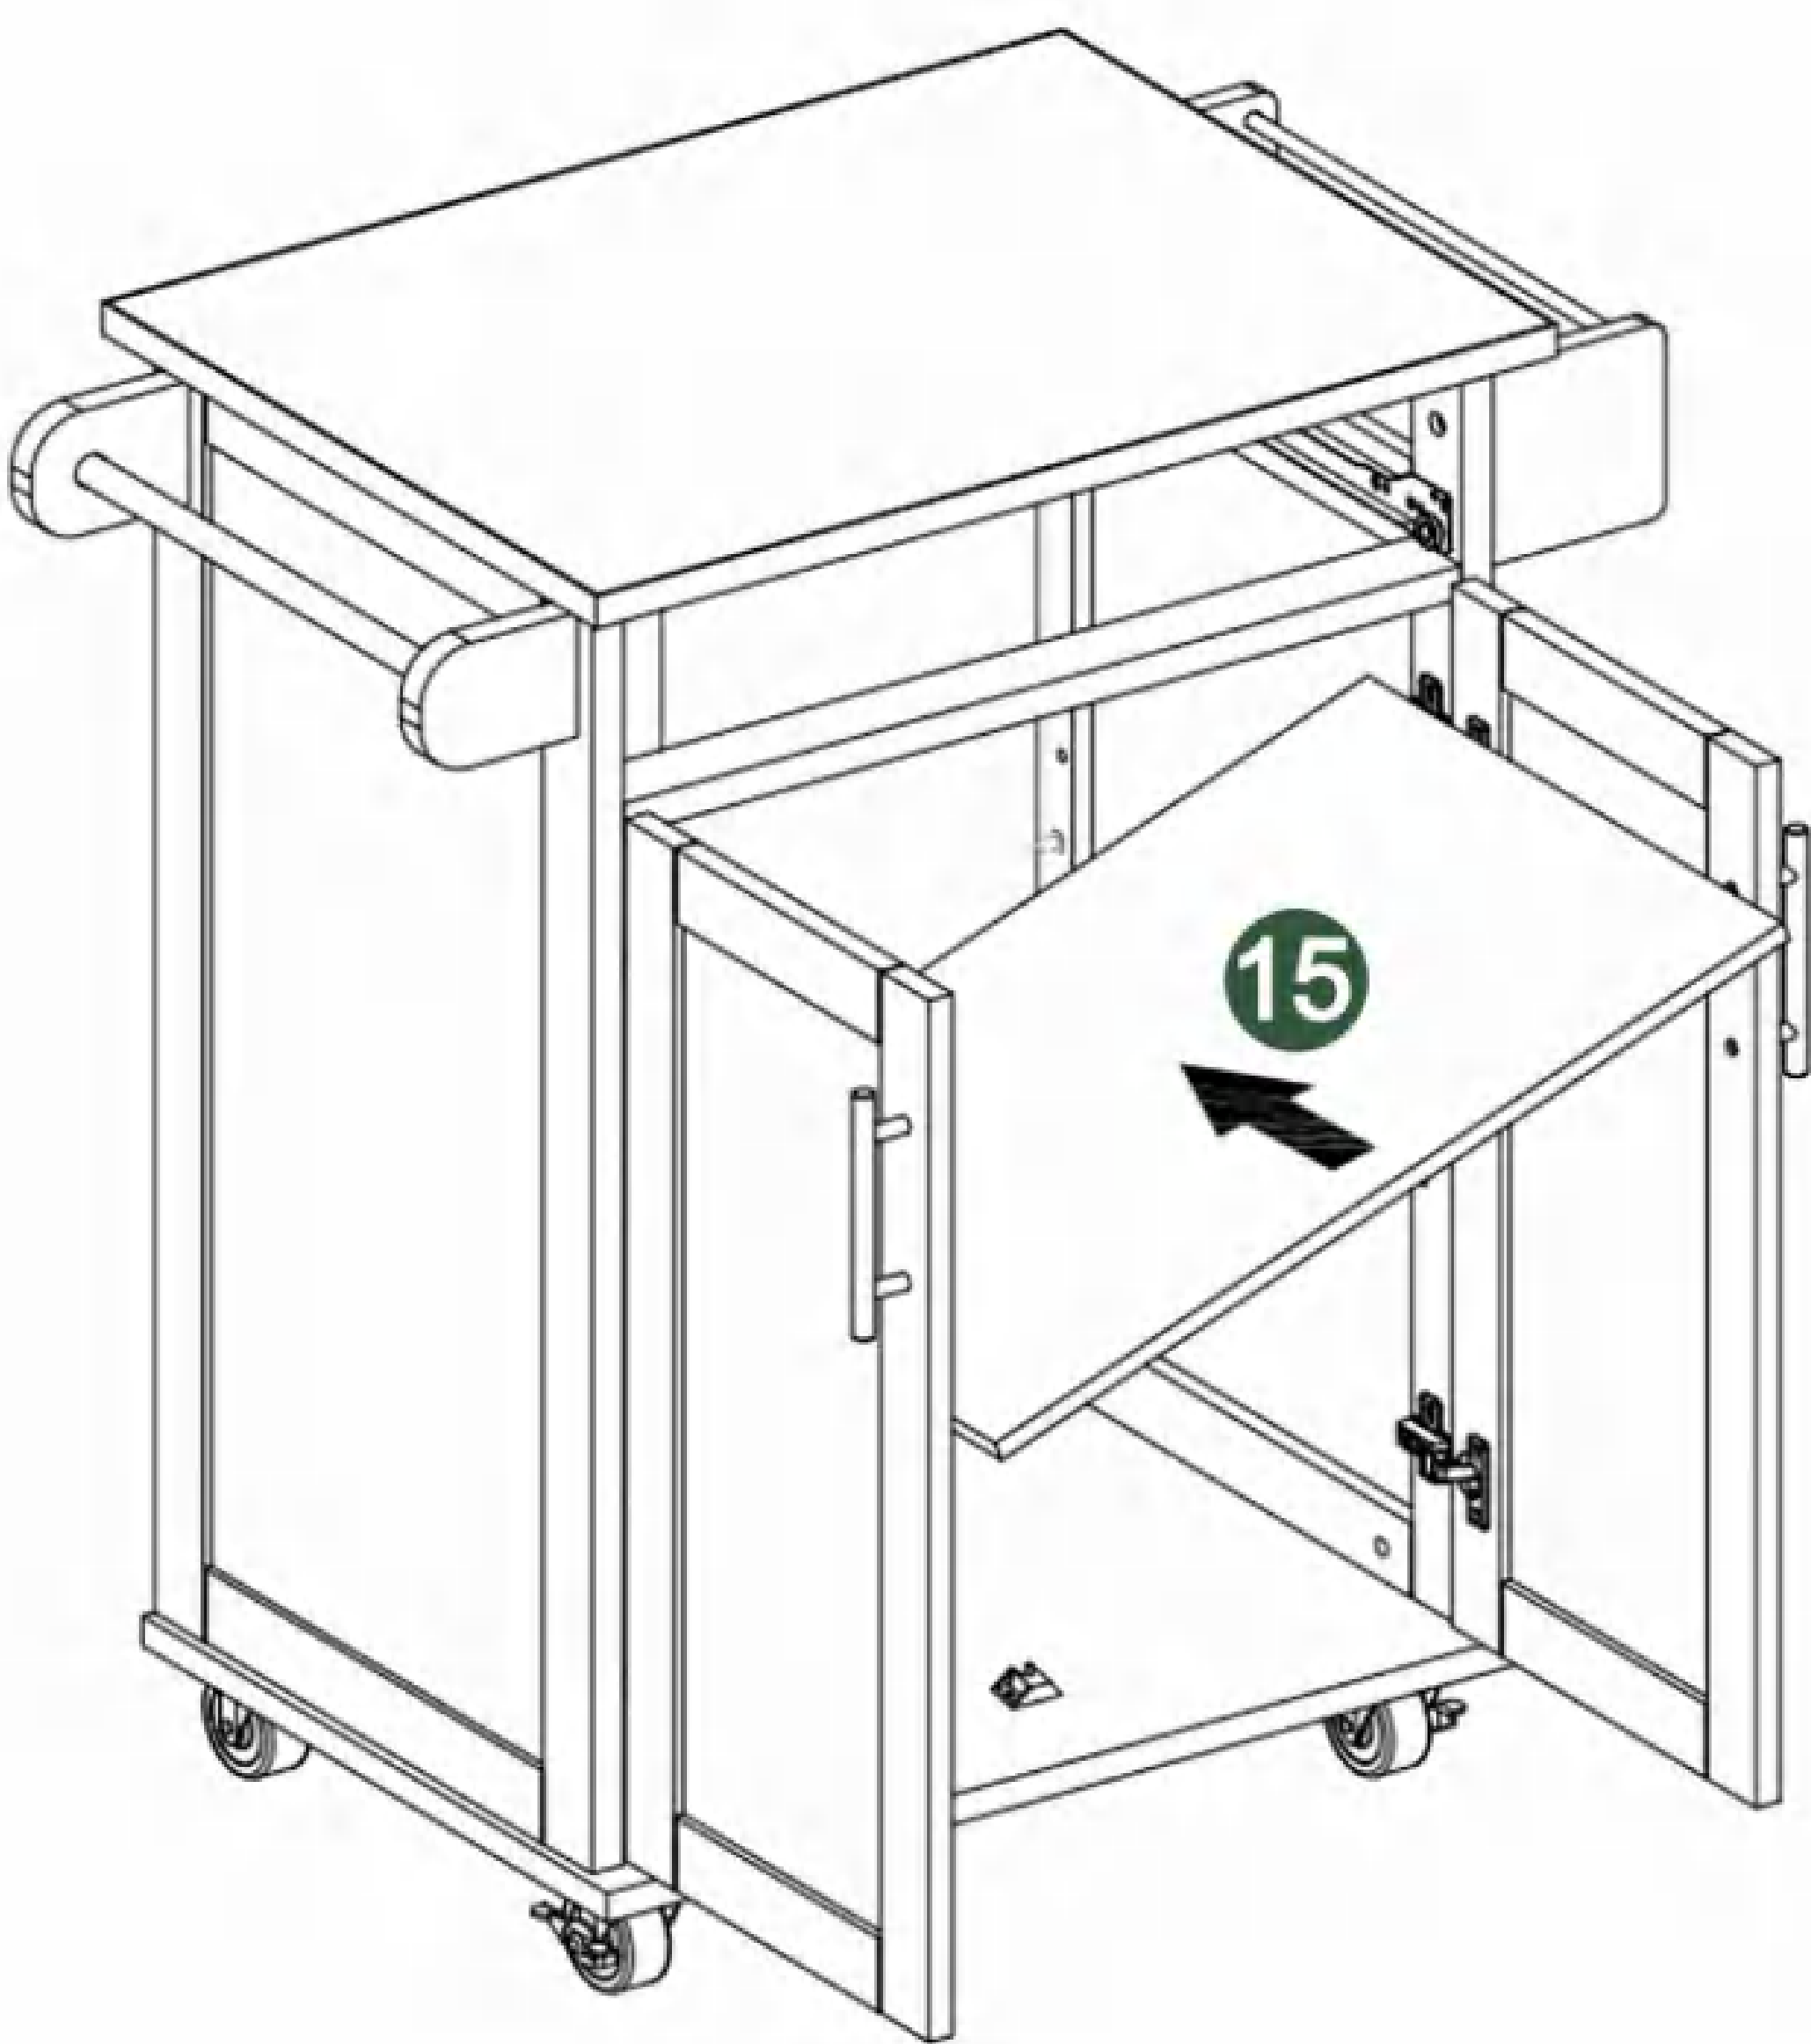


18.

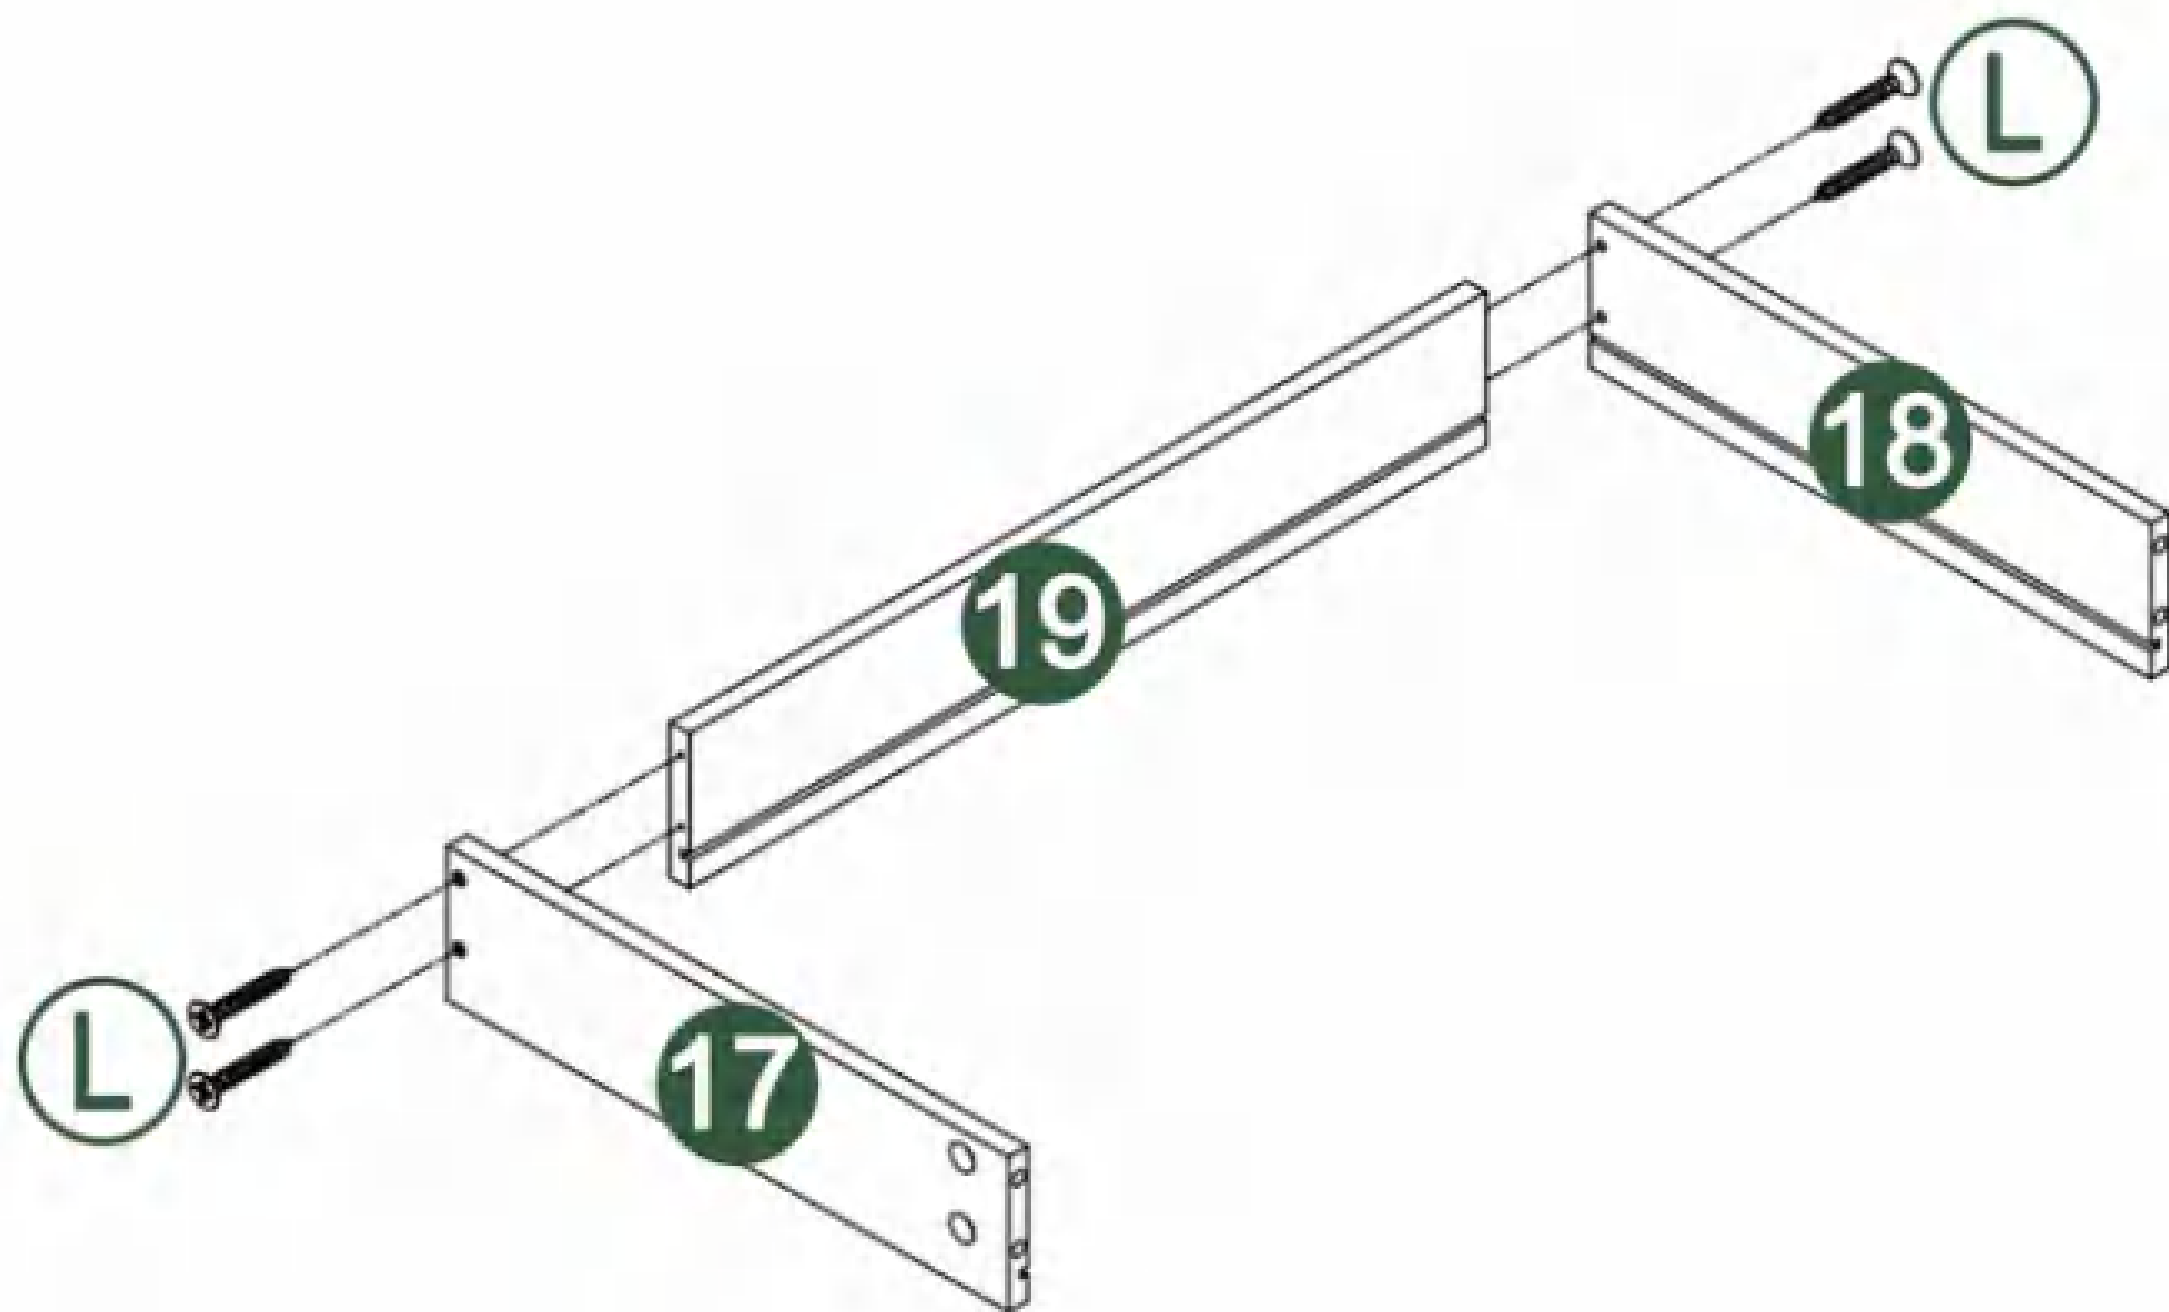


19.

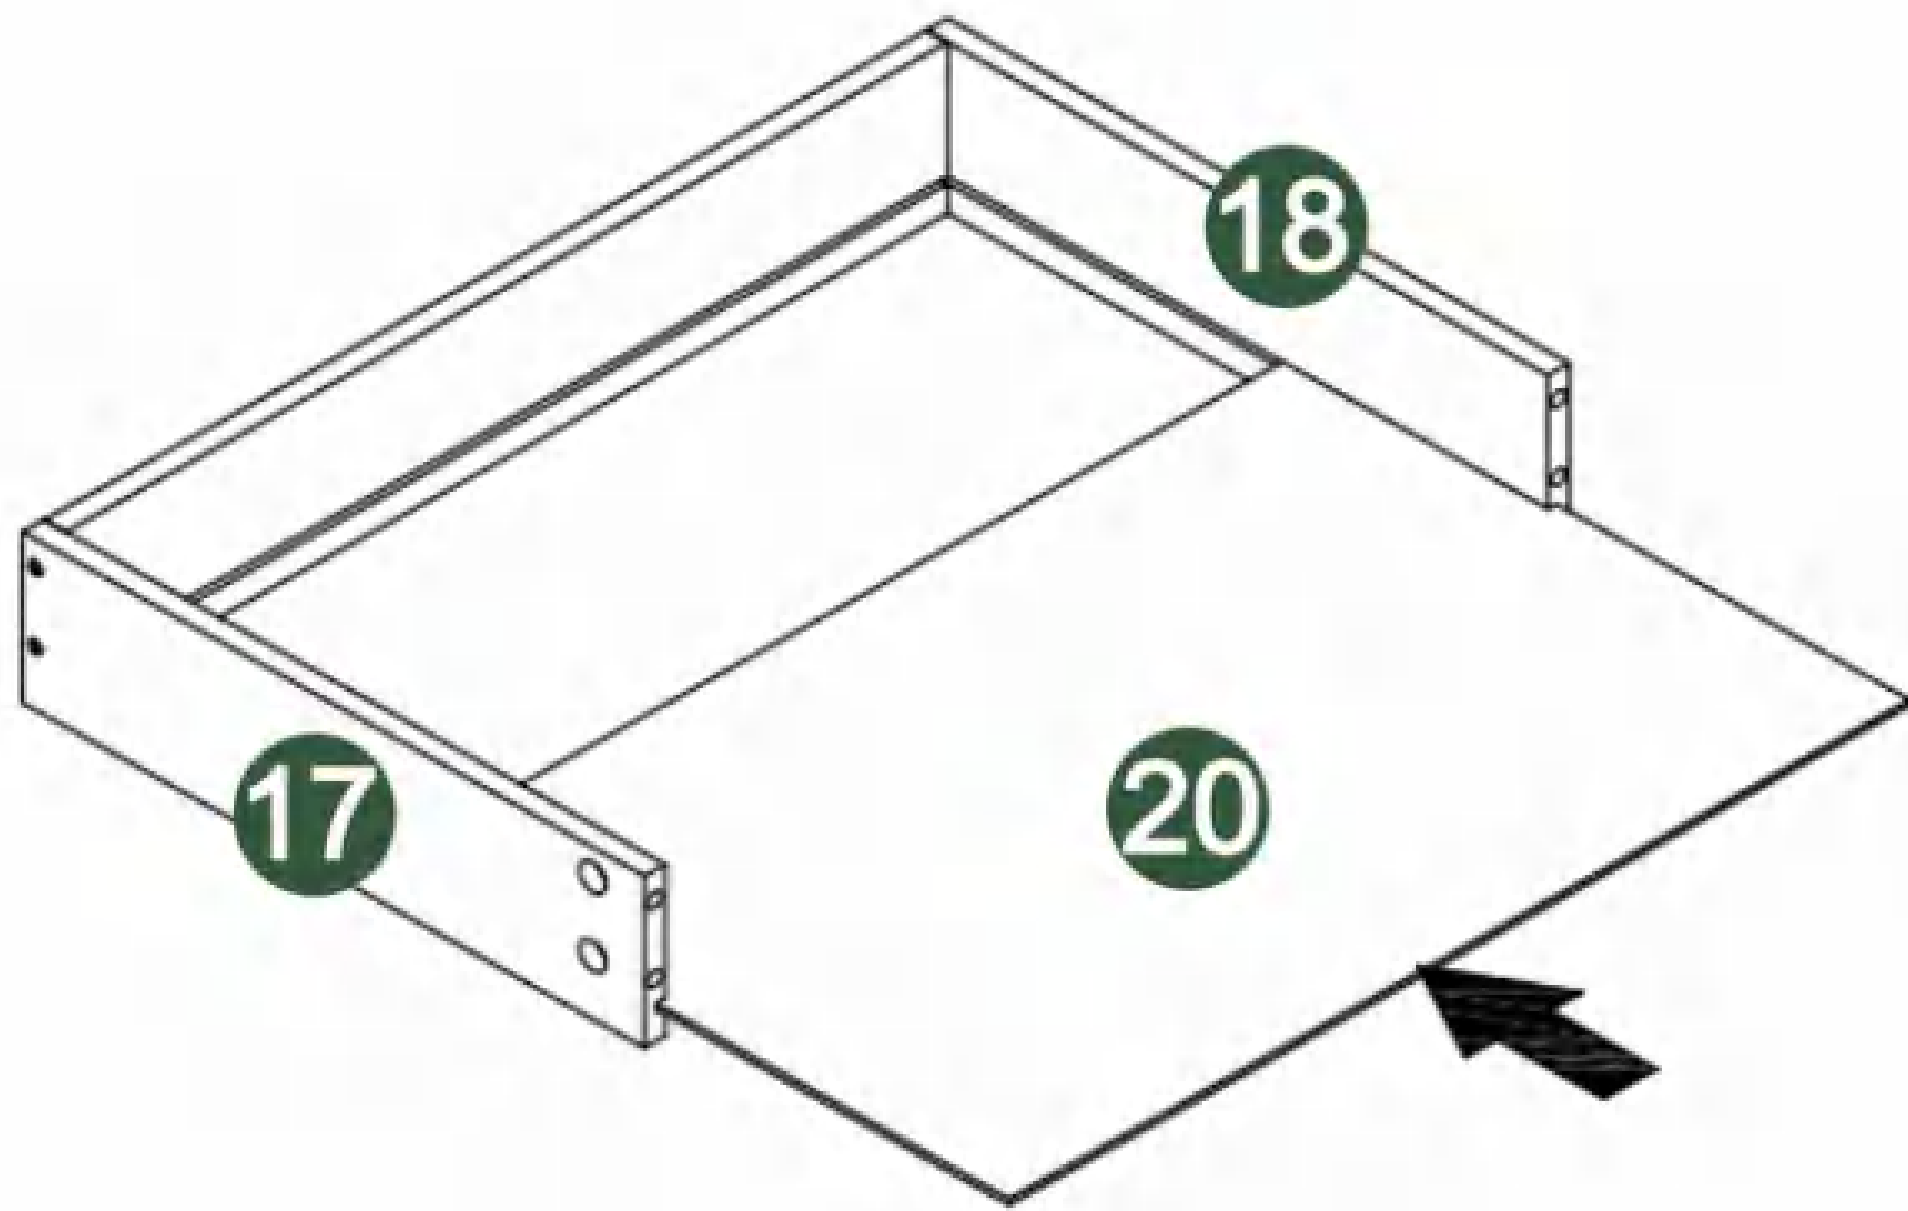


20.

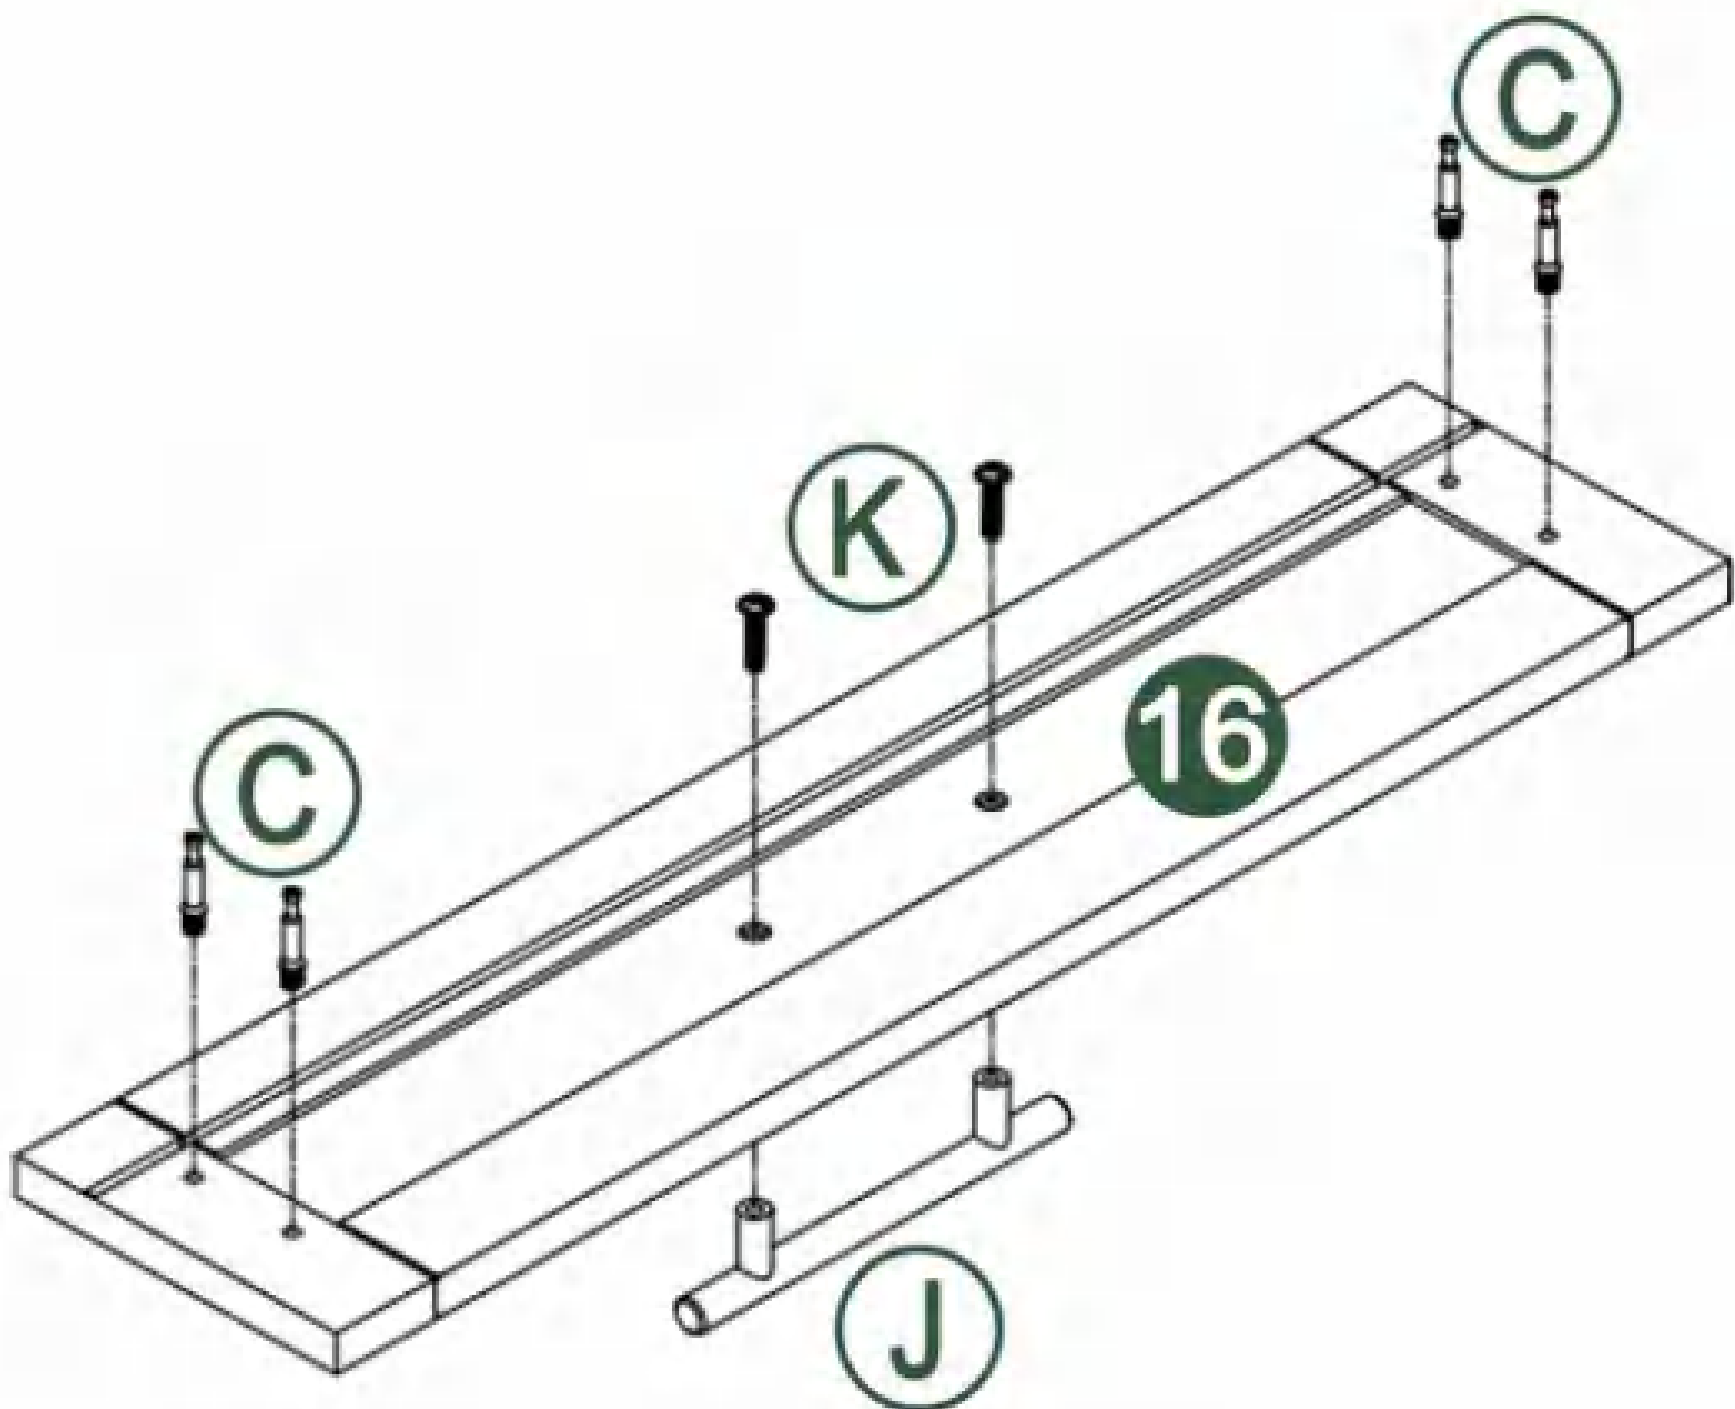


21.

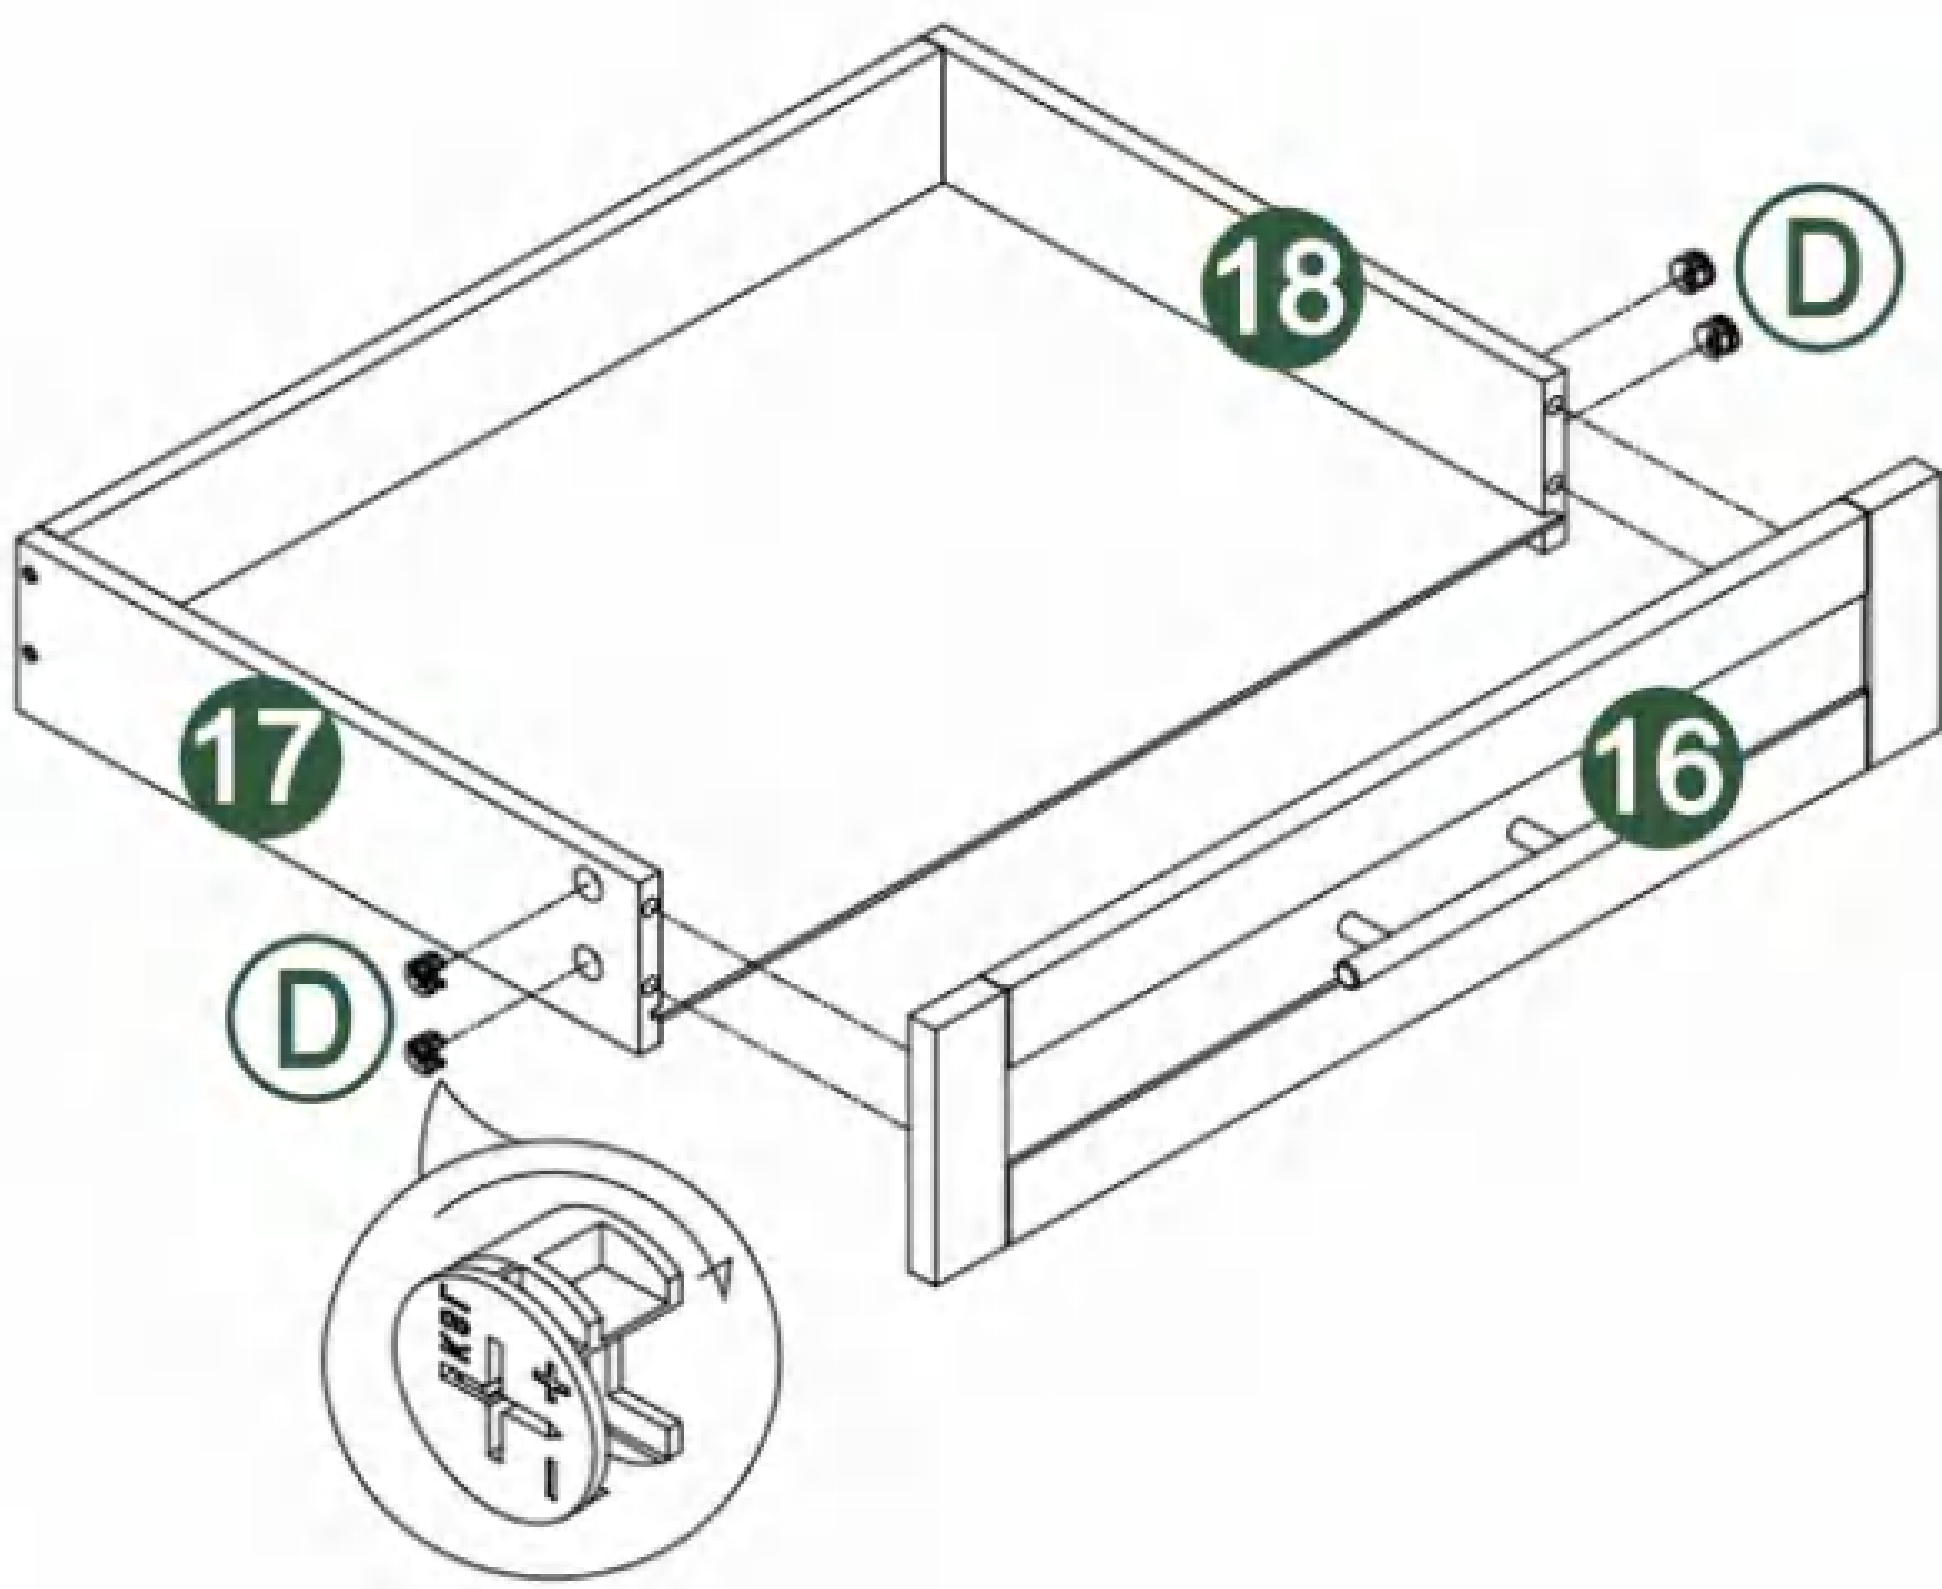


22.

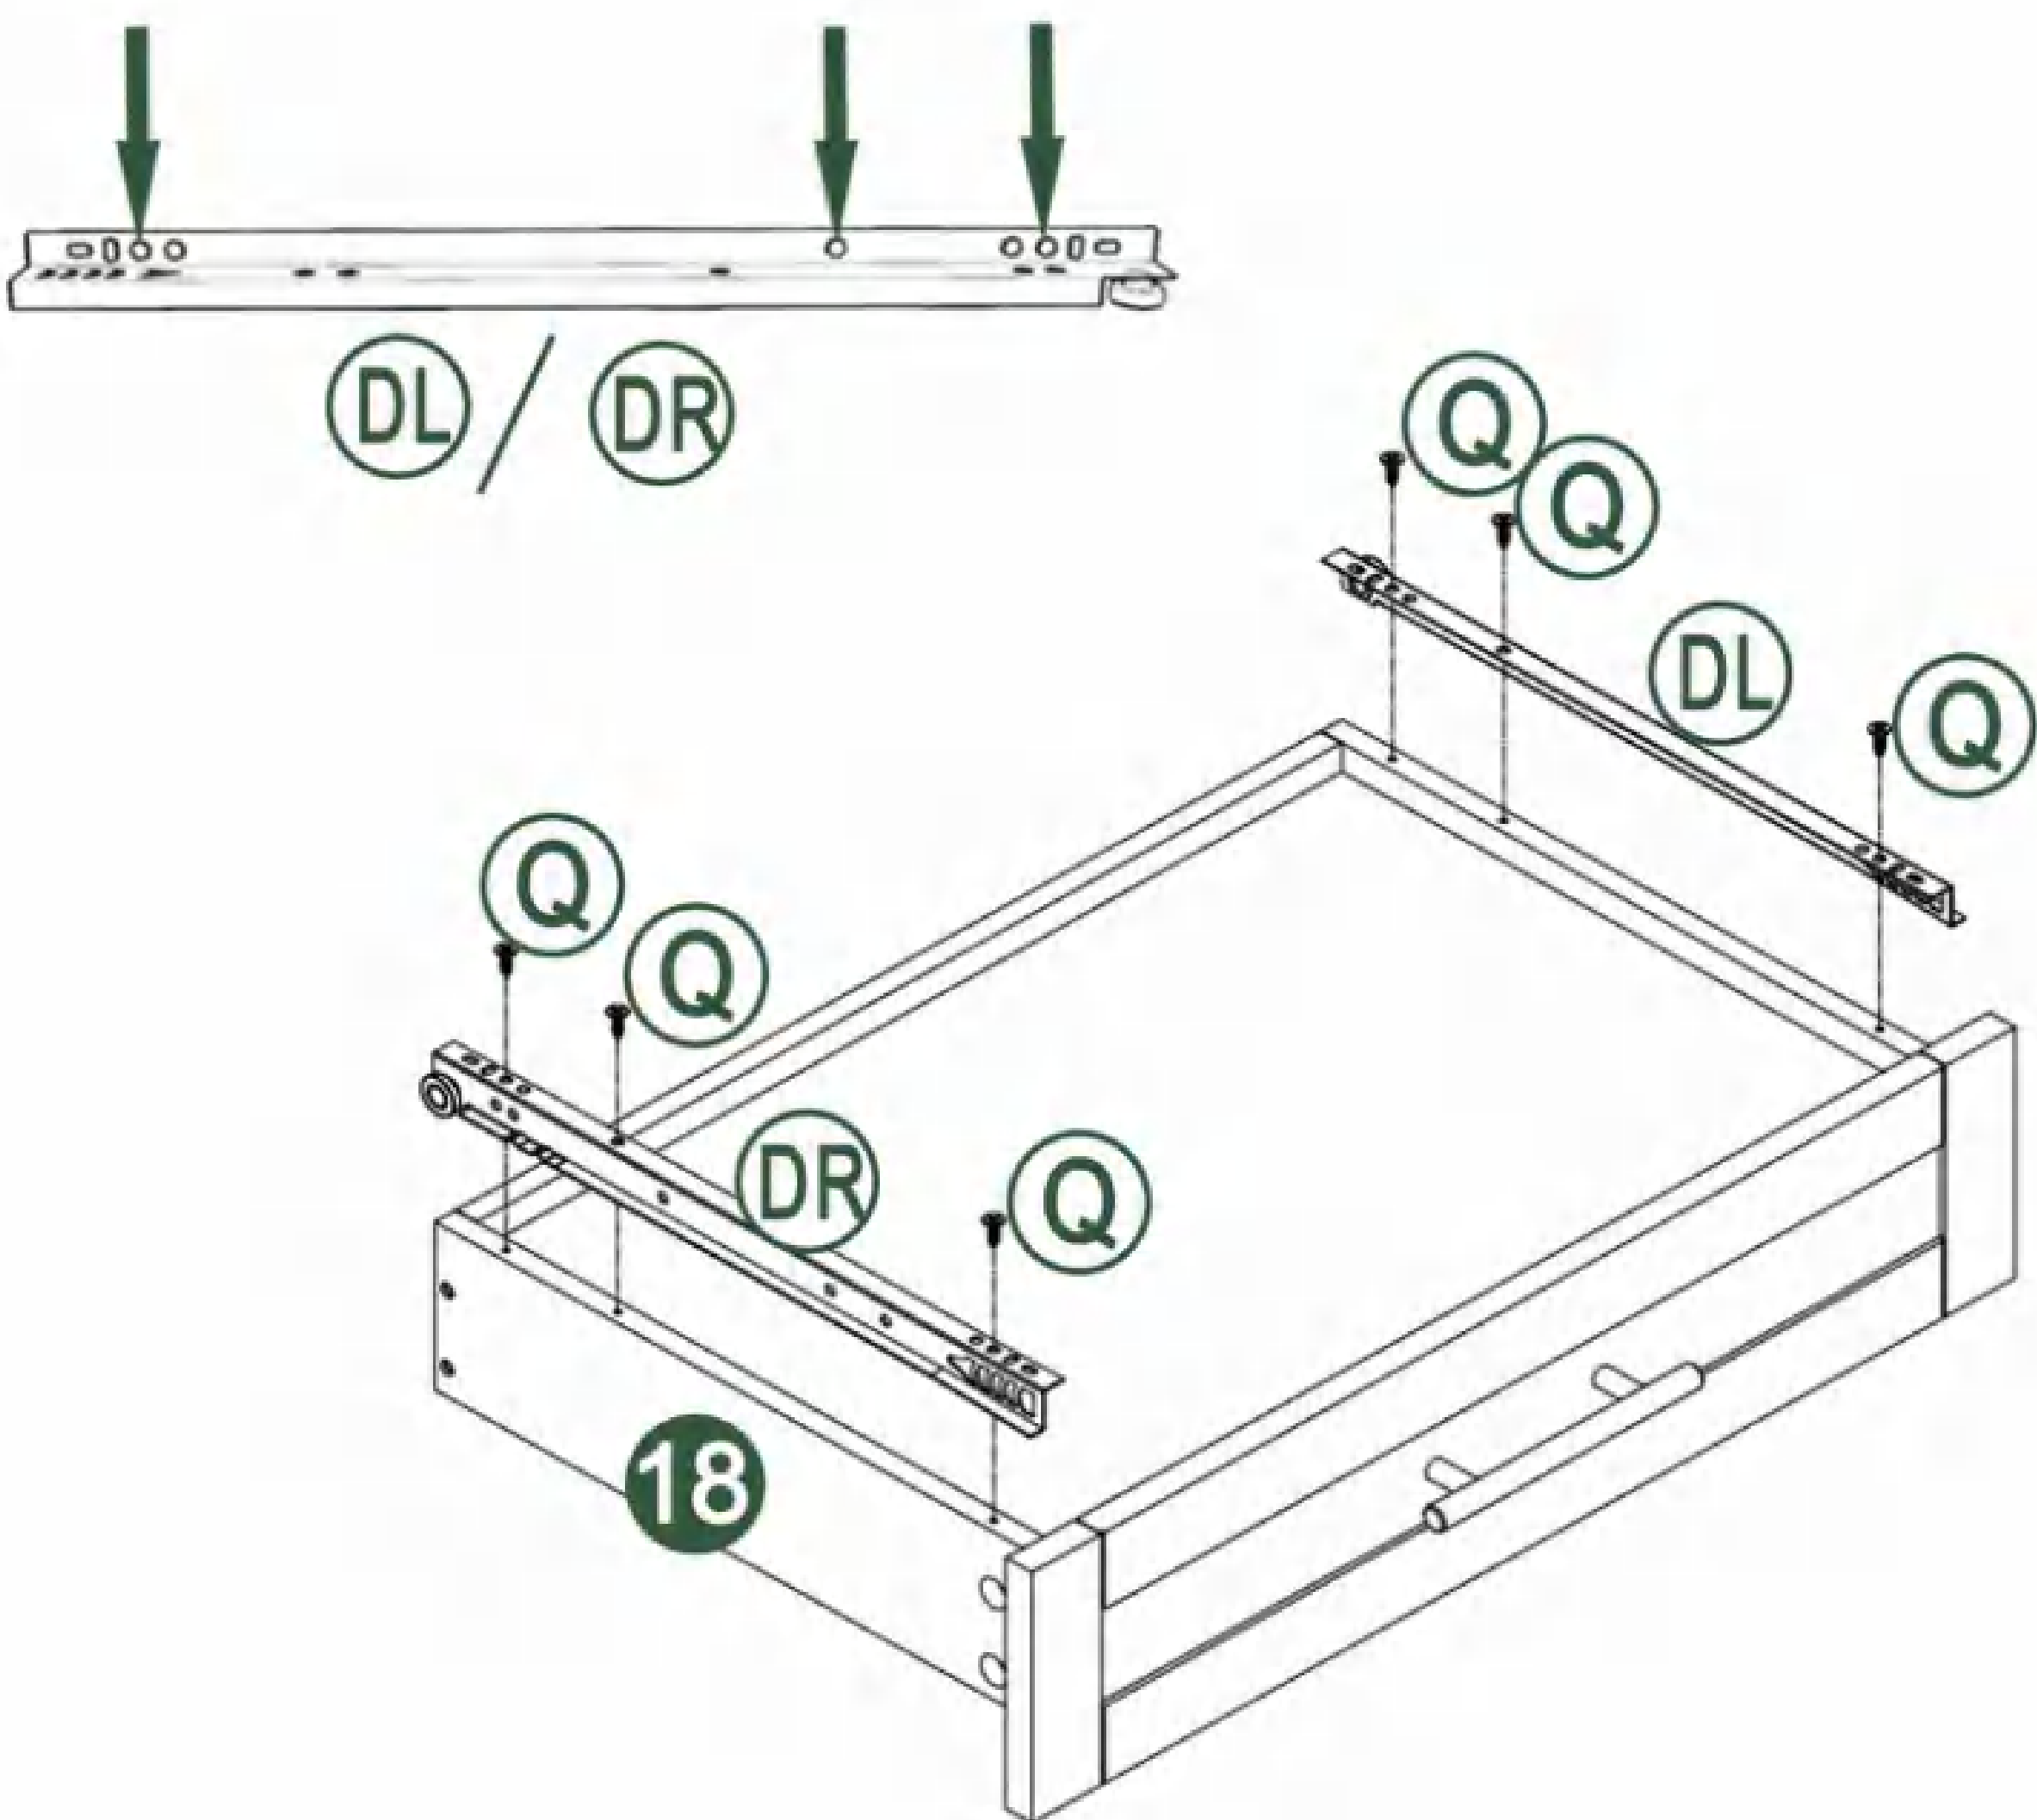

23.

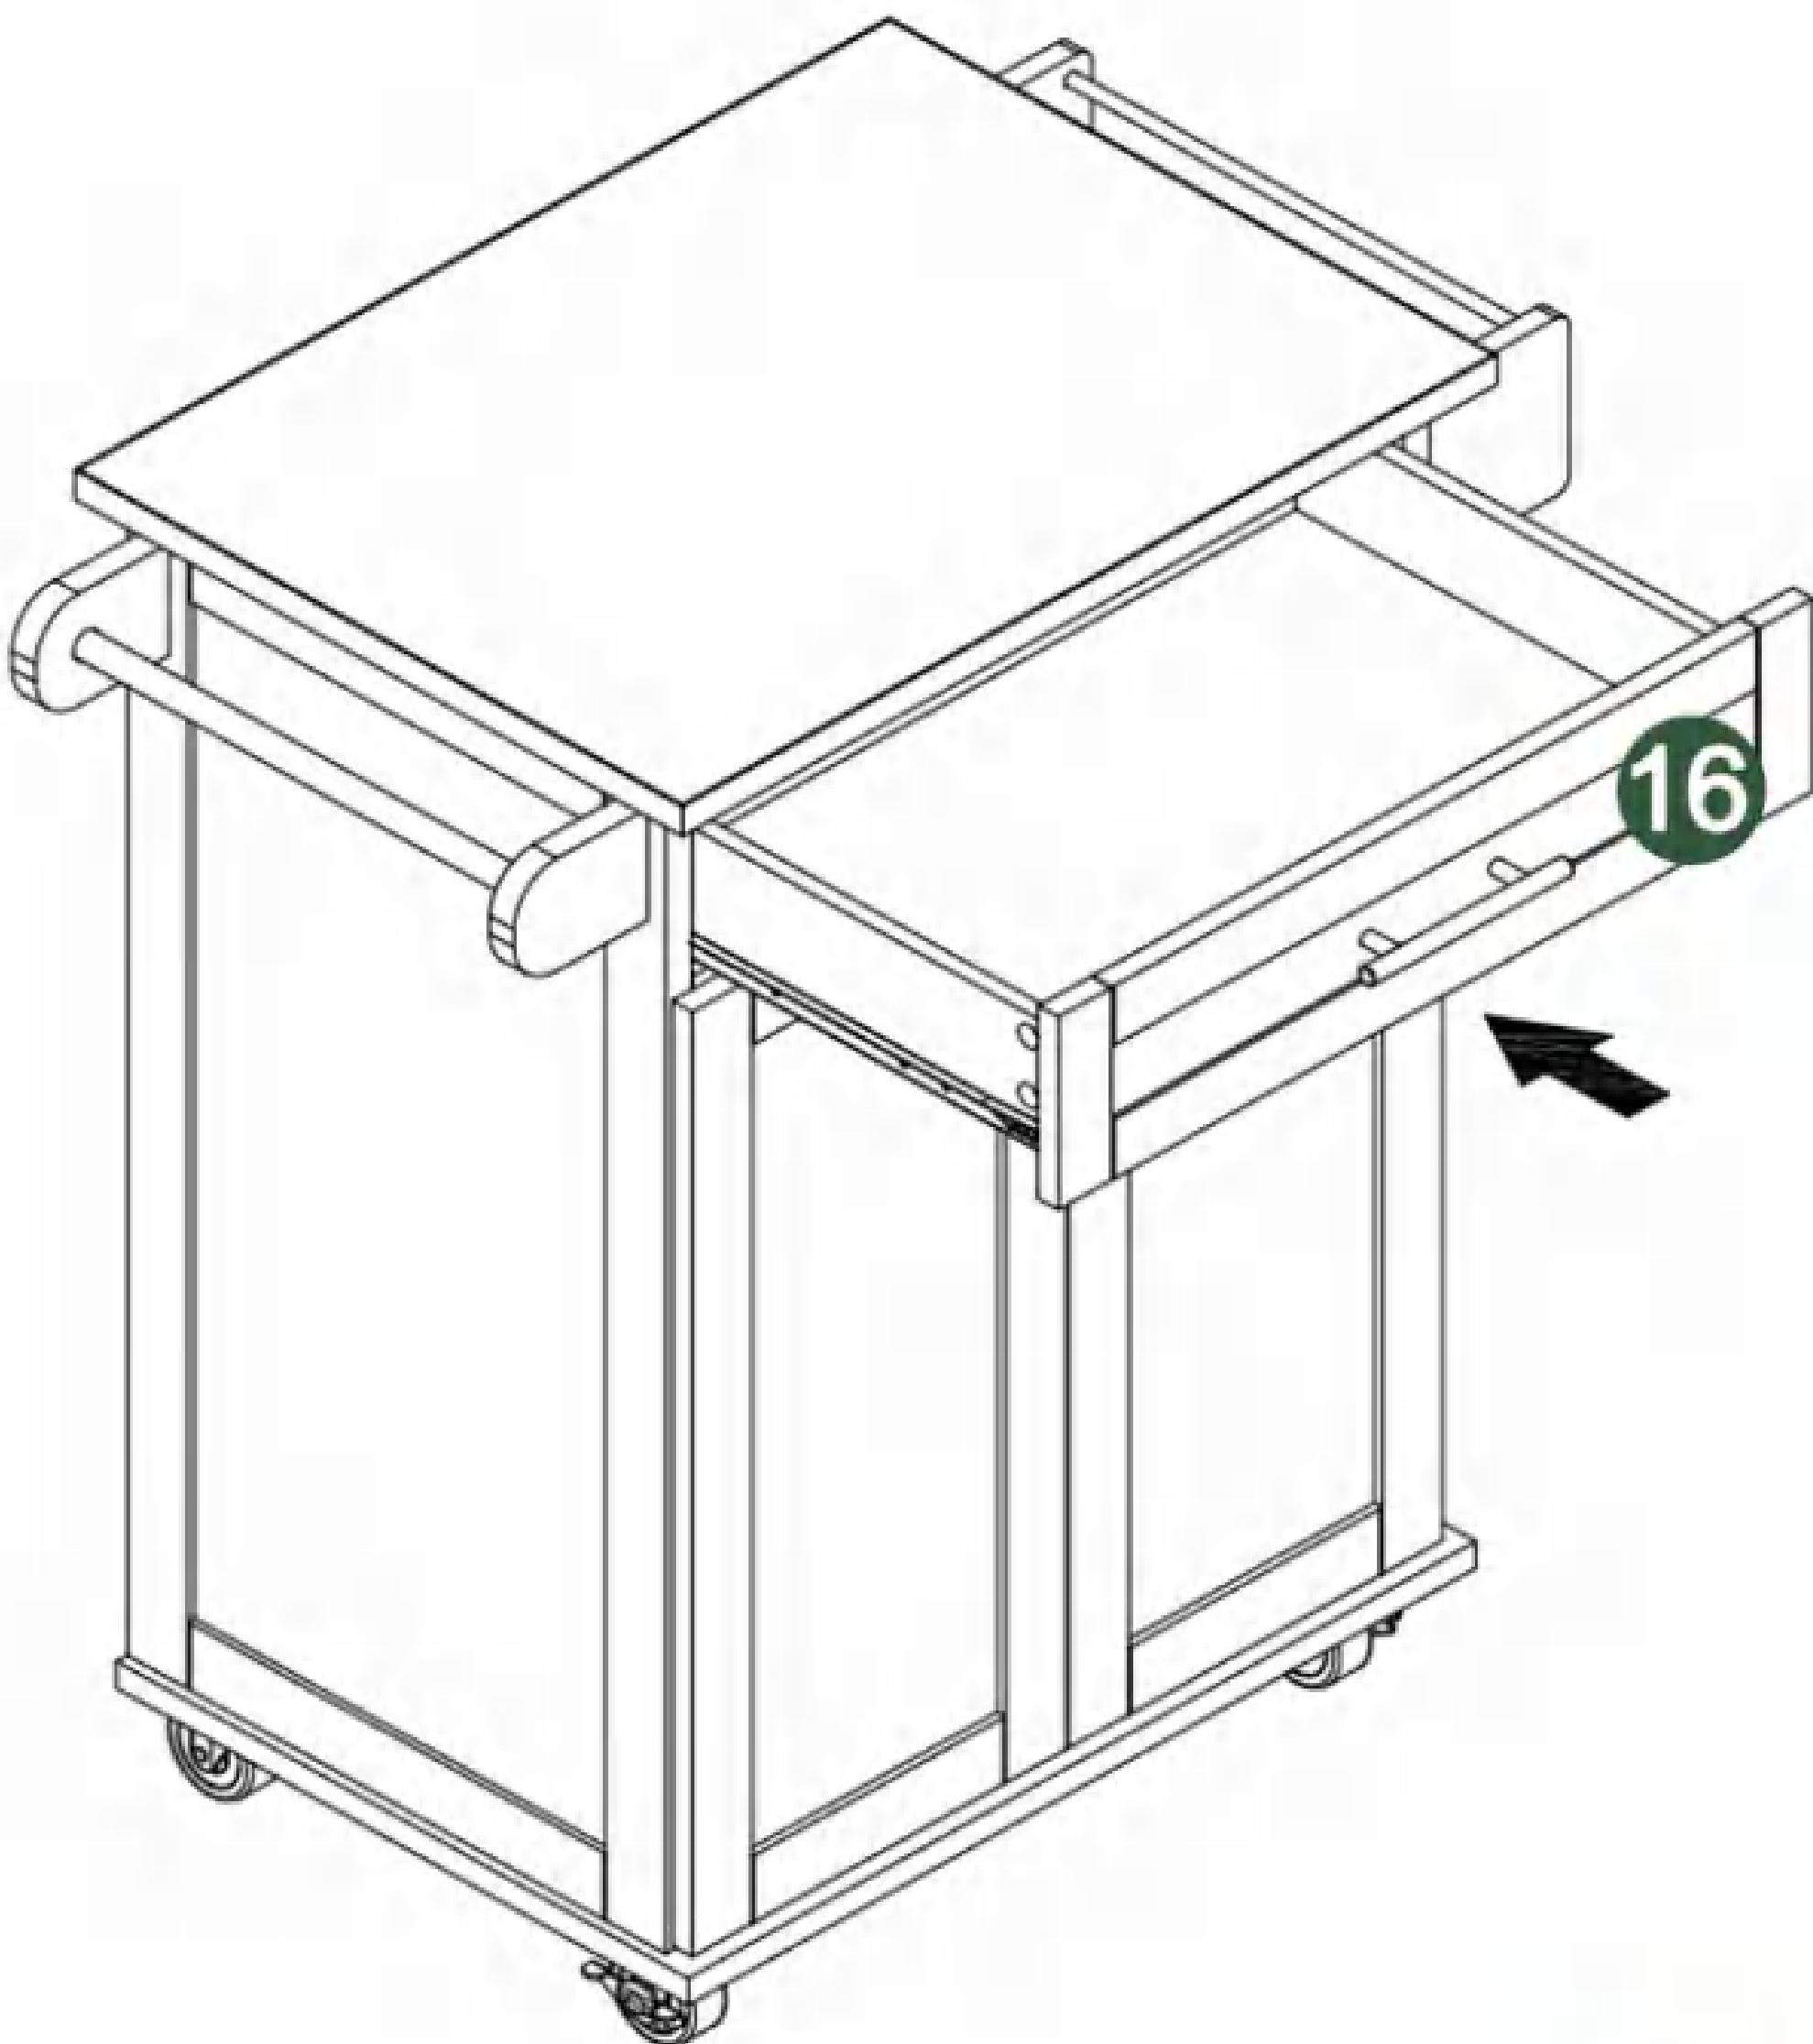

24.

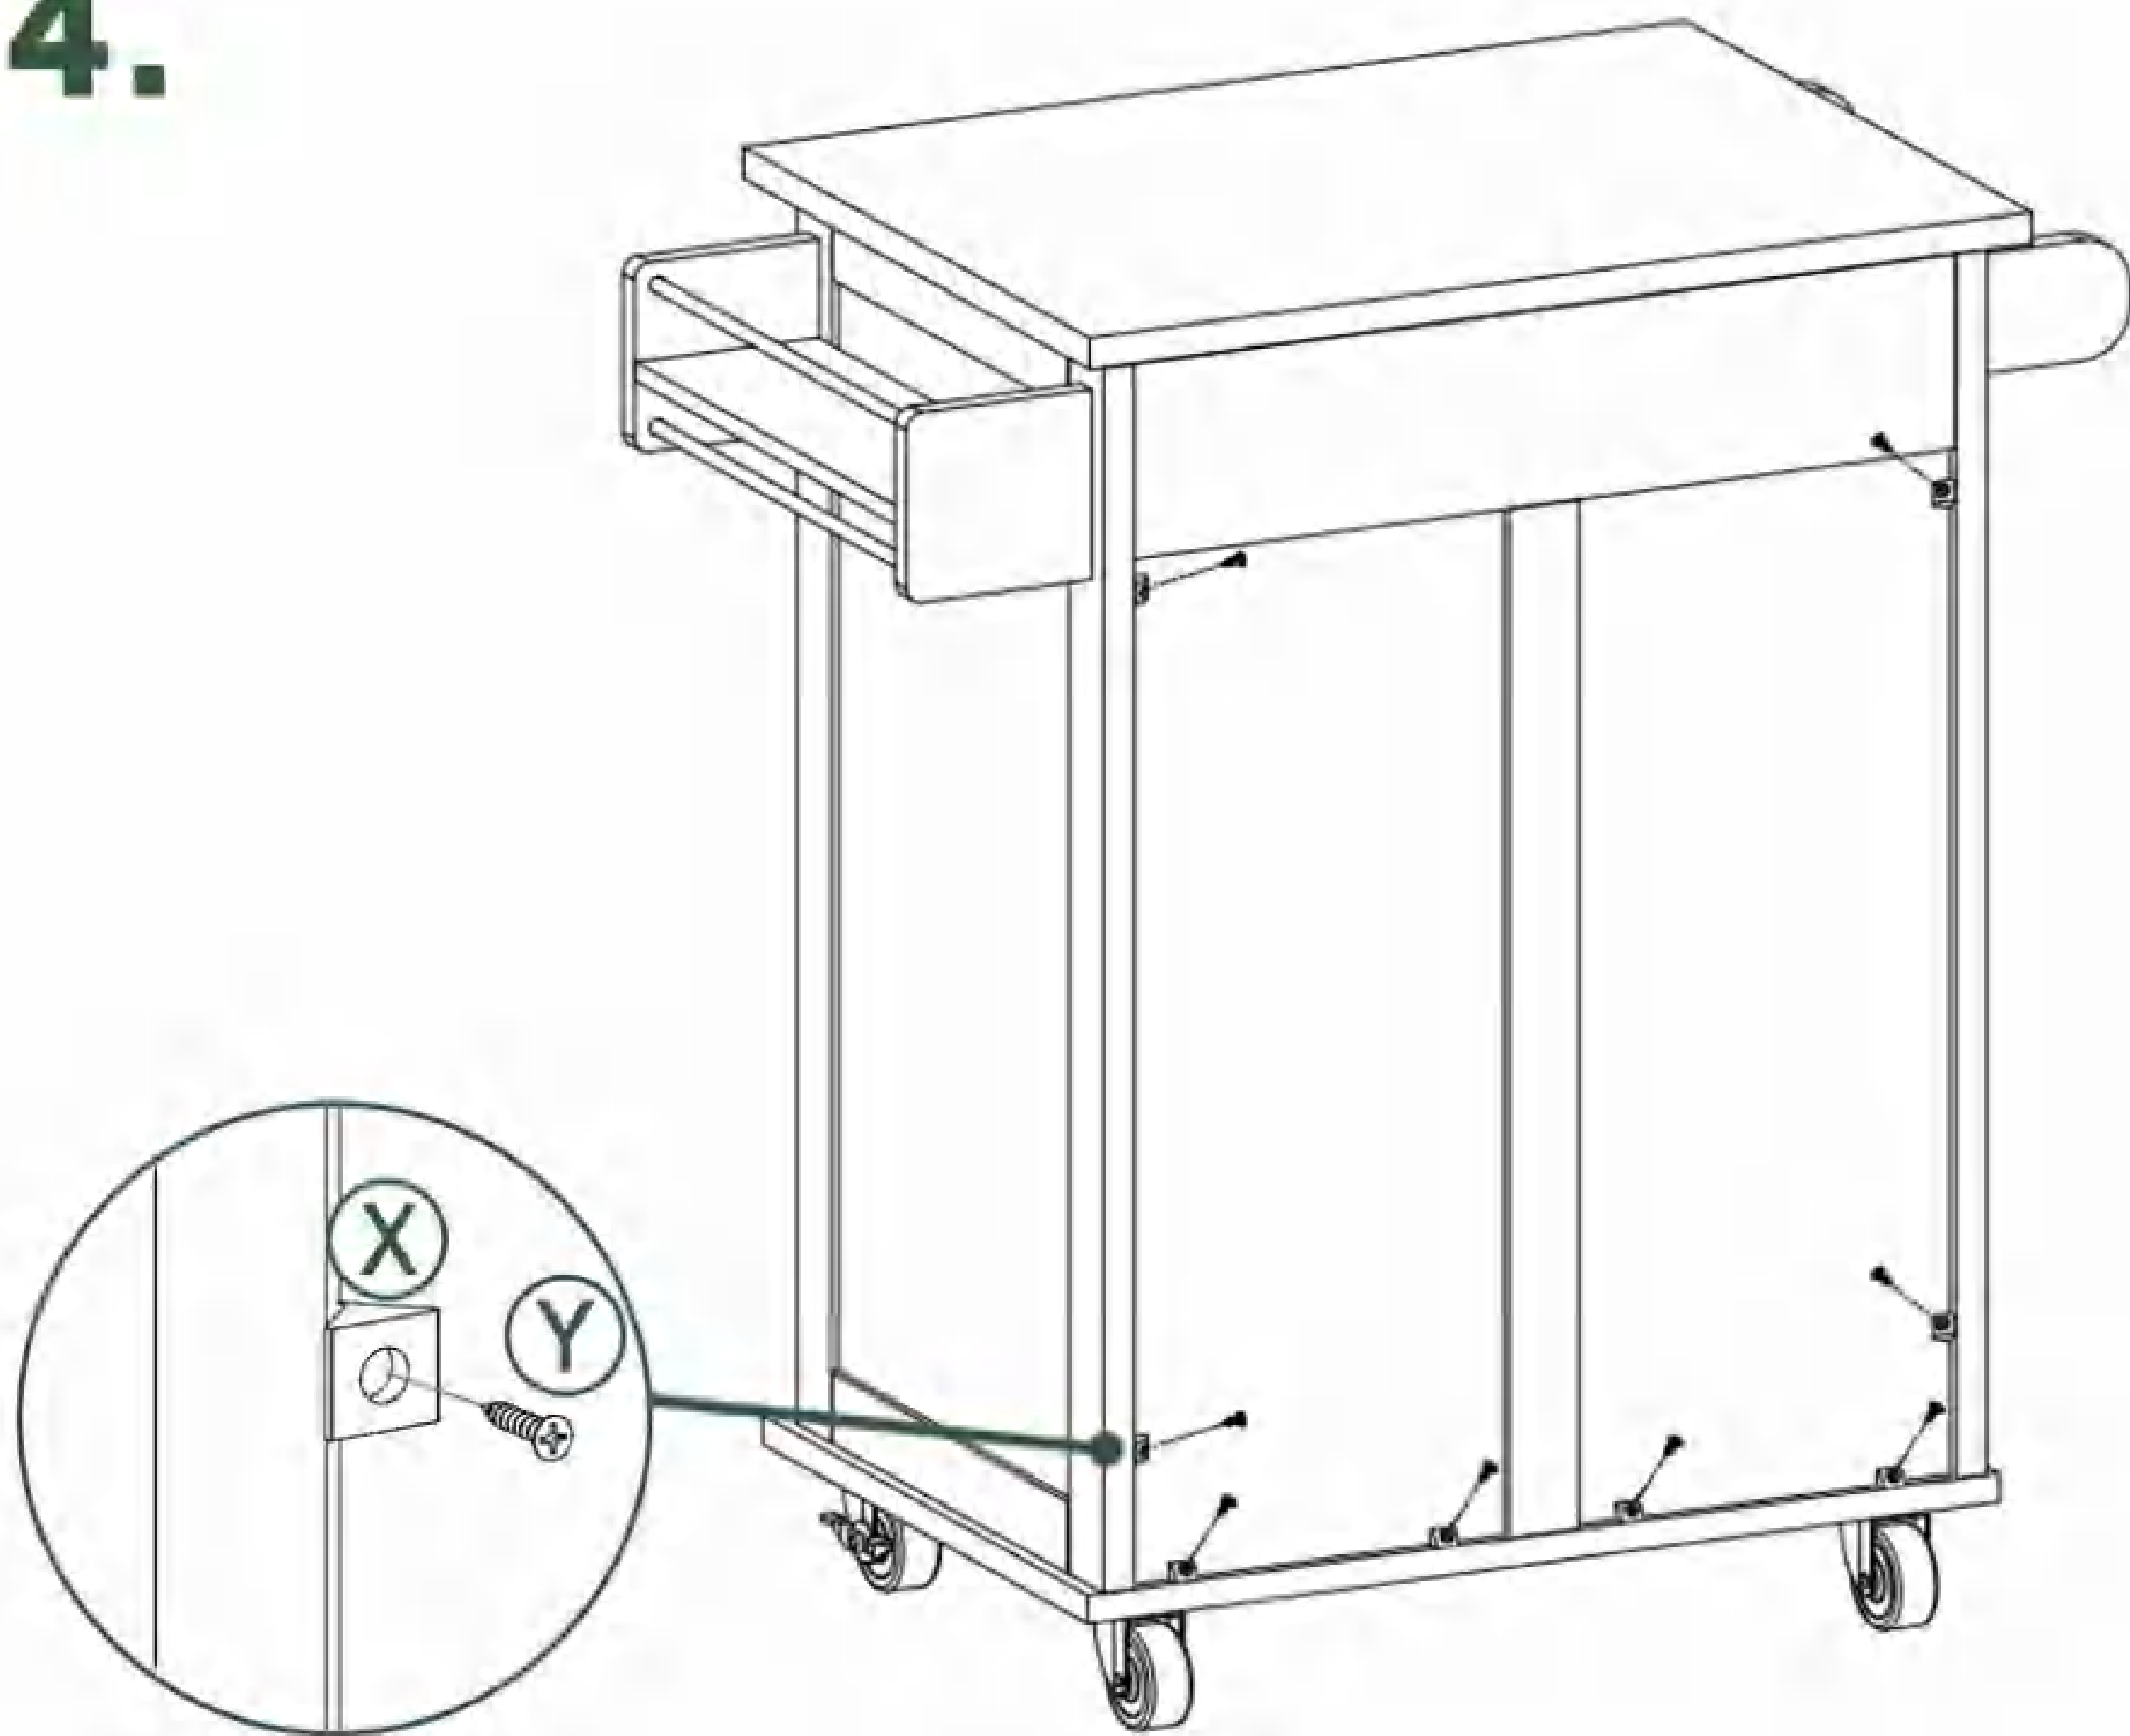

ENJOYING THE  
INSTALLATION?

Scan the QR code to  
share your review