


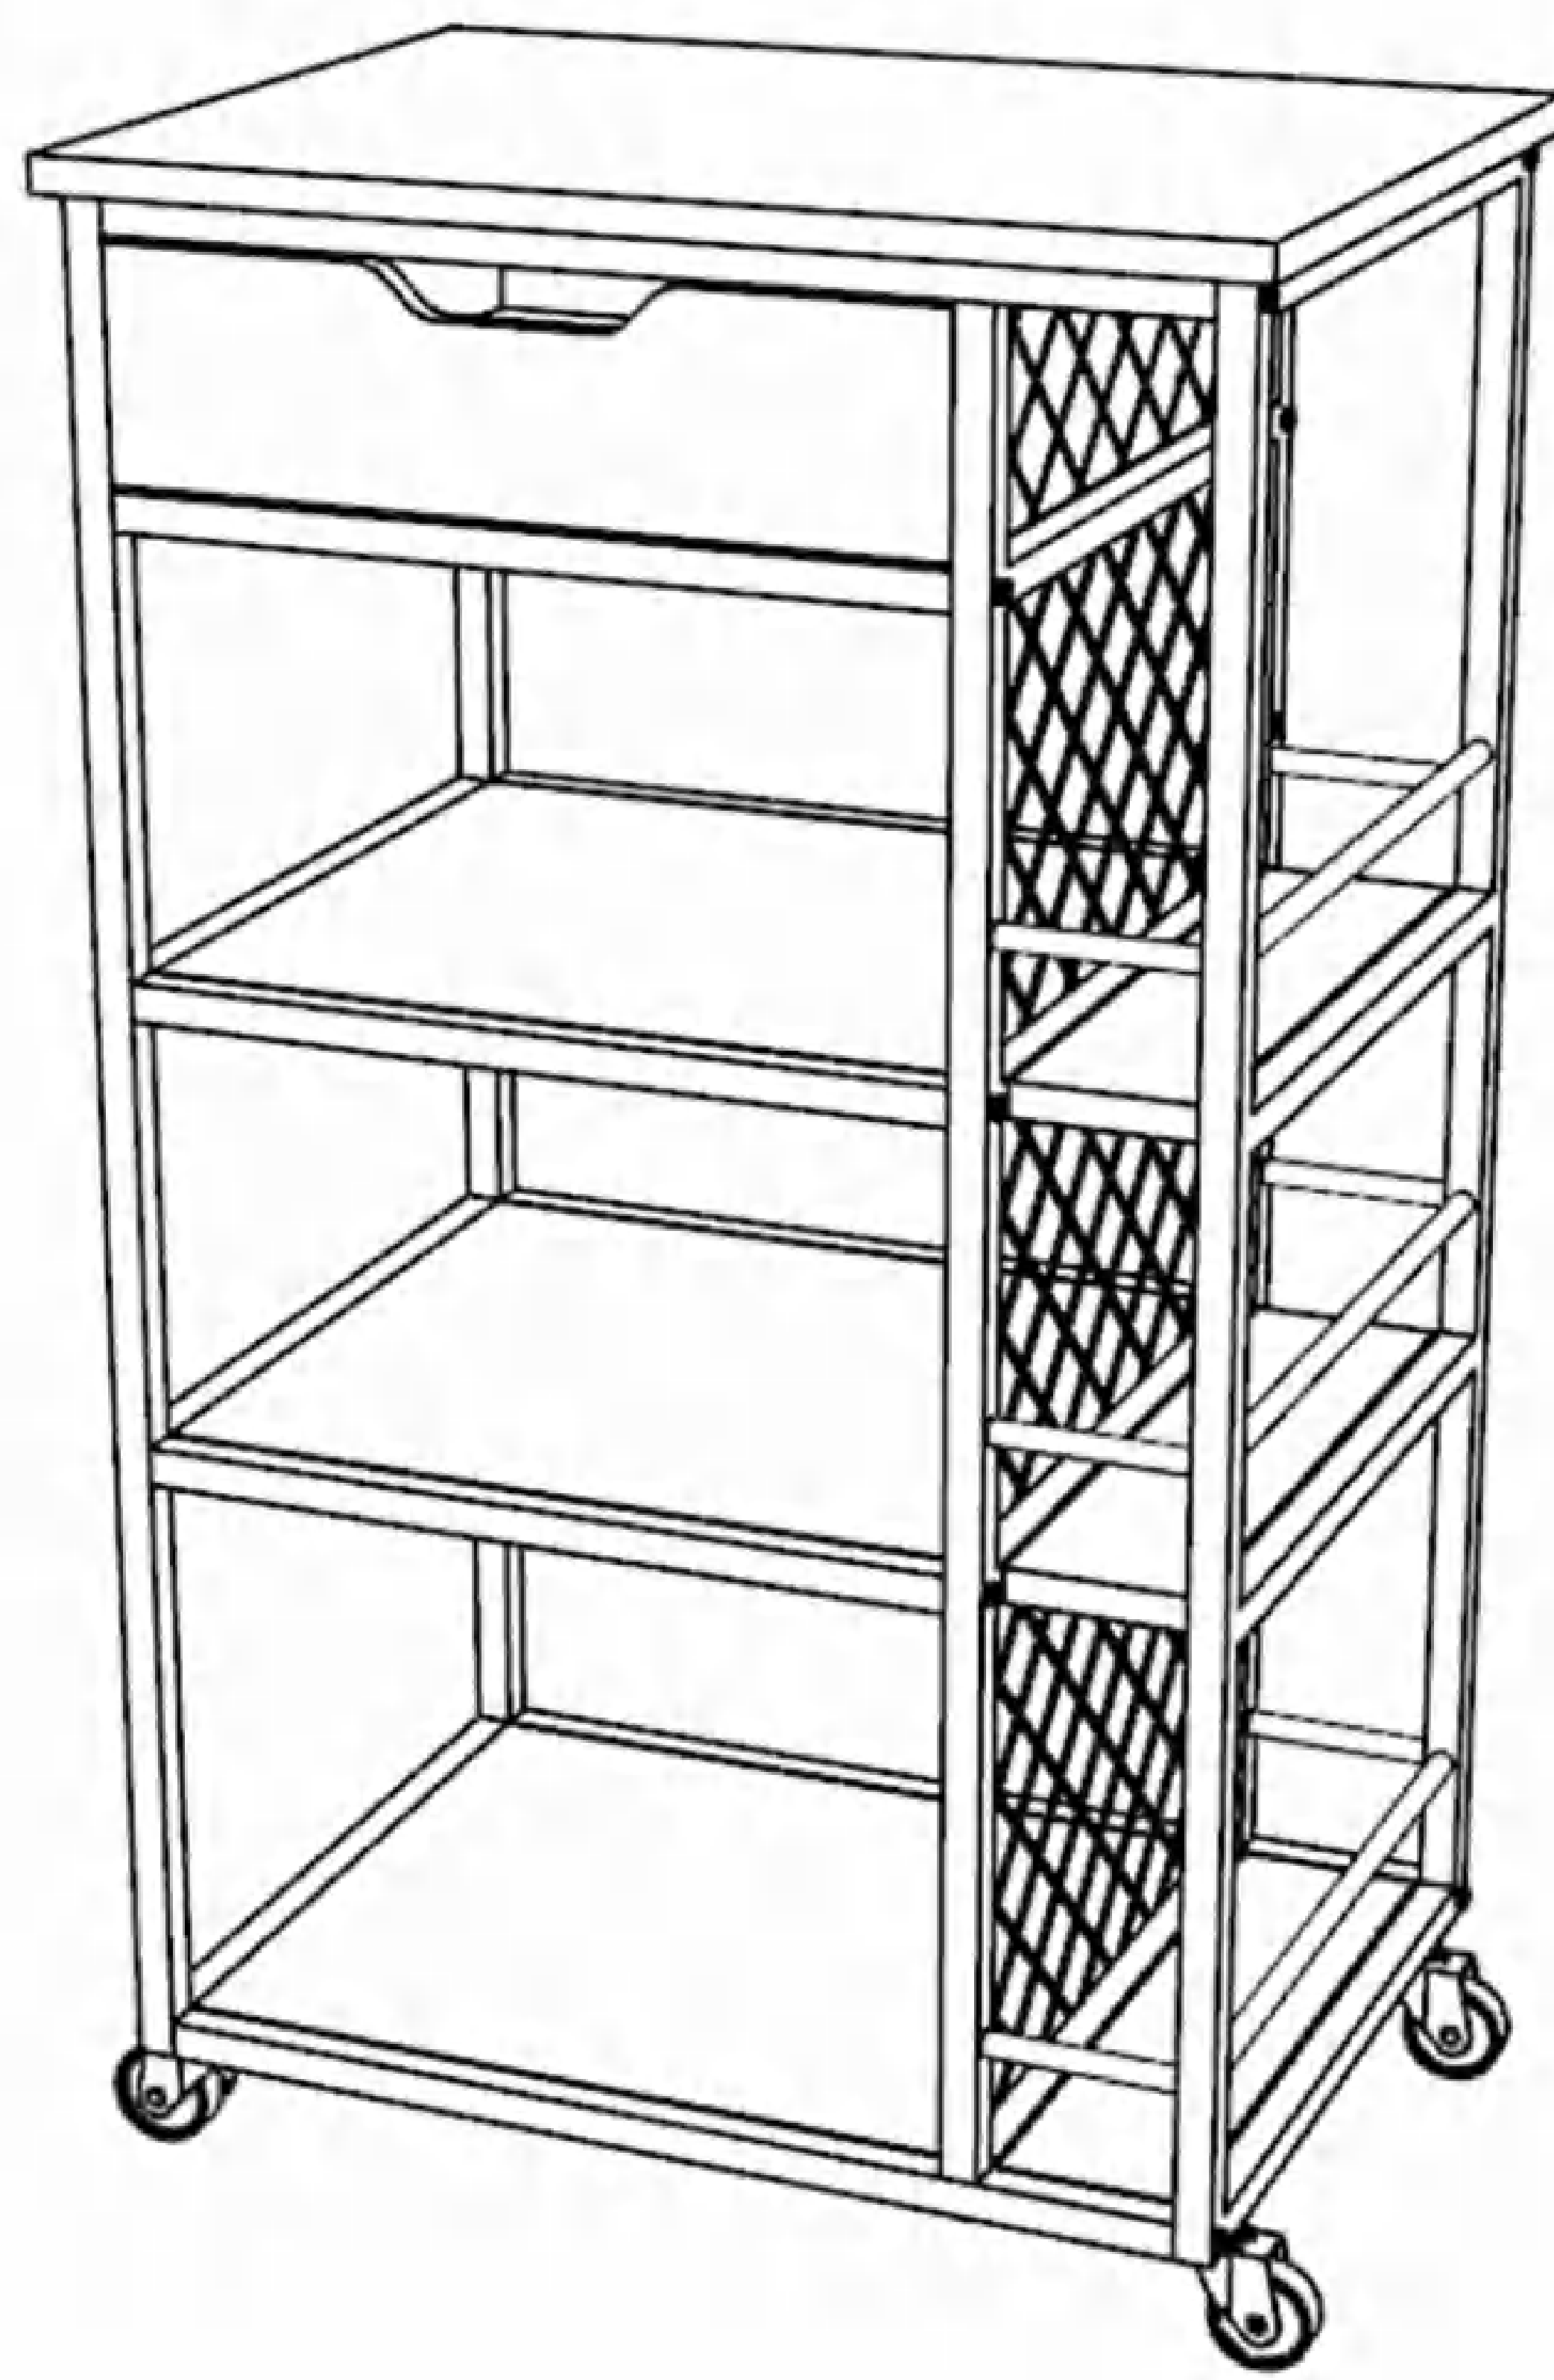



2019-02

FKW99





TOOLS:

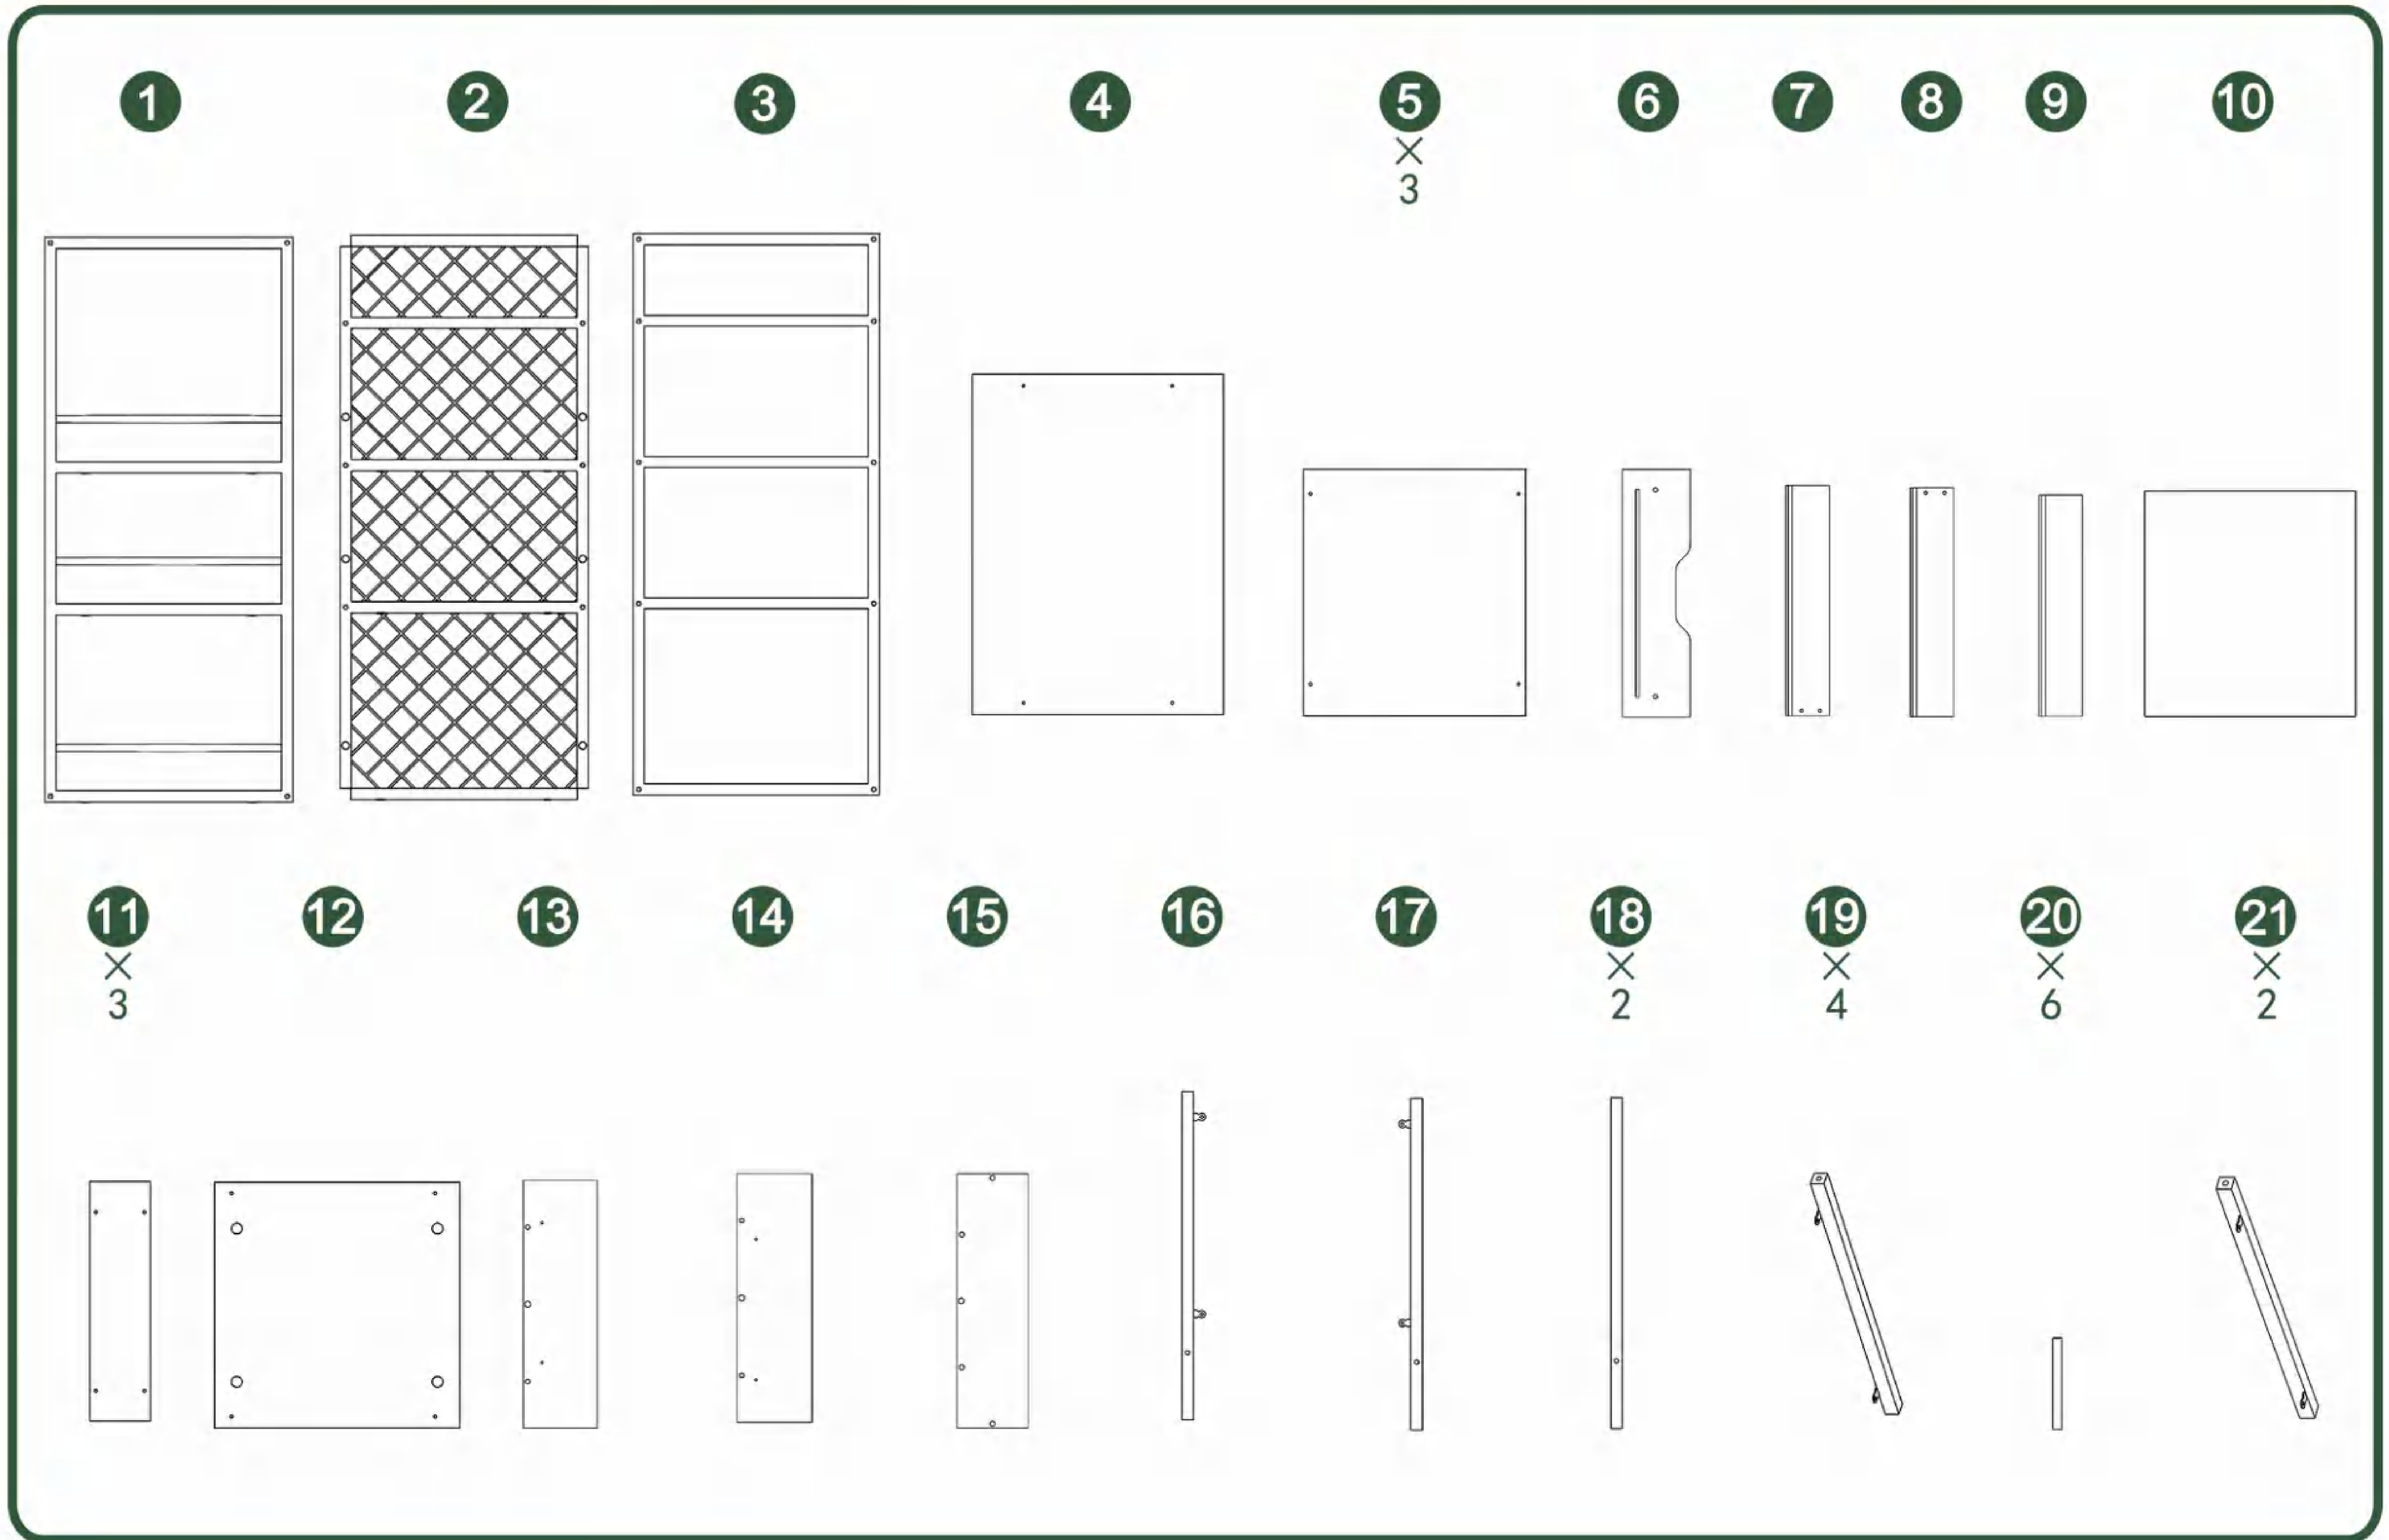


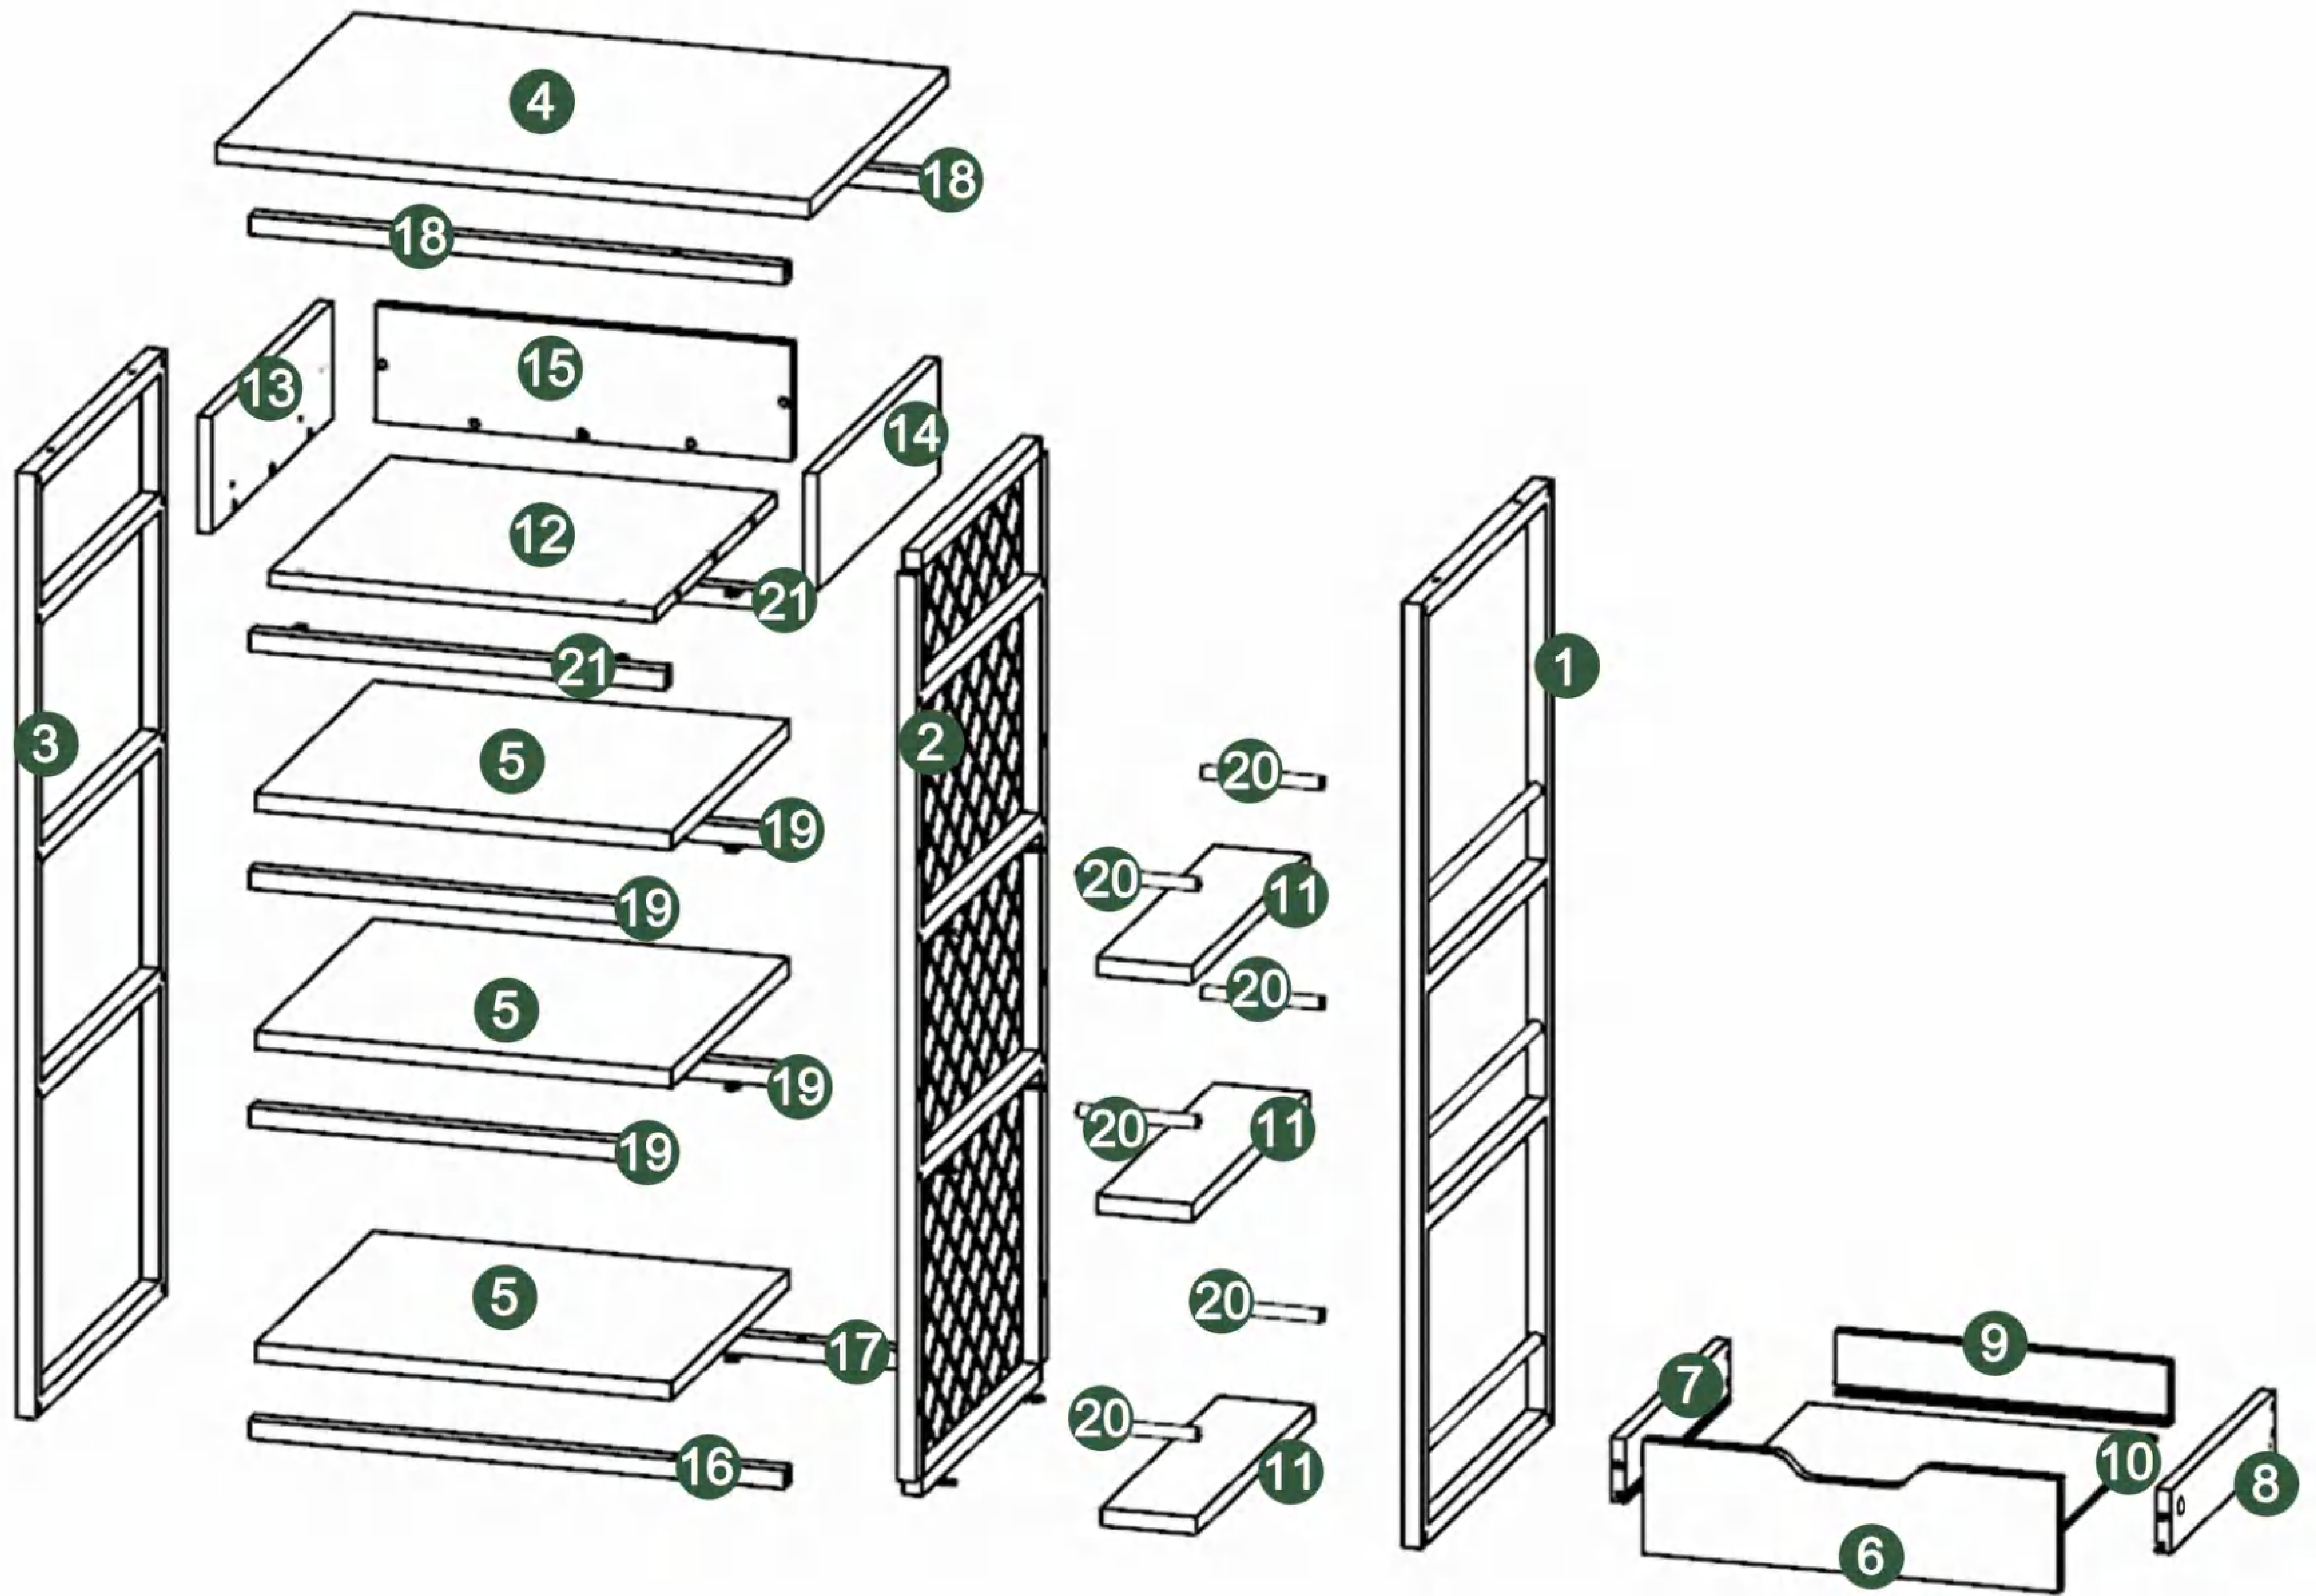


**BOLT INSTALLATION AS BELOW:**

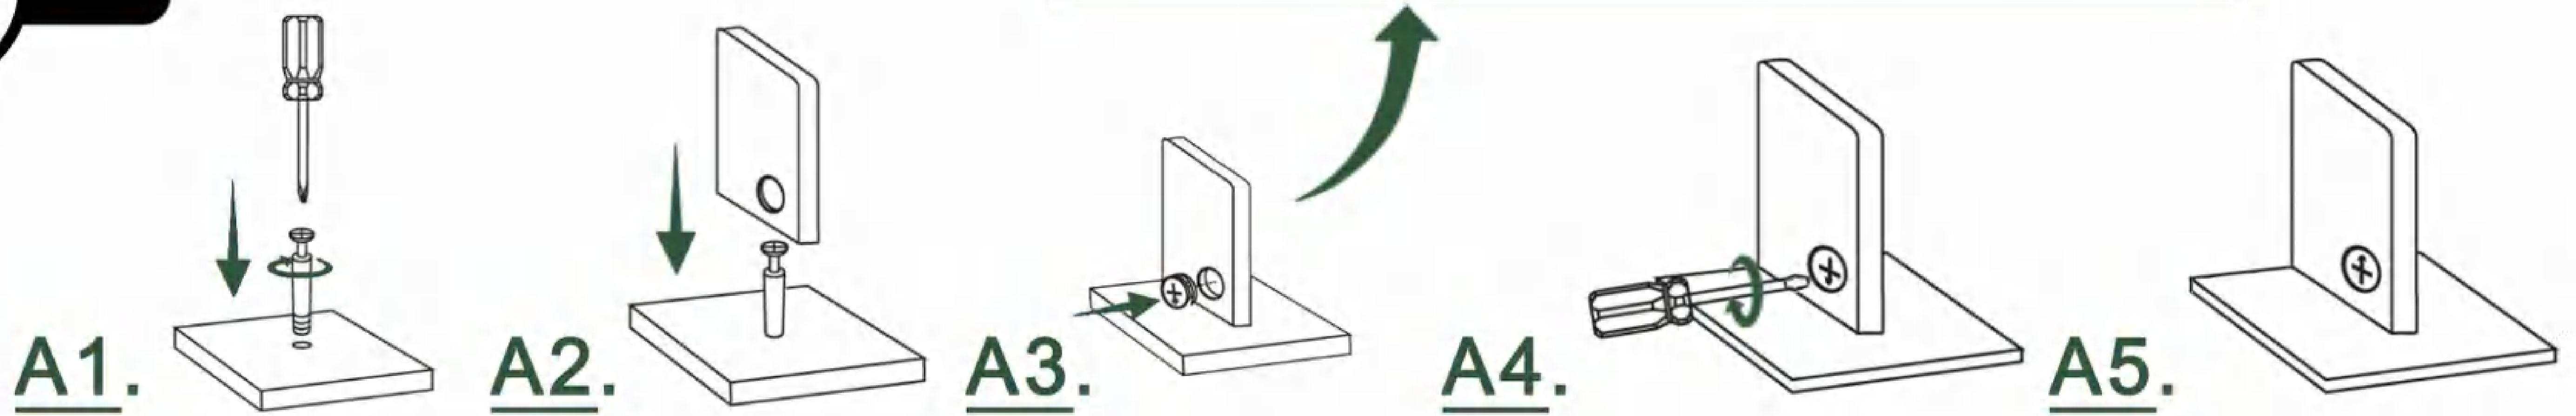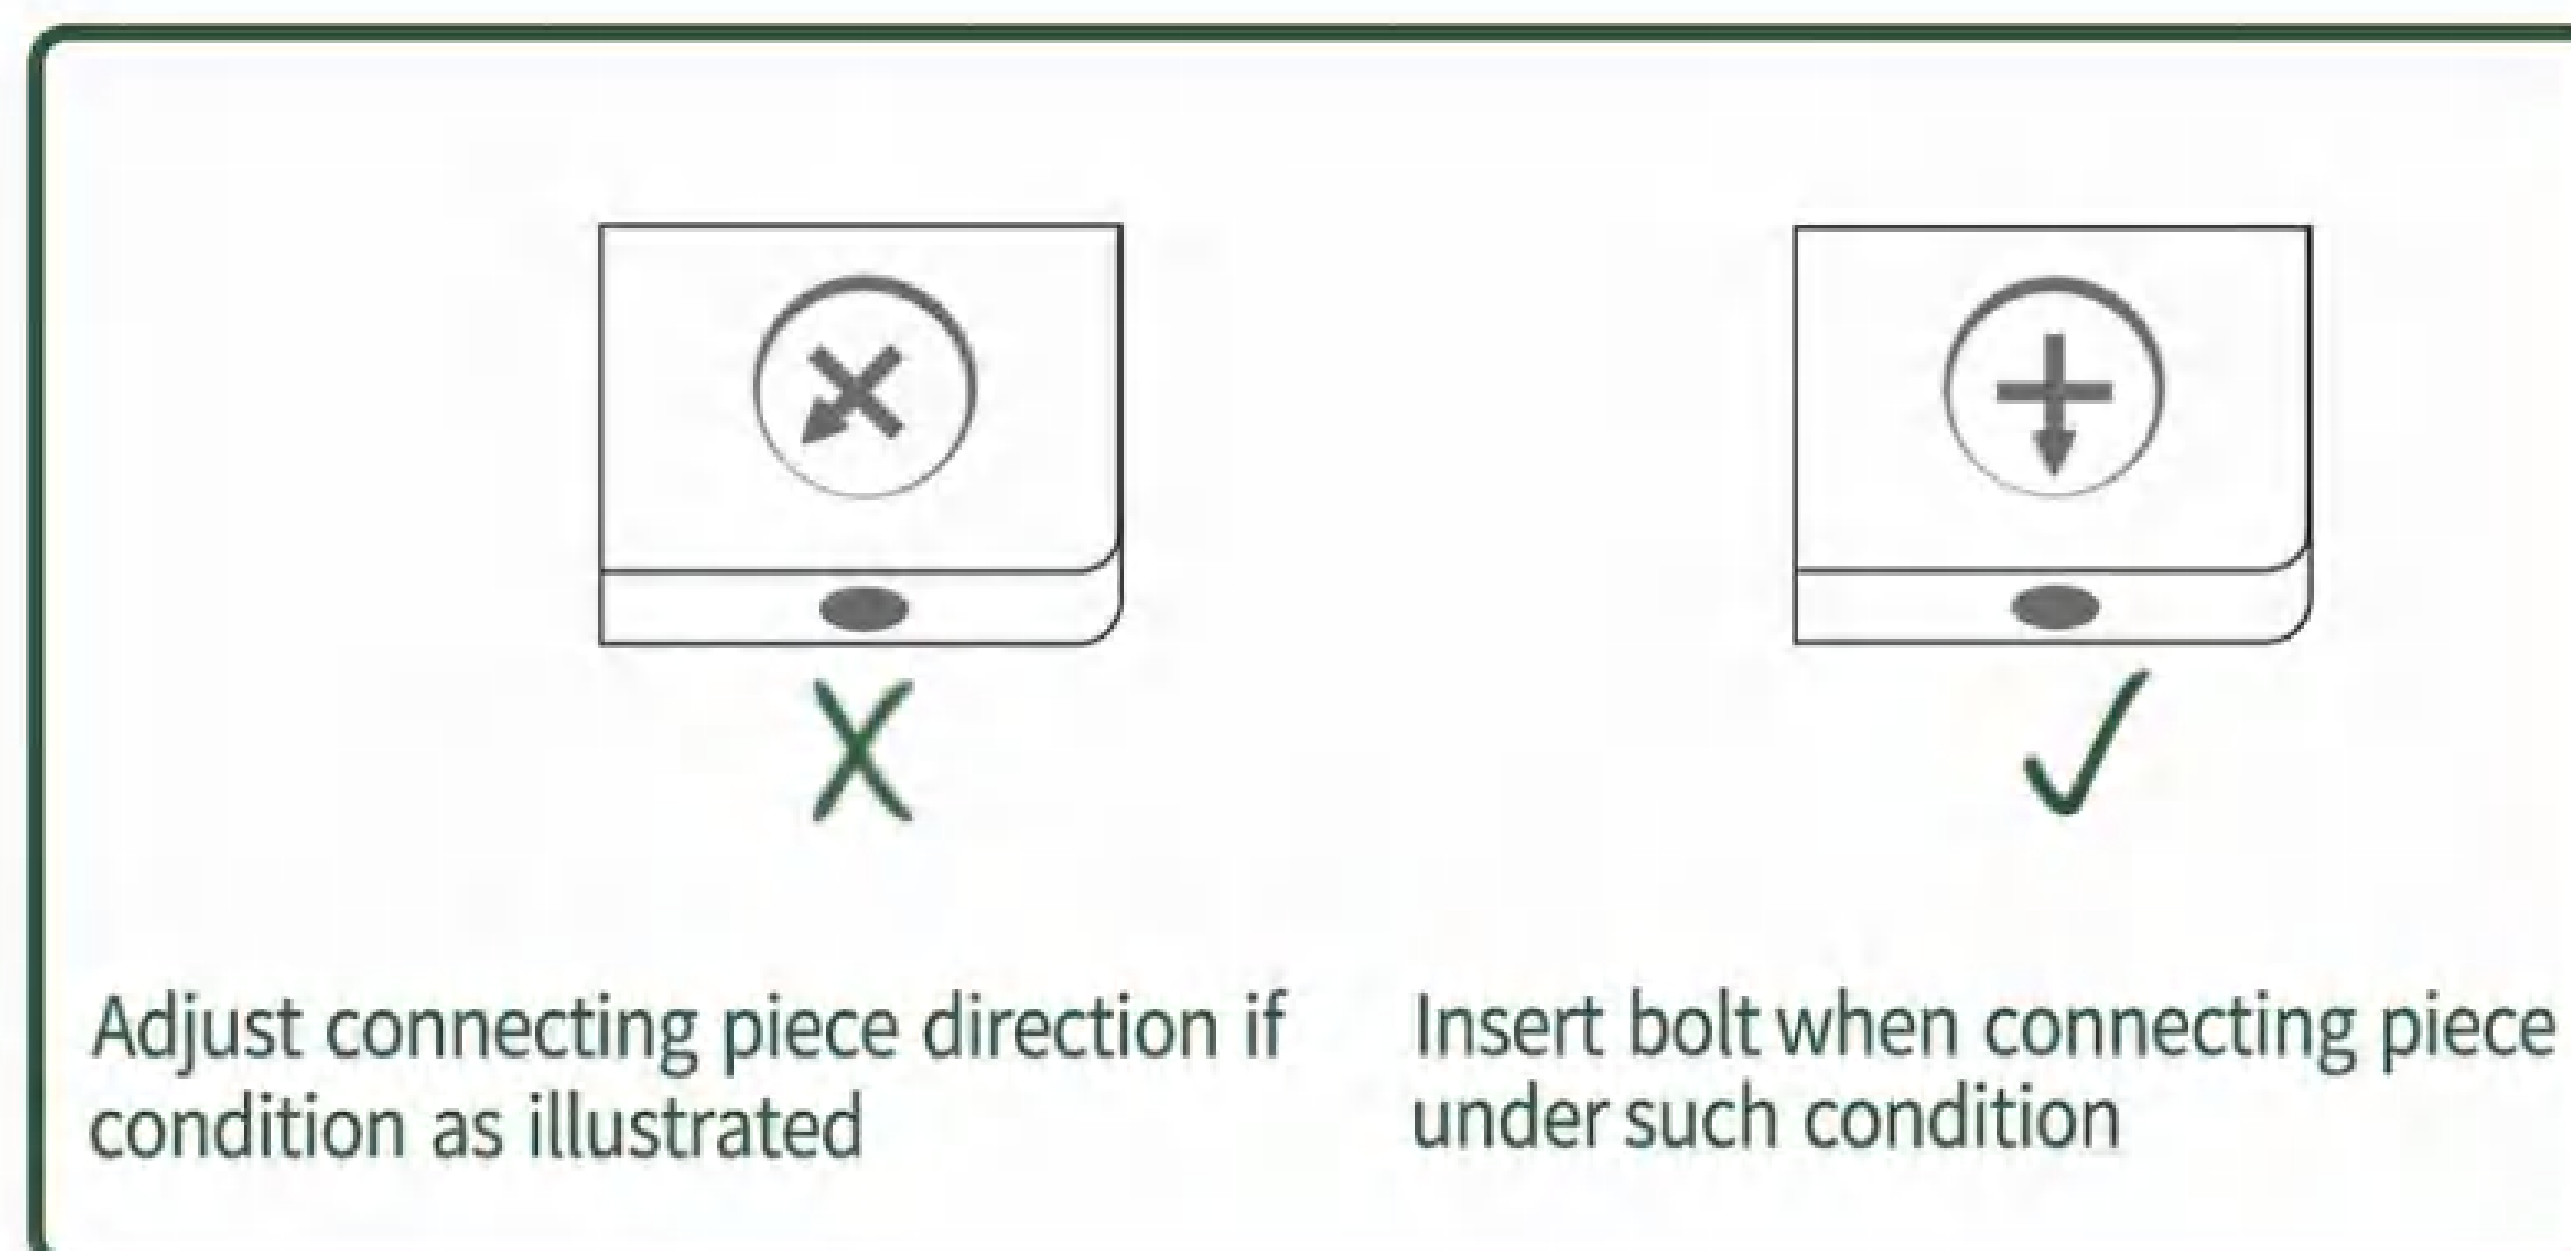


1.

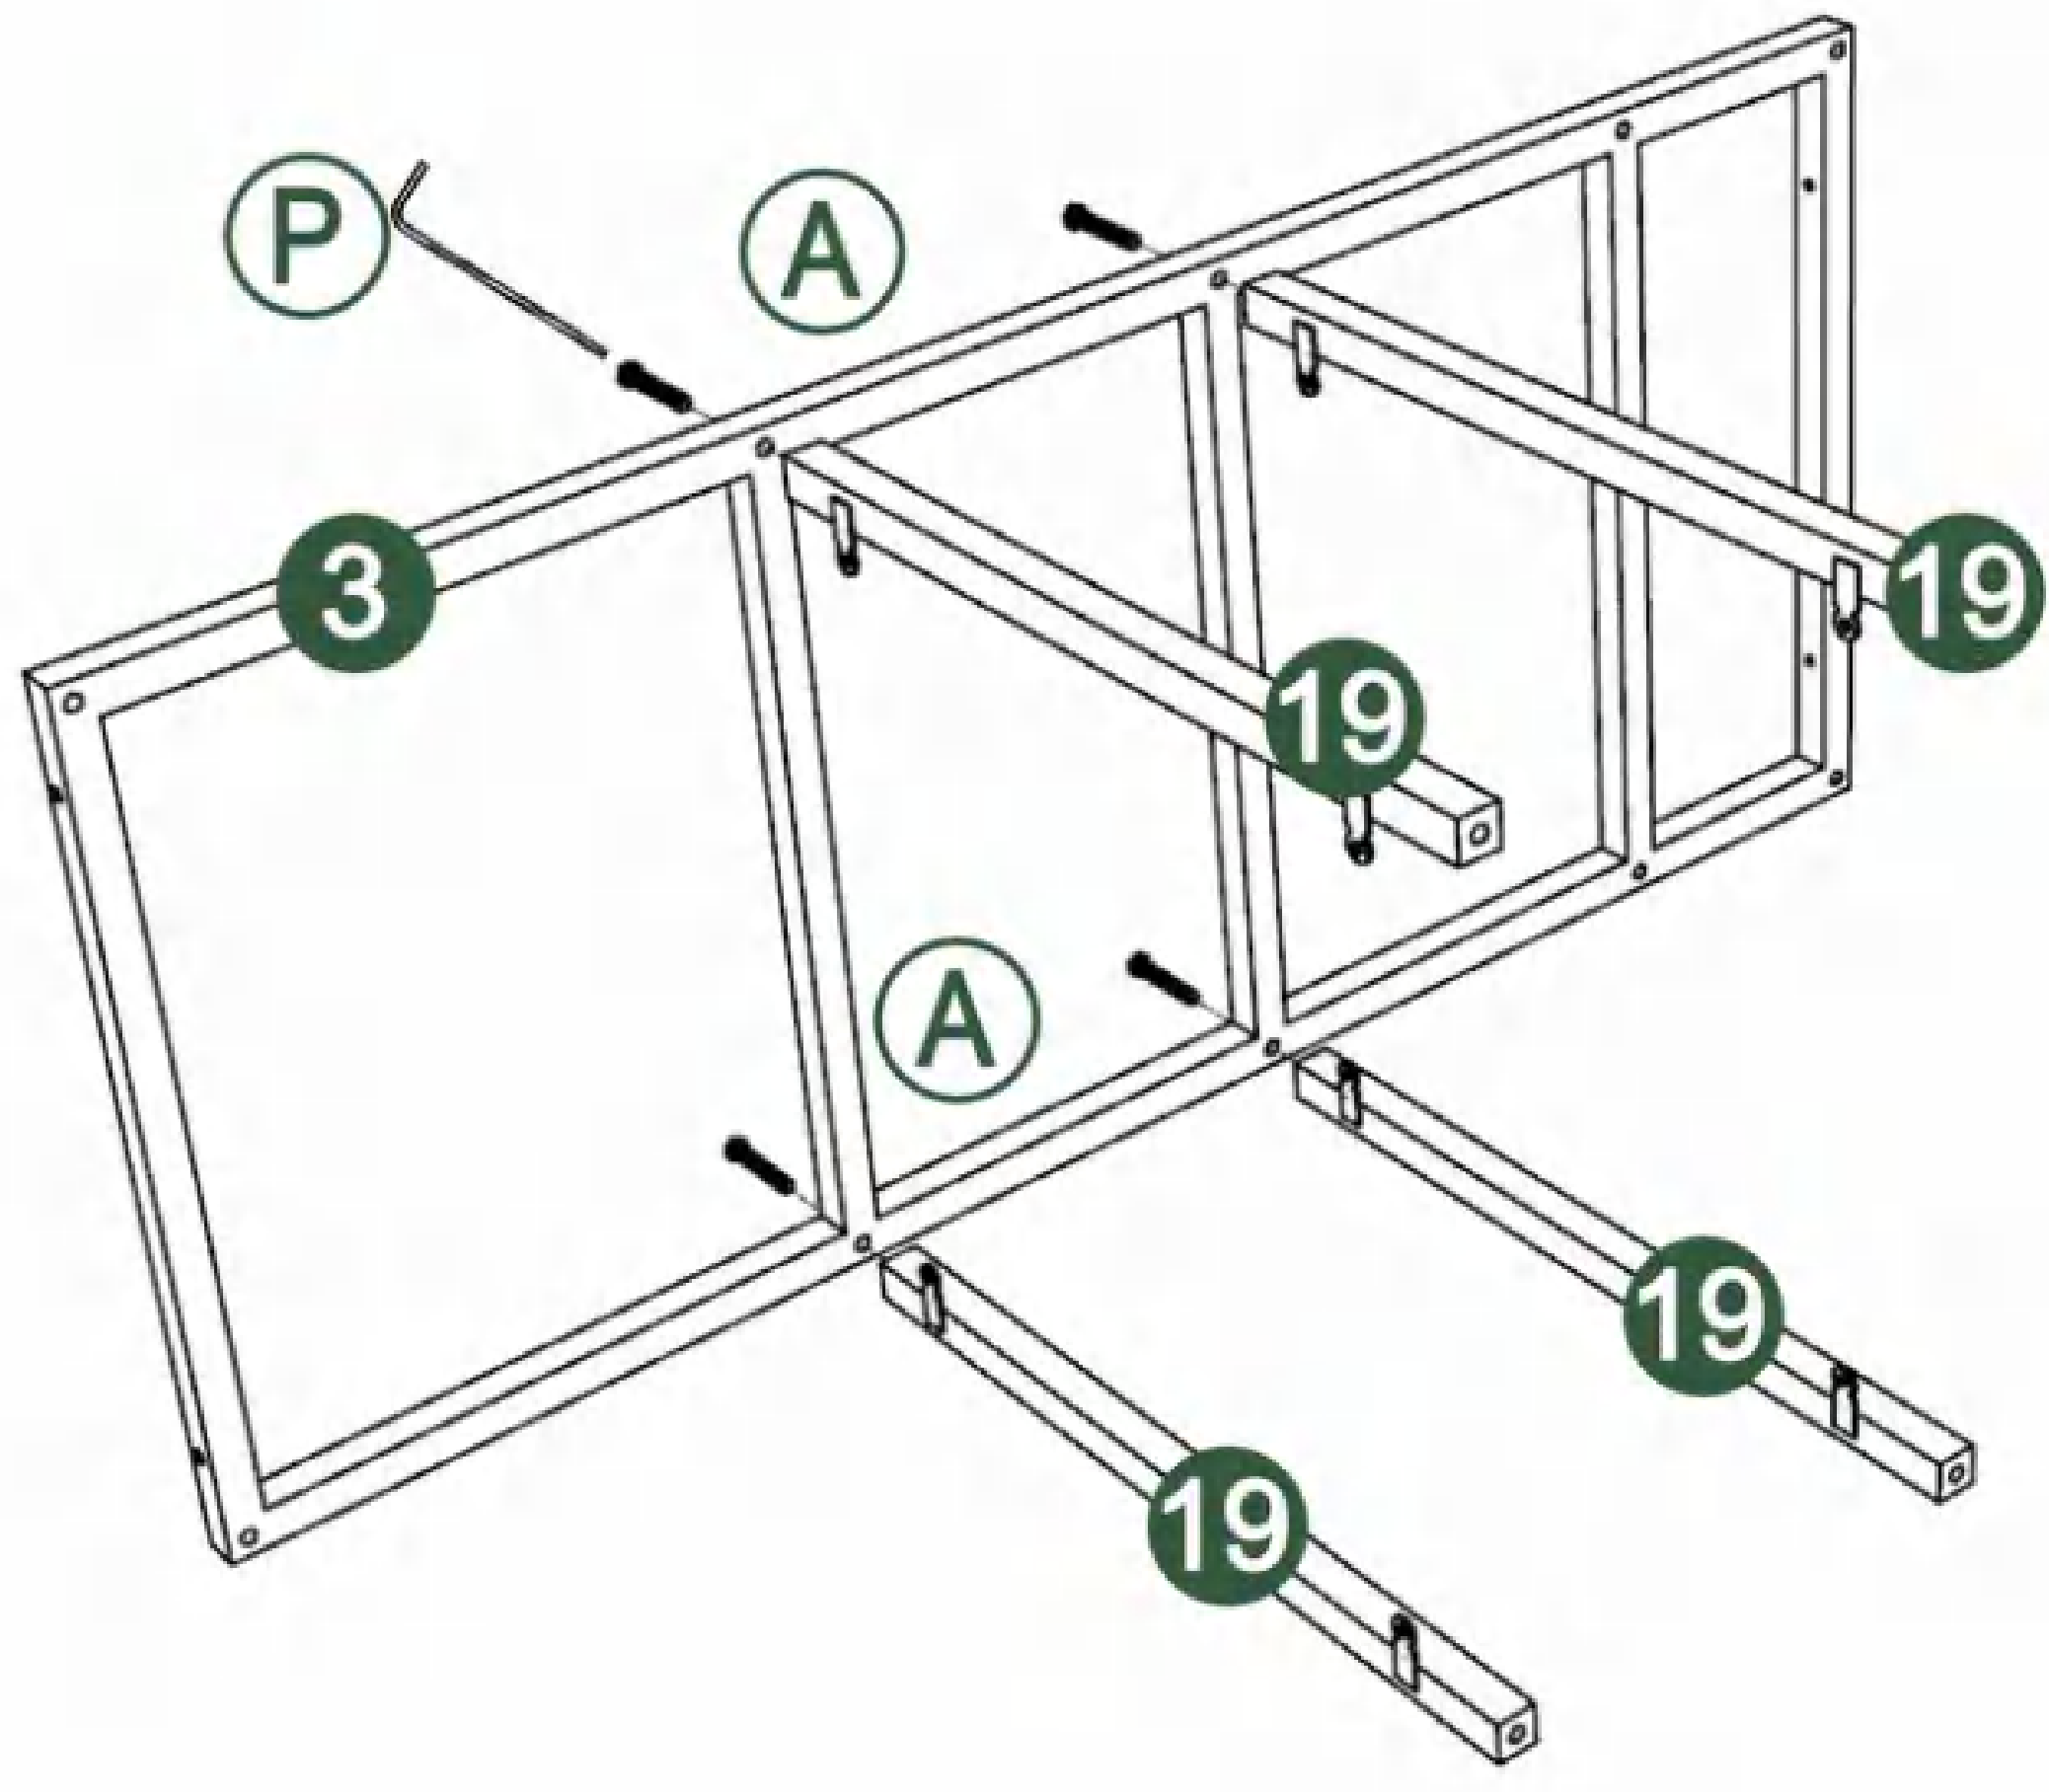


2.

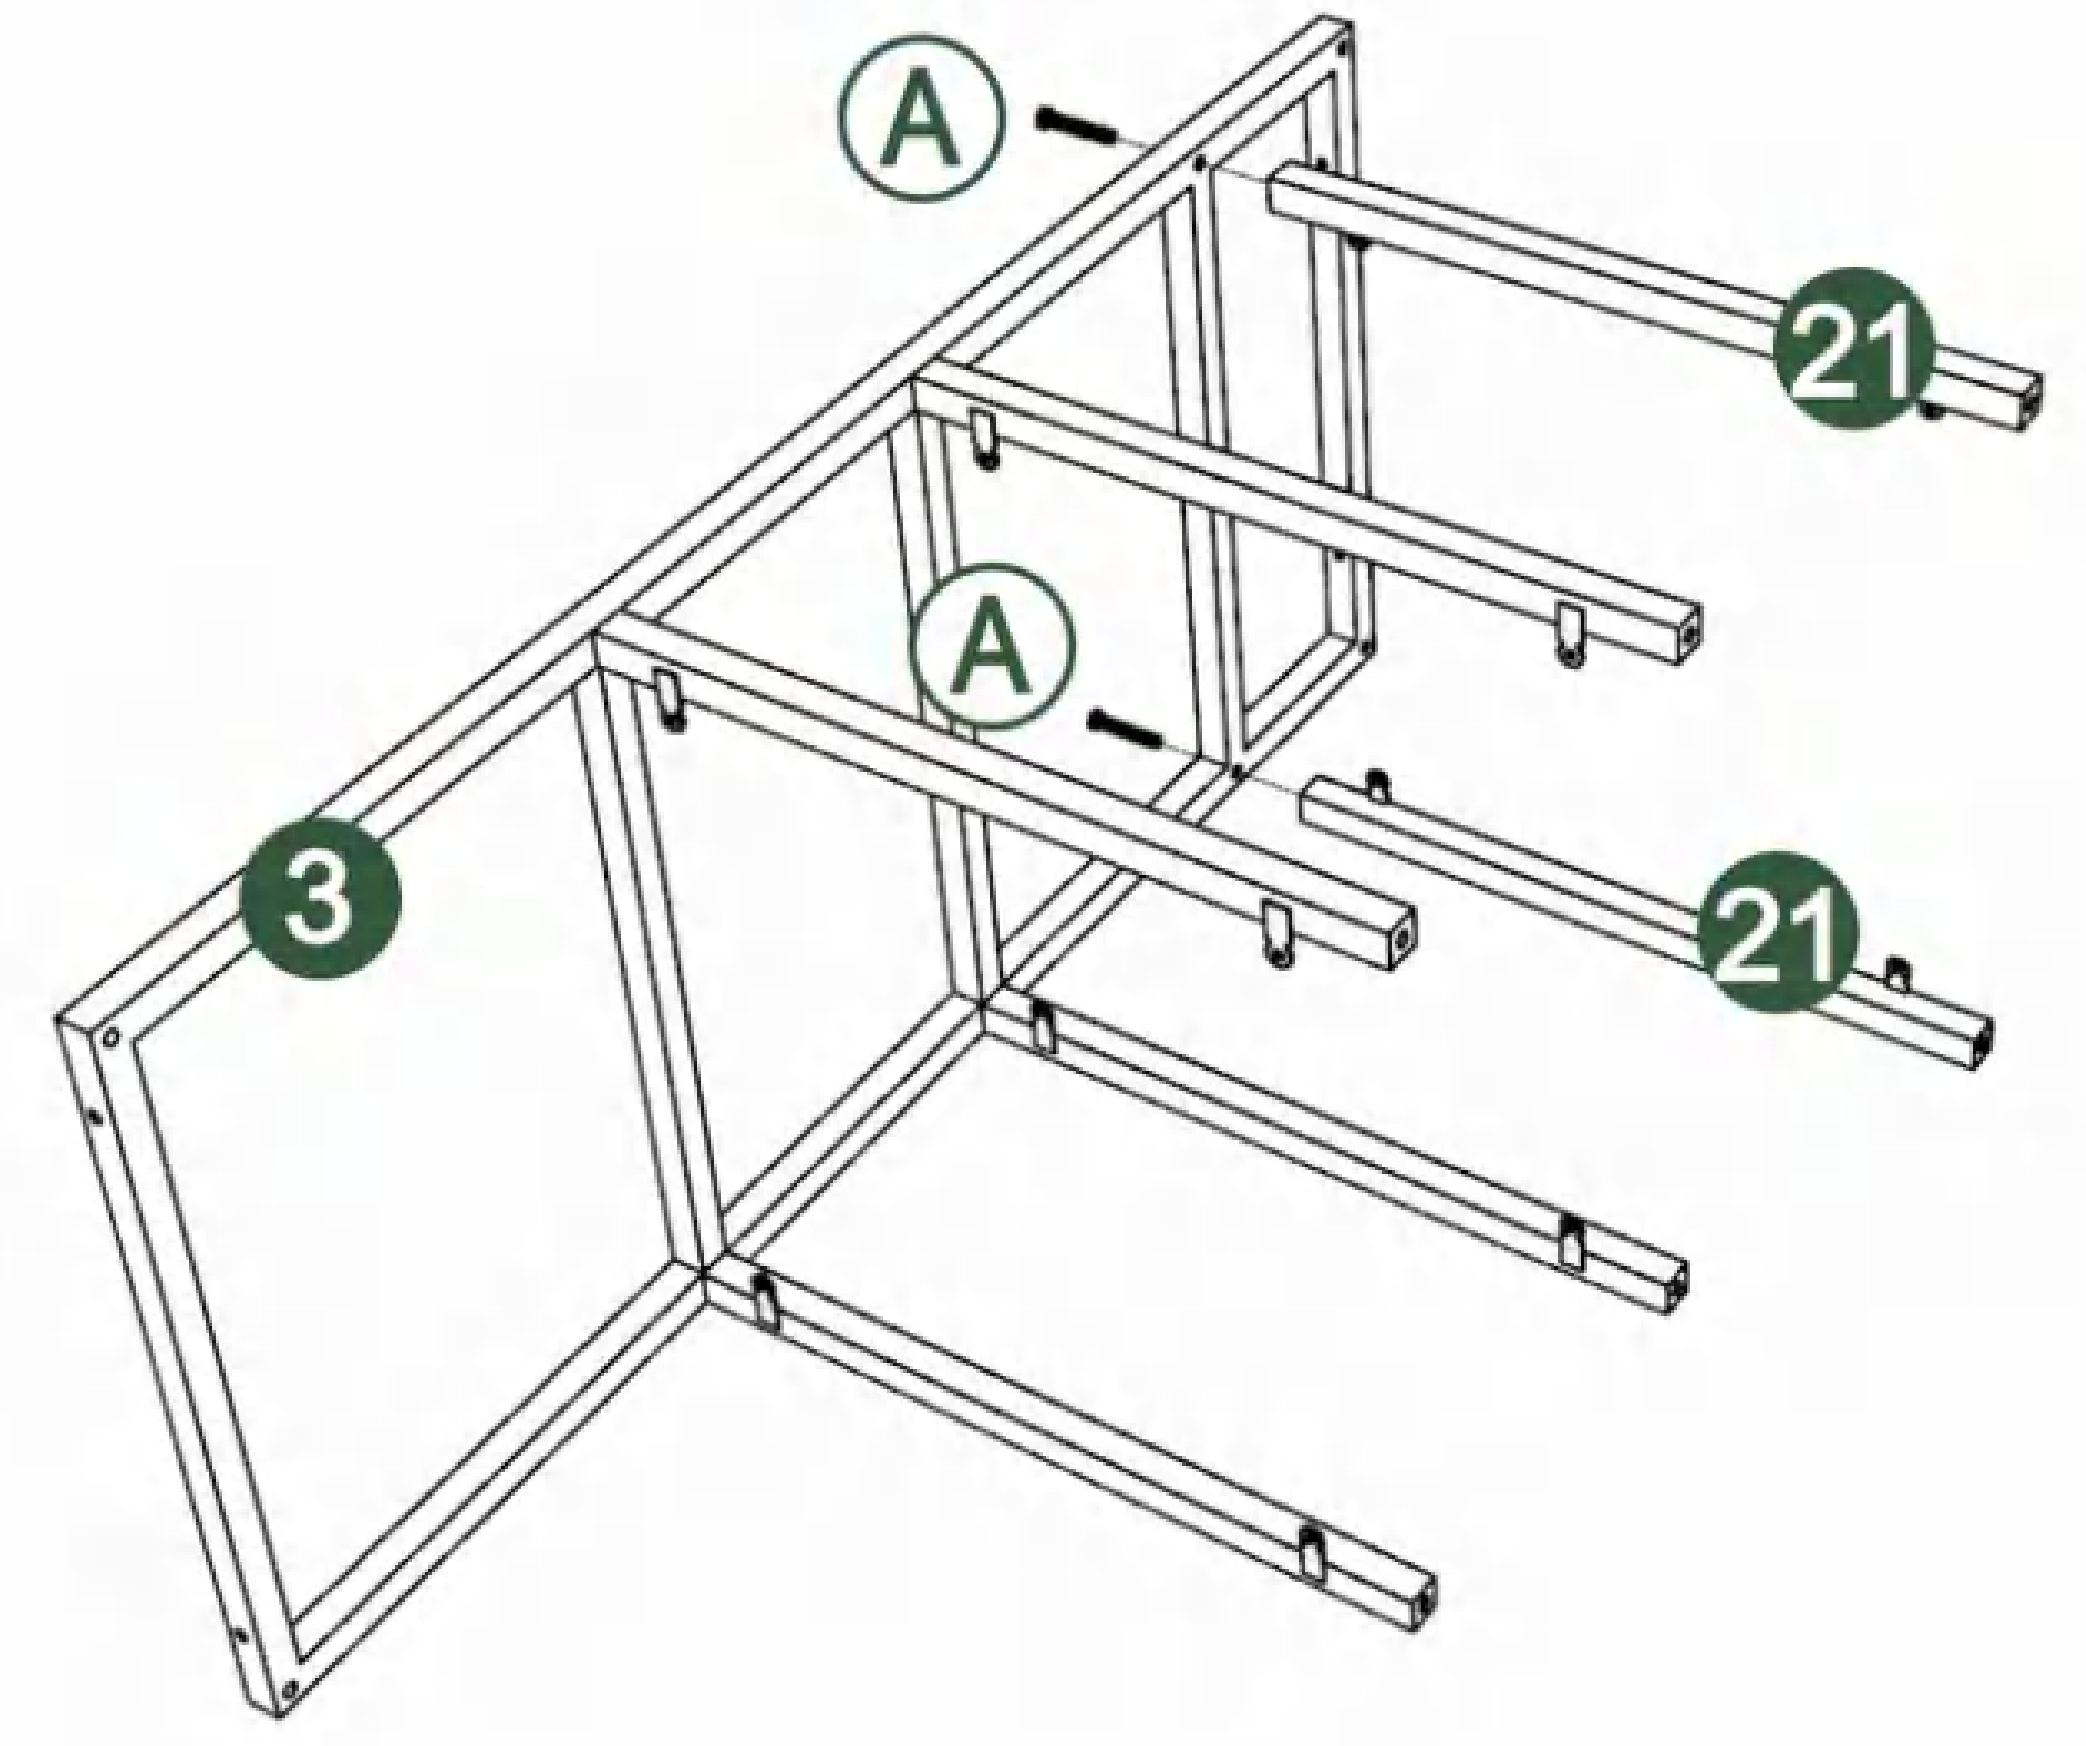


3.

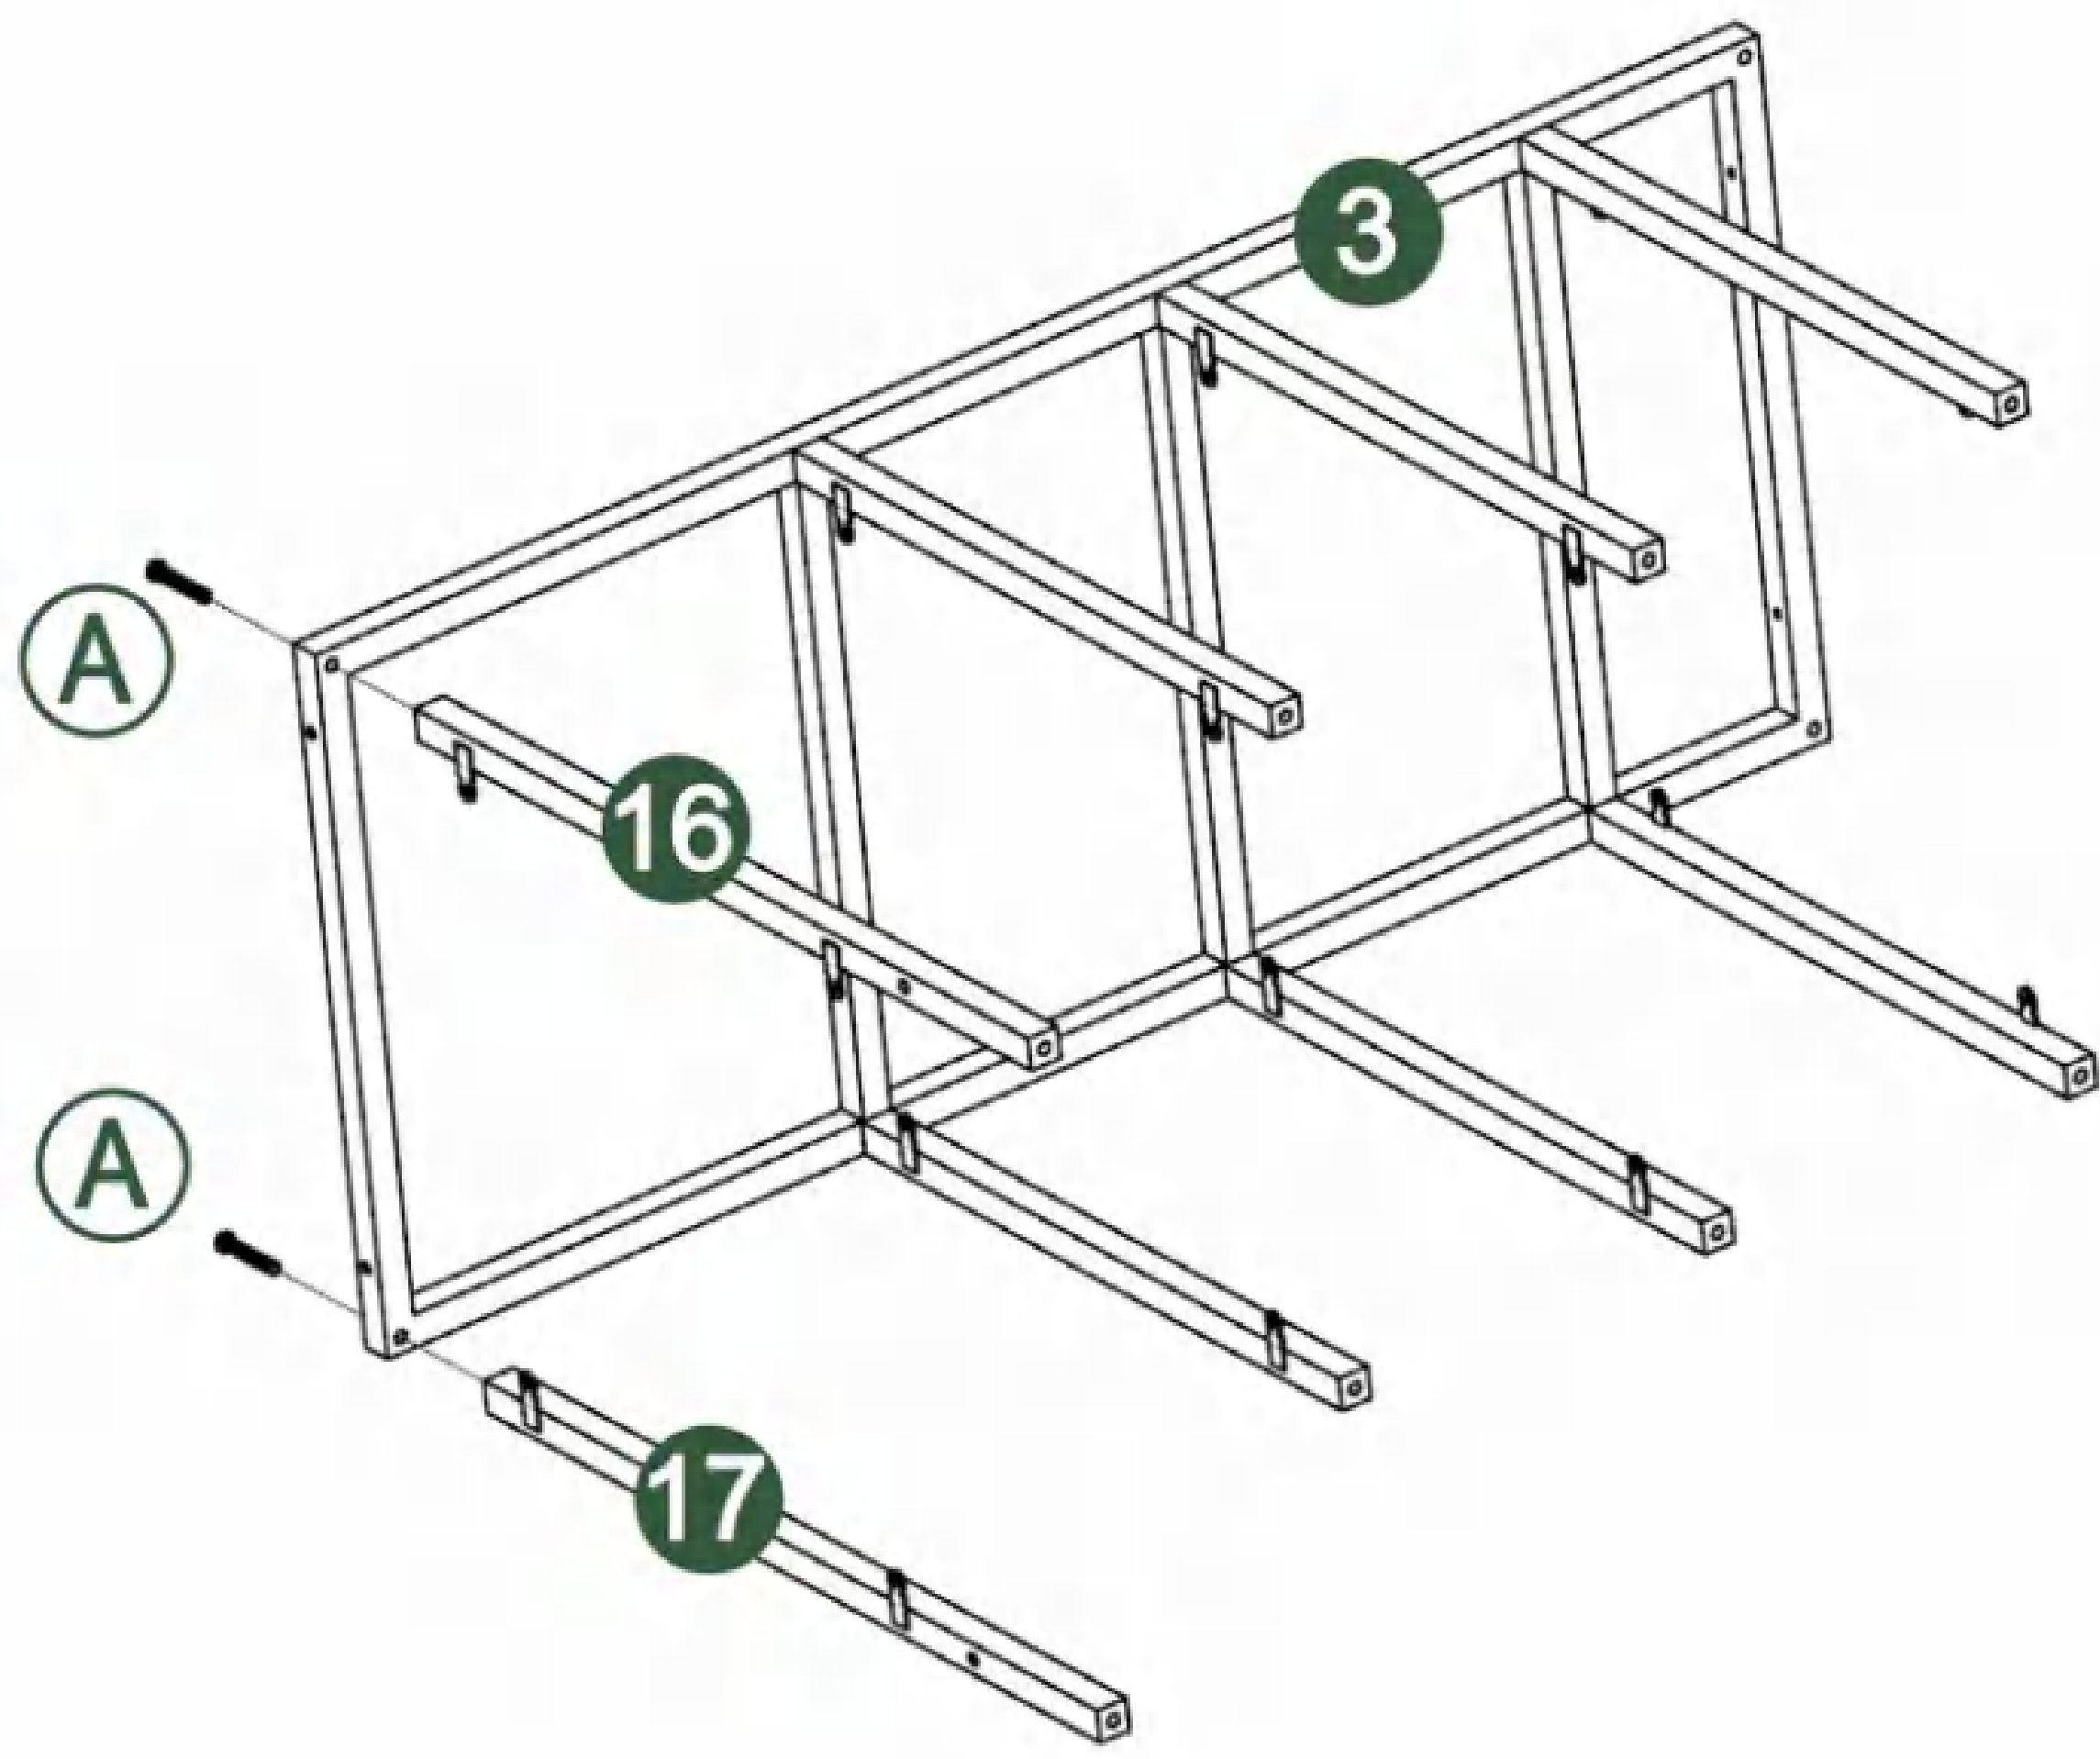


4.

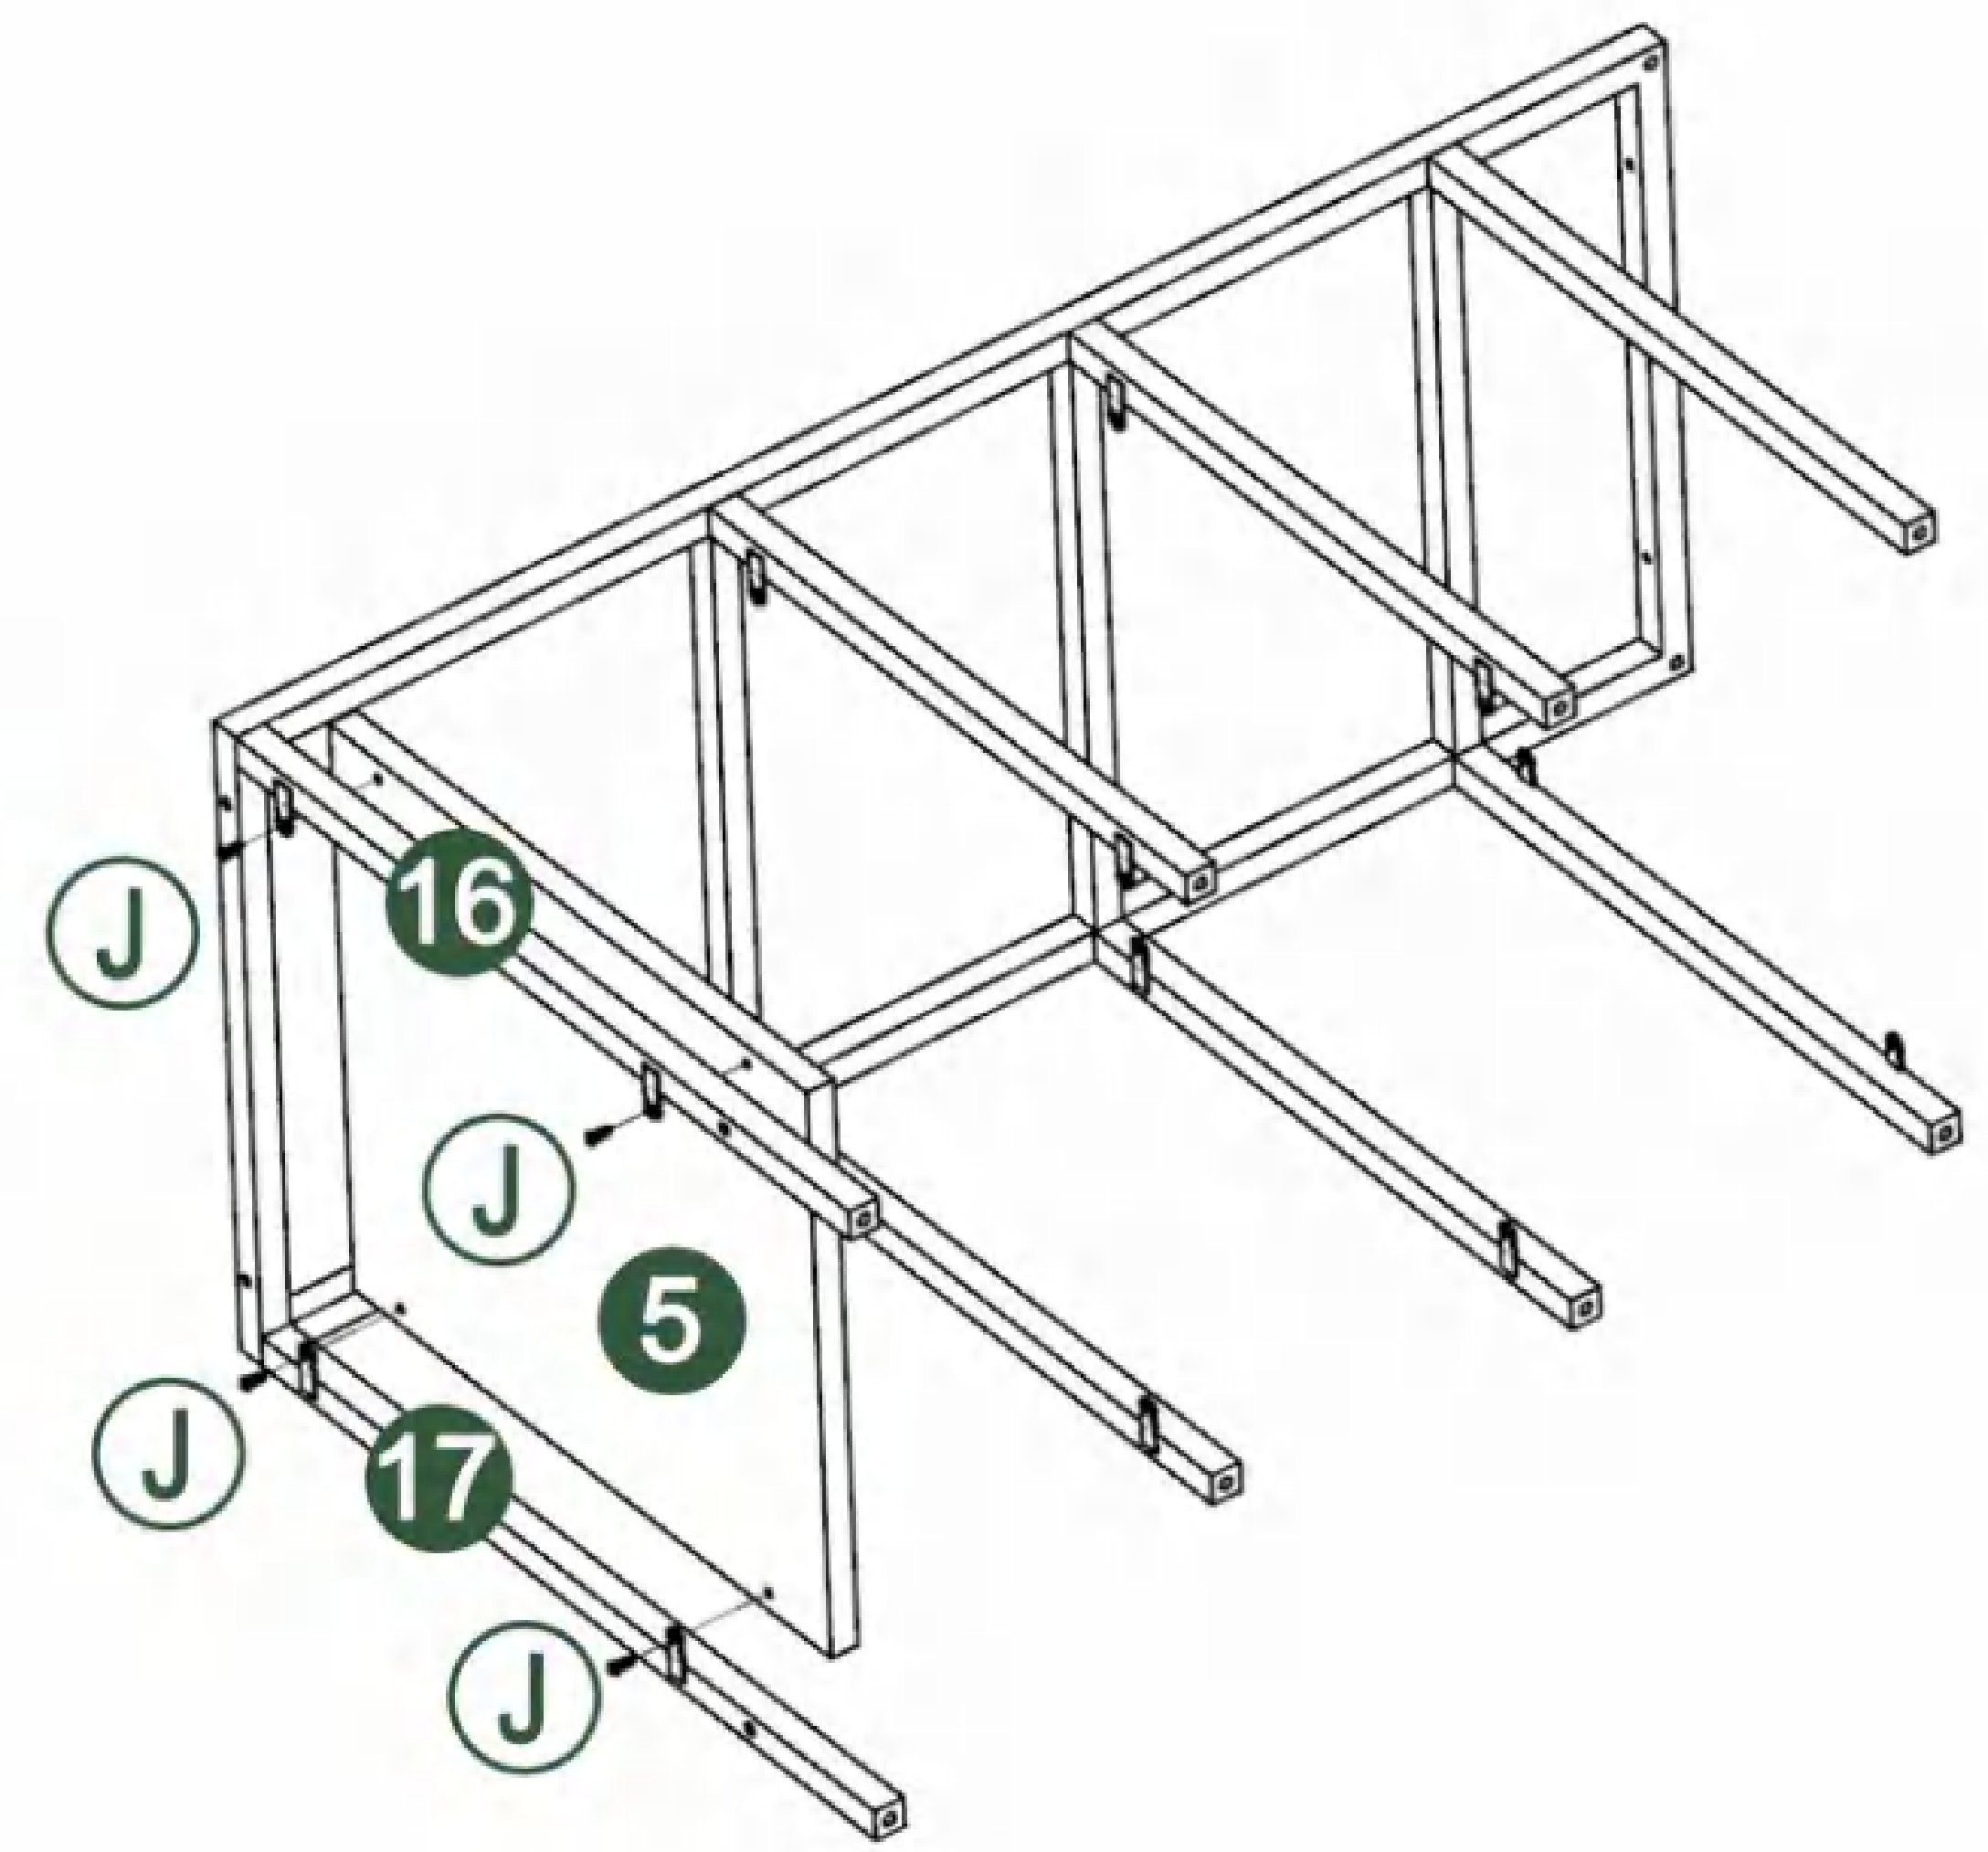


5.

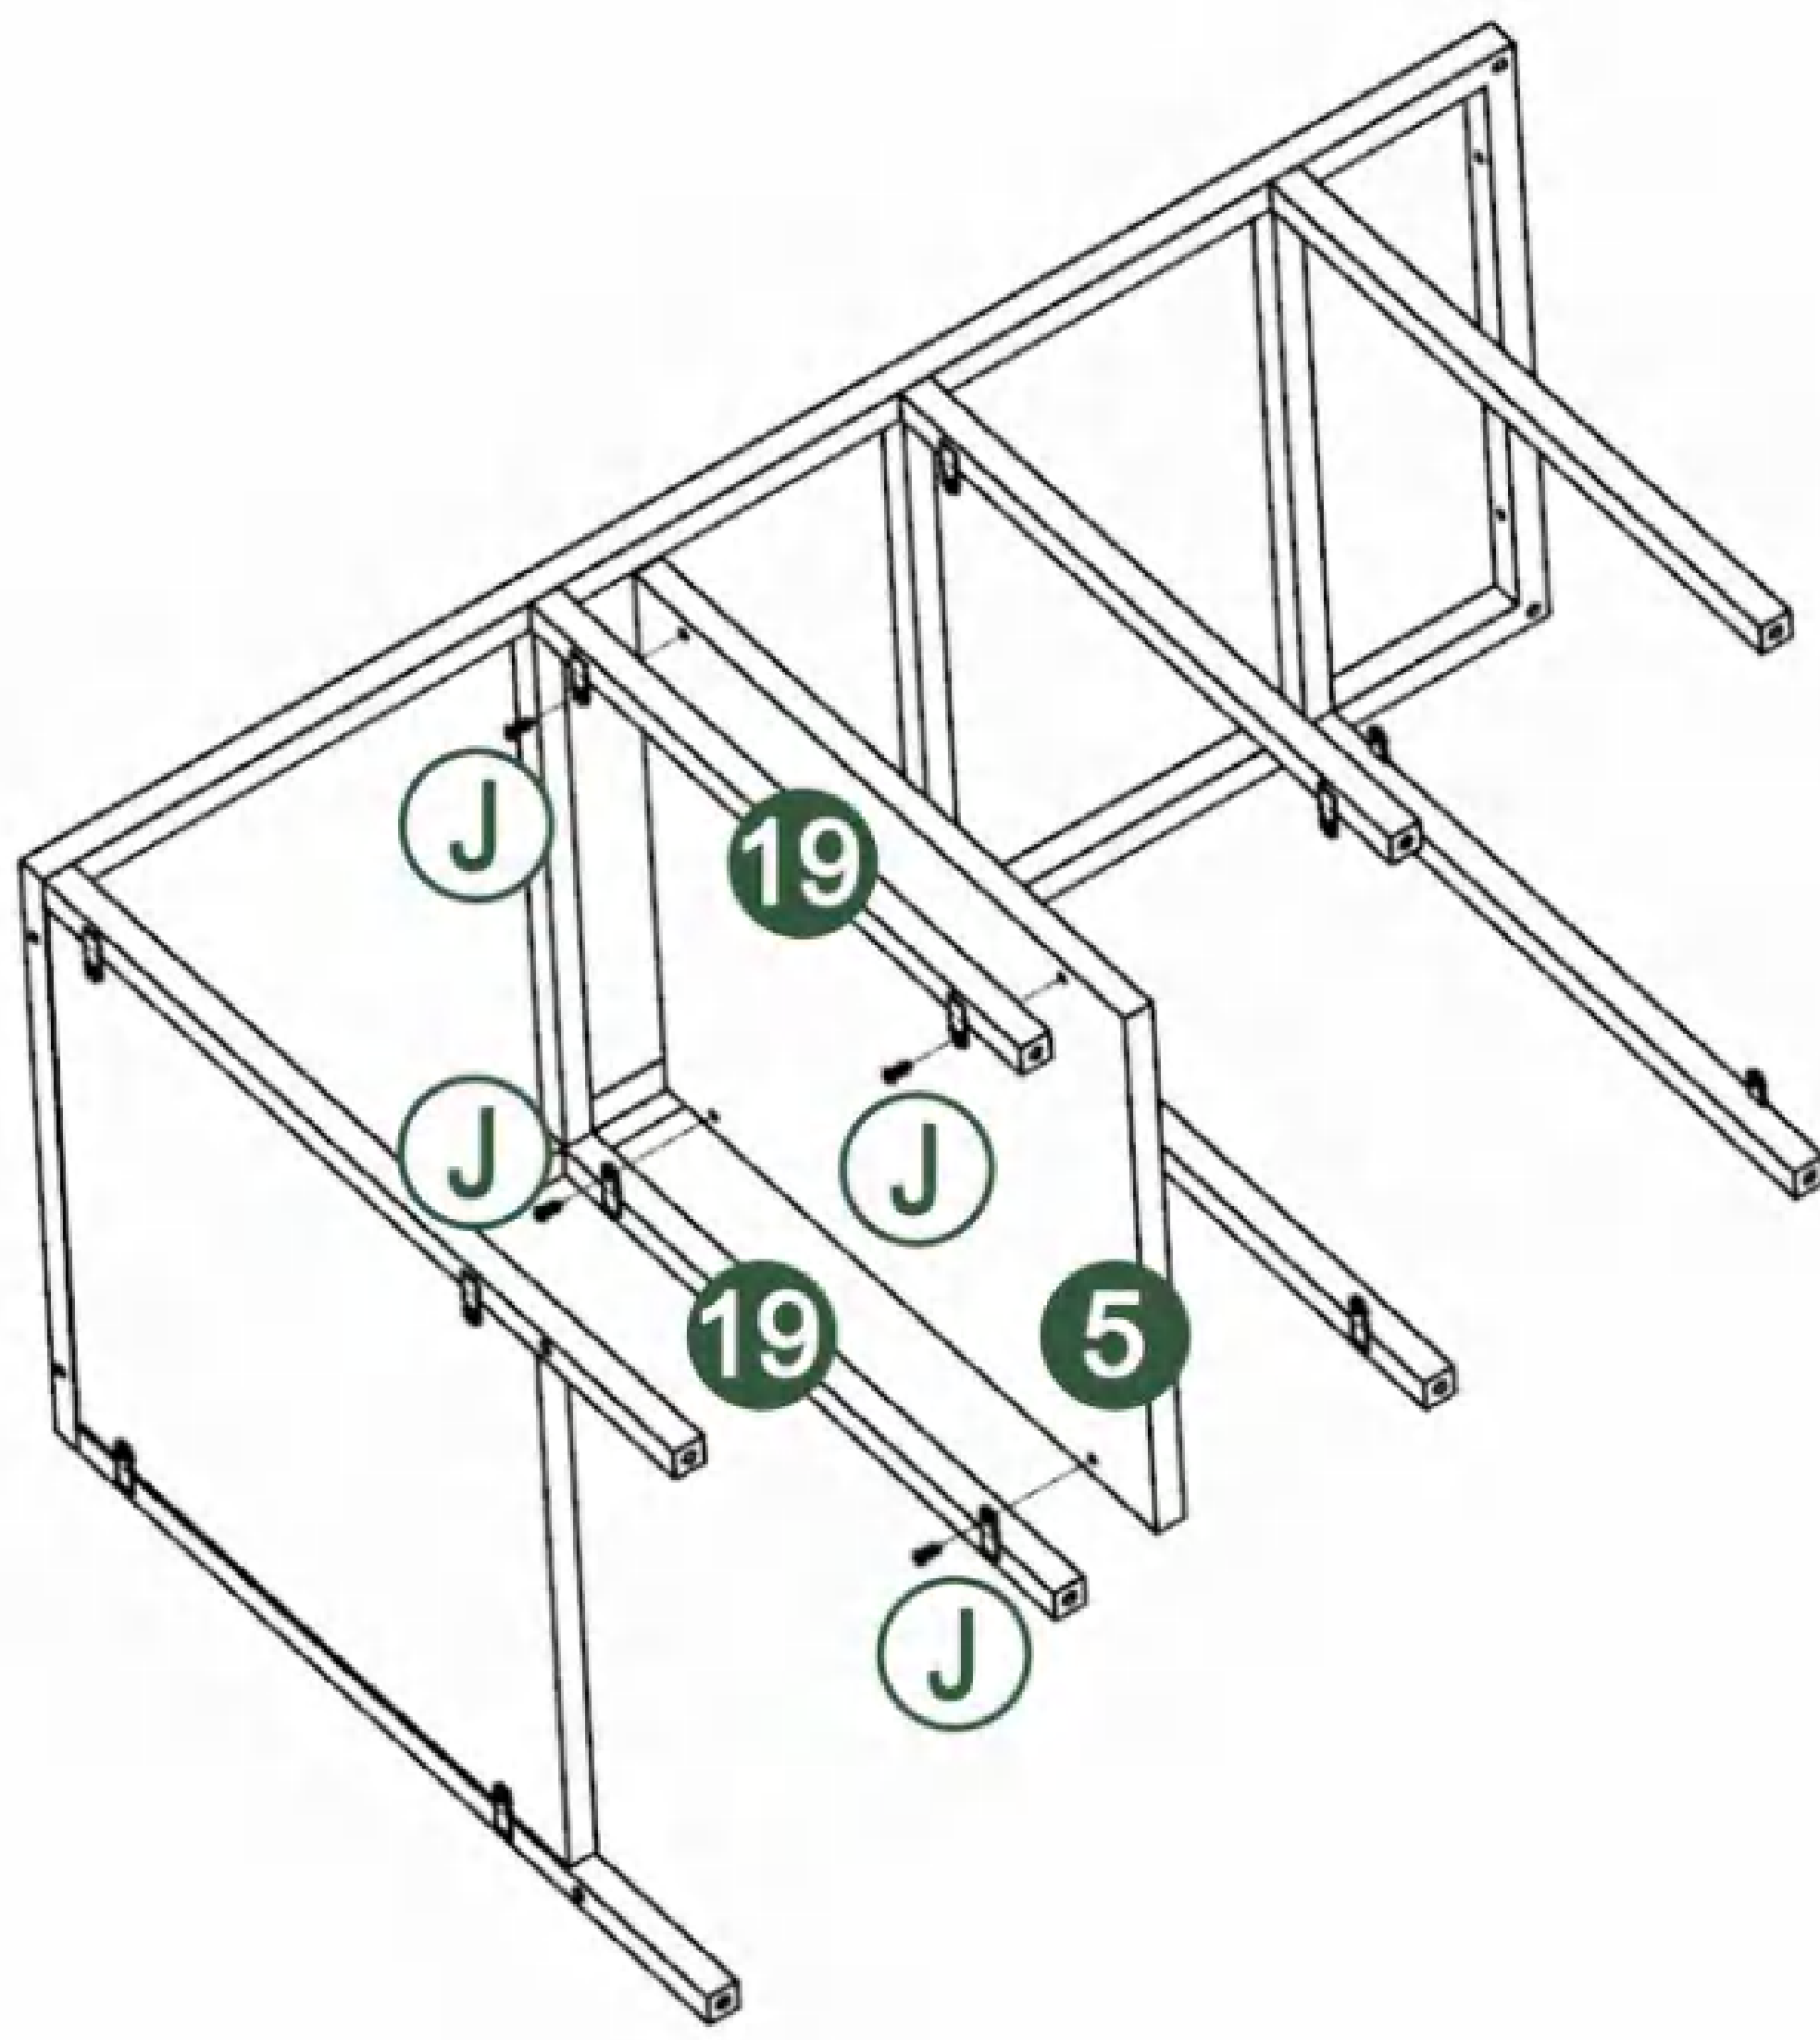


6.

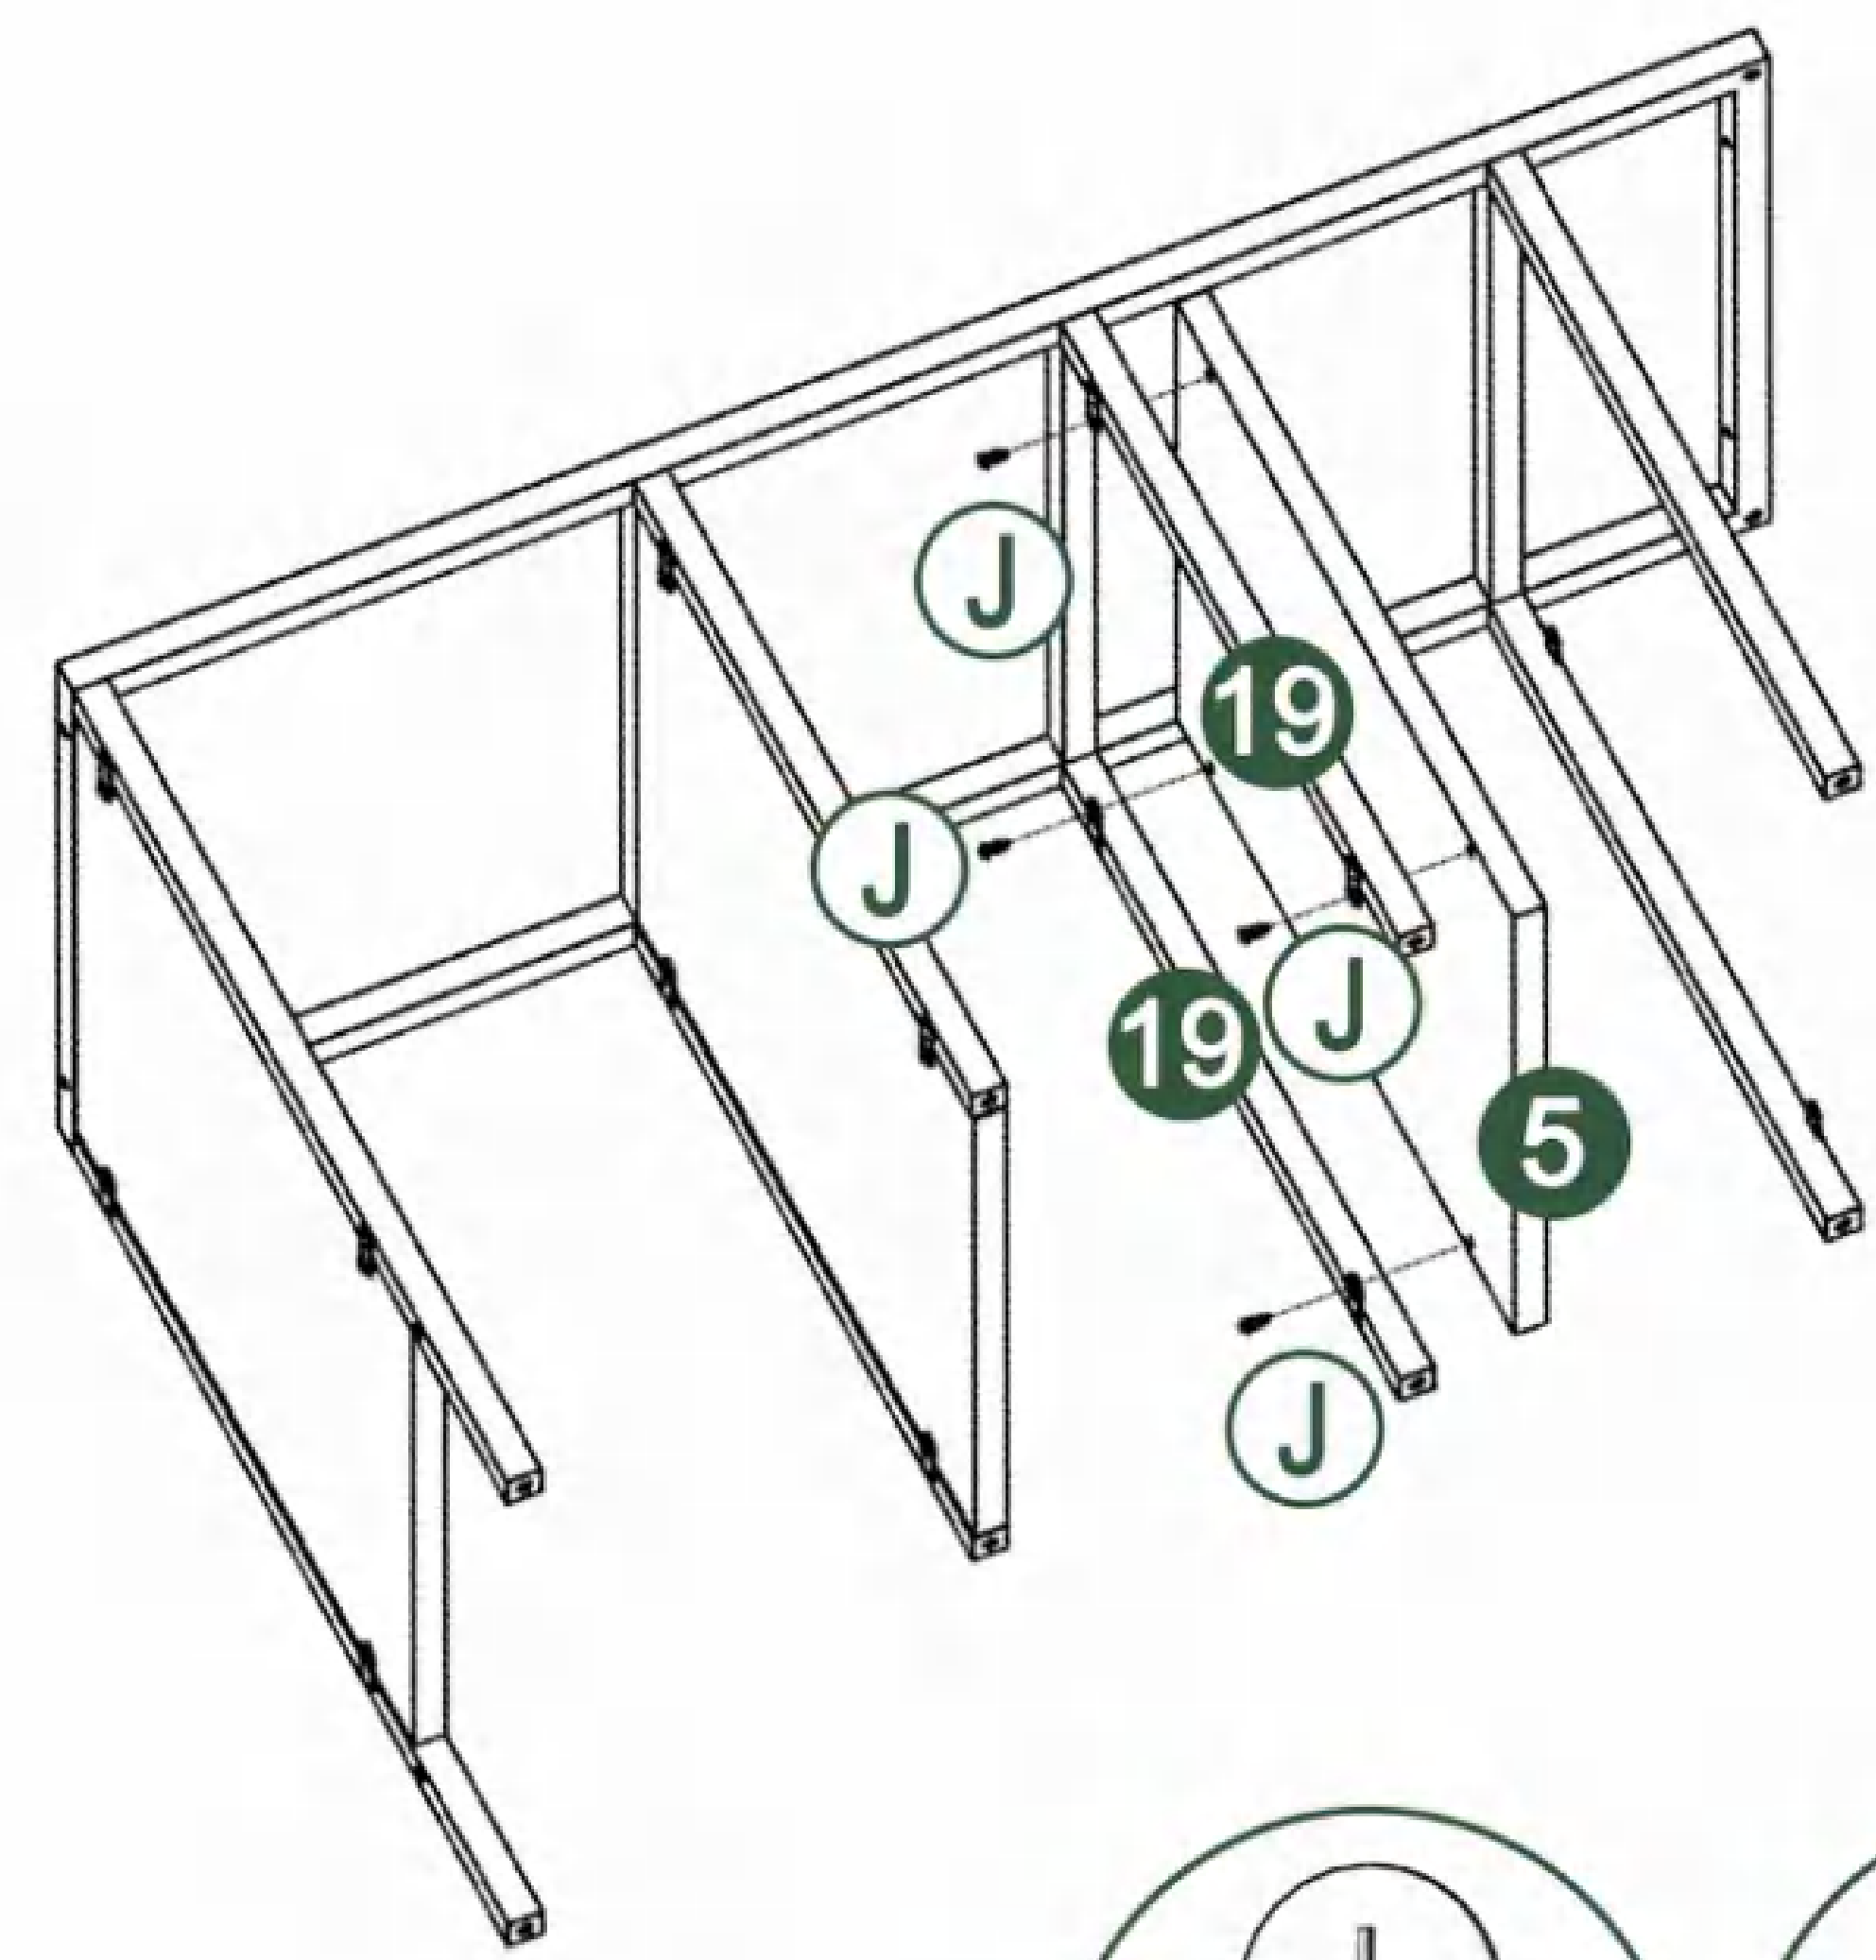


7.

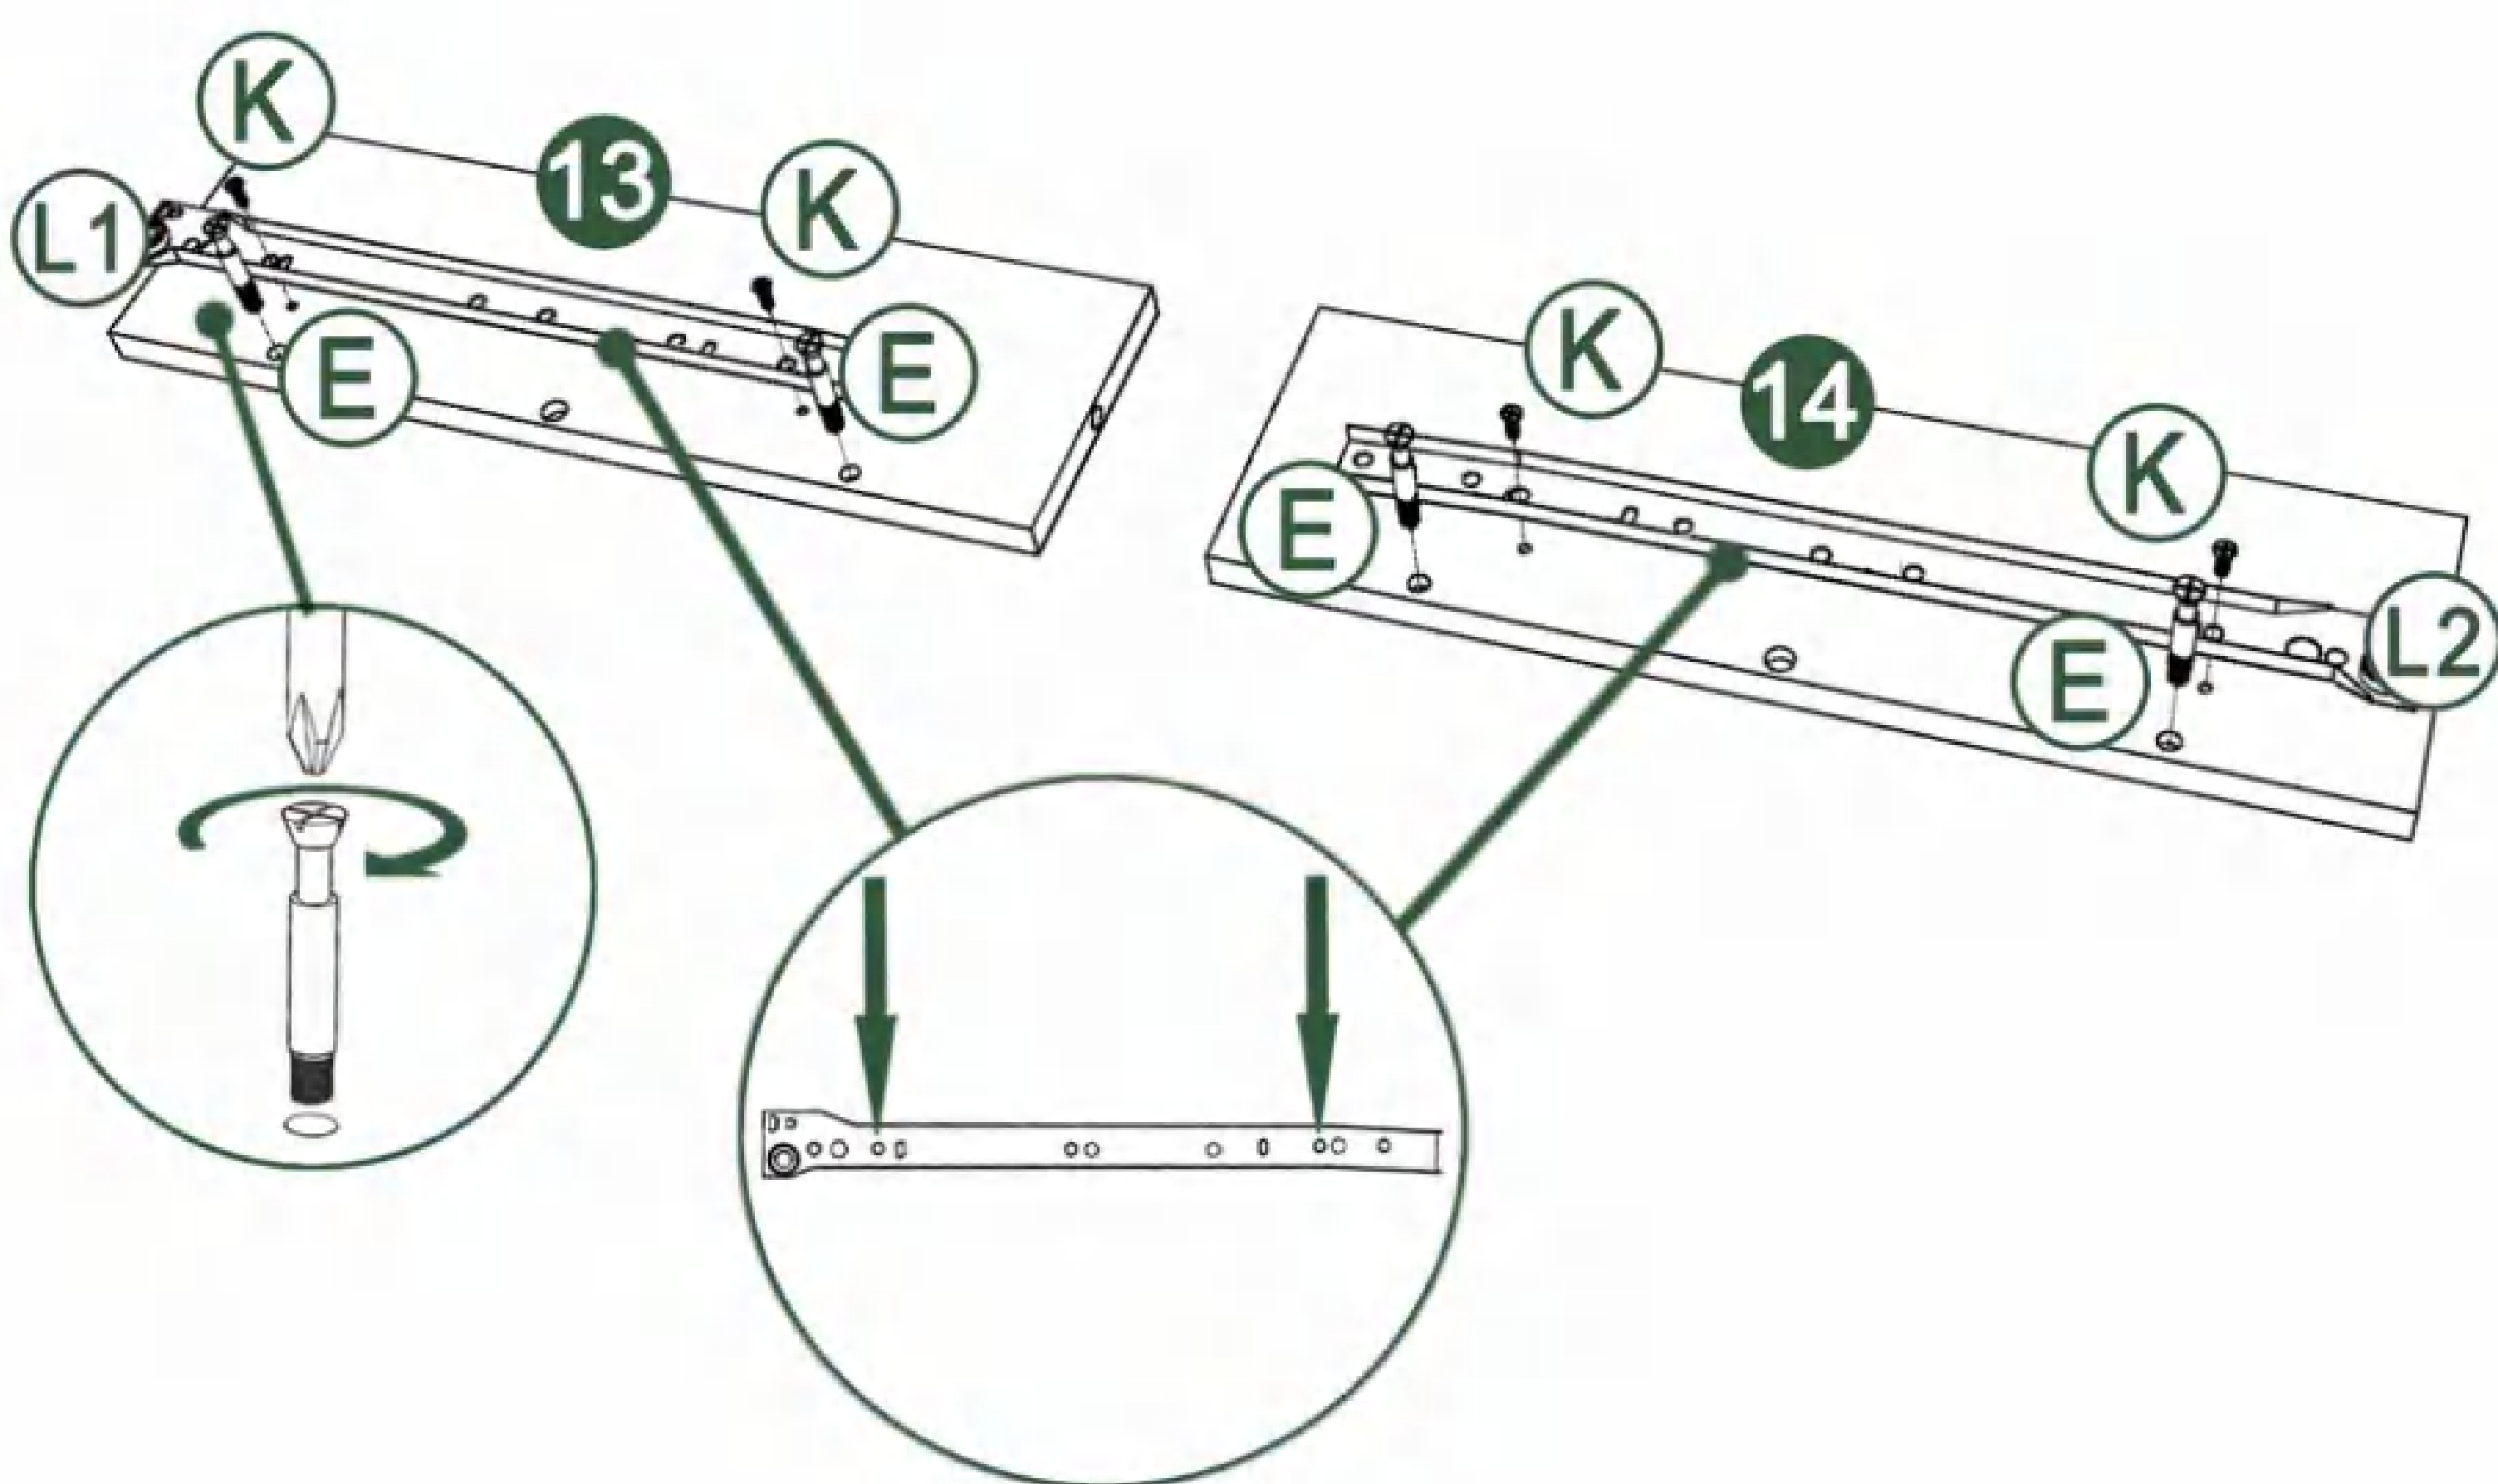


8.

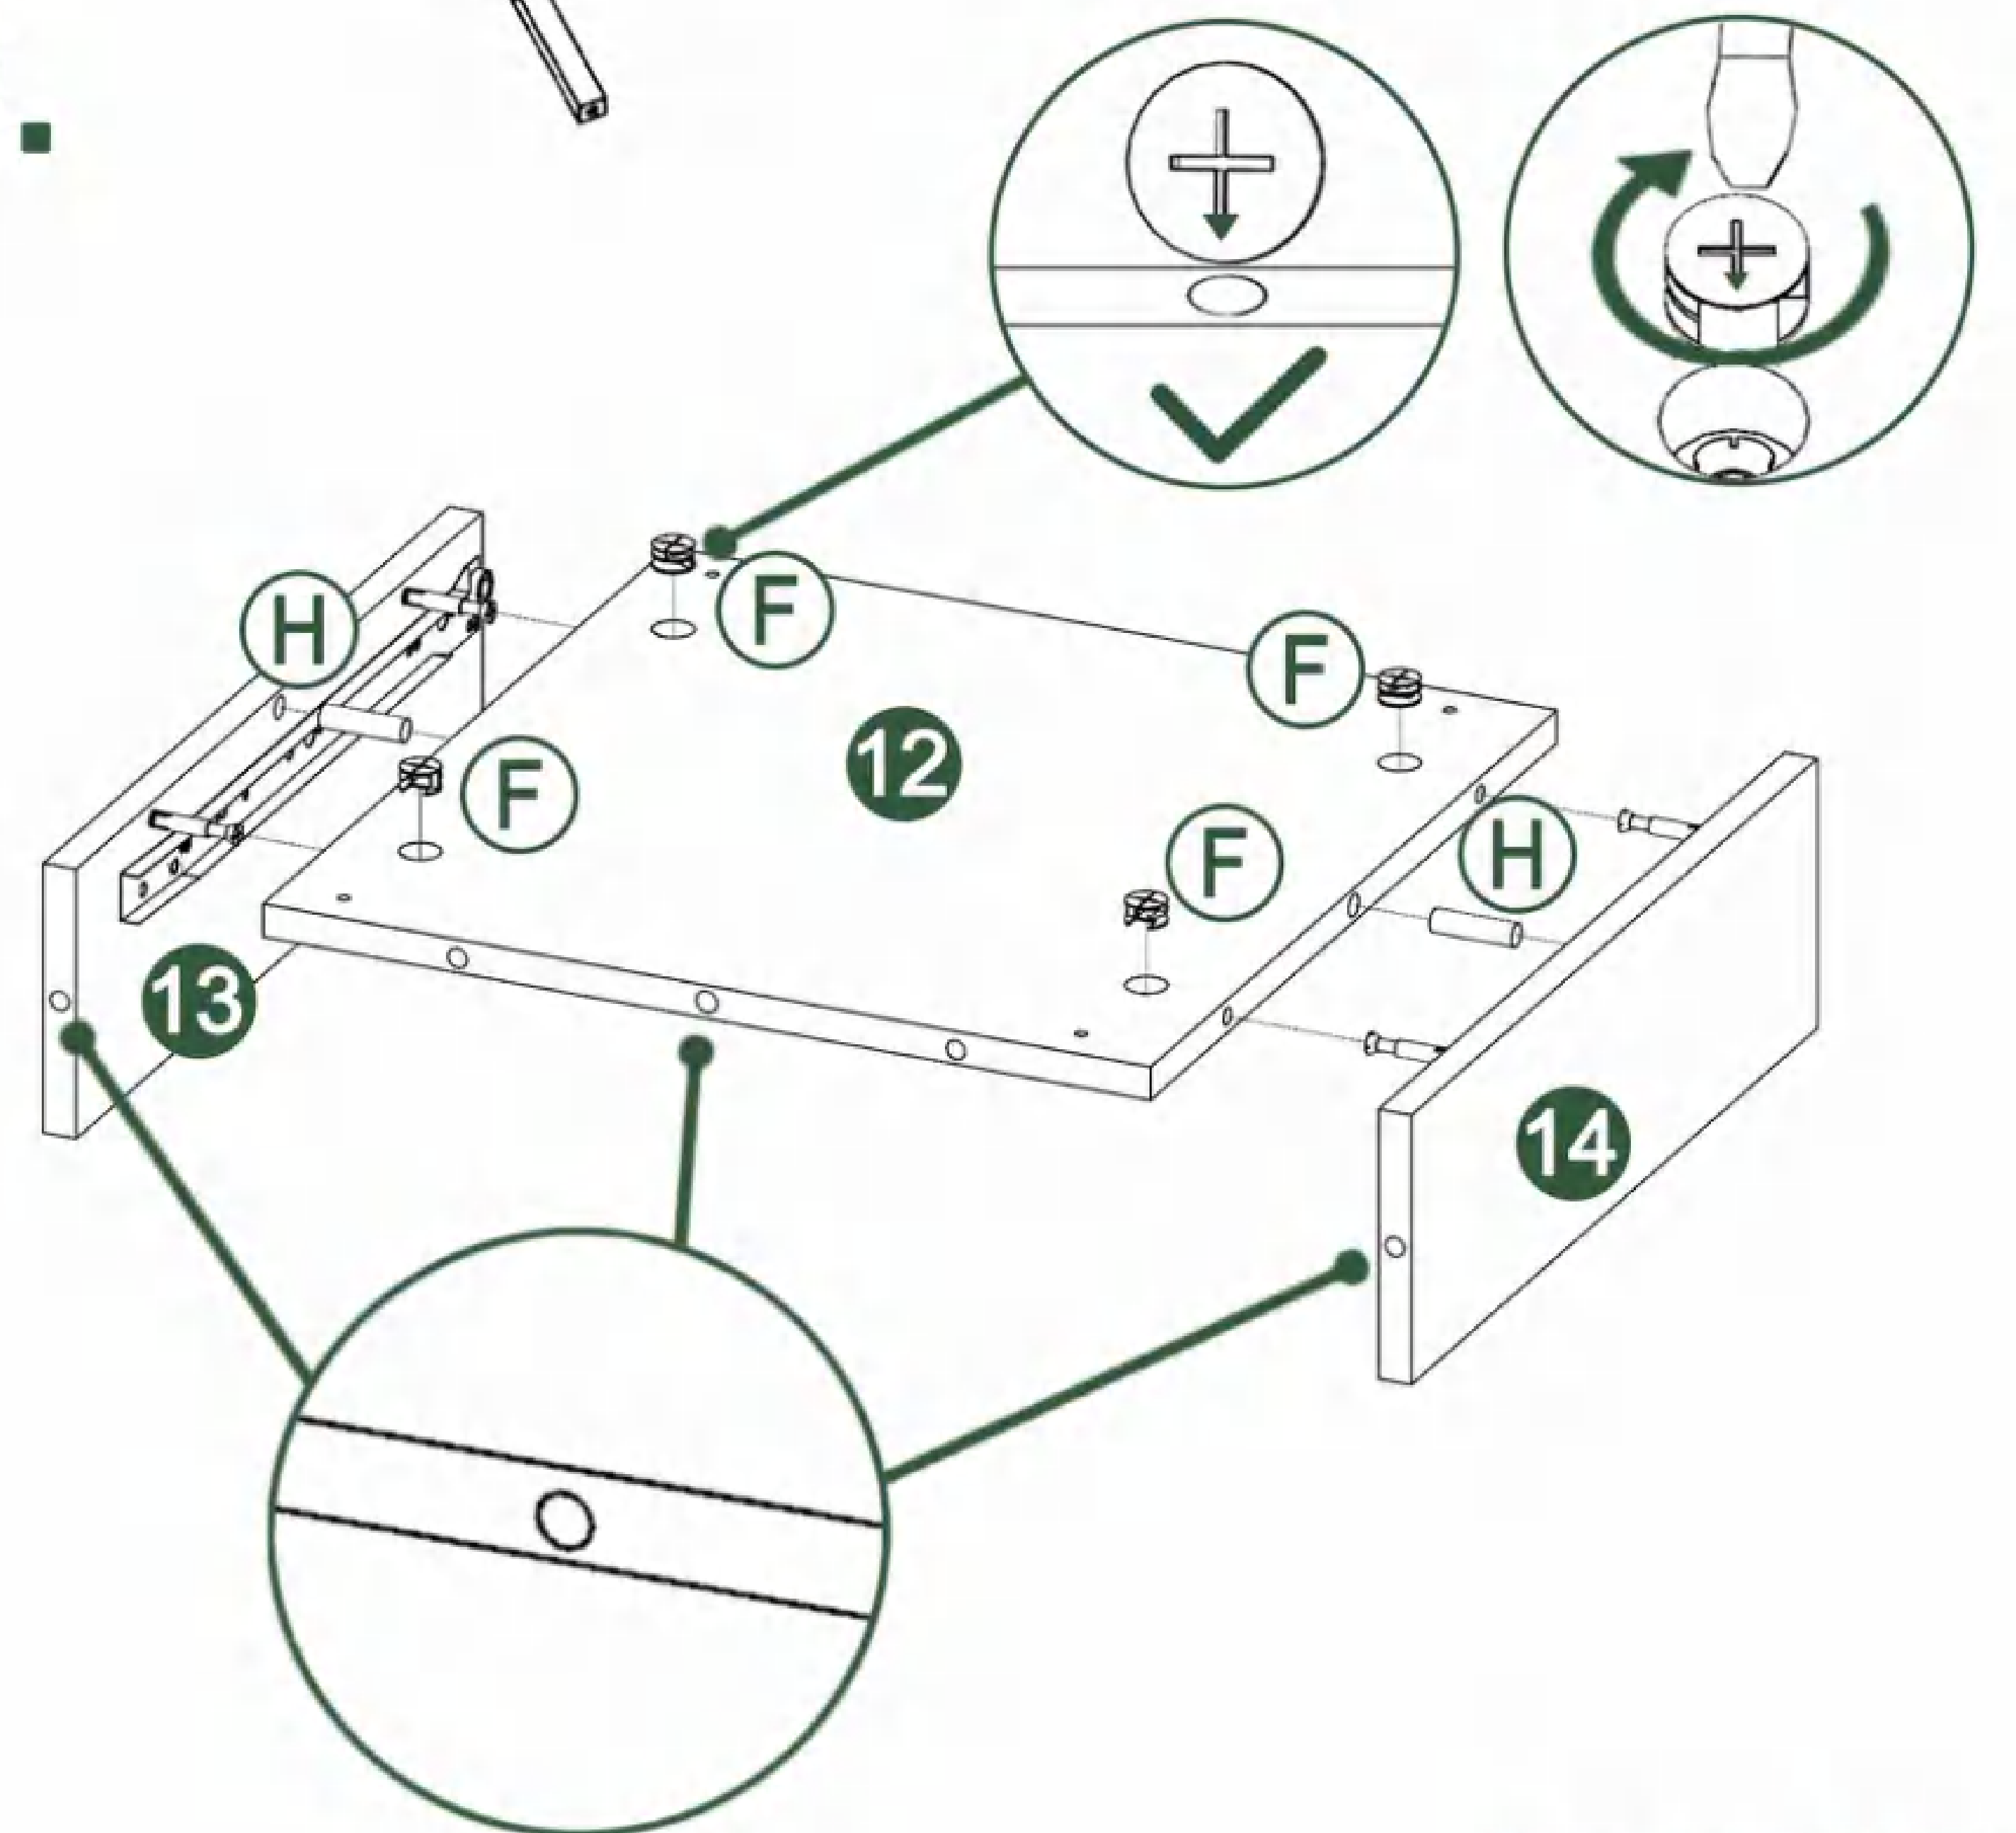


9.

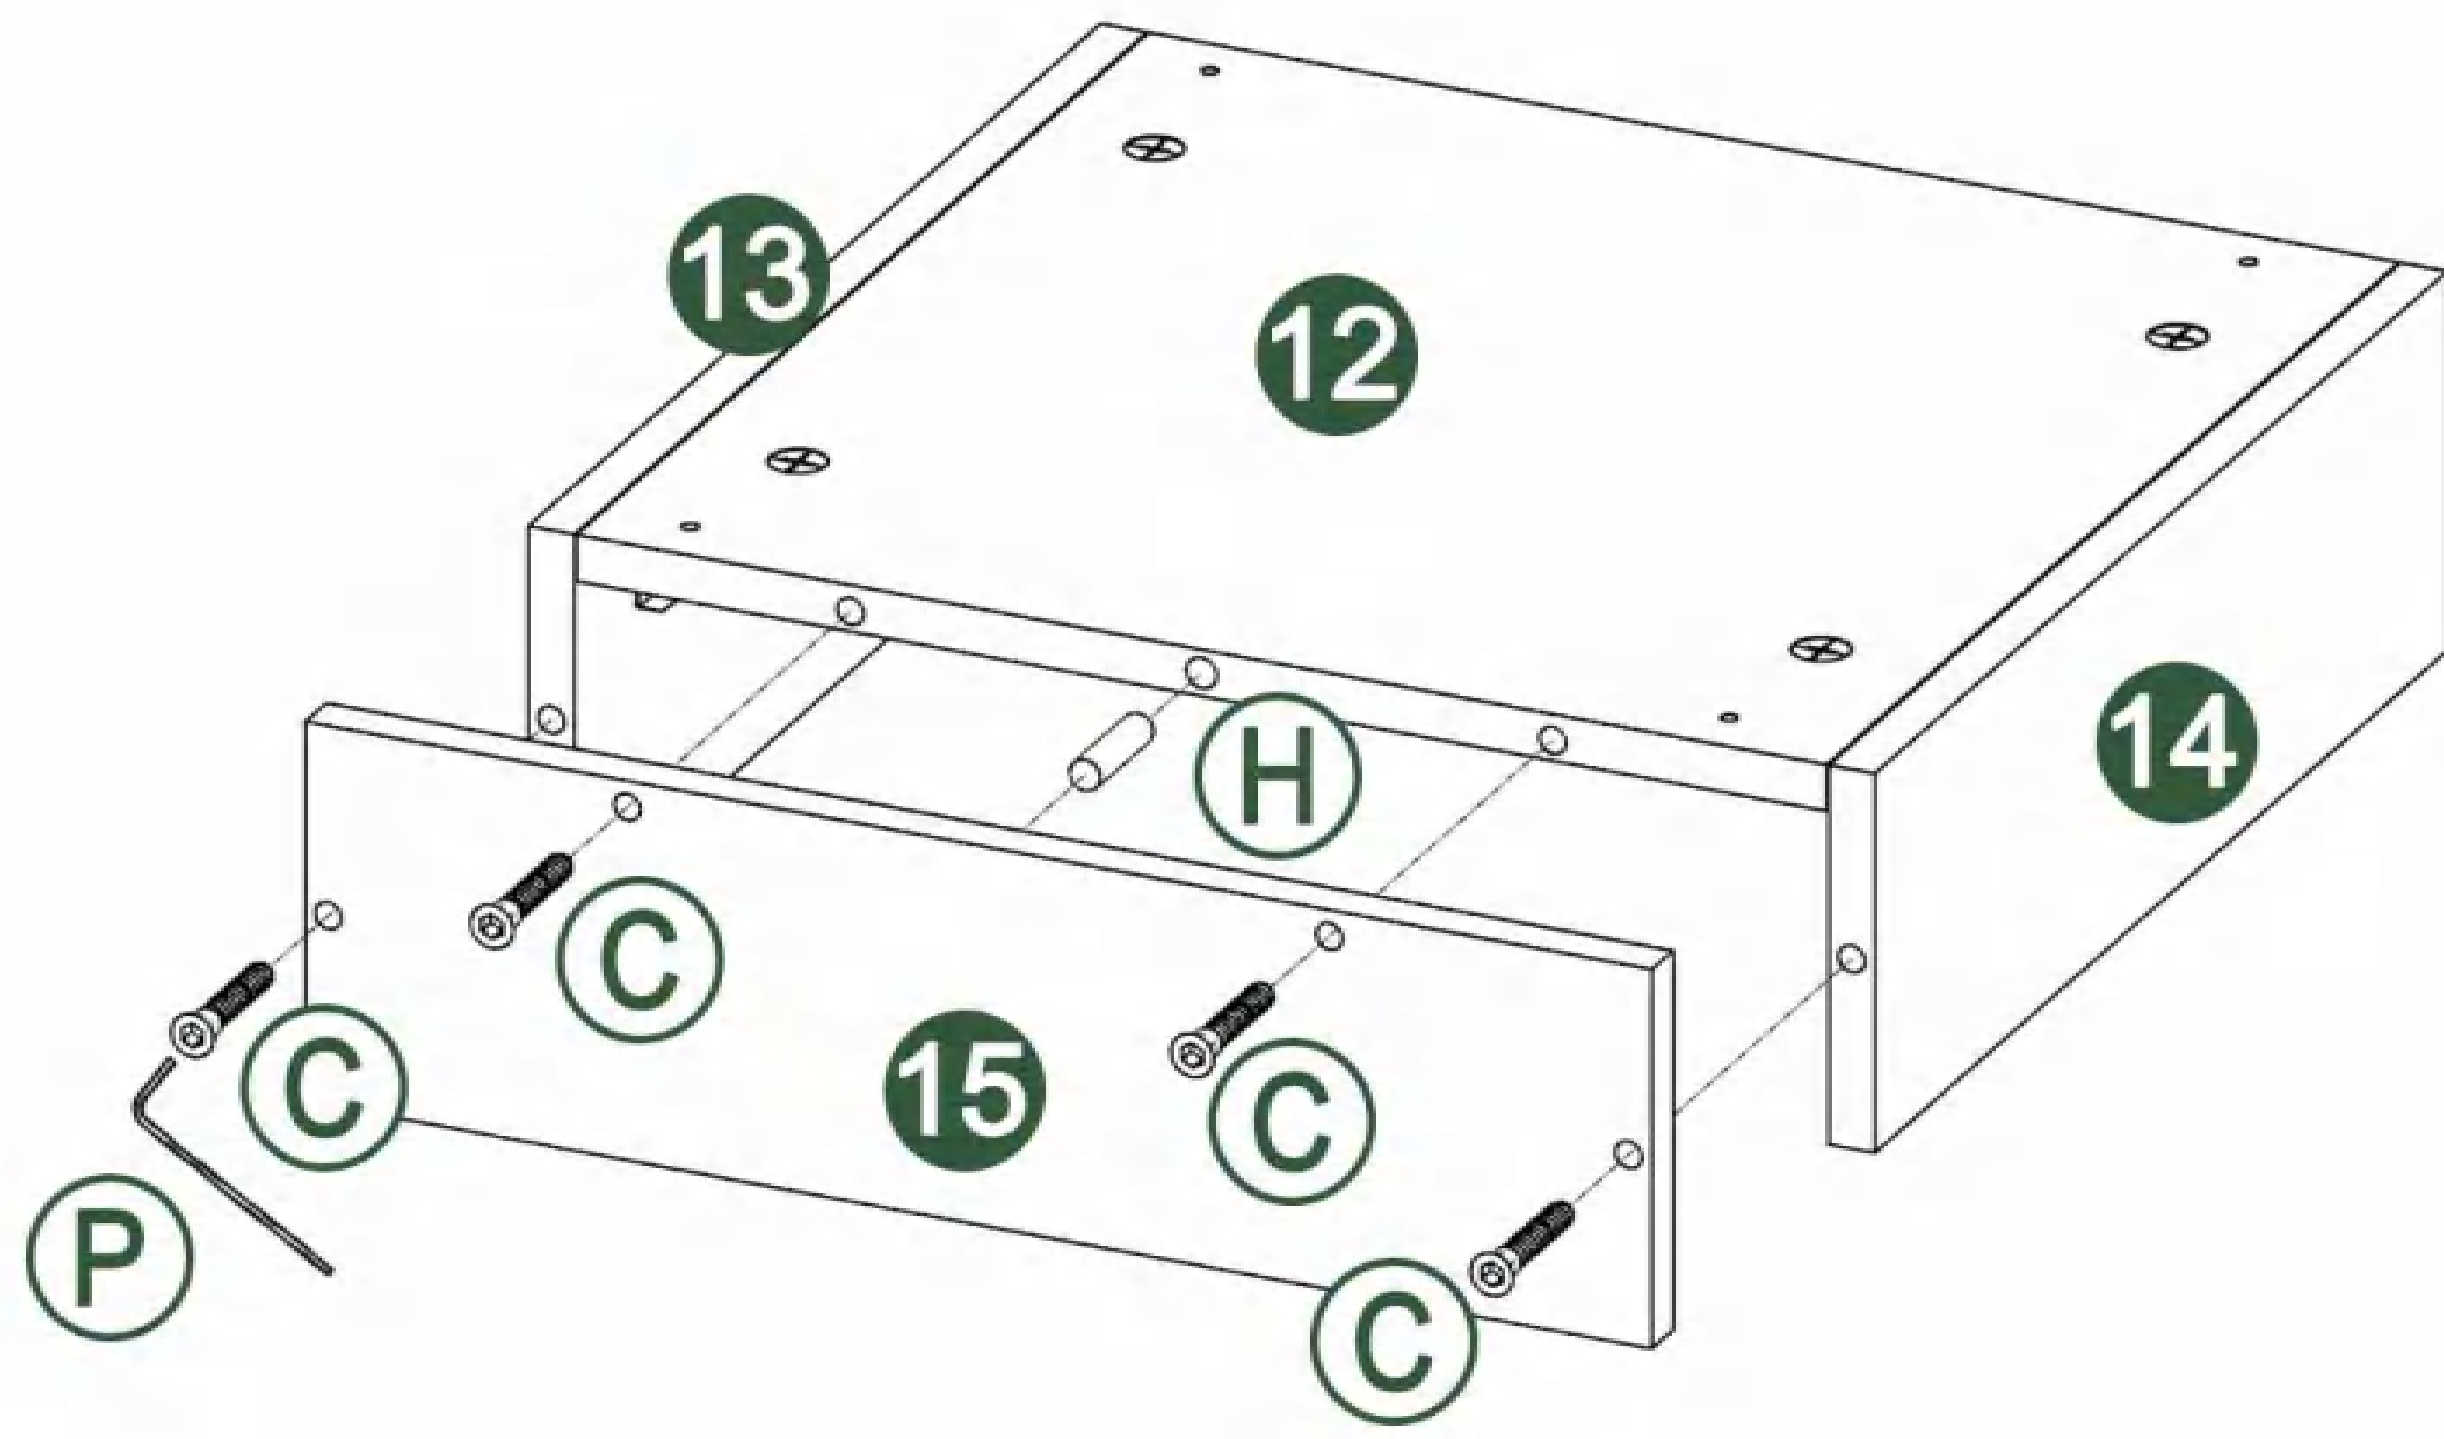


10.

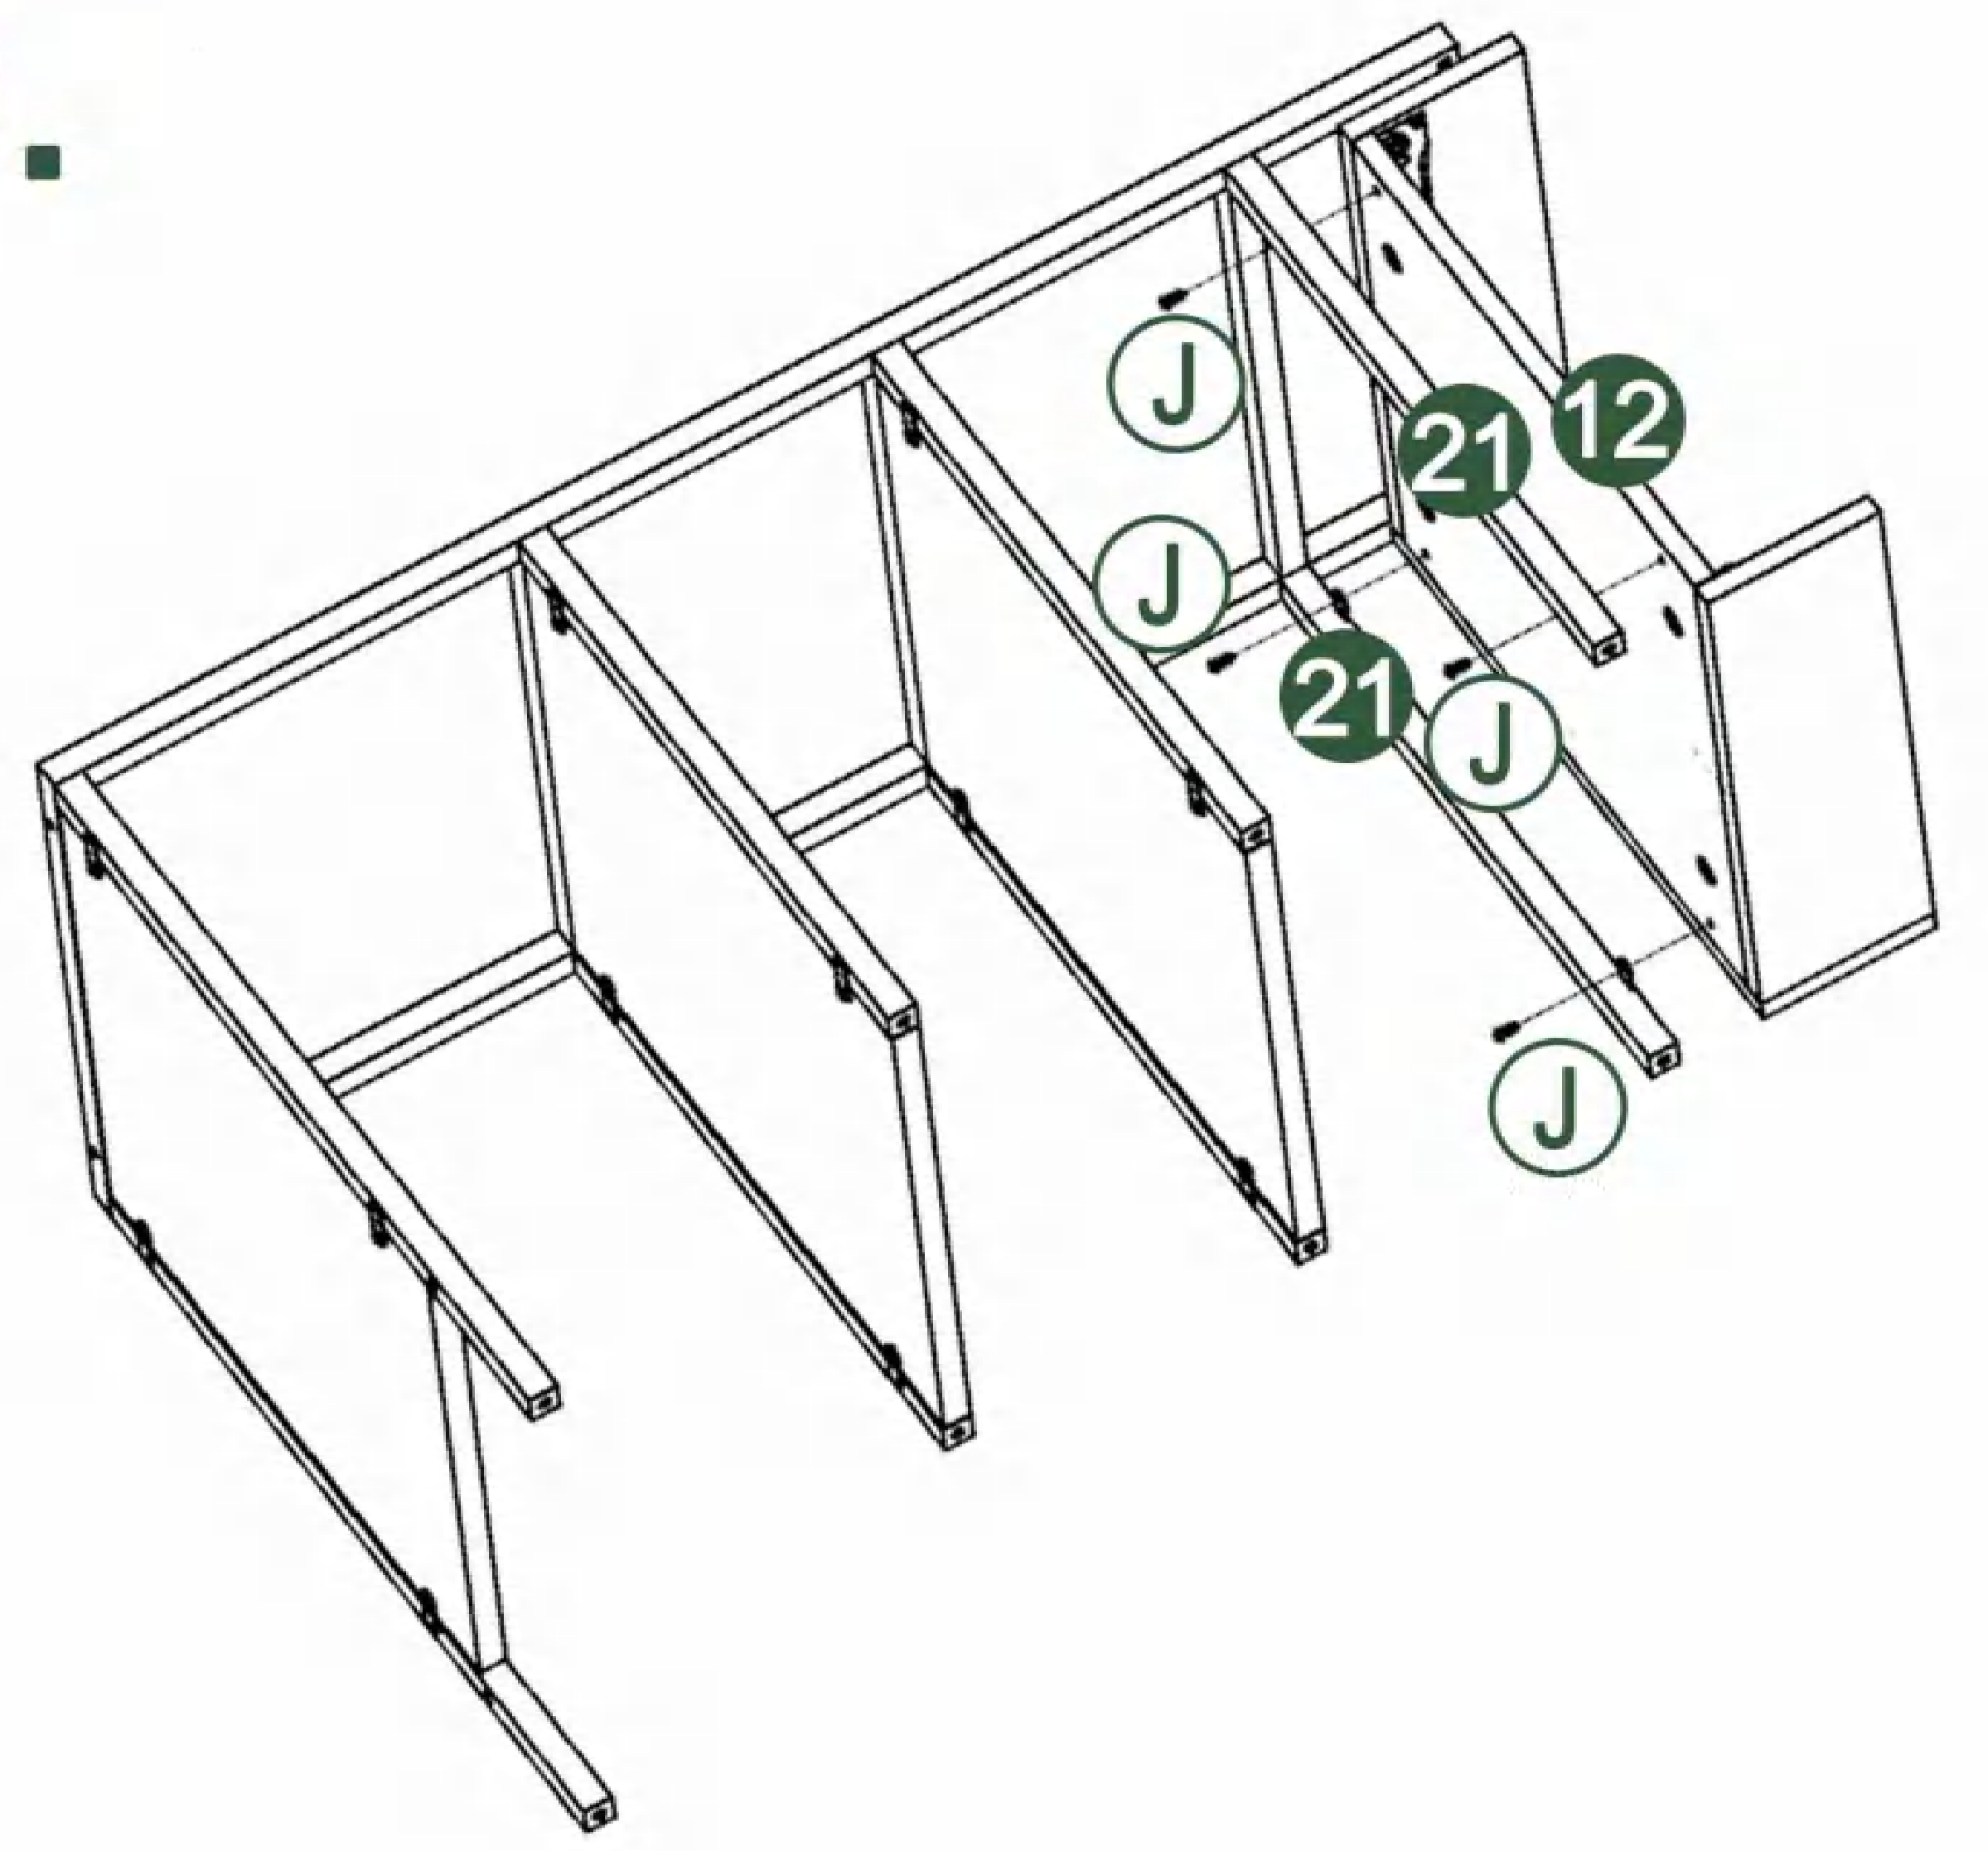


11.

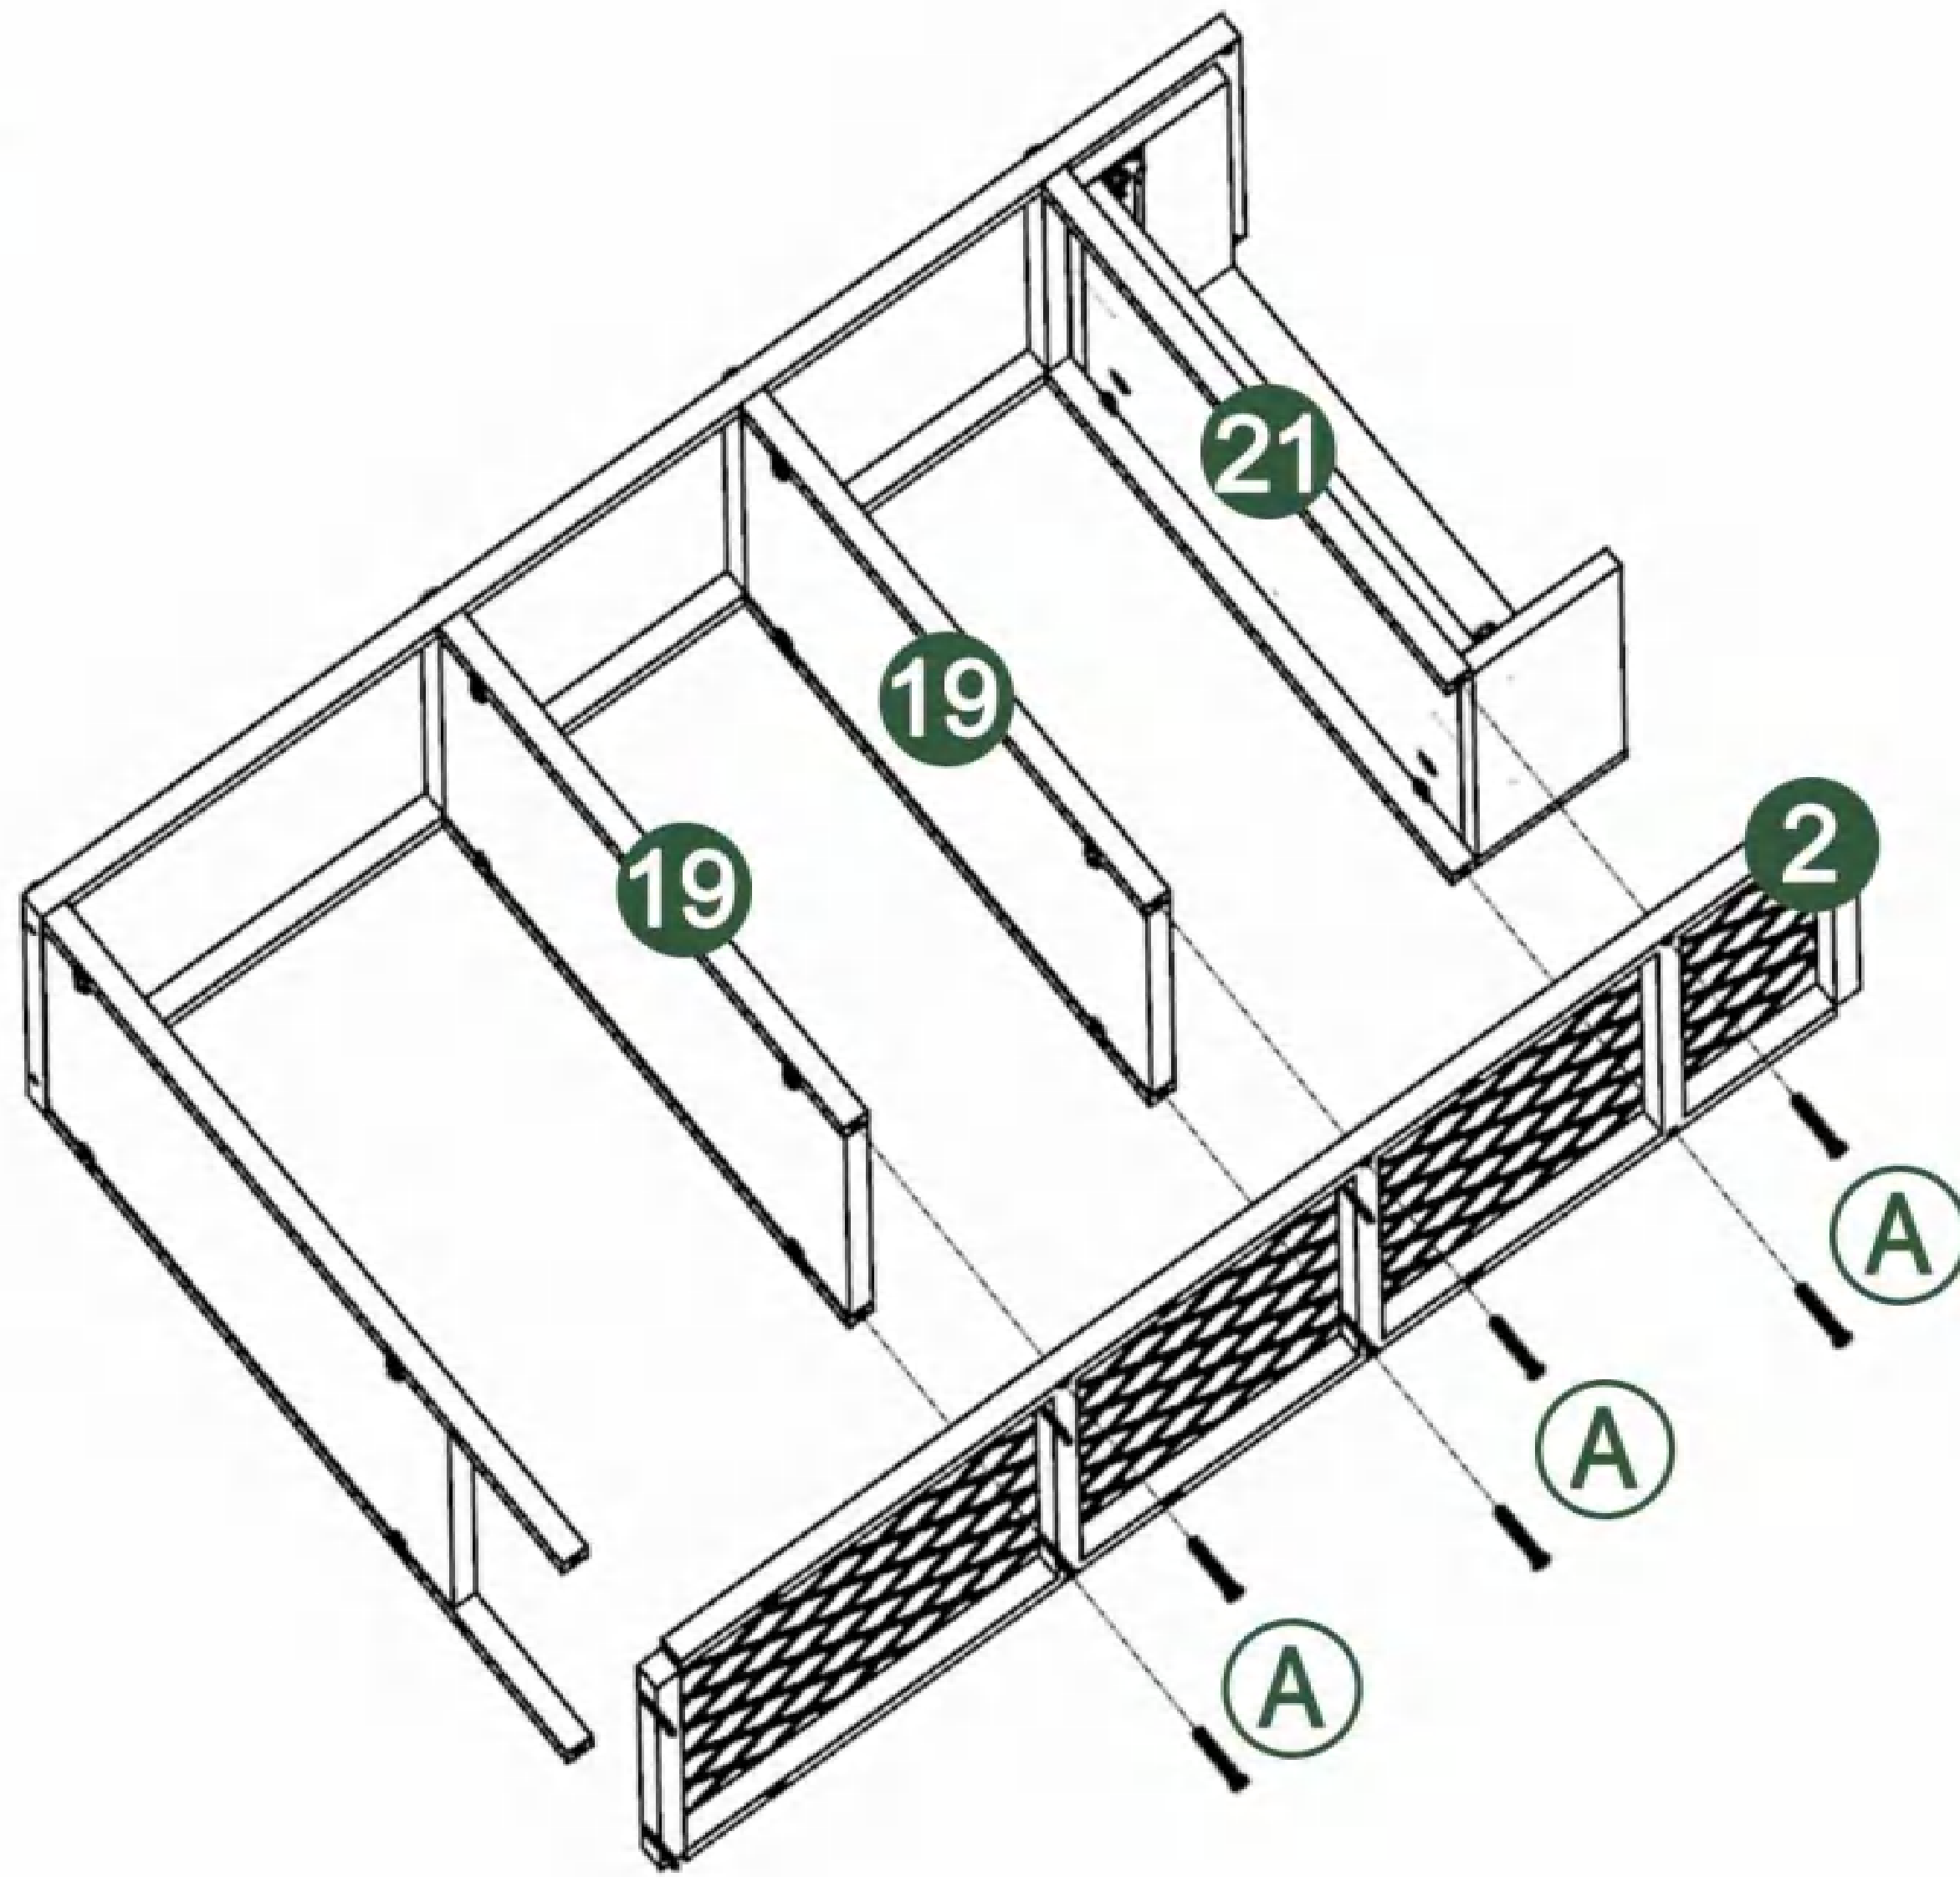


12.

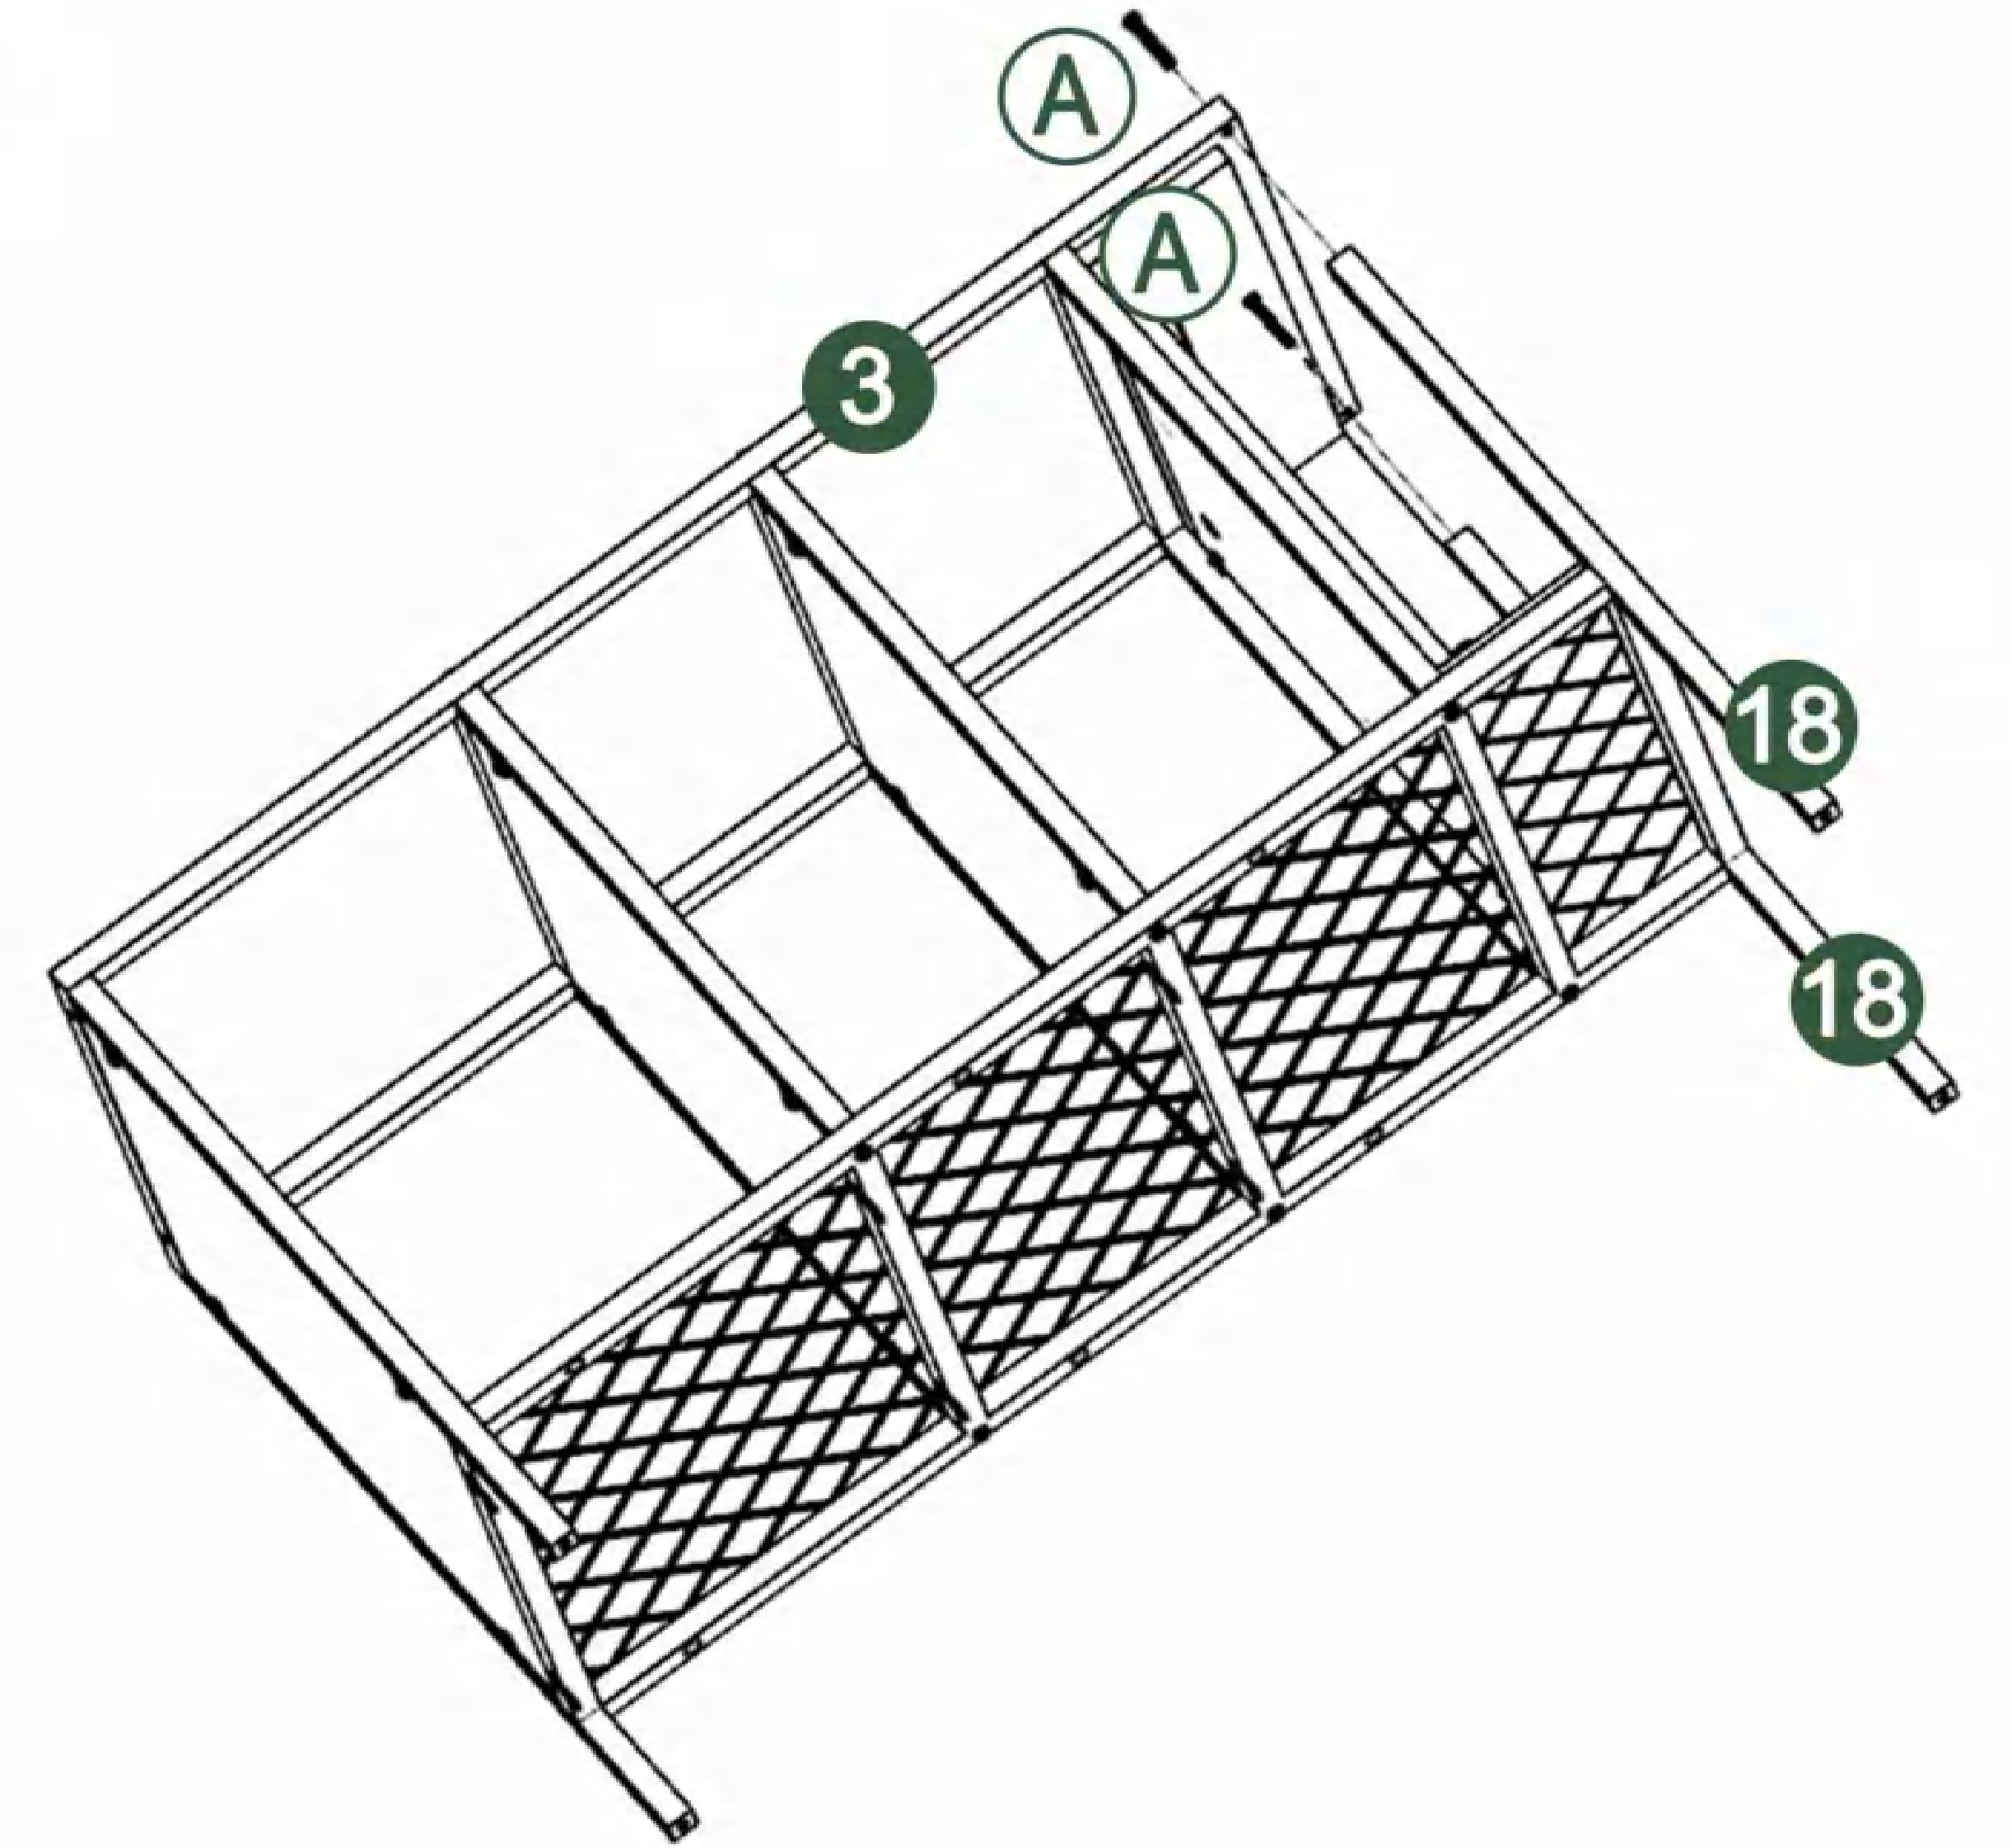


13.

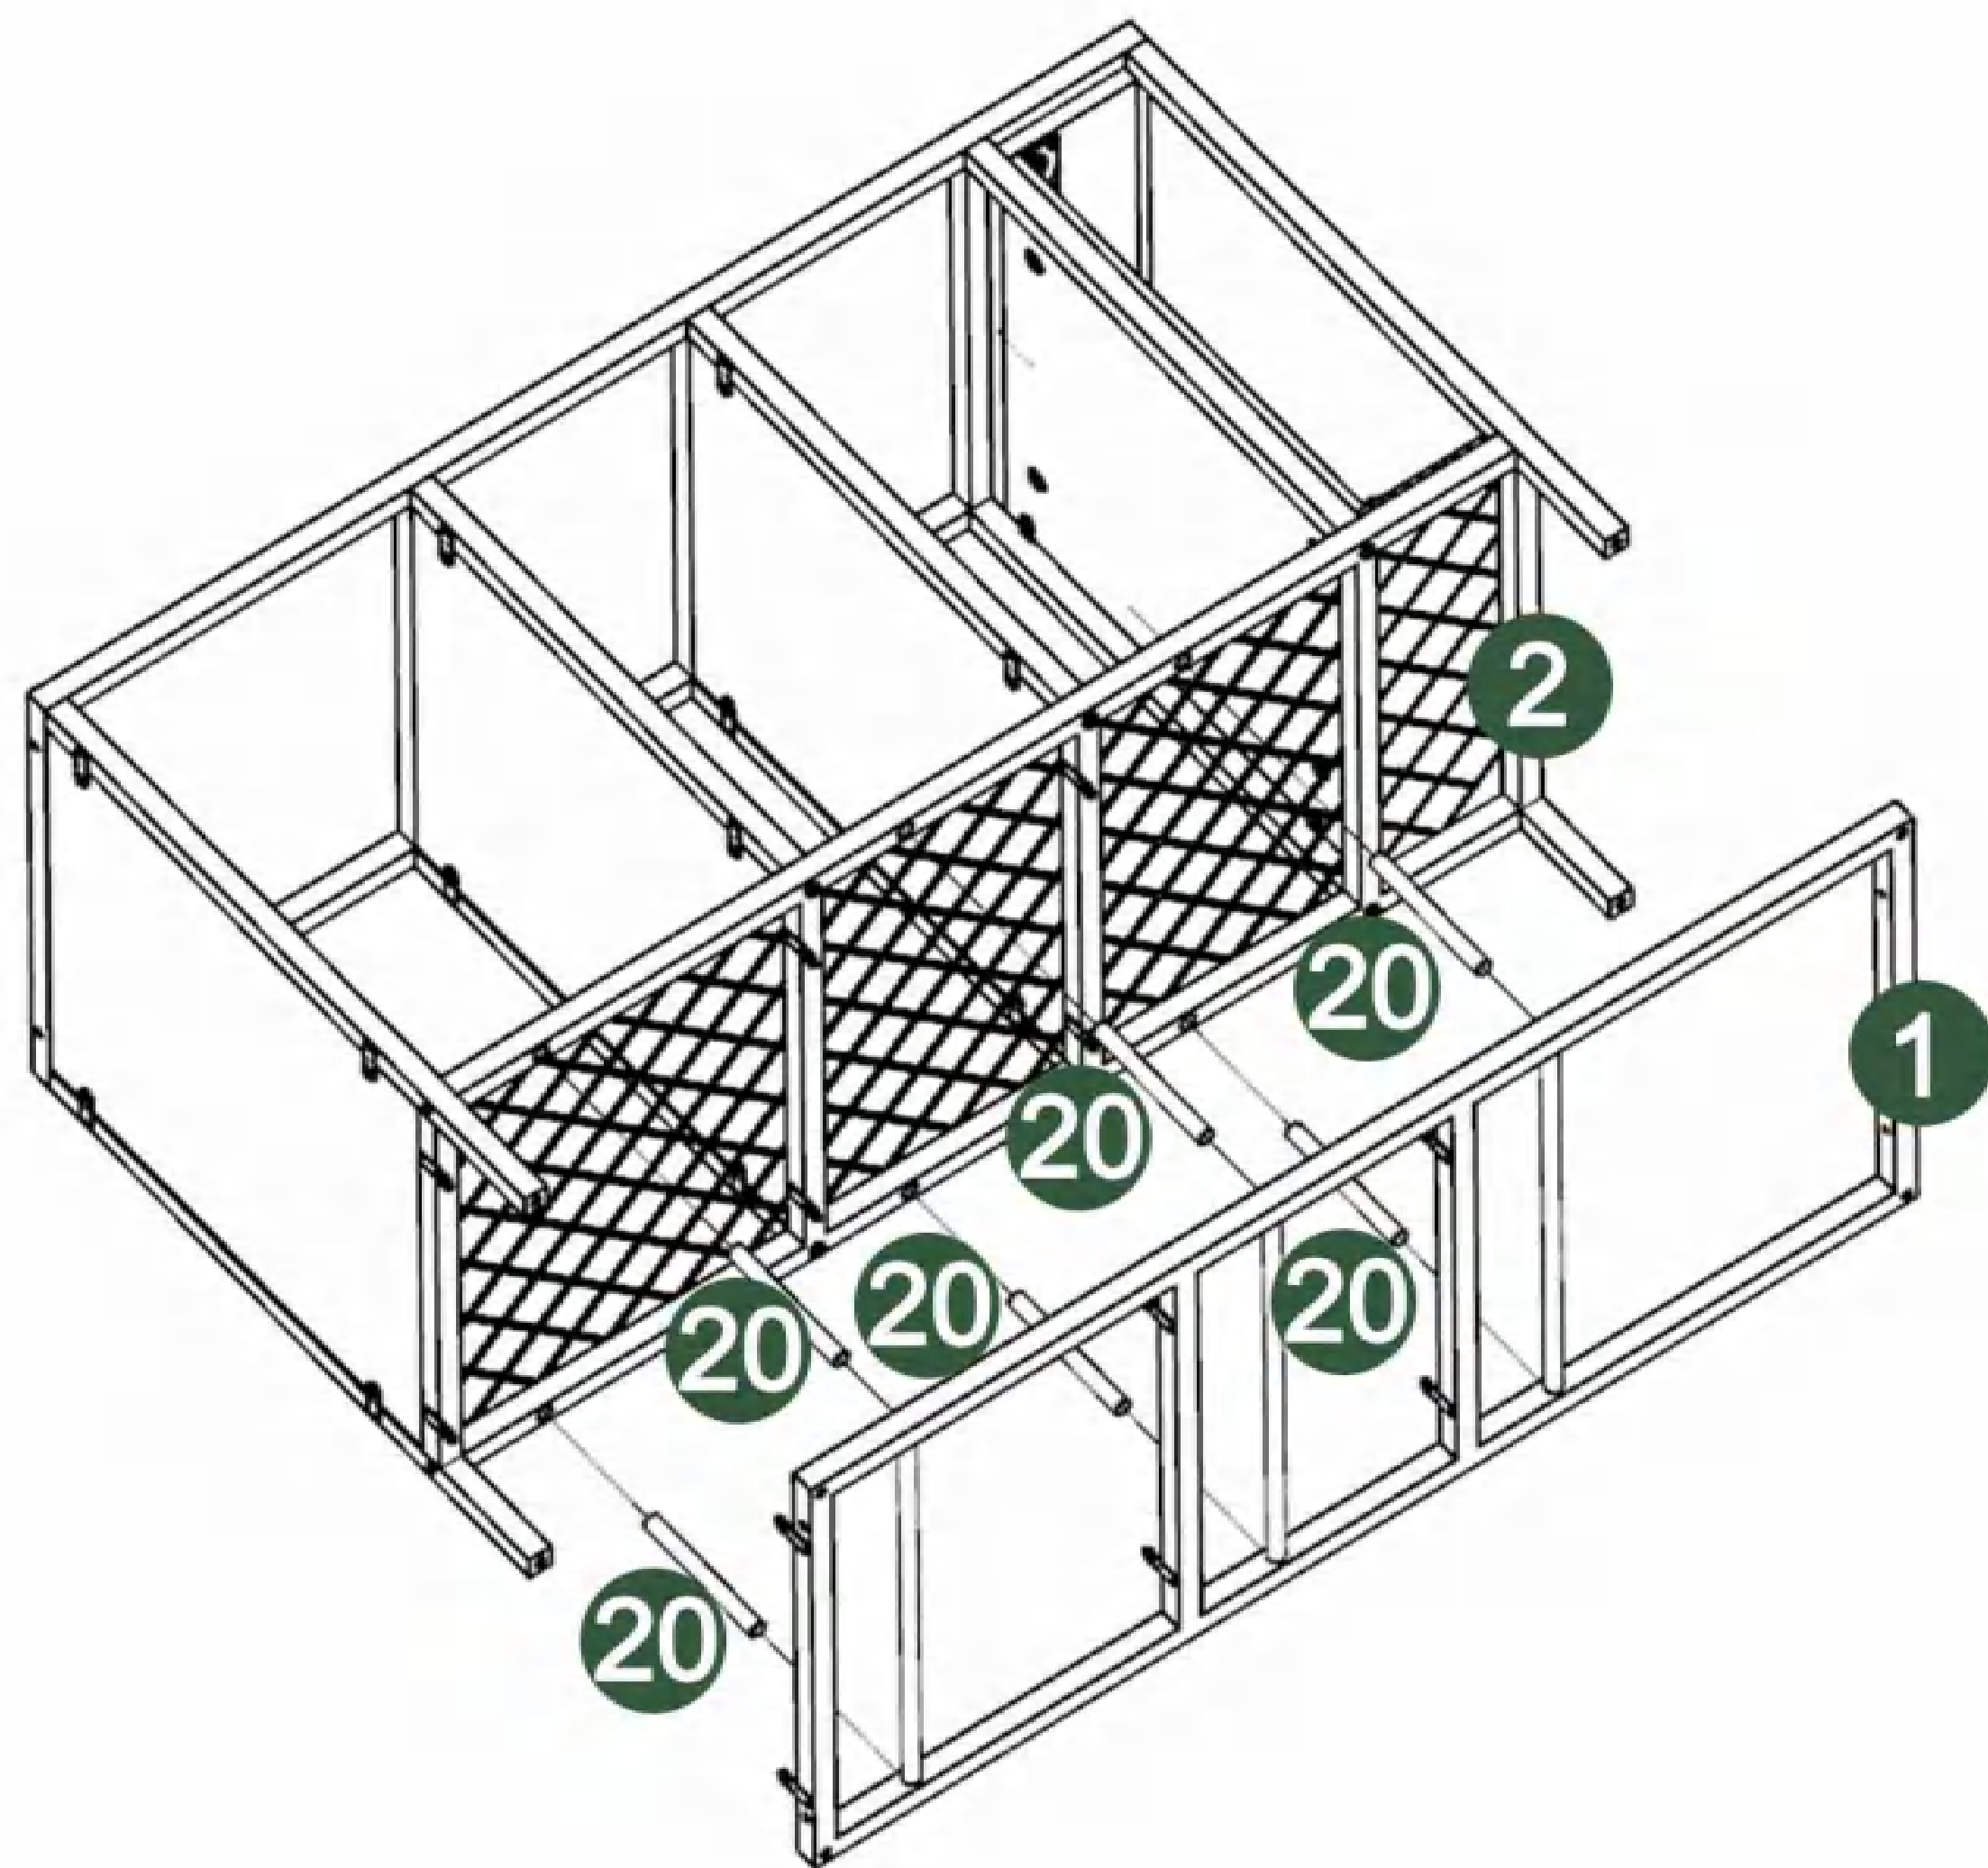


14.

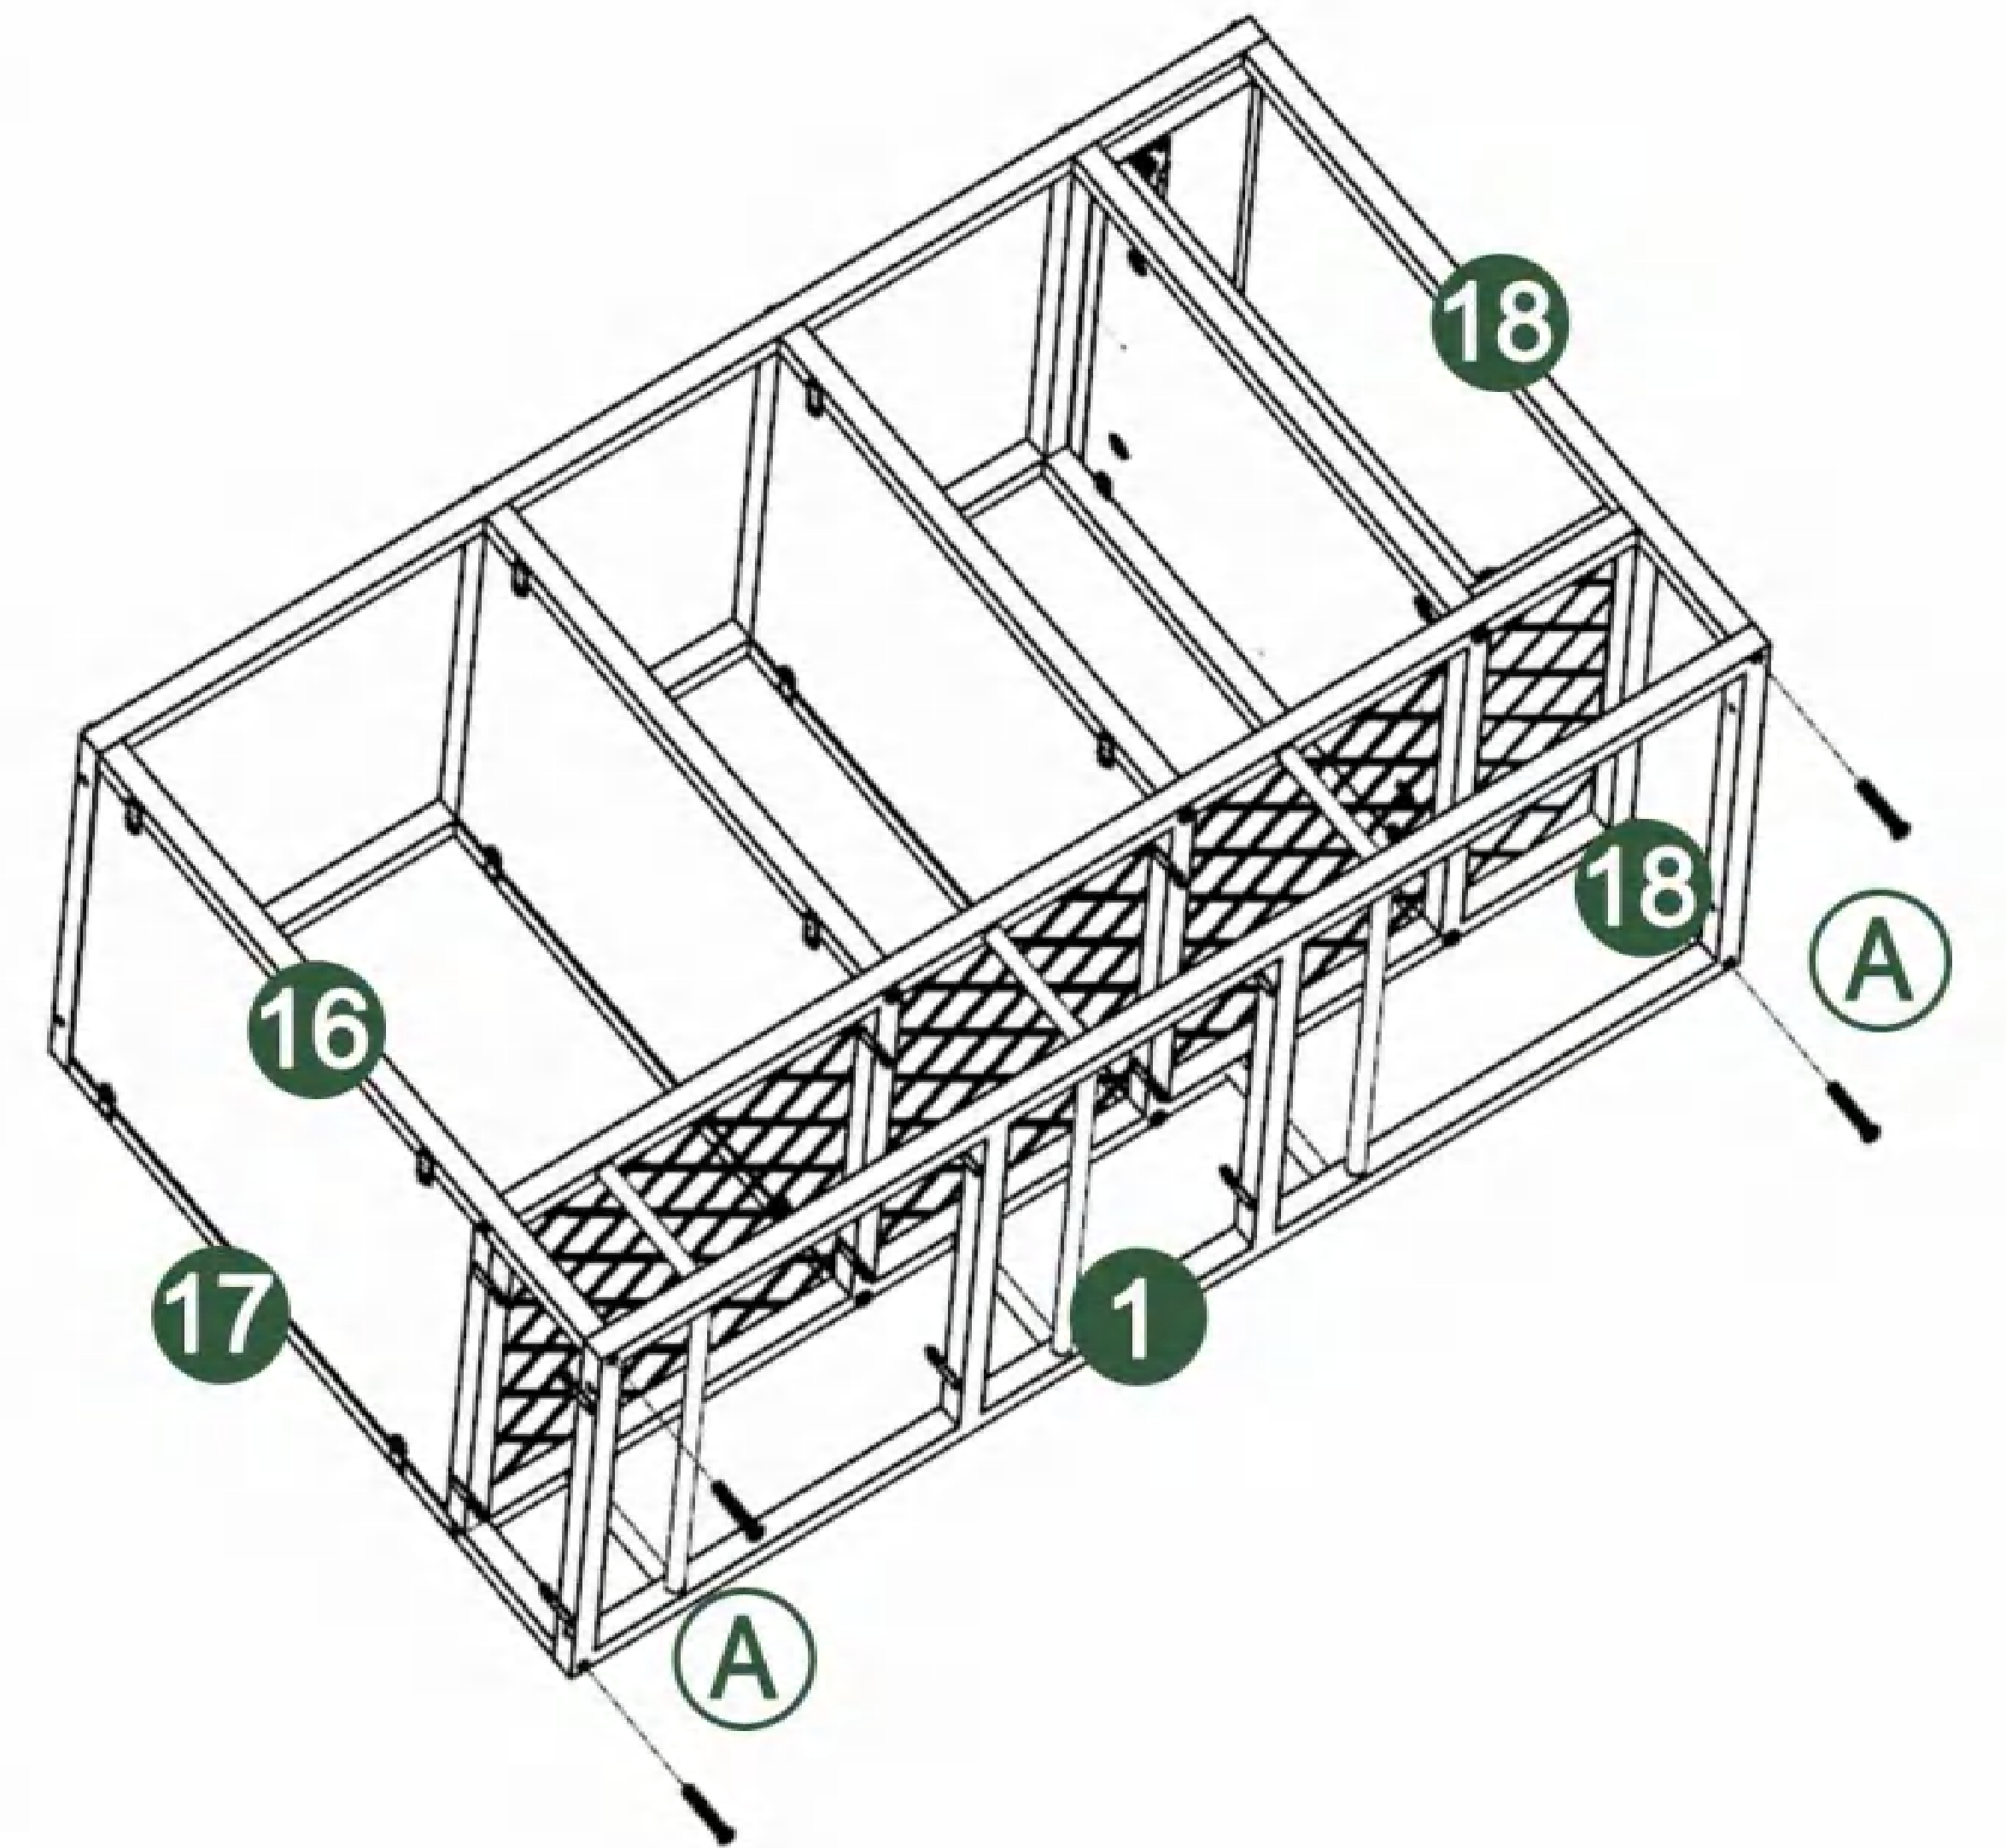


15.

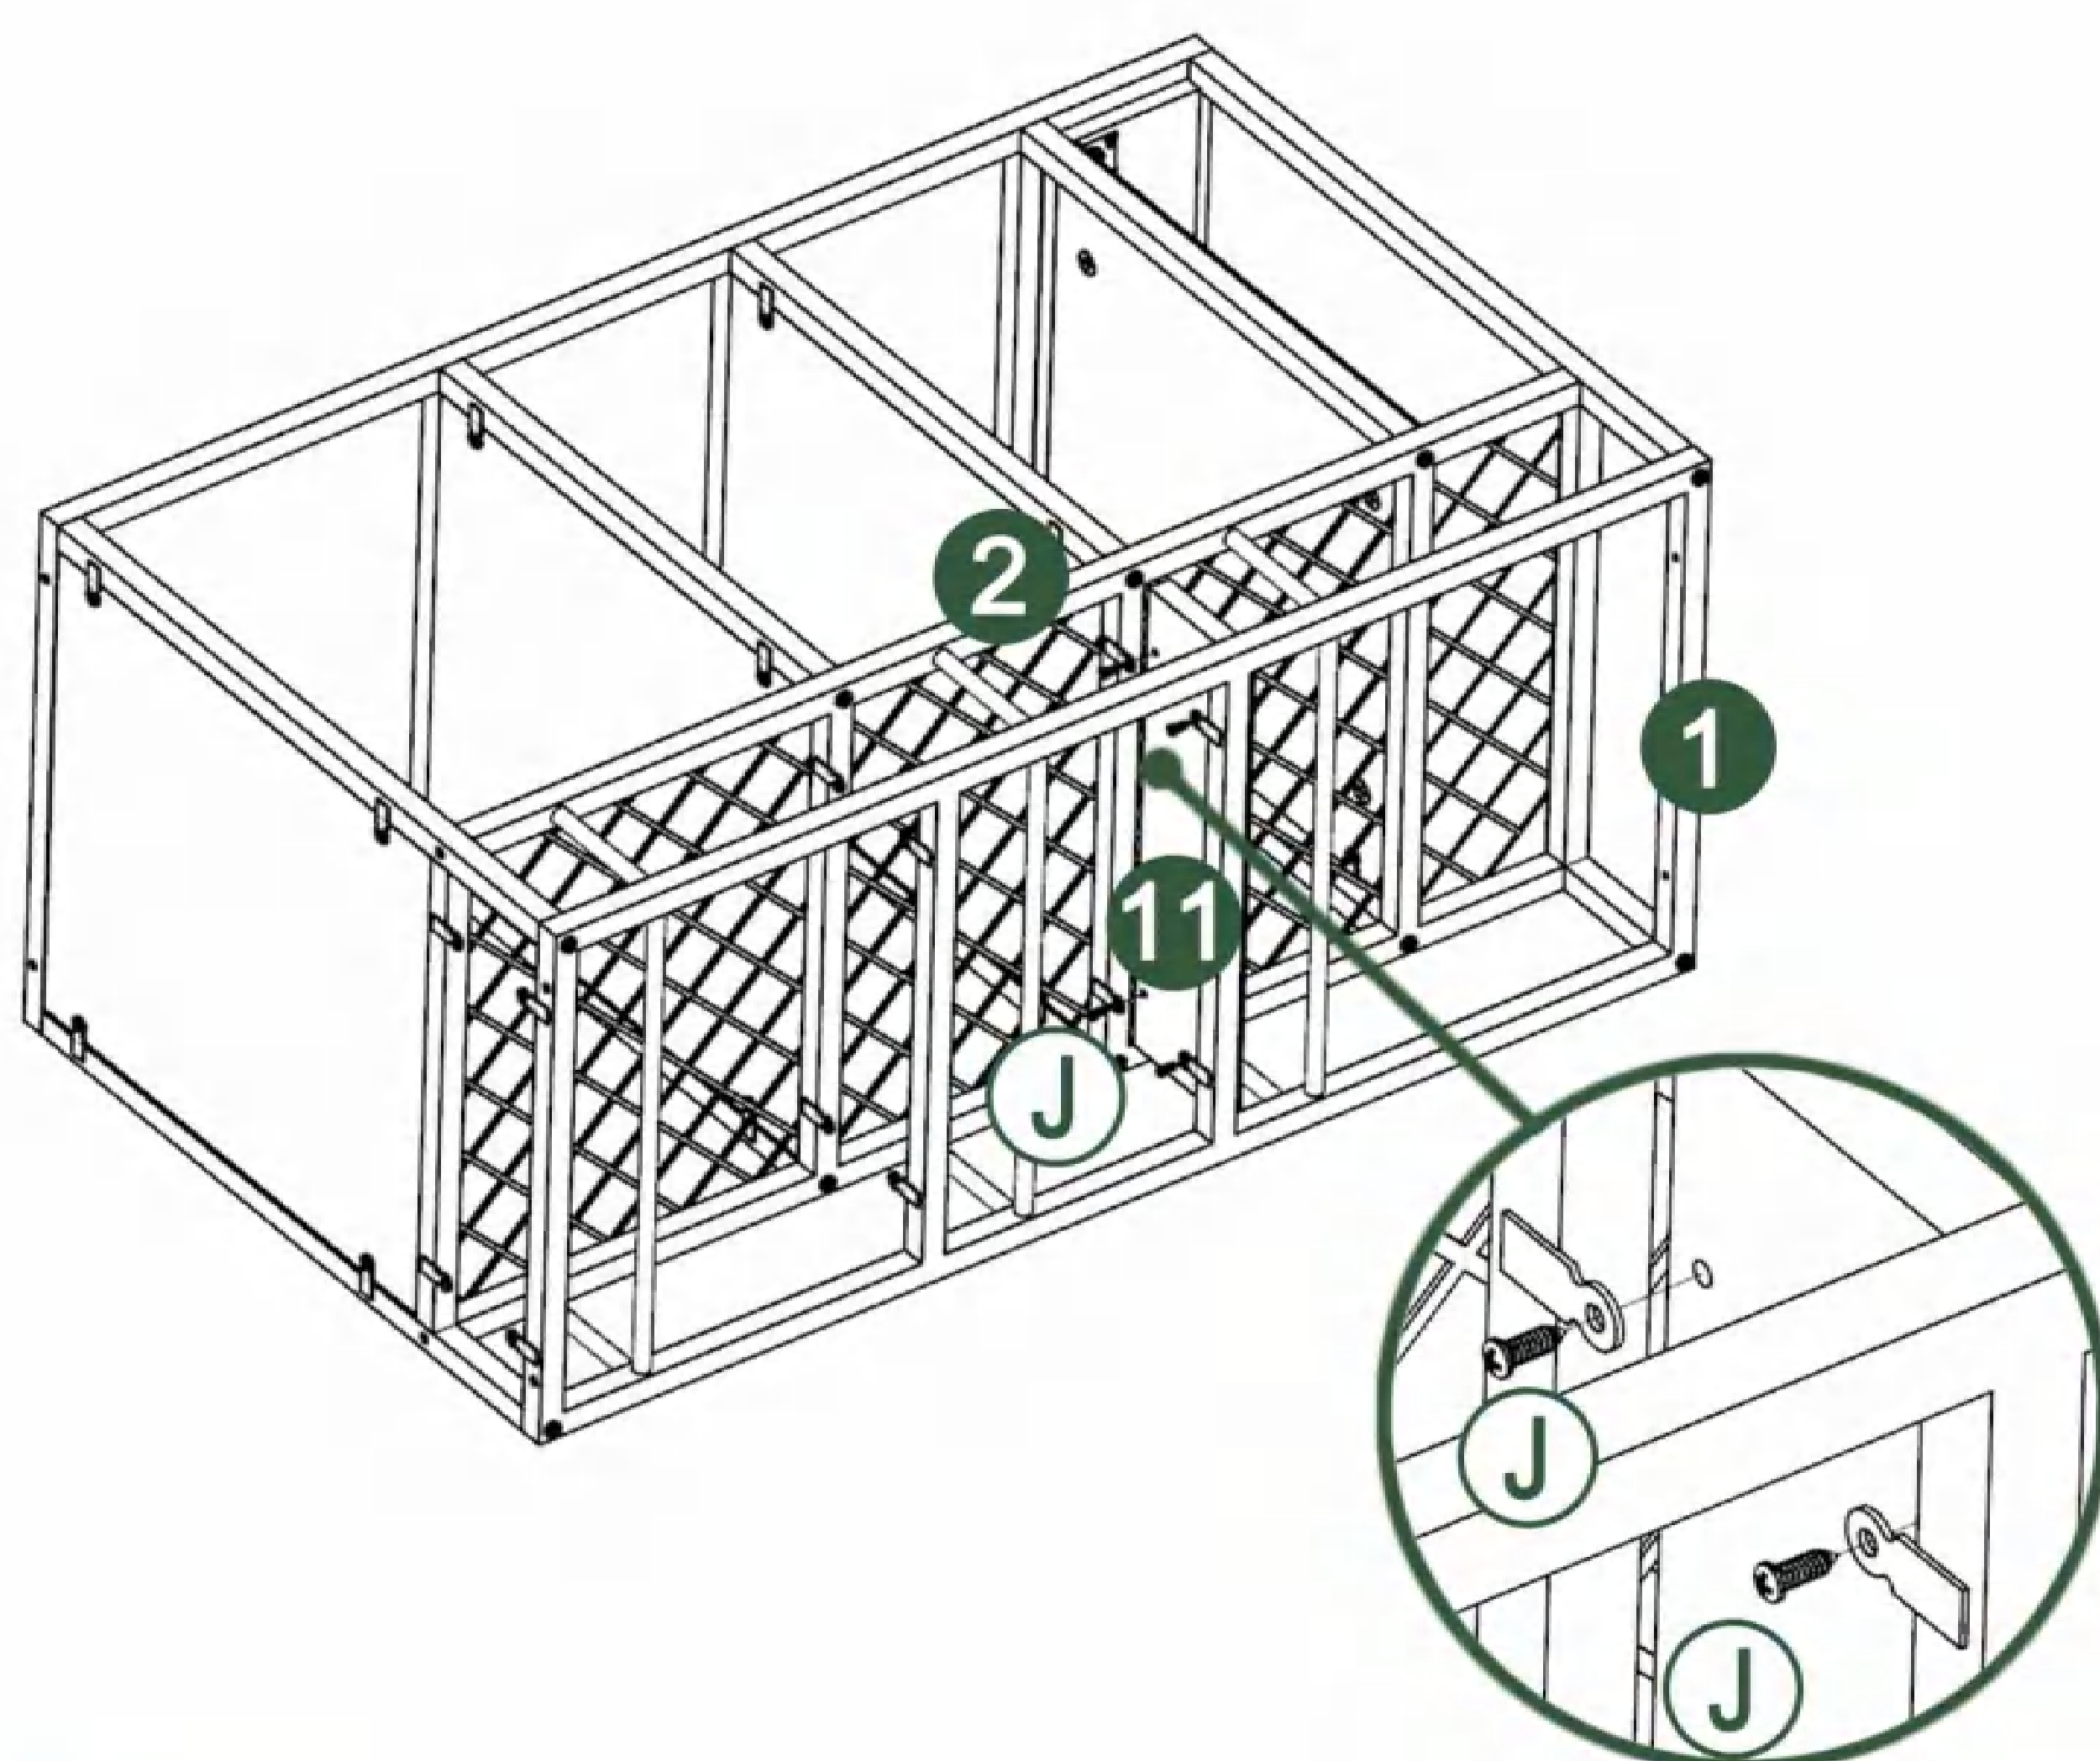


16.

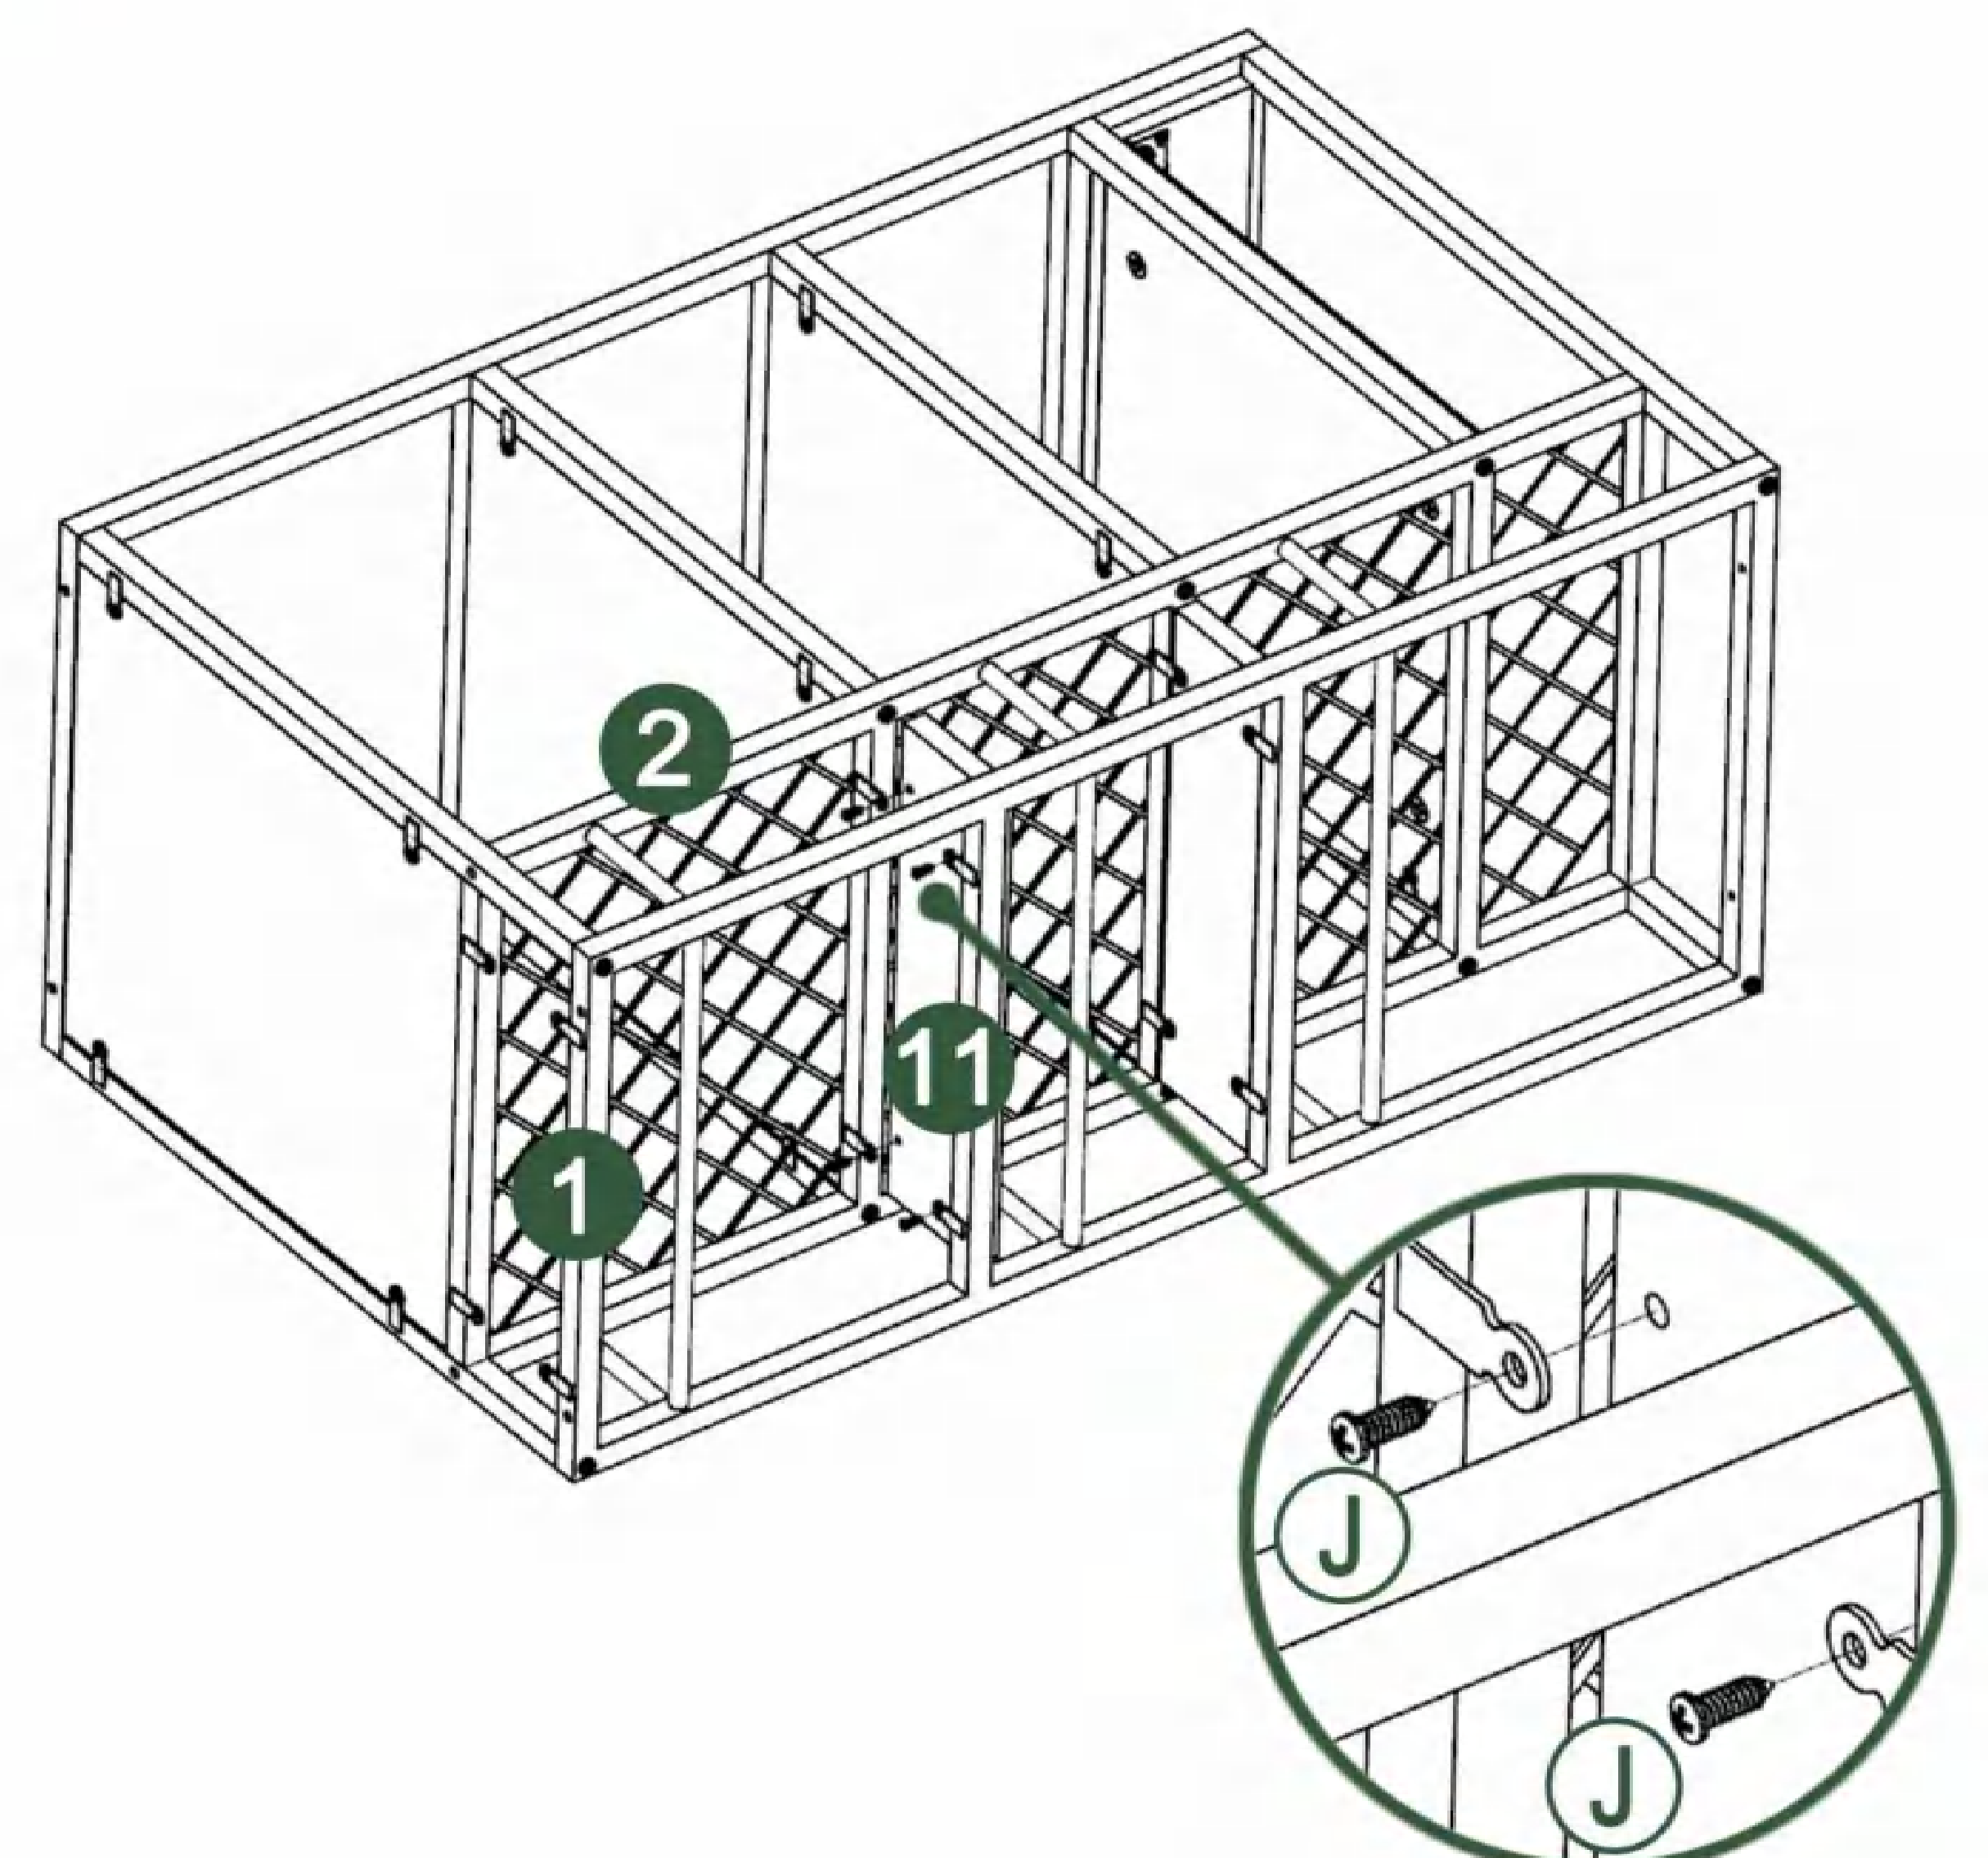


17.

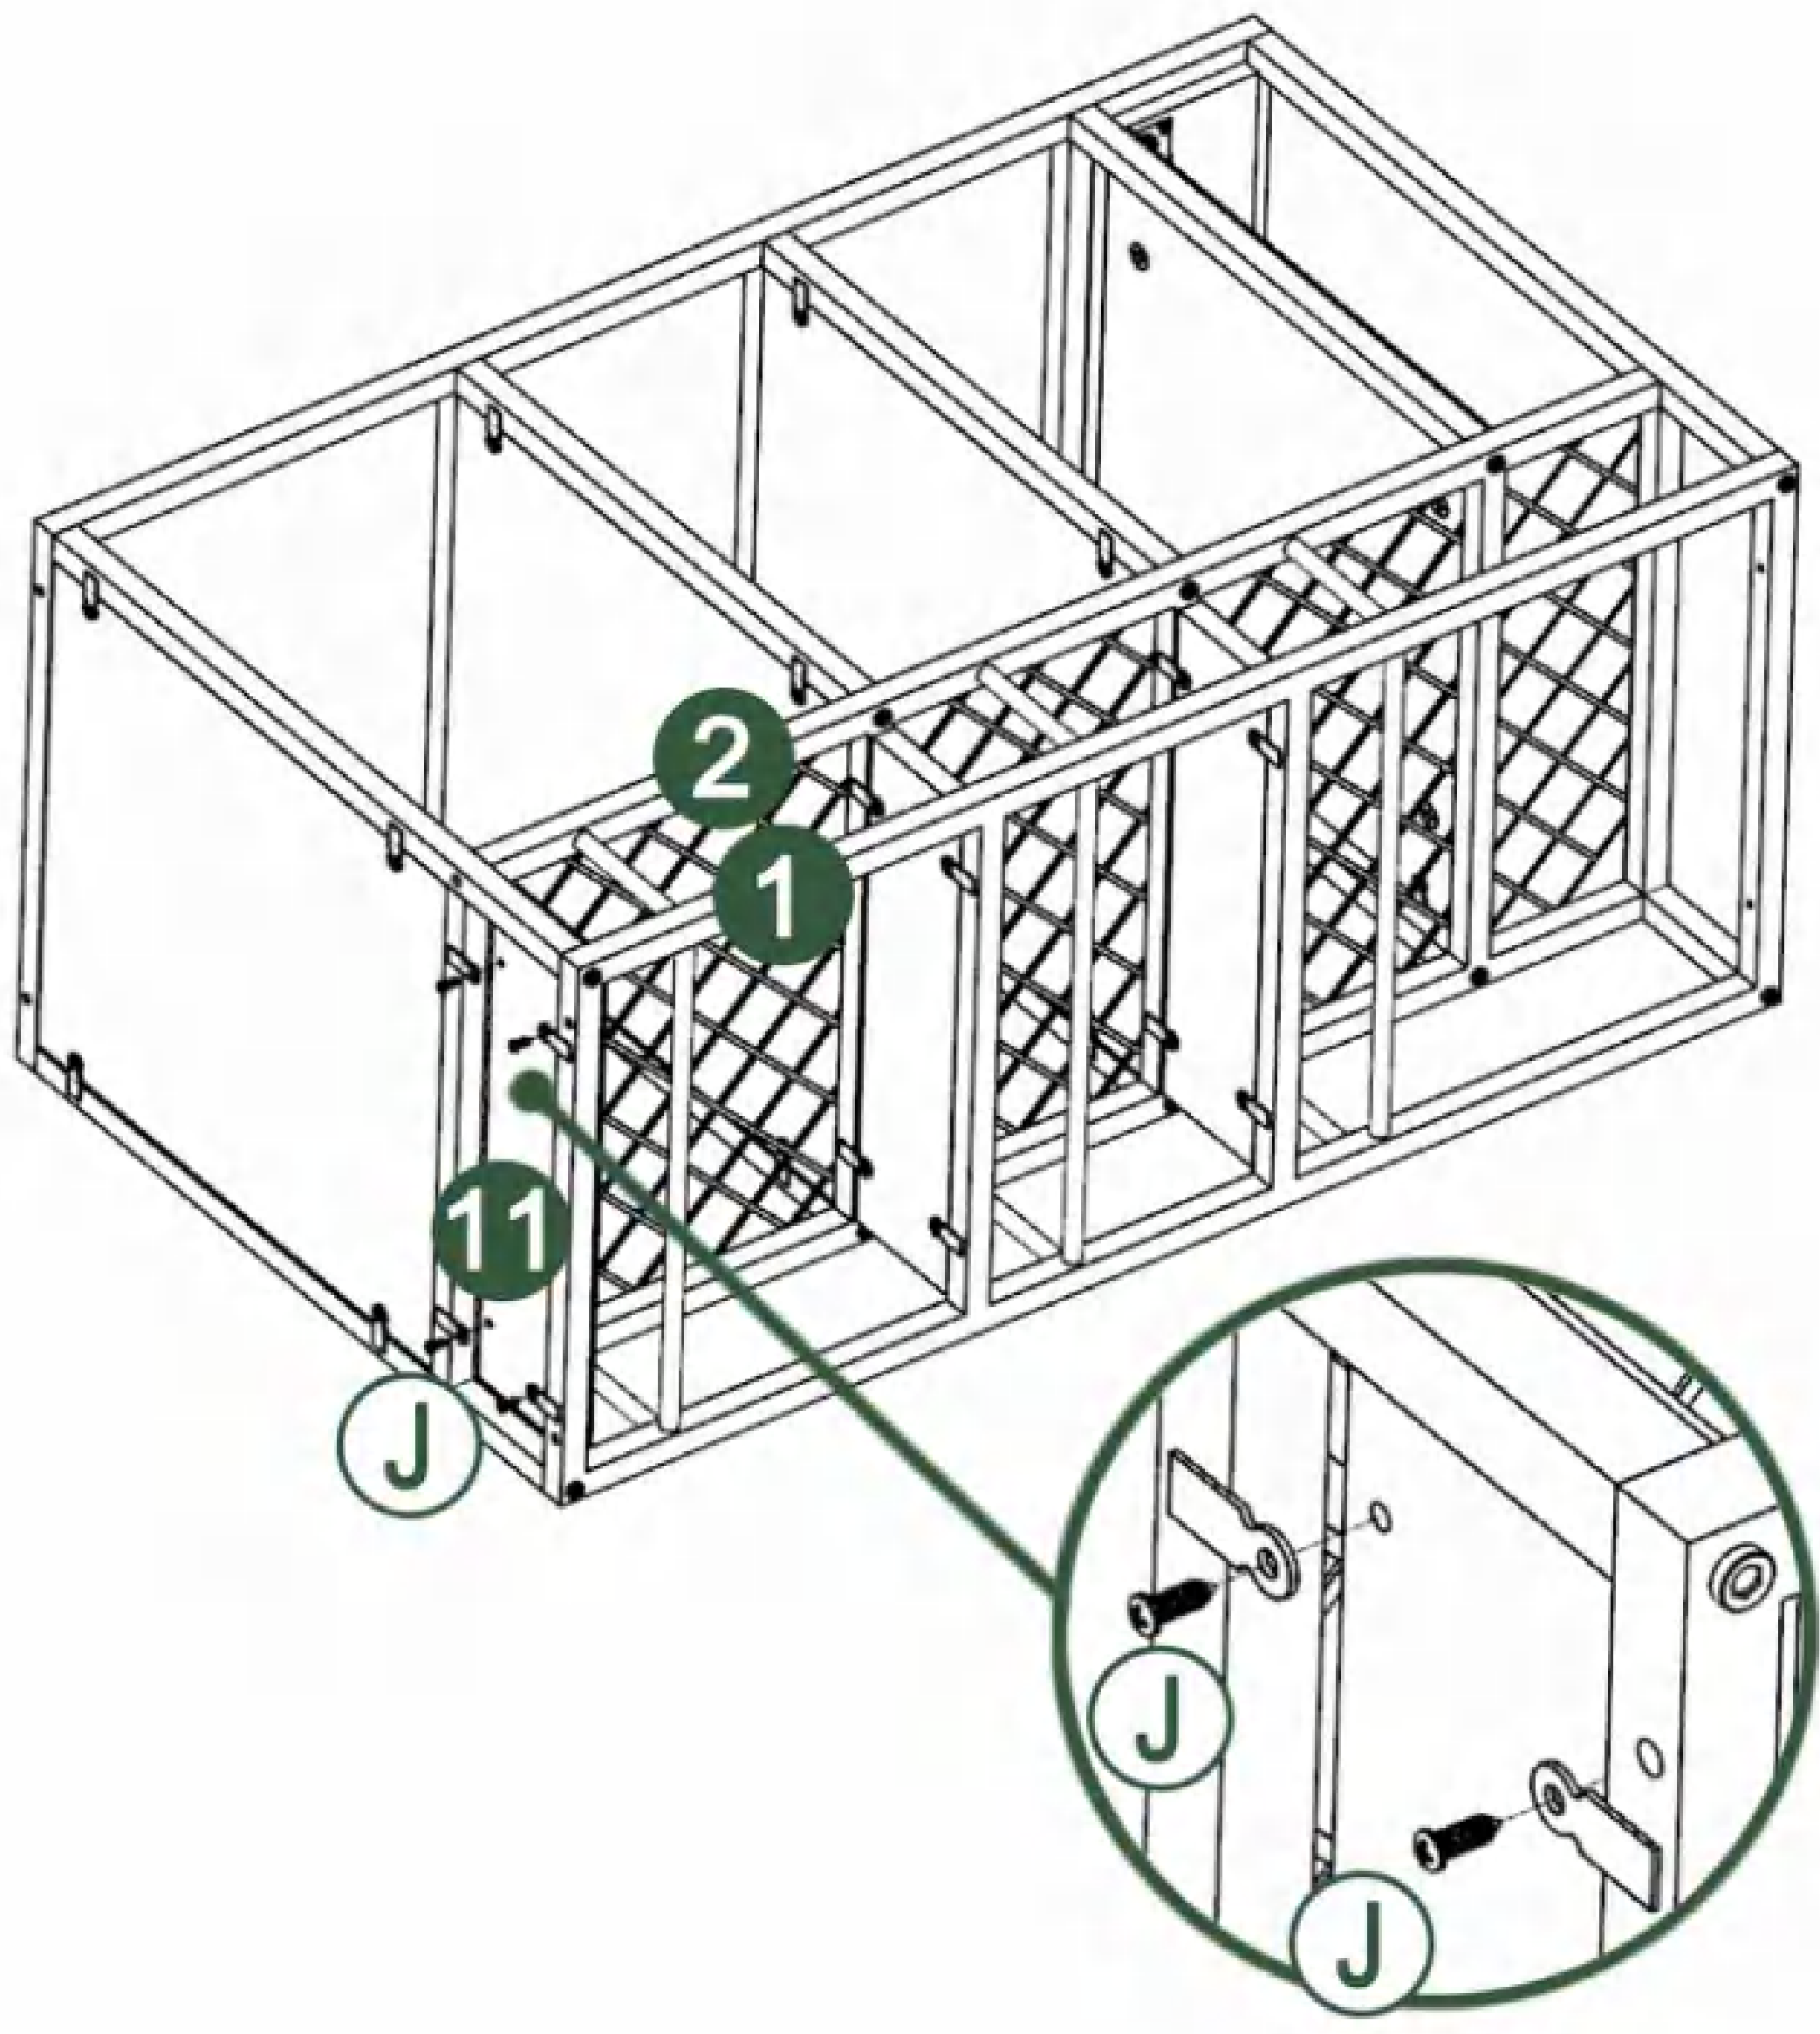


18.

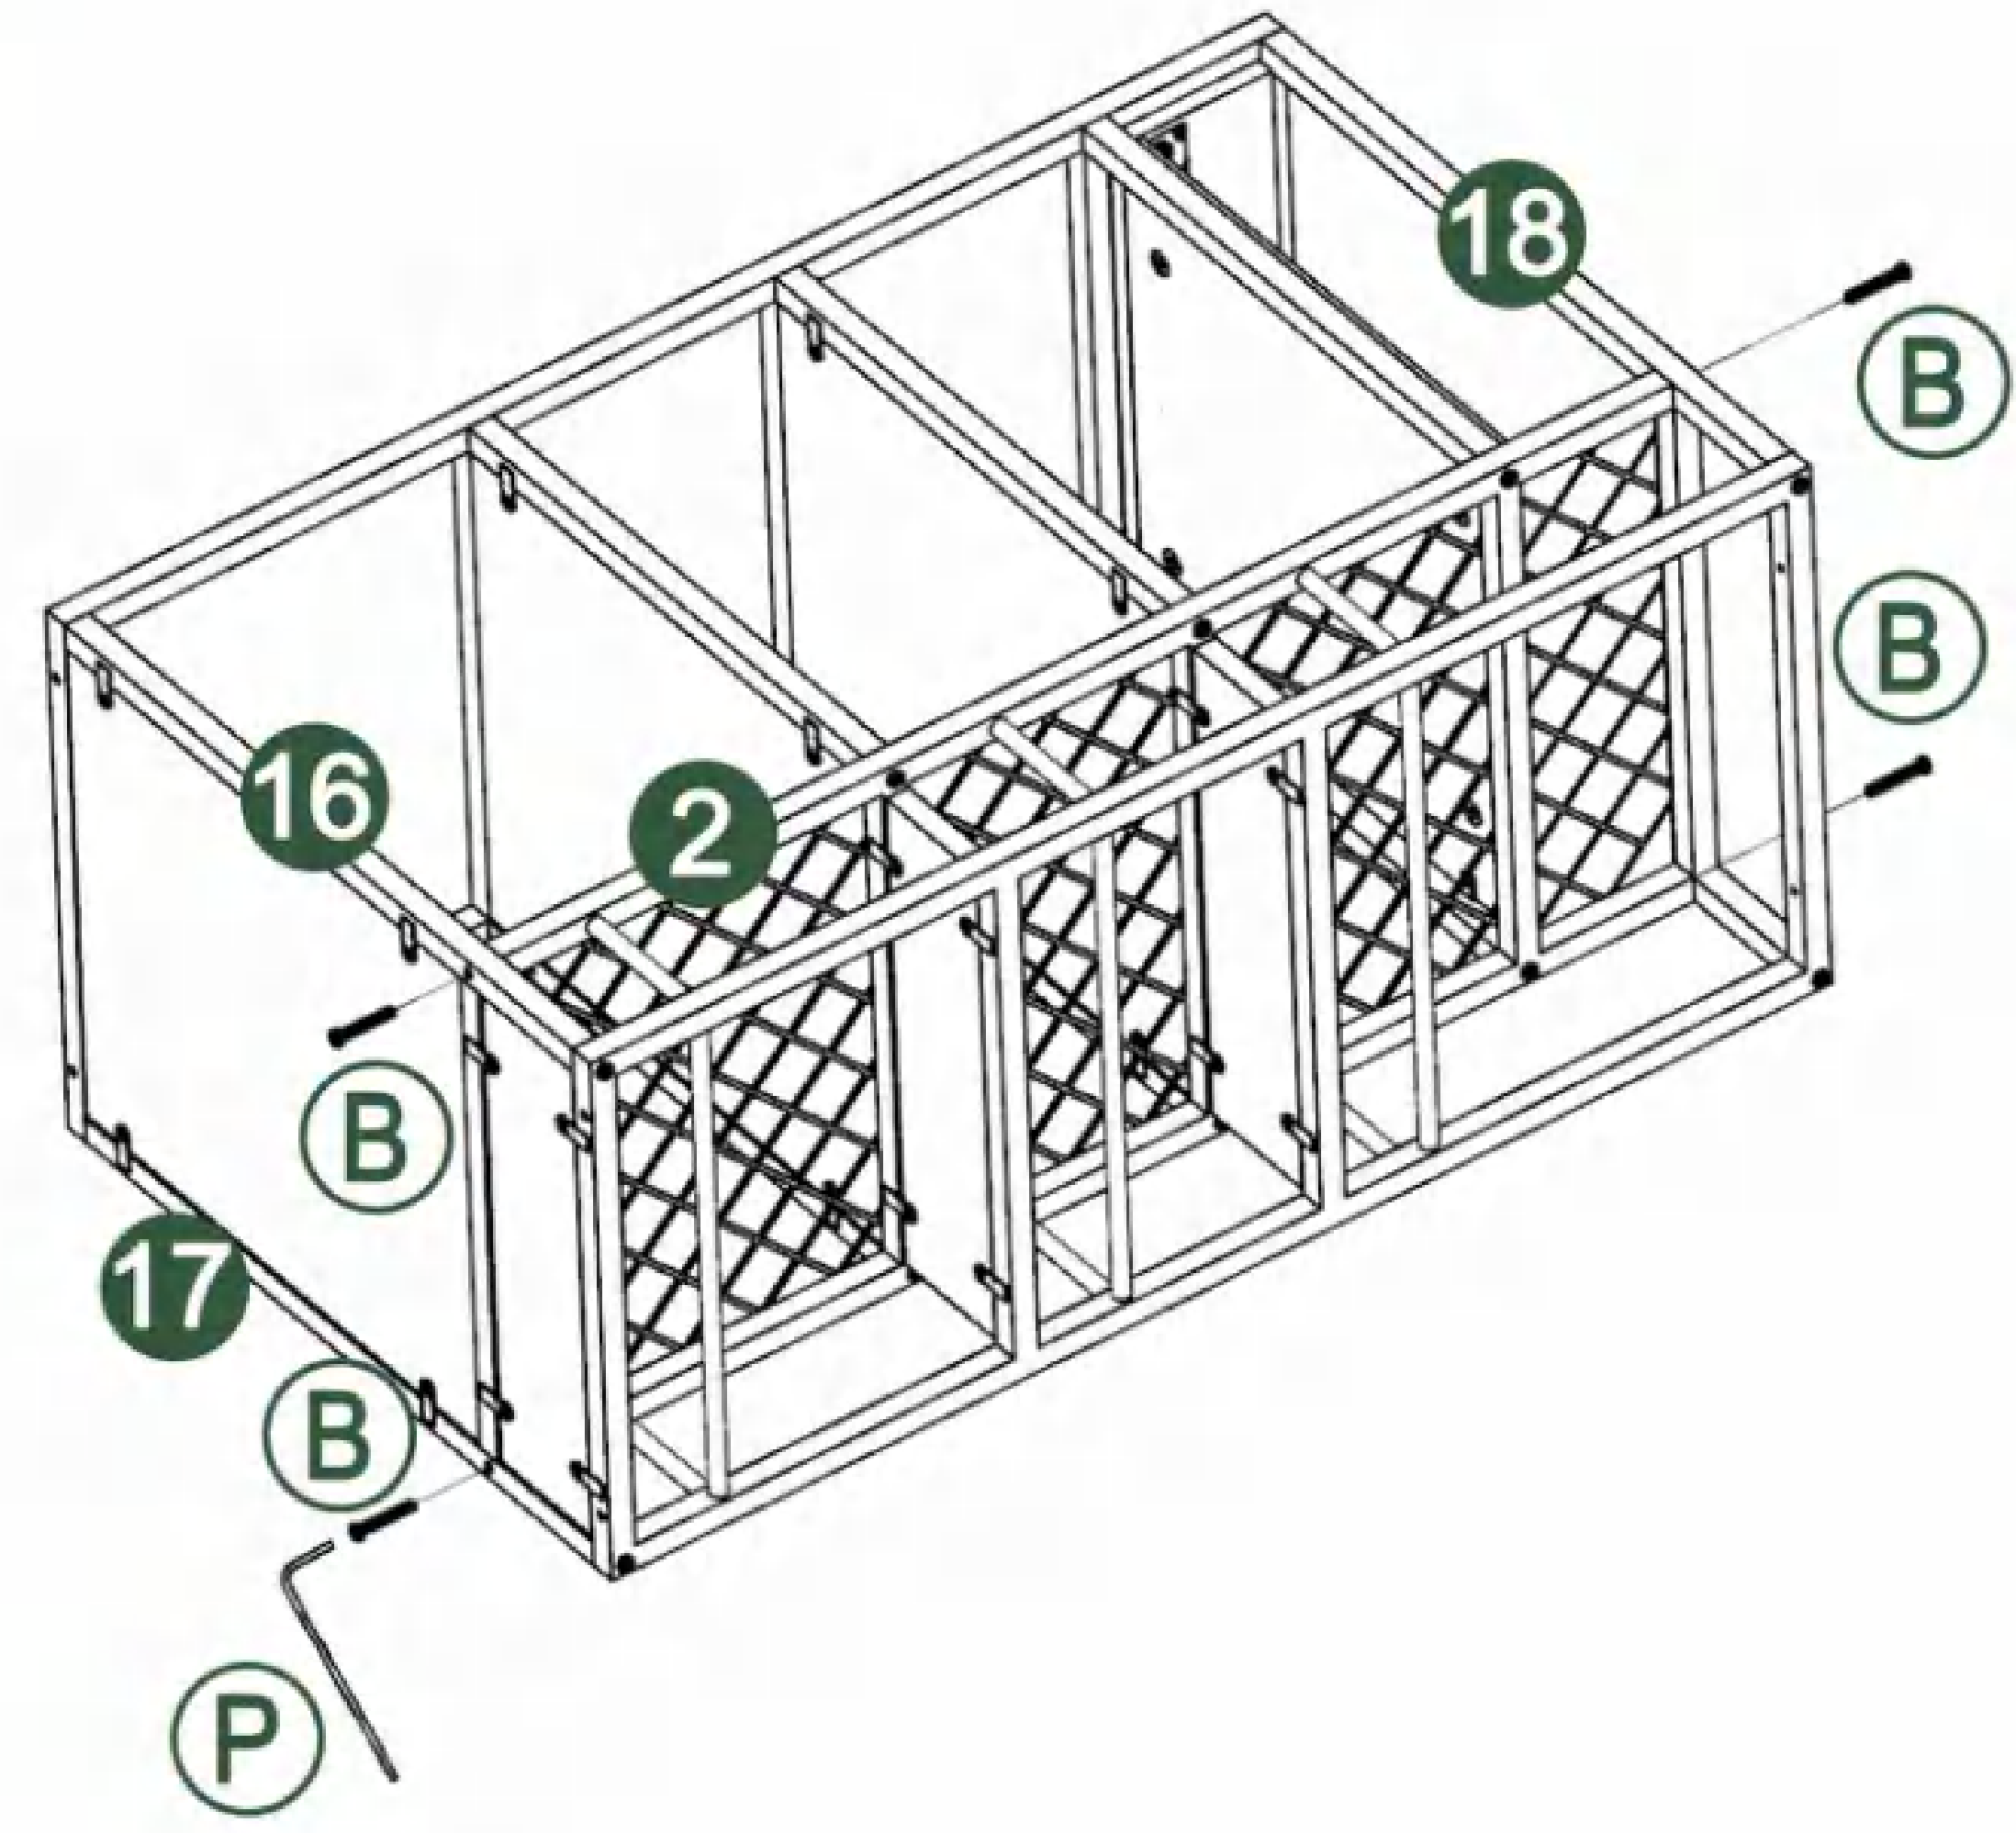


19.

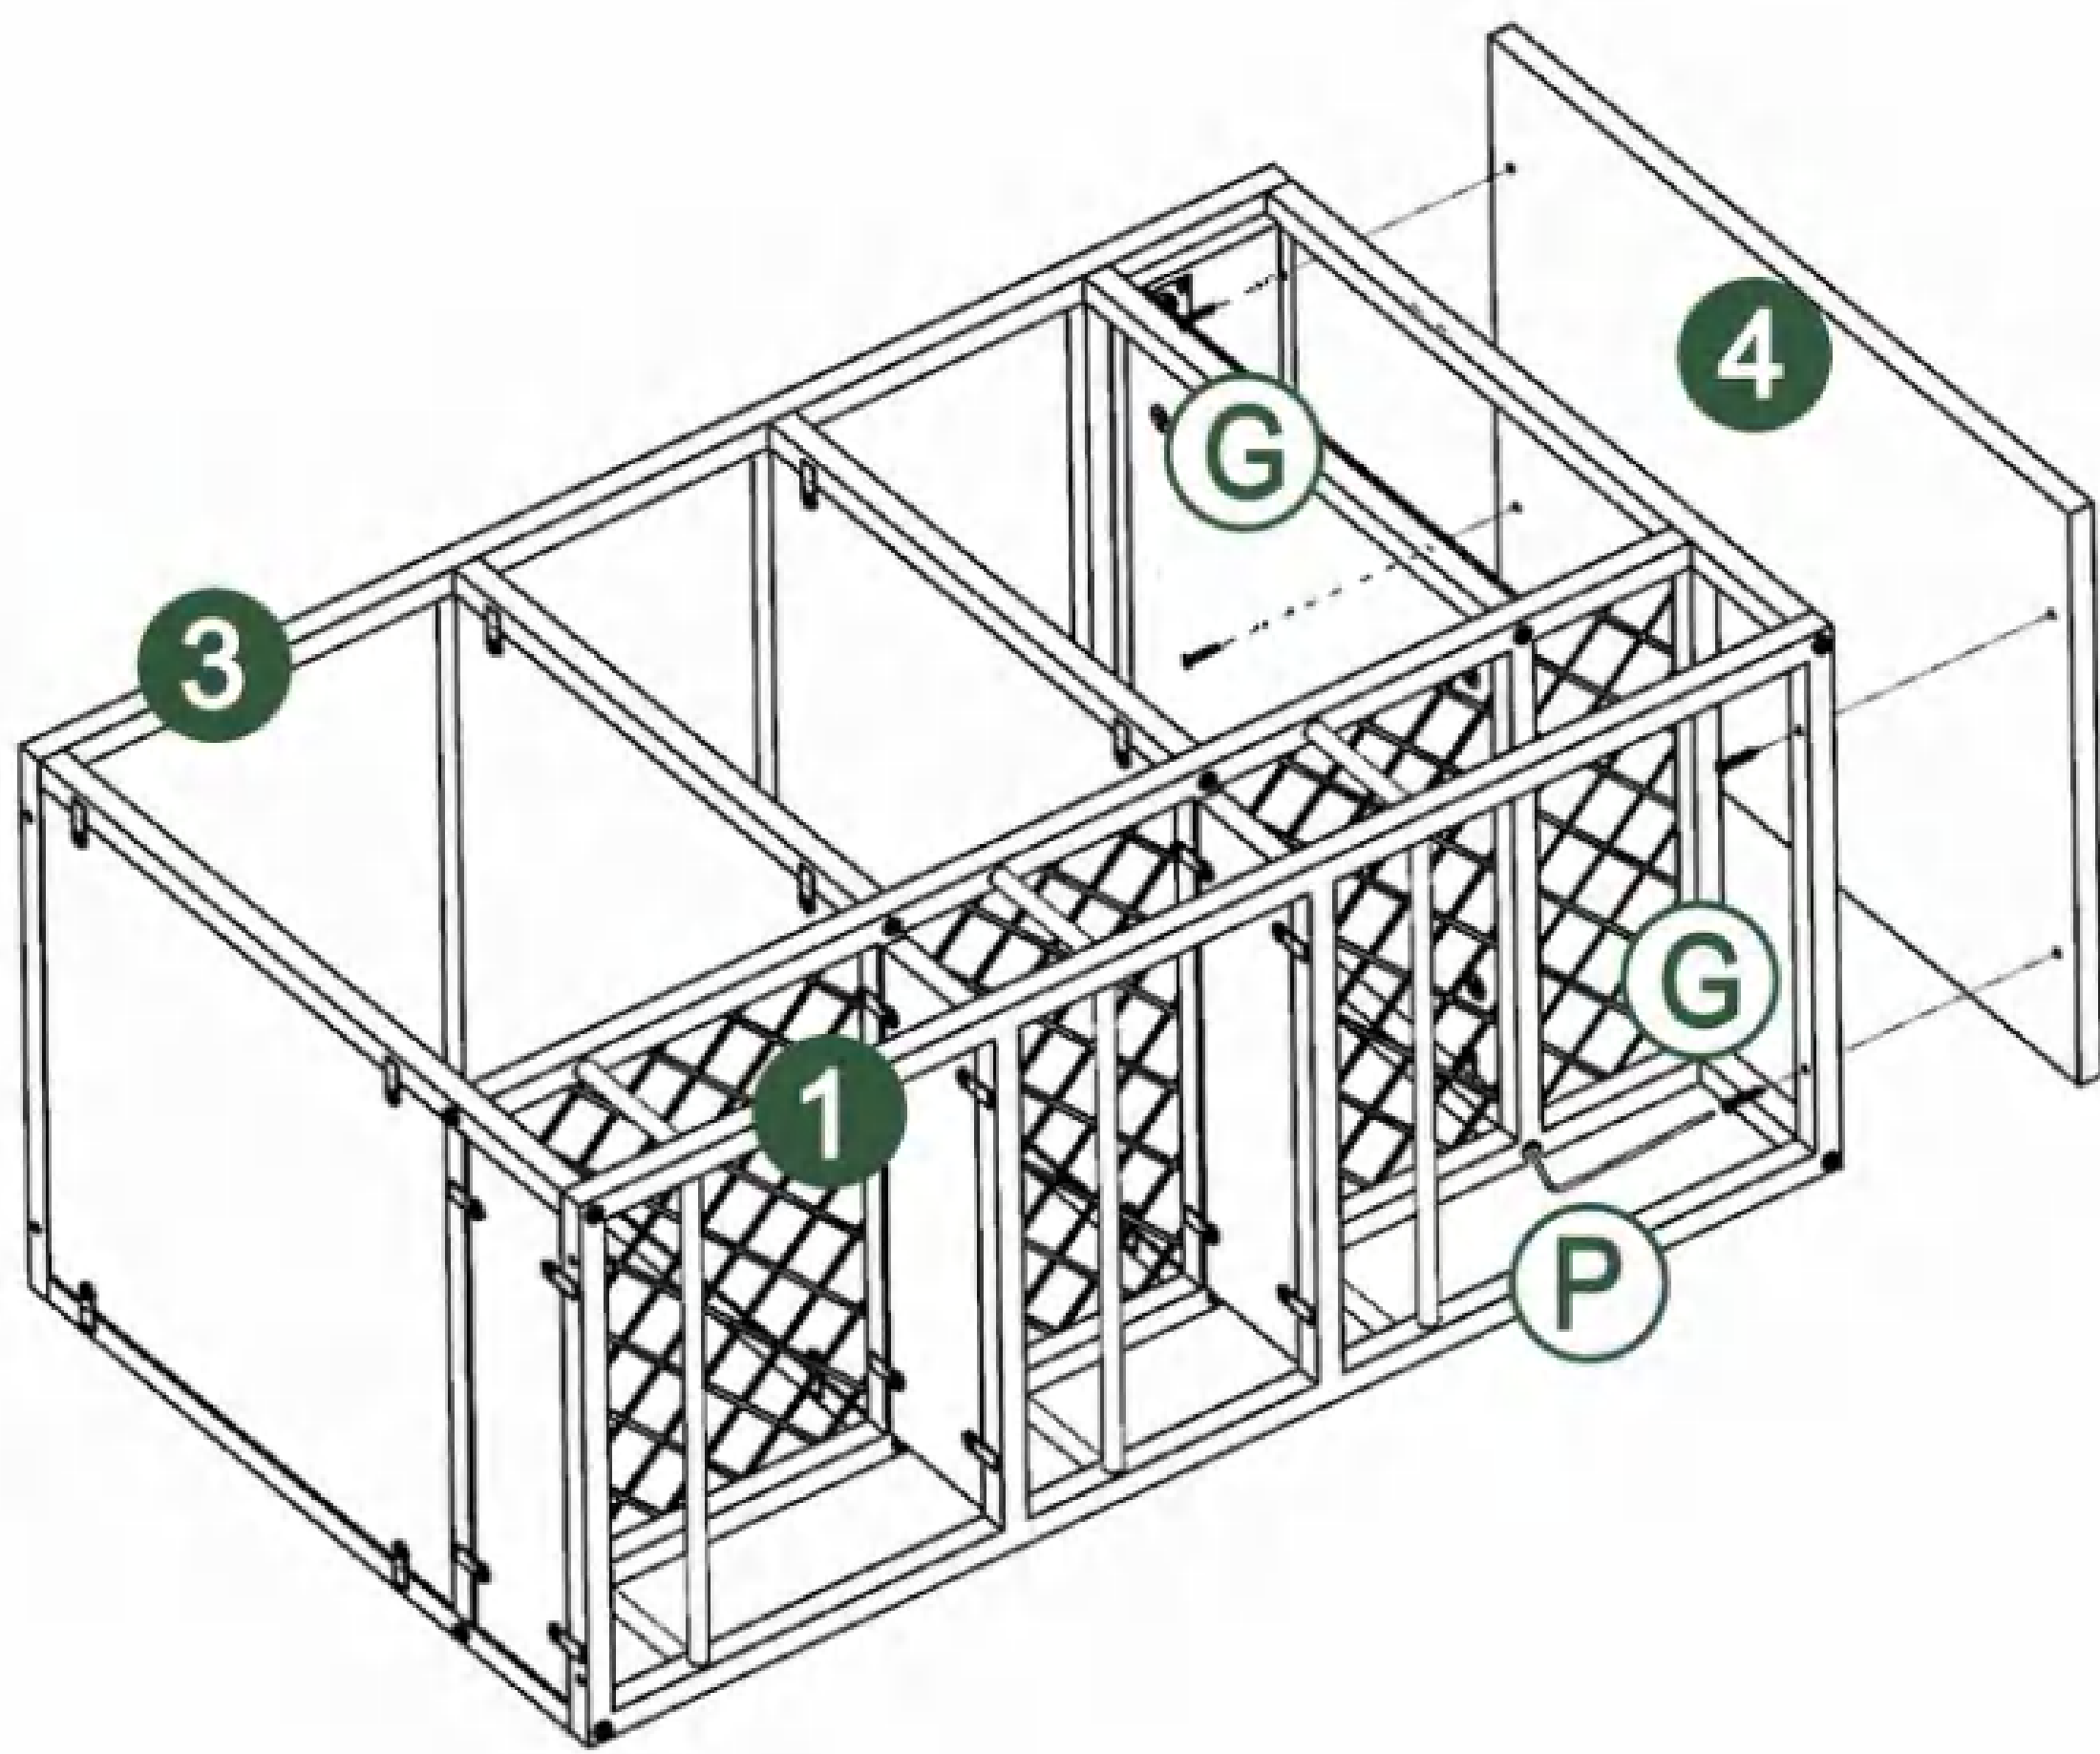


20.

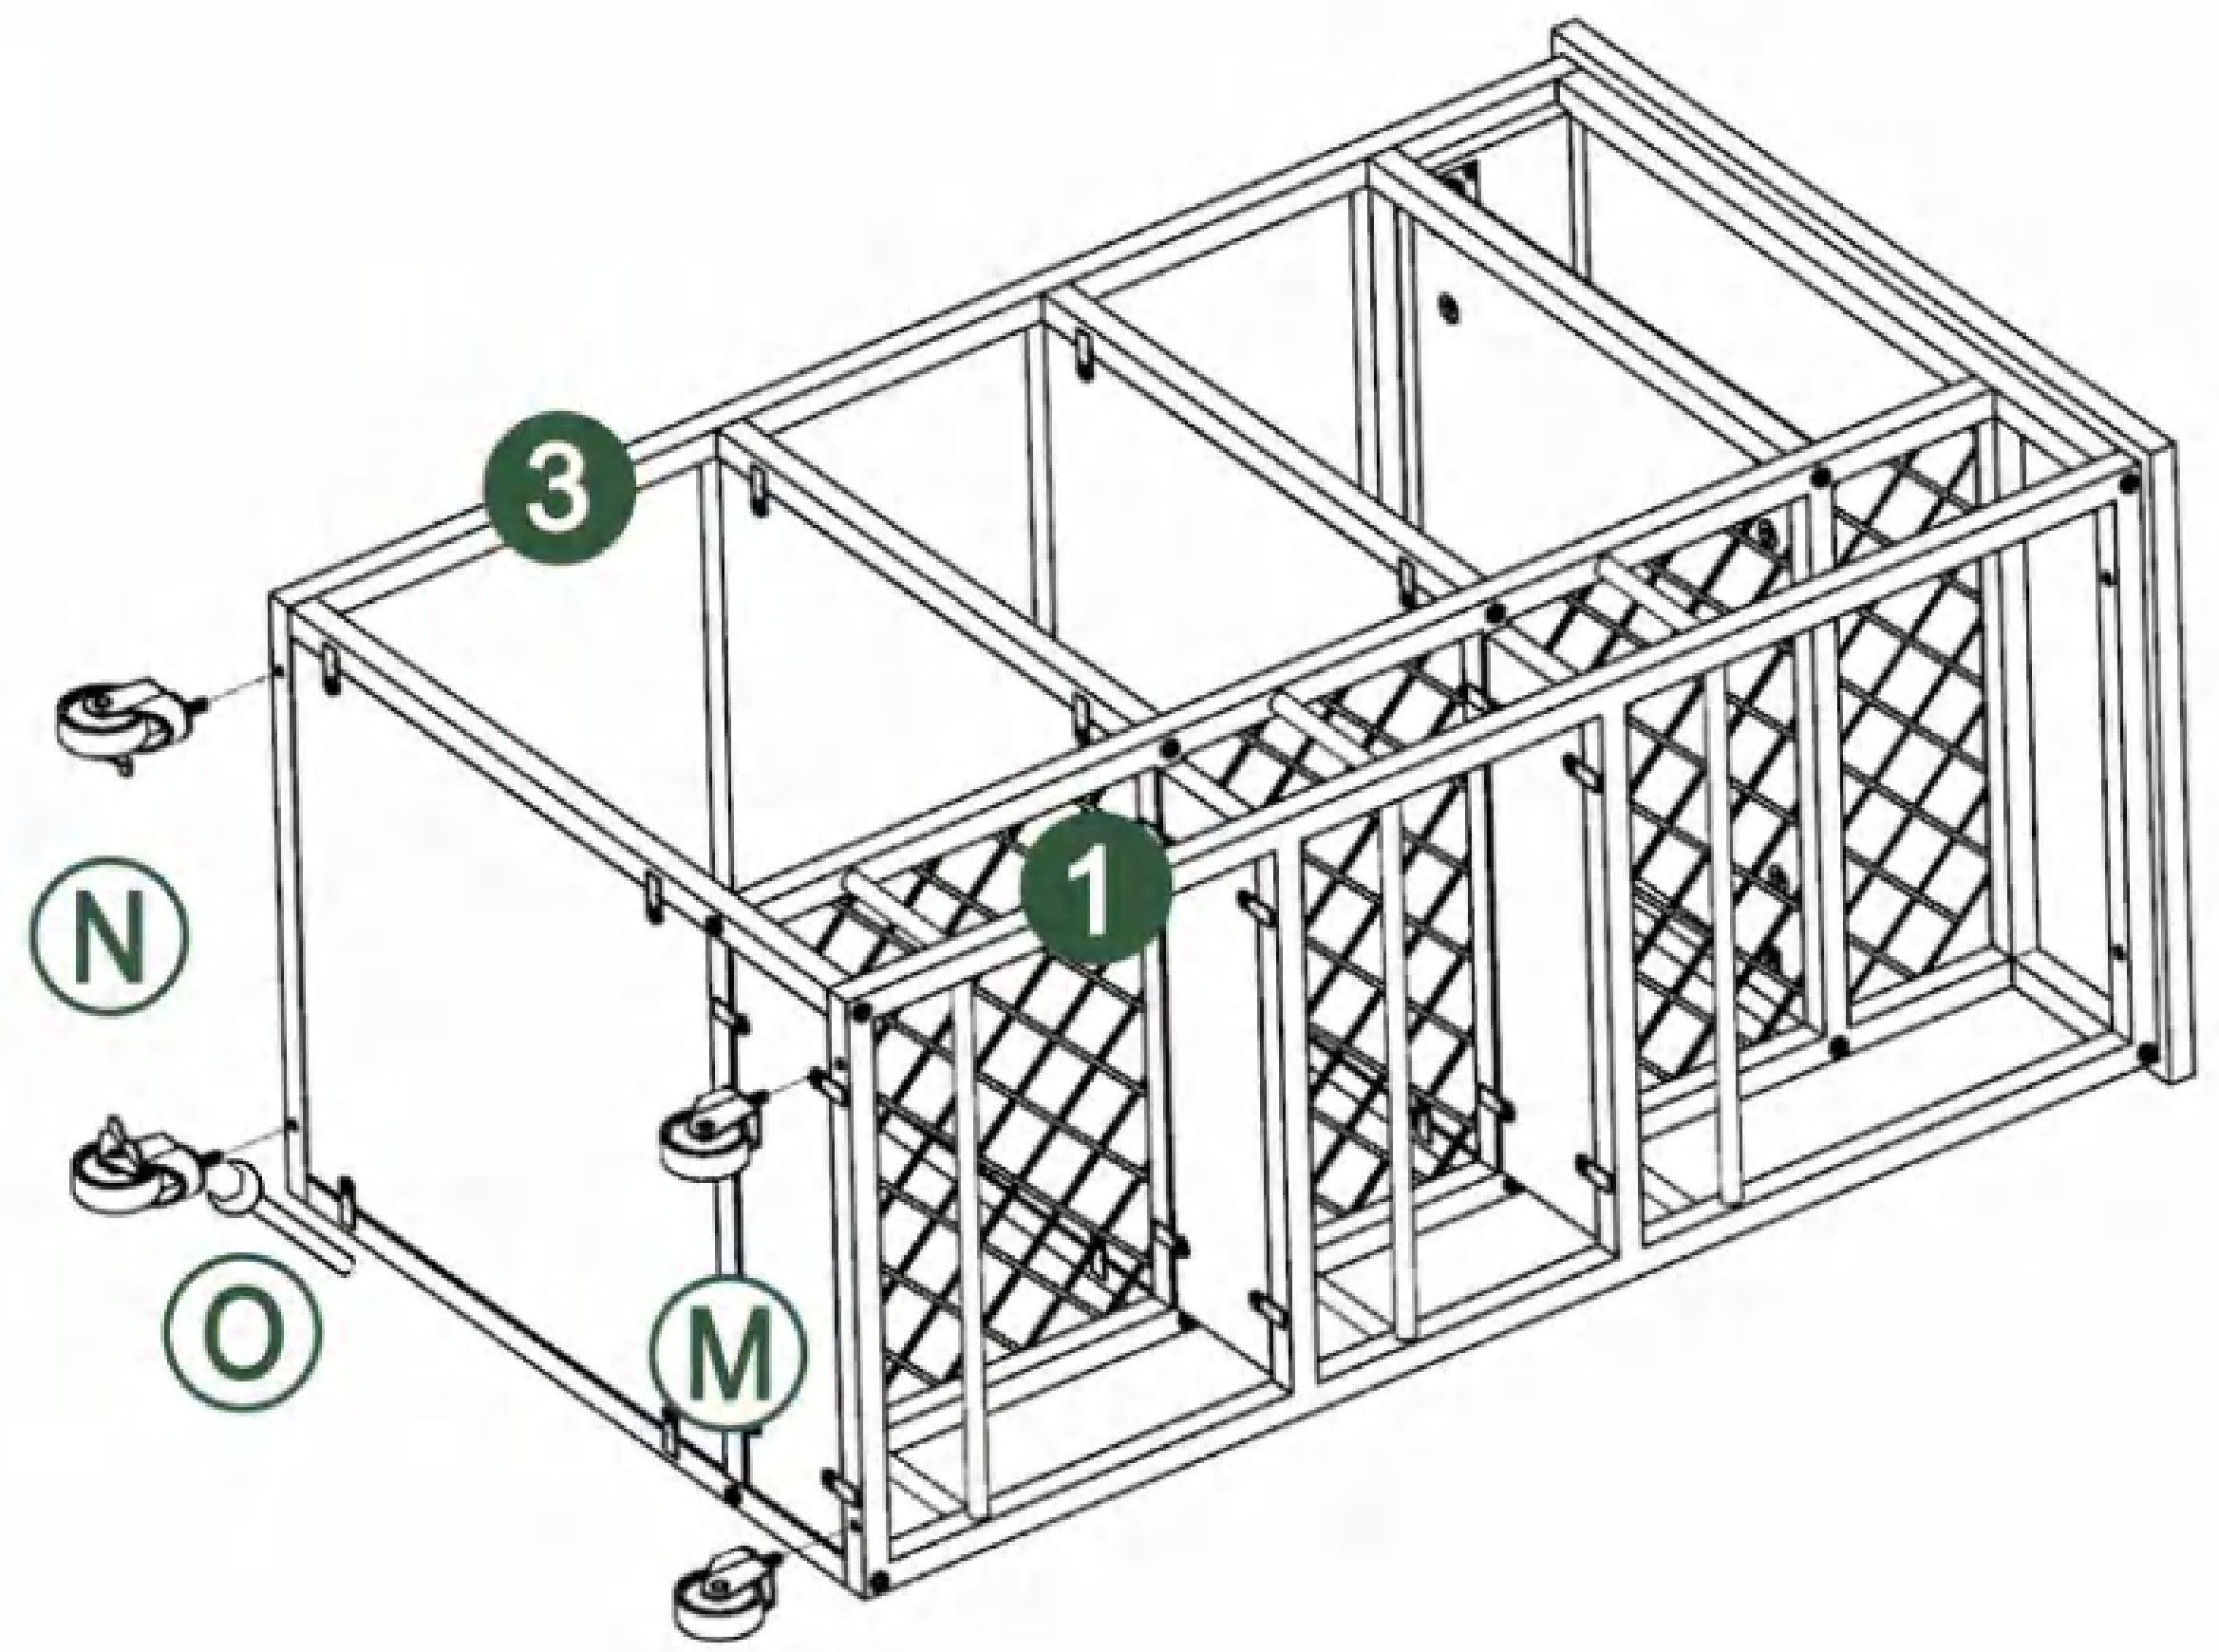


21.

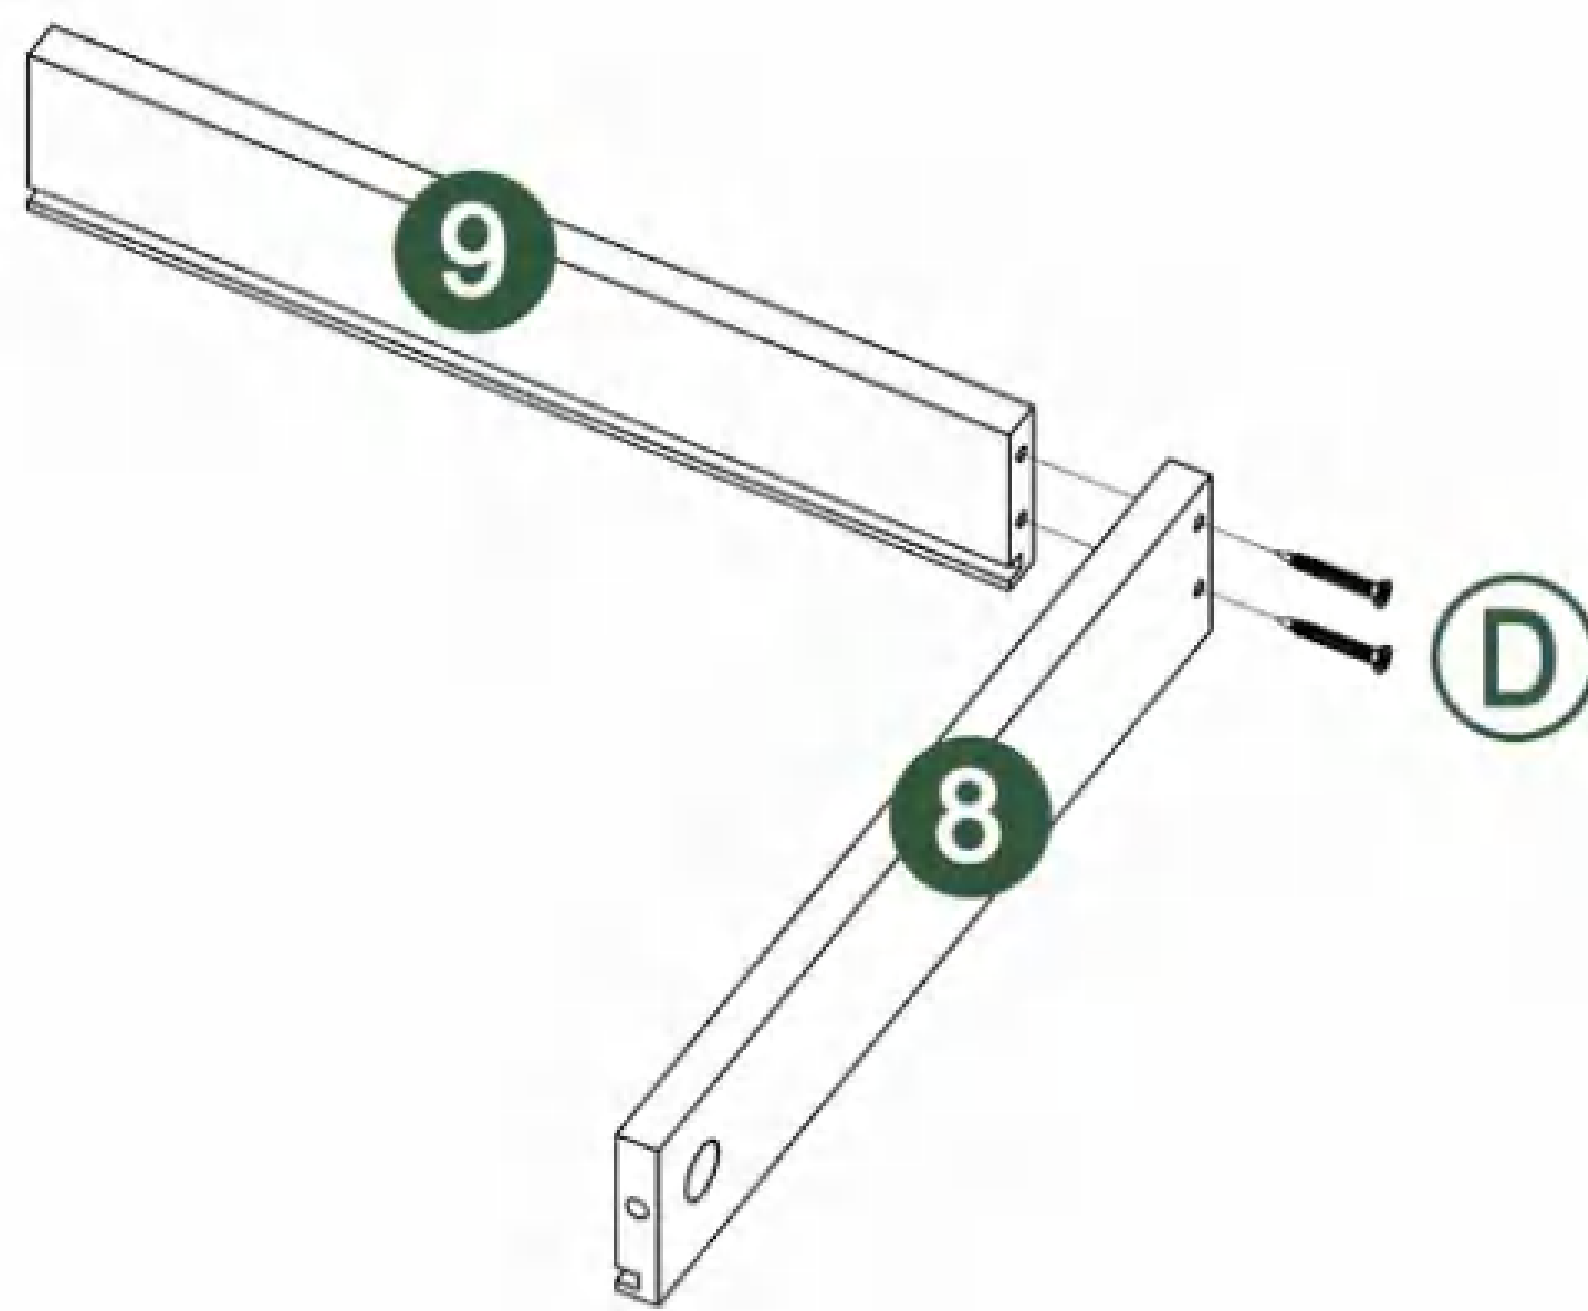


22.

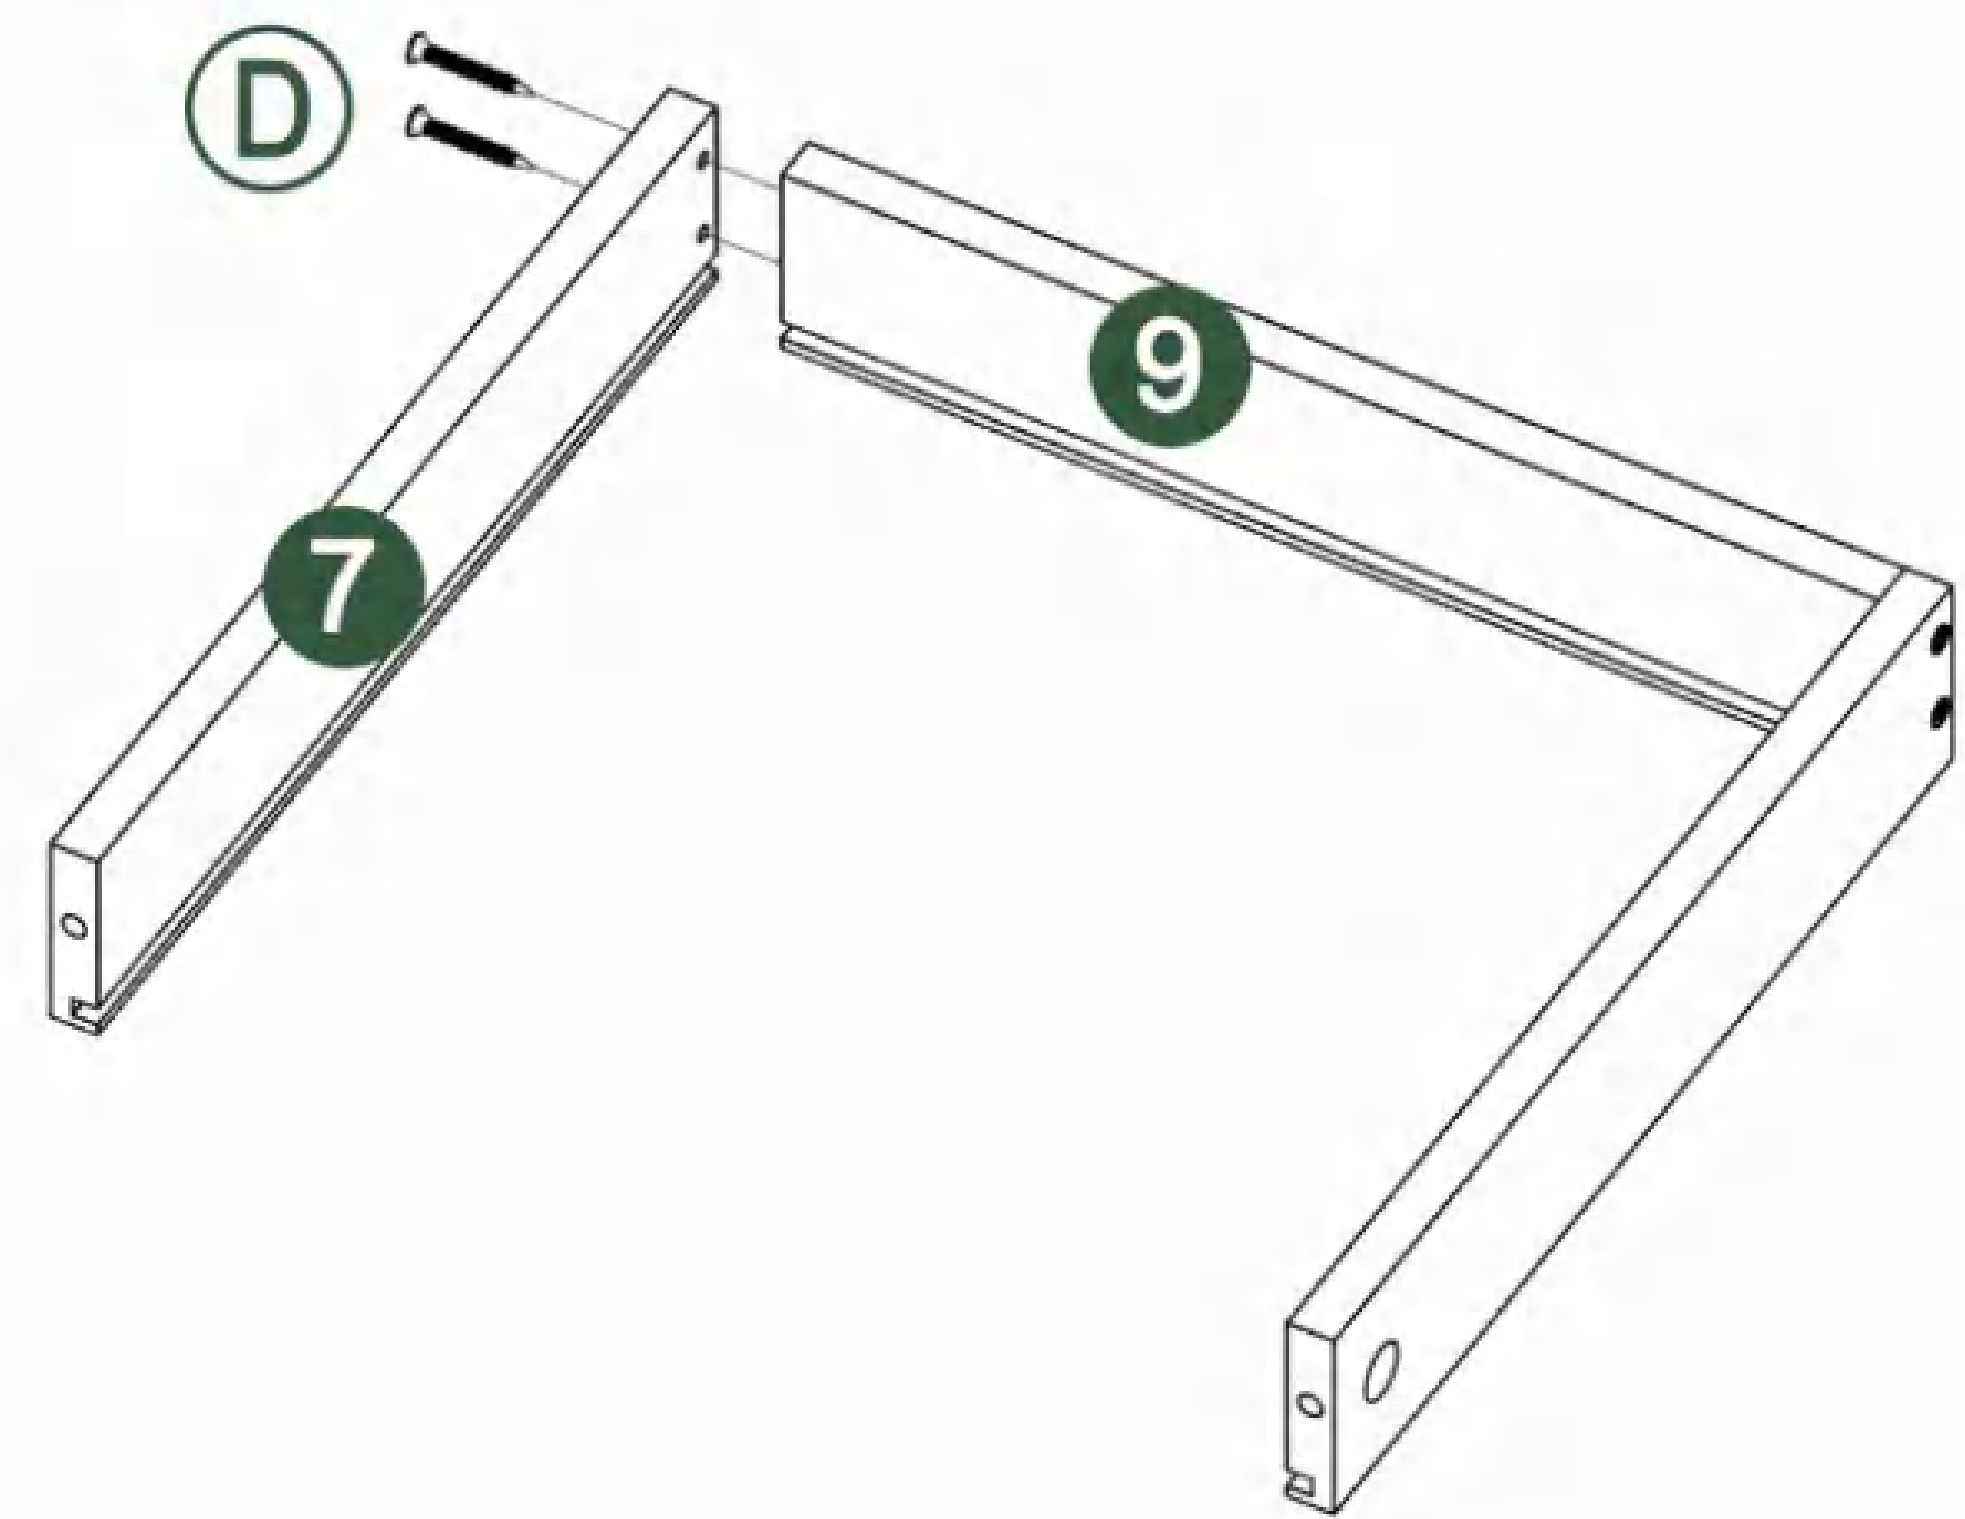


23.

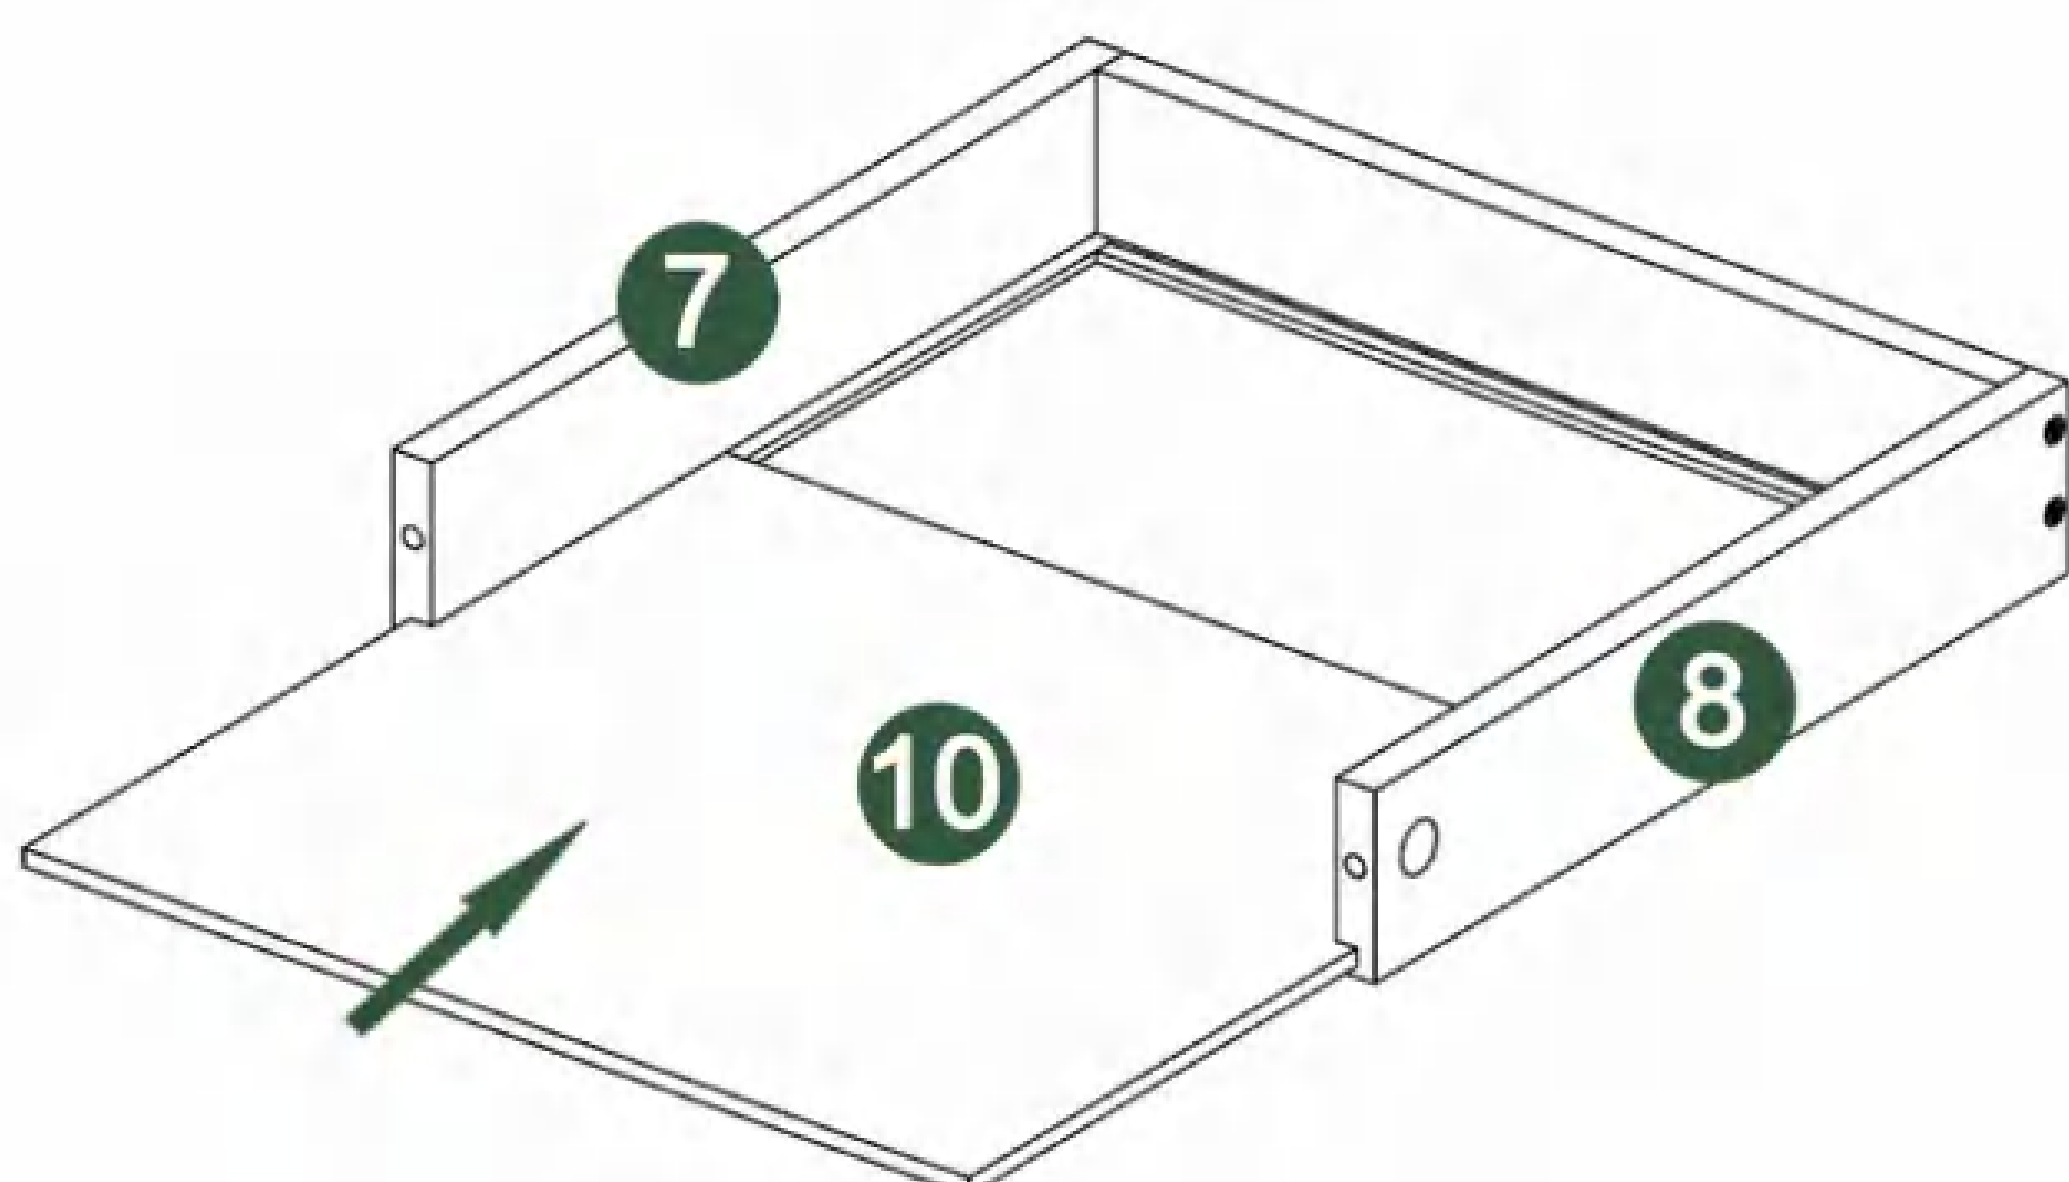


24.

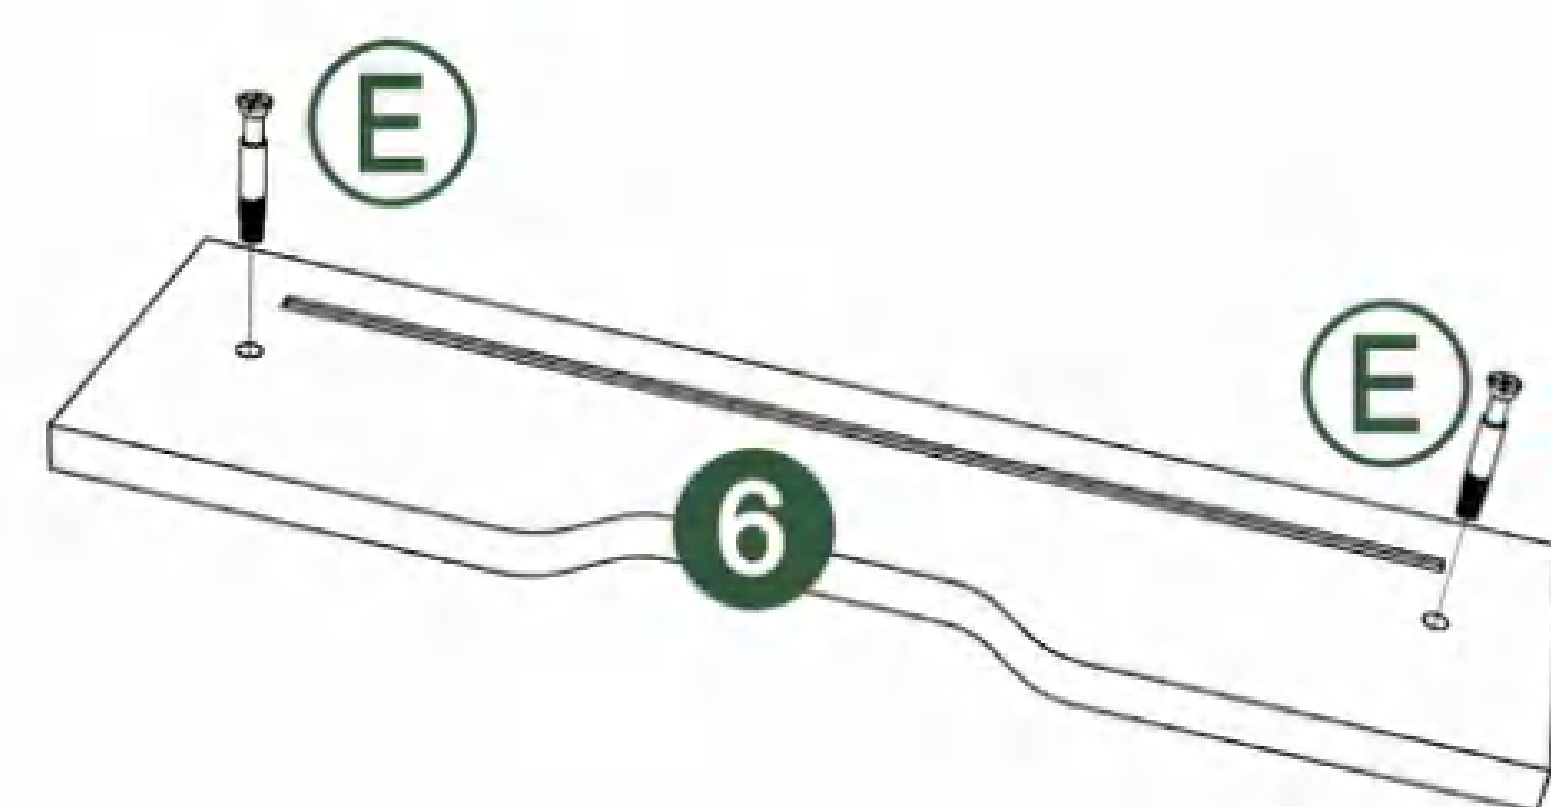

25.

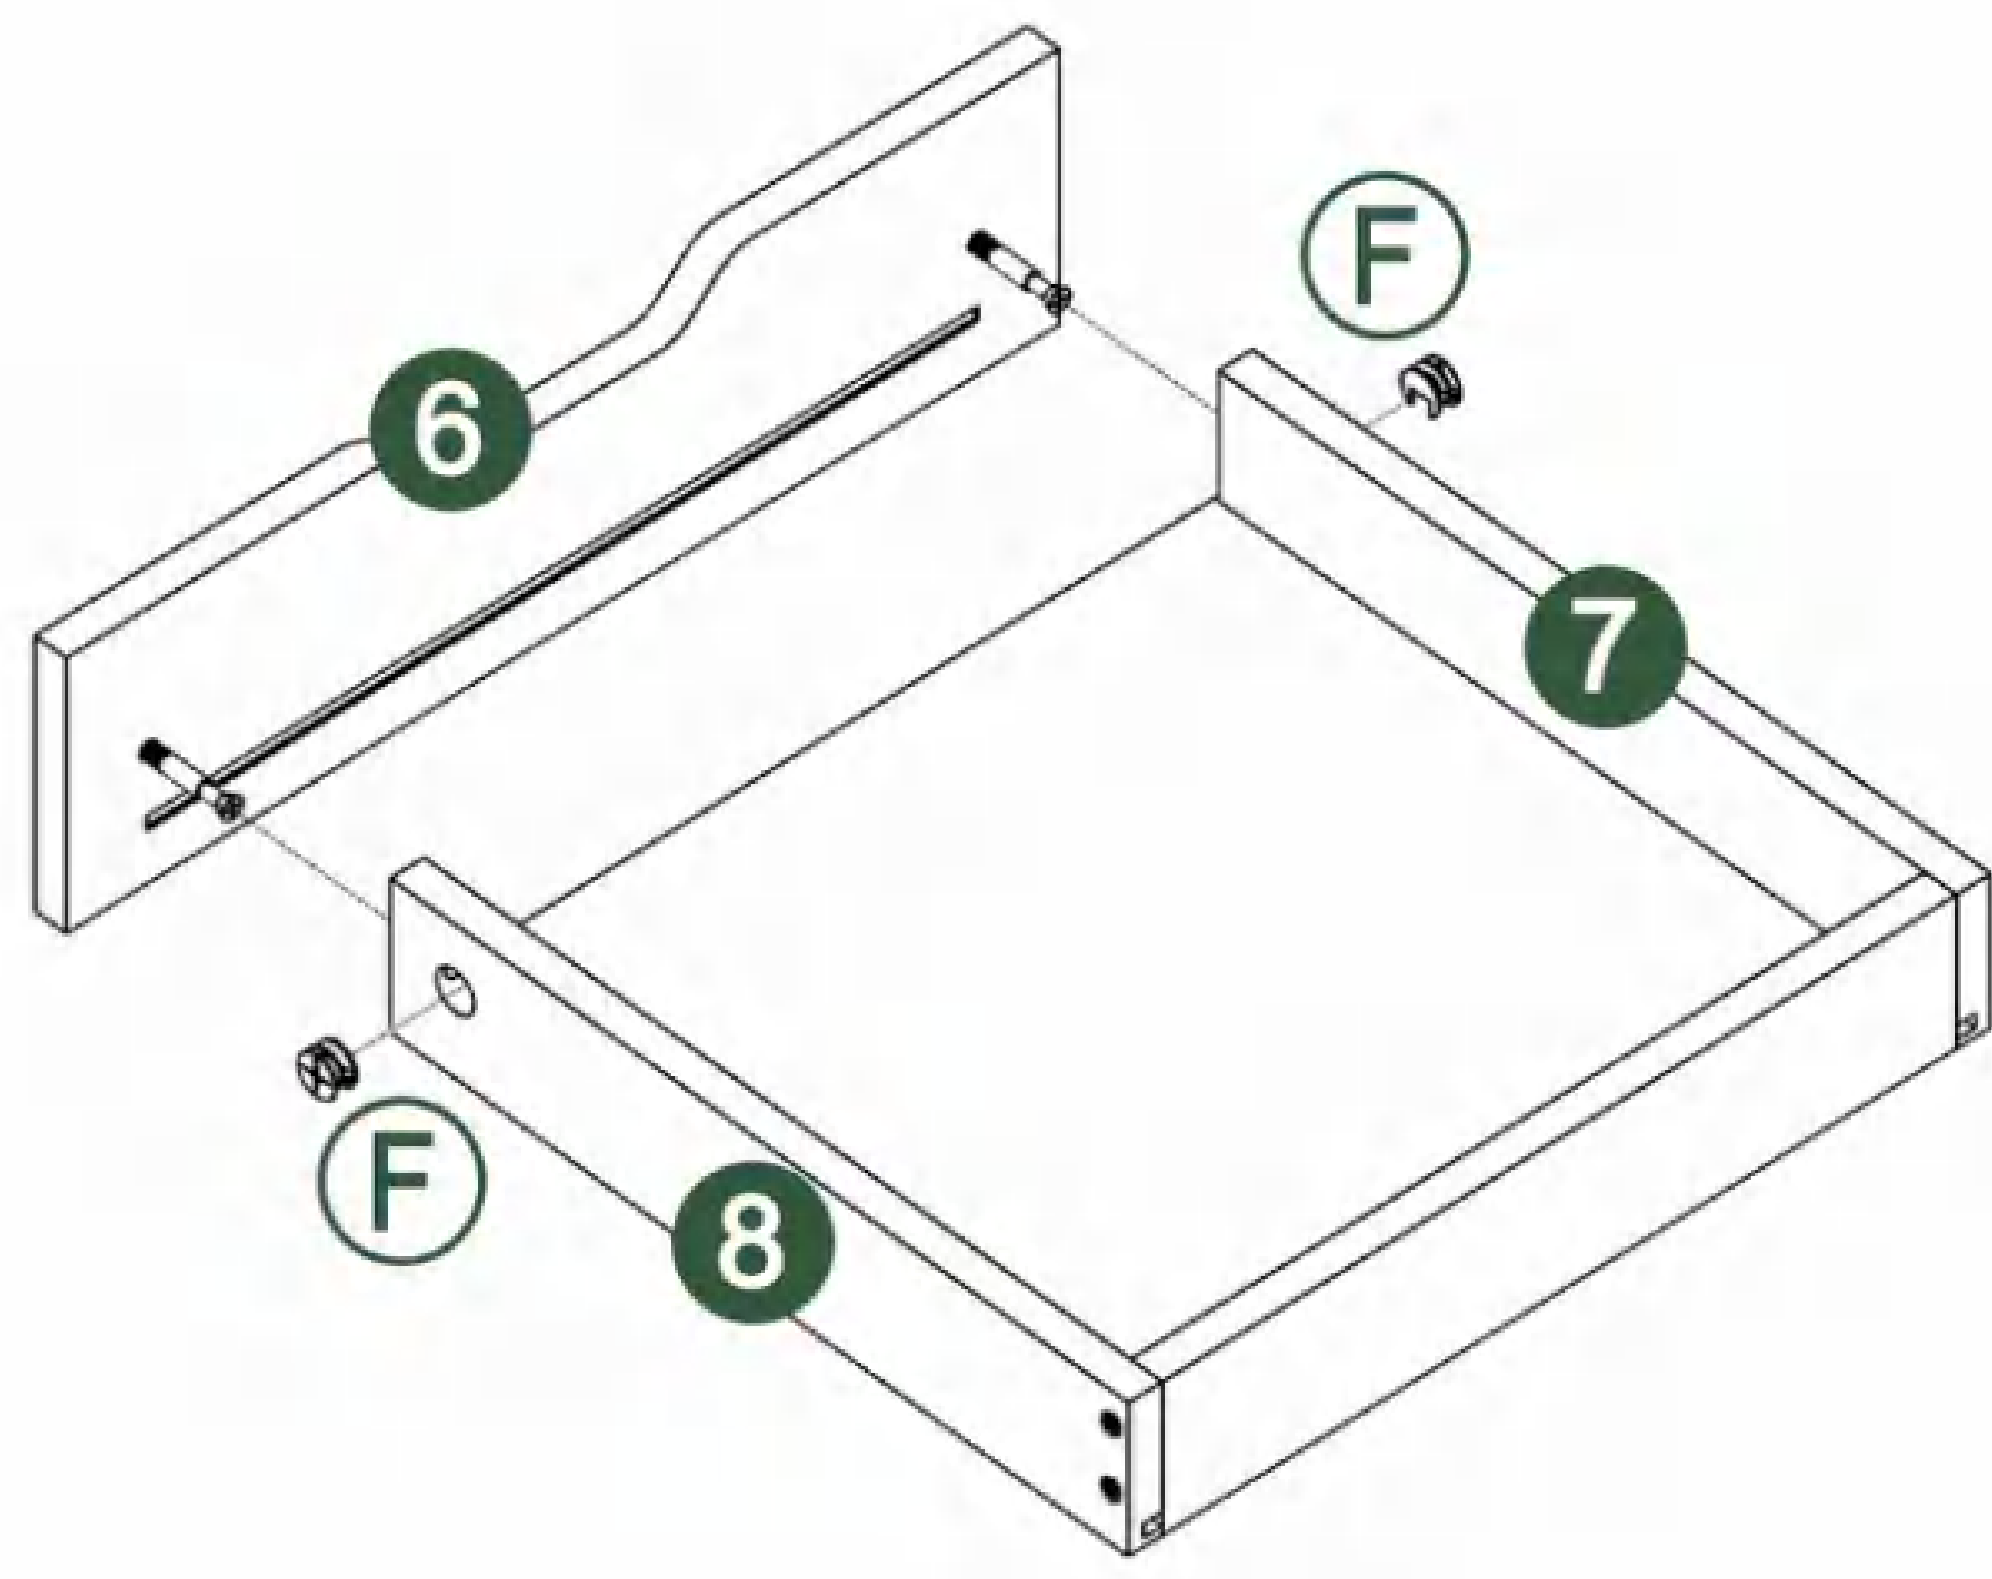


26.

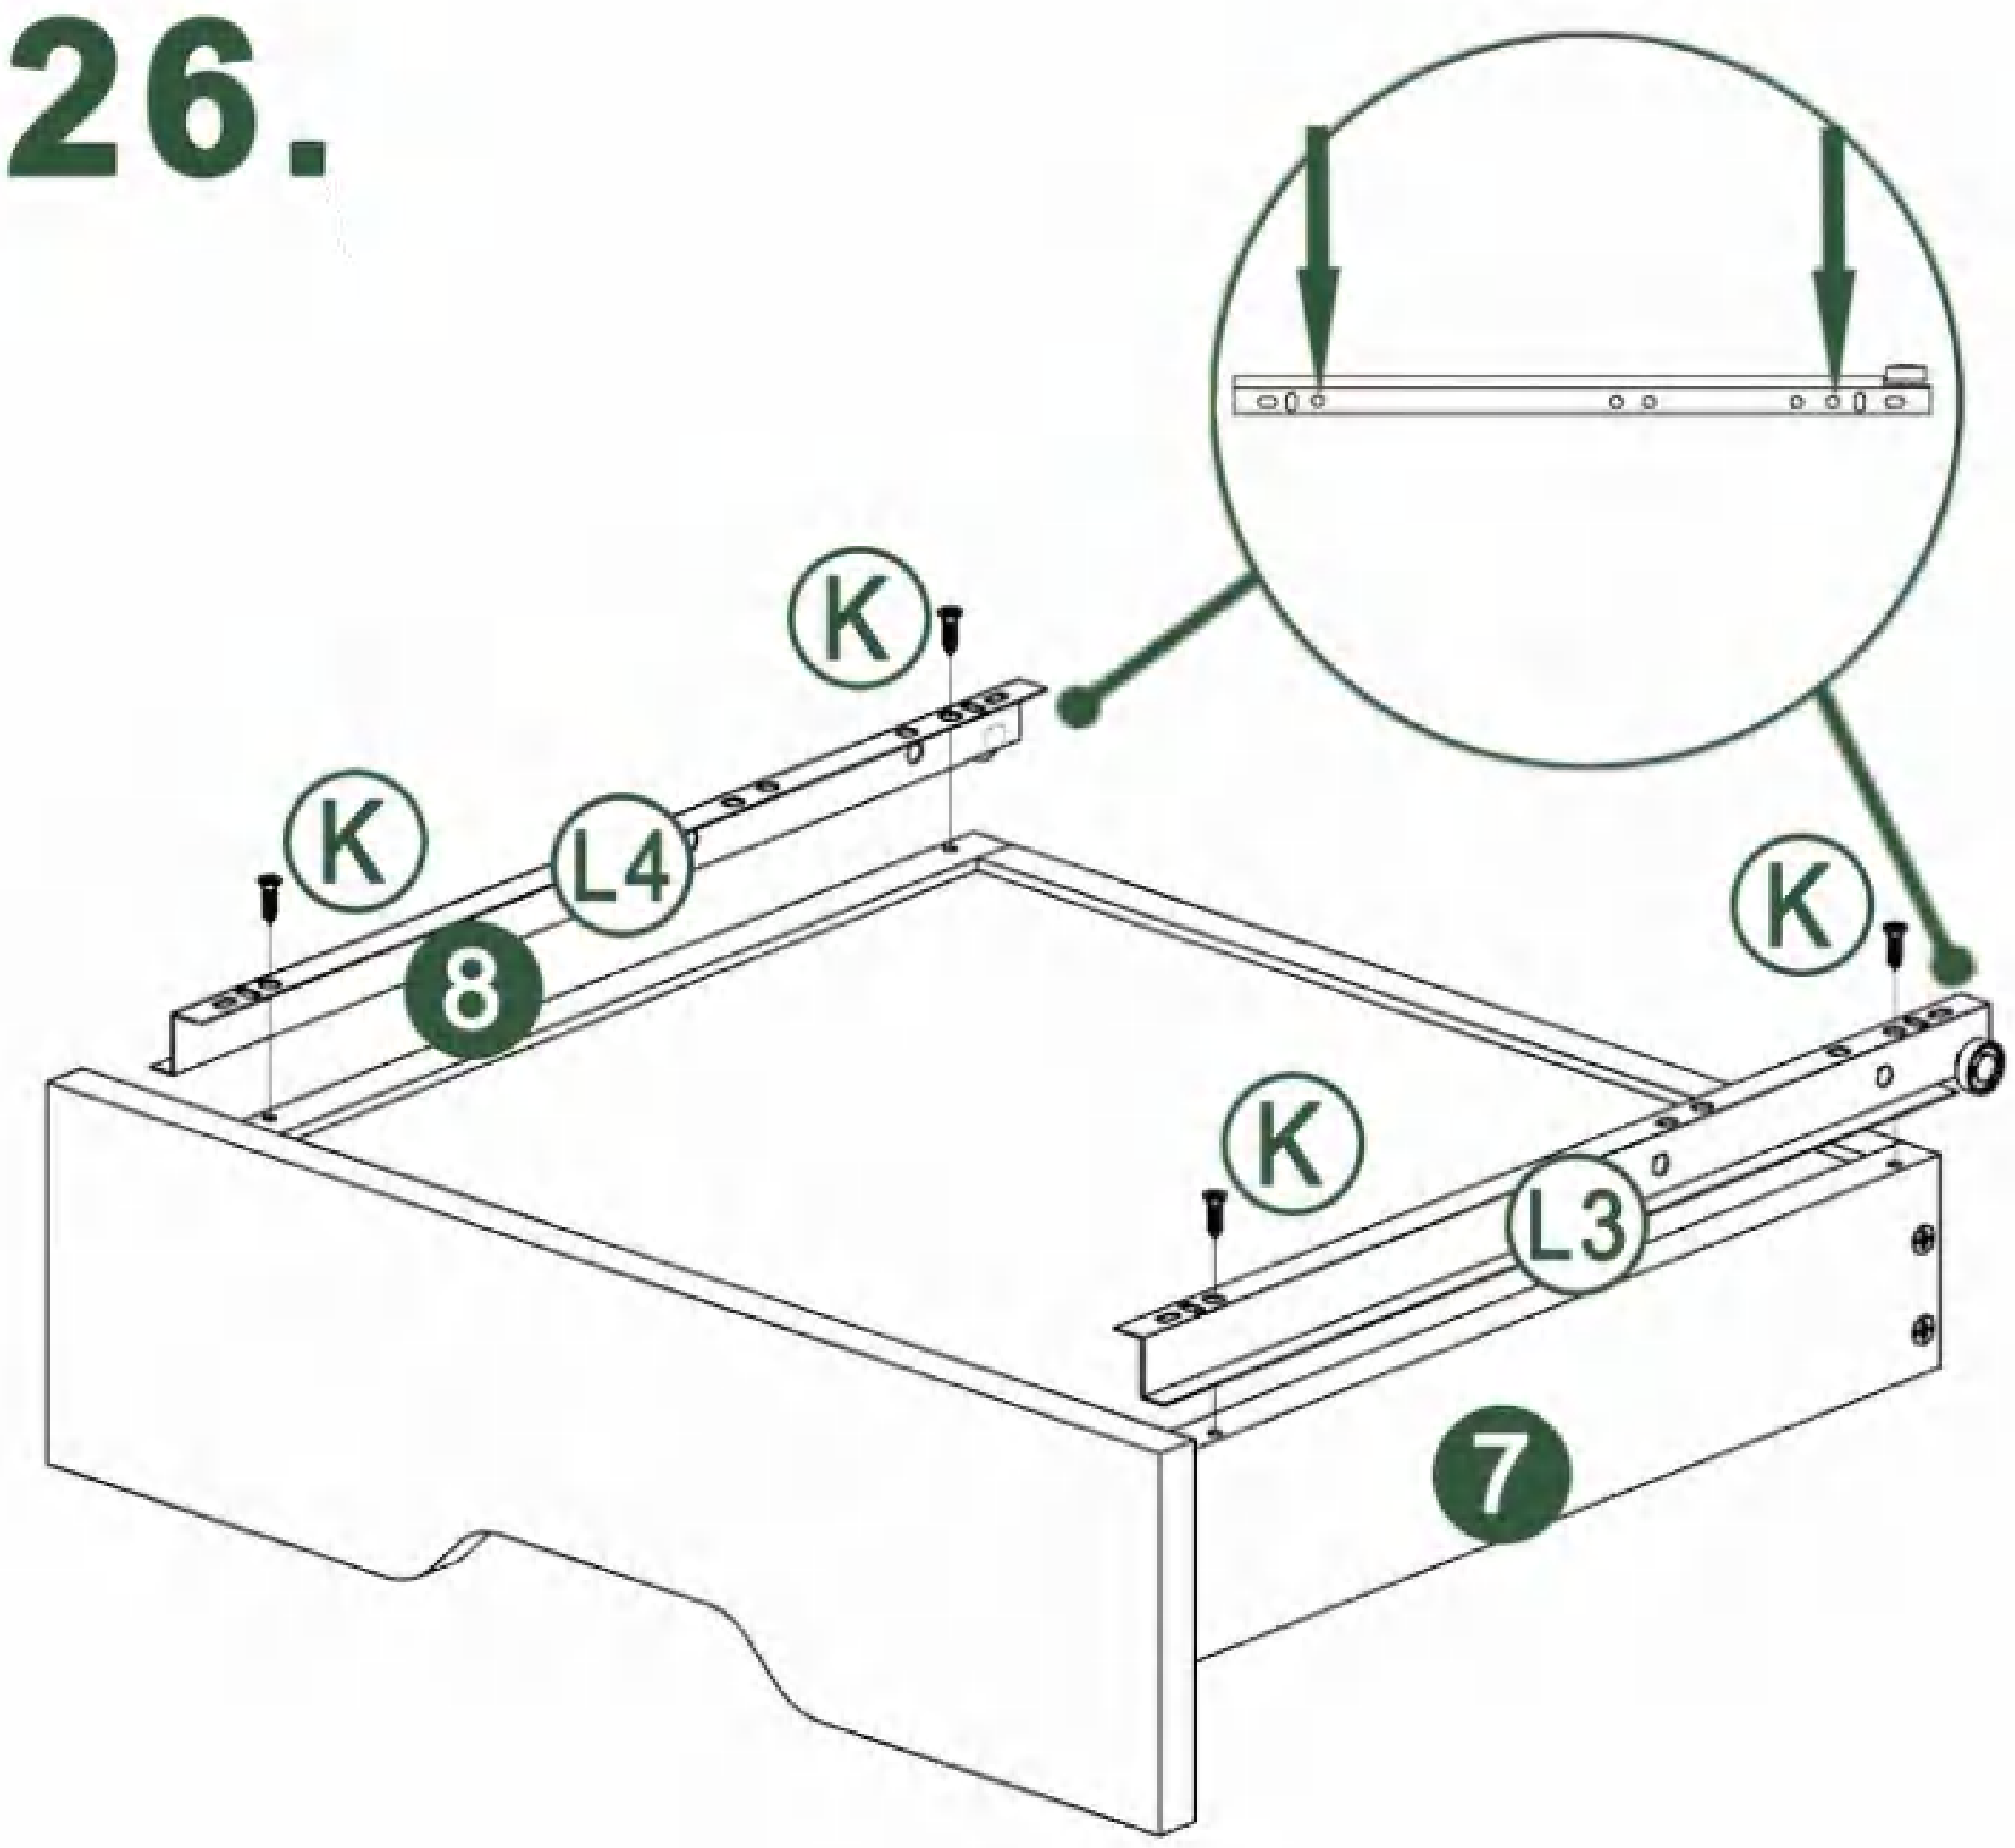

27.



28.

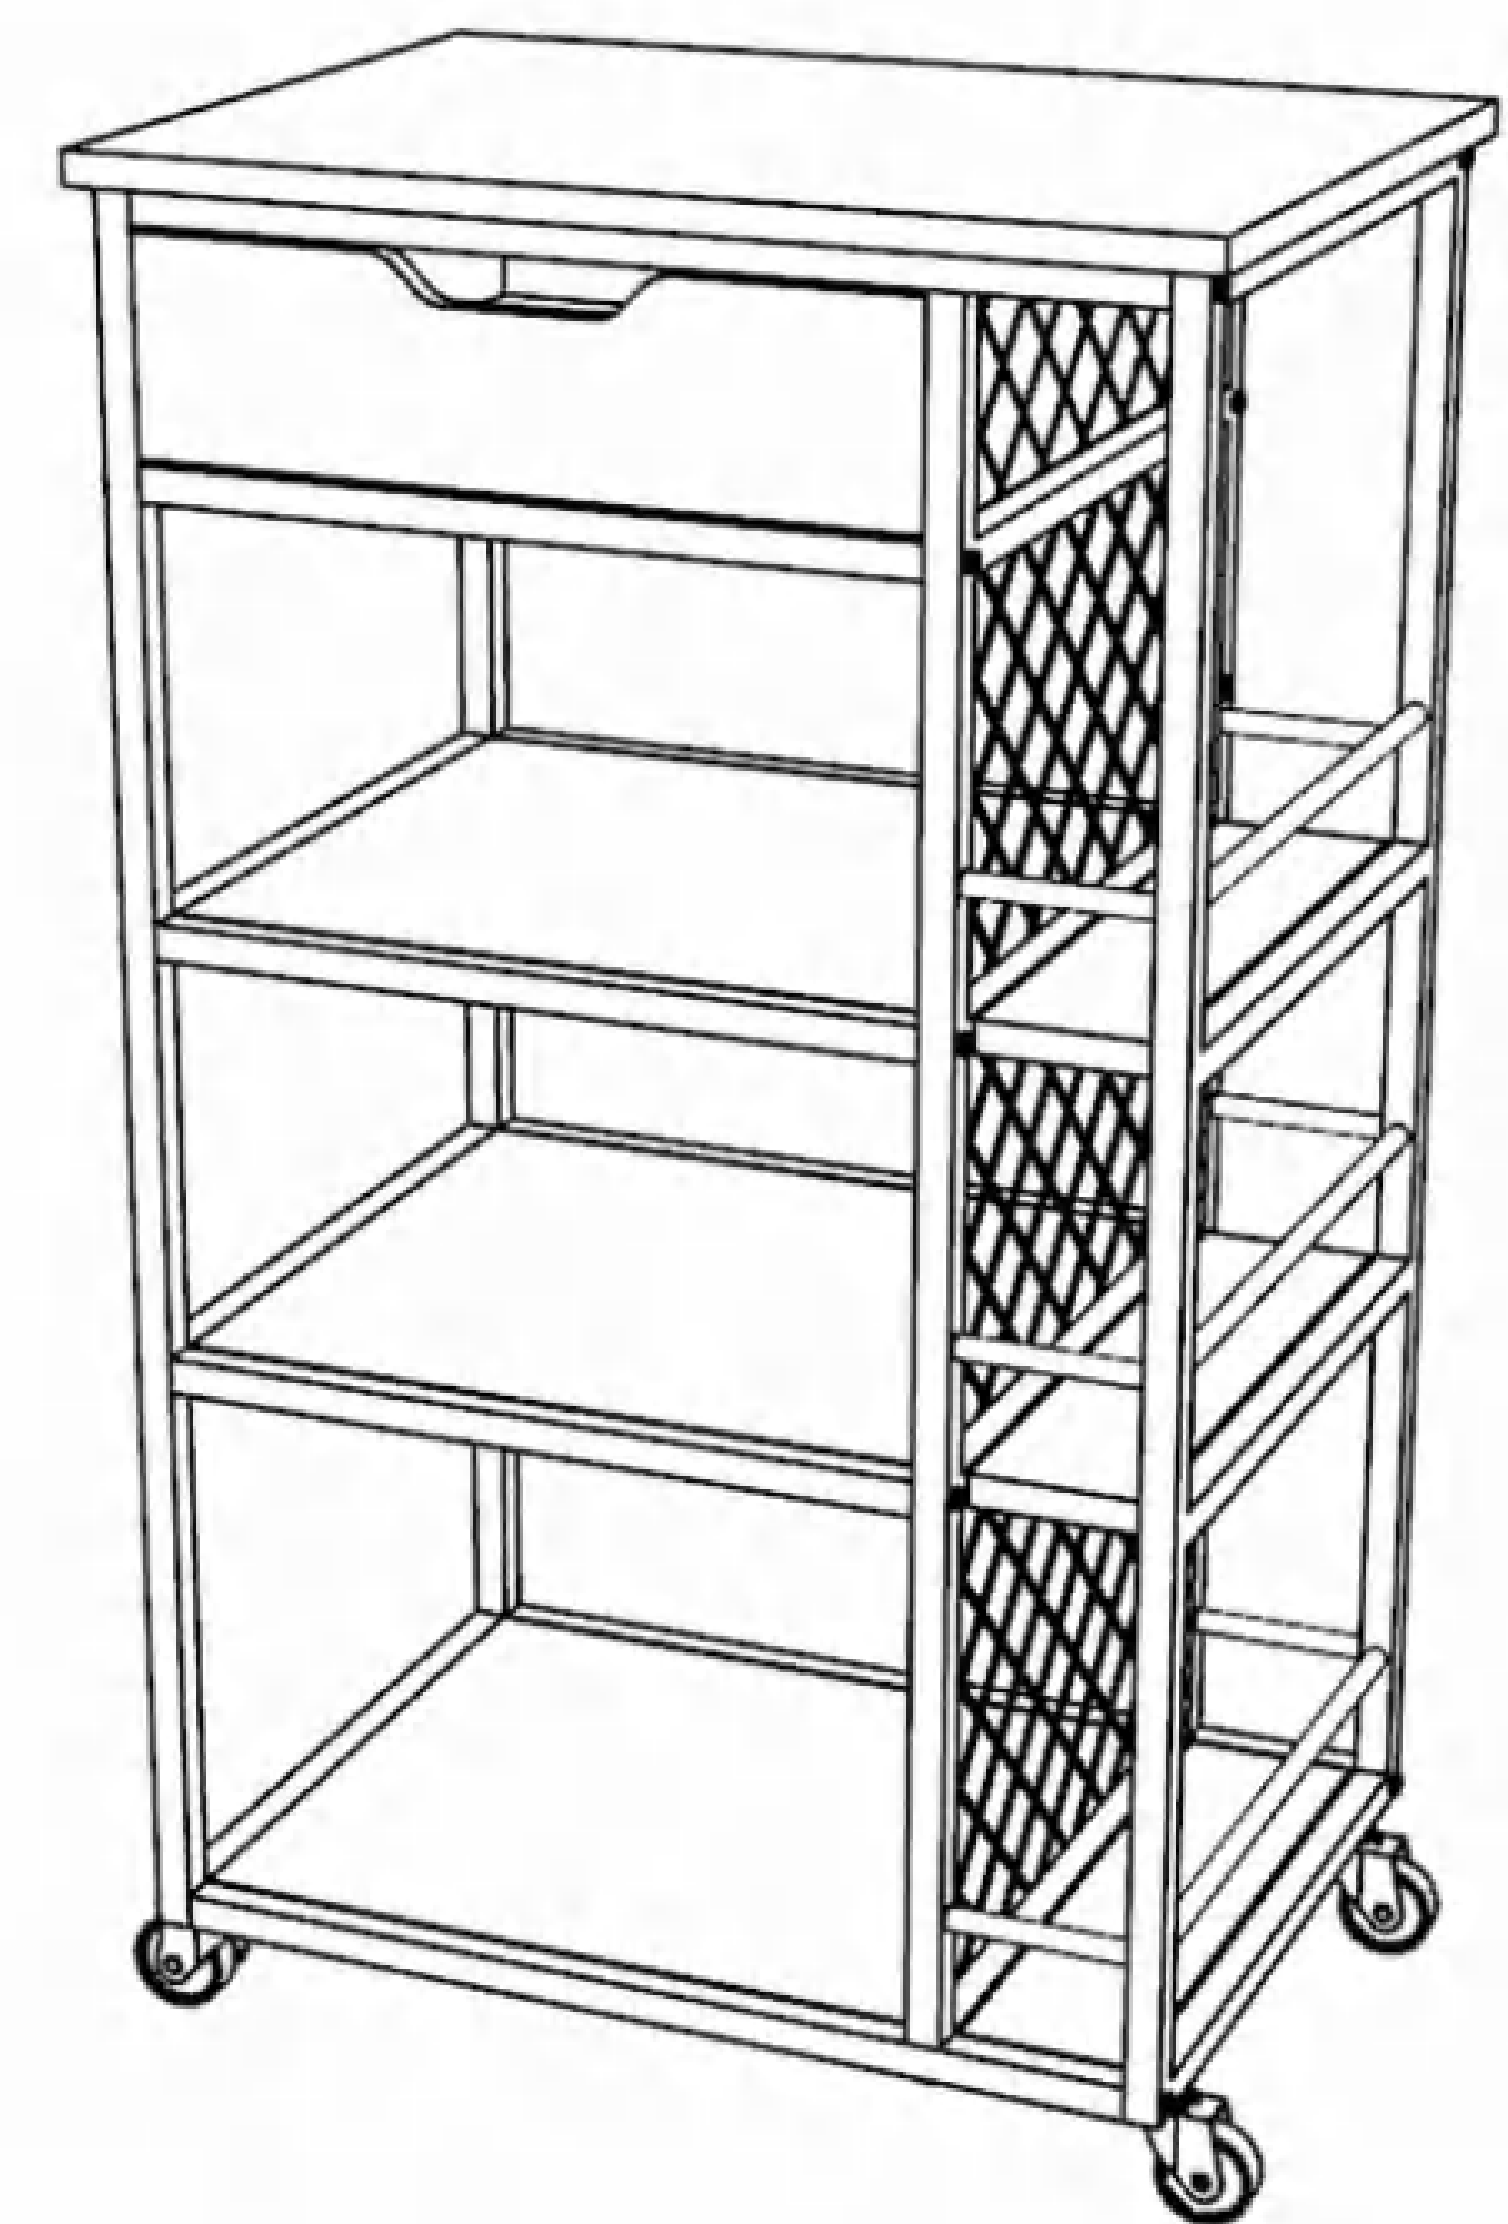

Scan the QR code to answer a short survey



Scan the QR code to share your review