


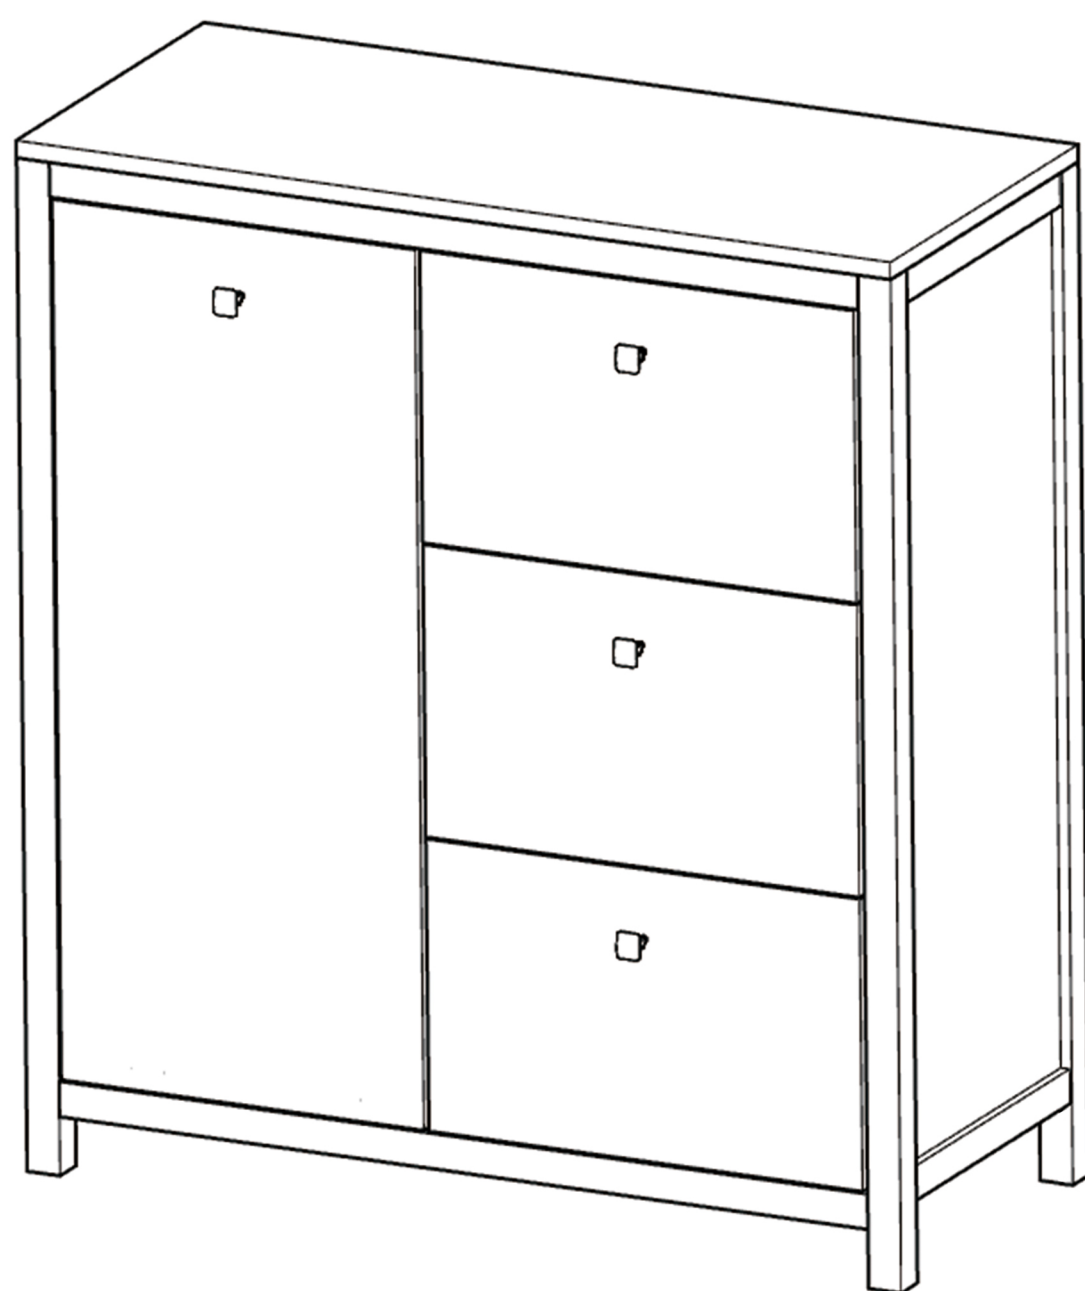

BZR97




TOOLS:




Pour en savoir plus:
www.quefairedemesdechets.fr

PACKAGING A

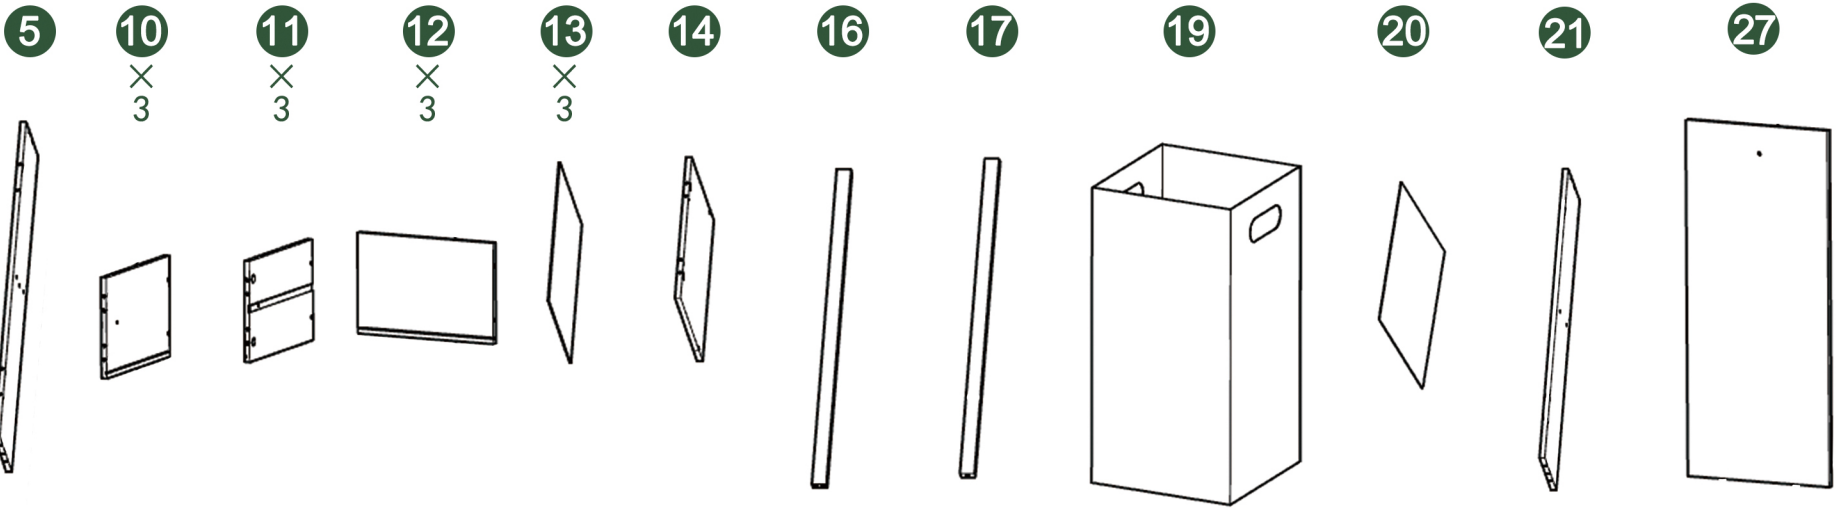


PACKAGING B

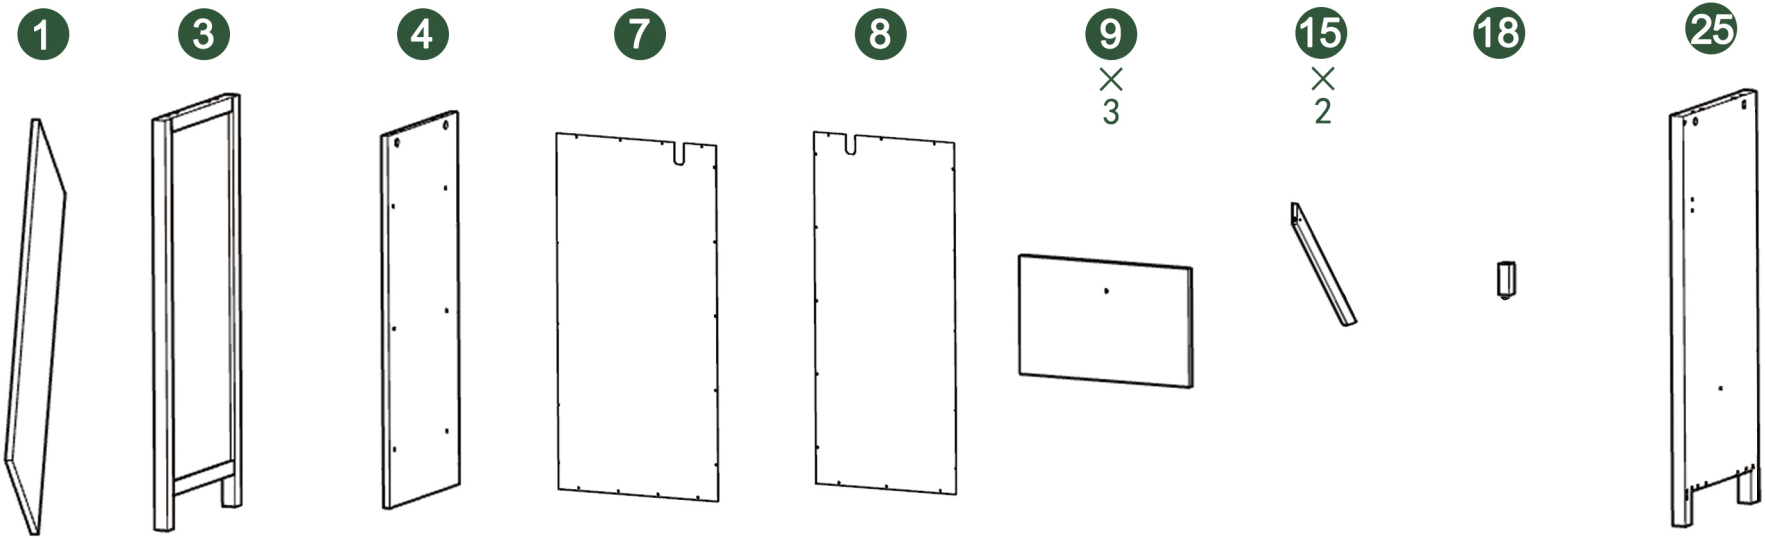


UNIT:MM PACKAGING A


A × 32 **B** × 32 **C** × 34 **D** × 21 **E** × 4 **F** × 2 **G** × 2 **H** × 29 **J** × 4 **K** × 4

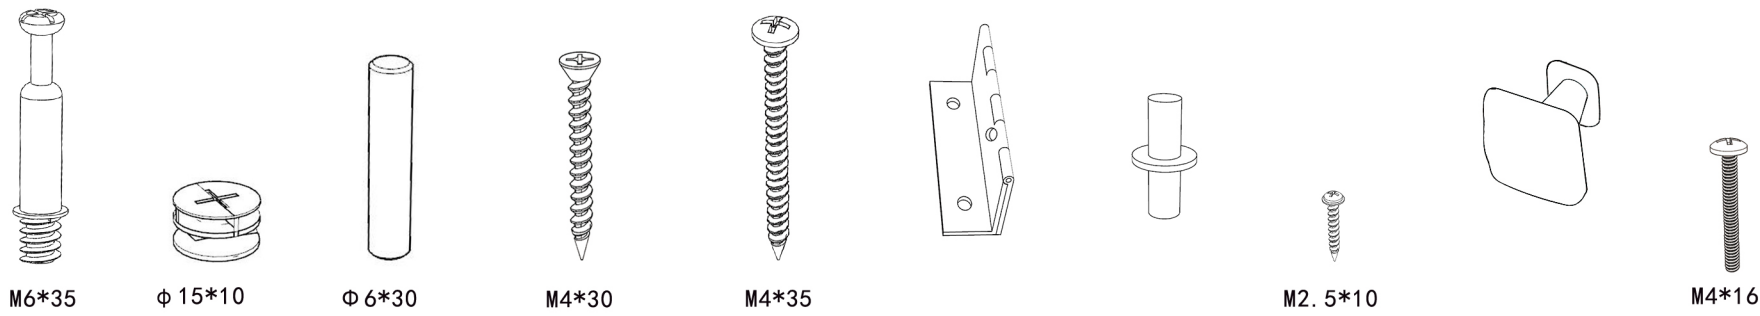




UNIT:MM

L × 2 **M** × 26 **N** × 2 **O** × 2 **P** × 2 **Q** × 4 **R** × 6 **S** × 6 **T** × 2 **U** × 4

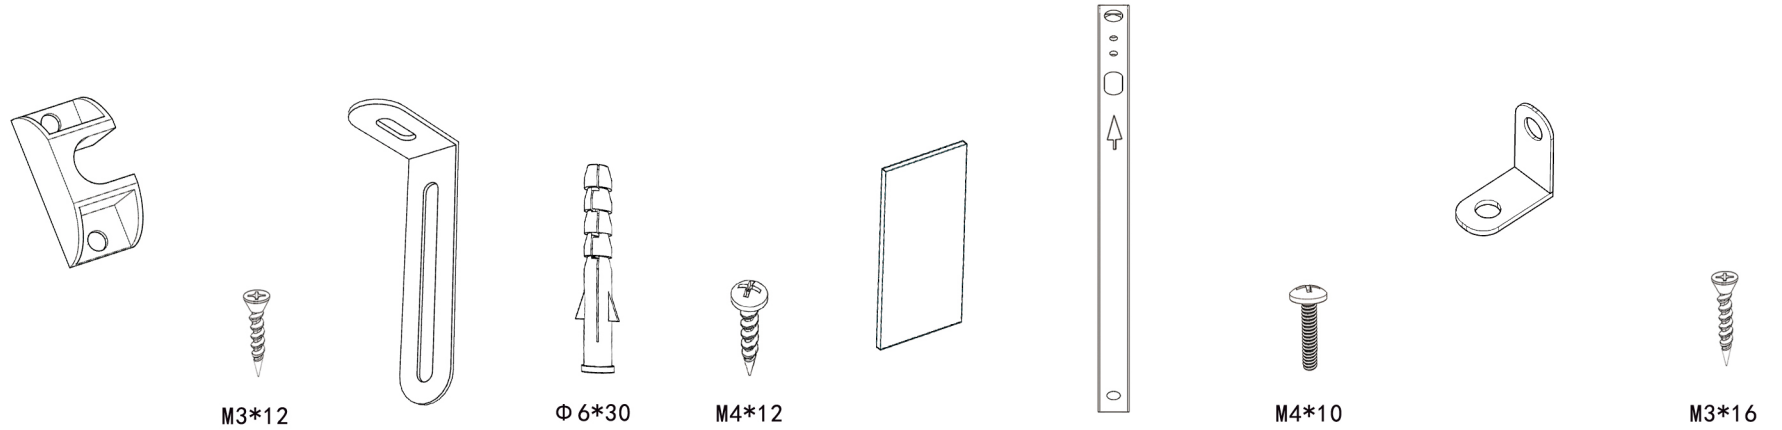


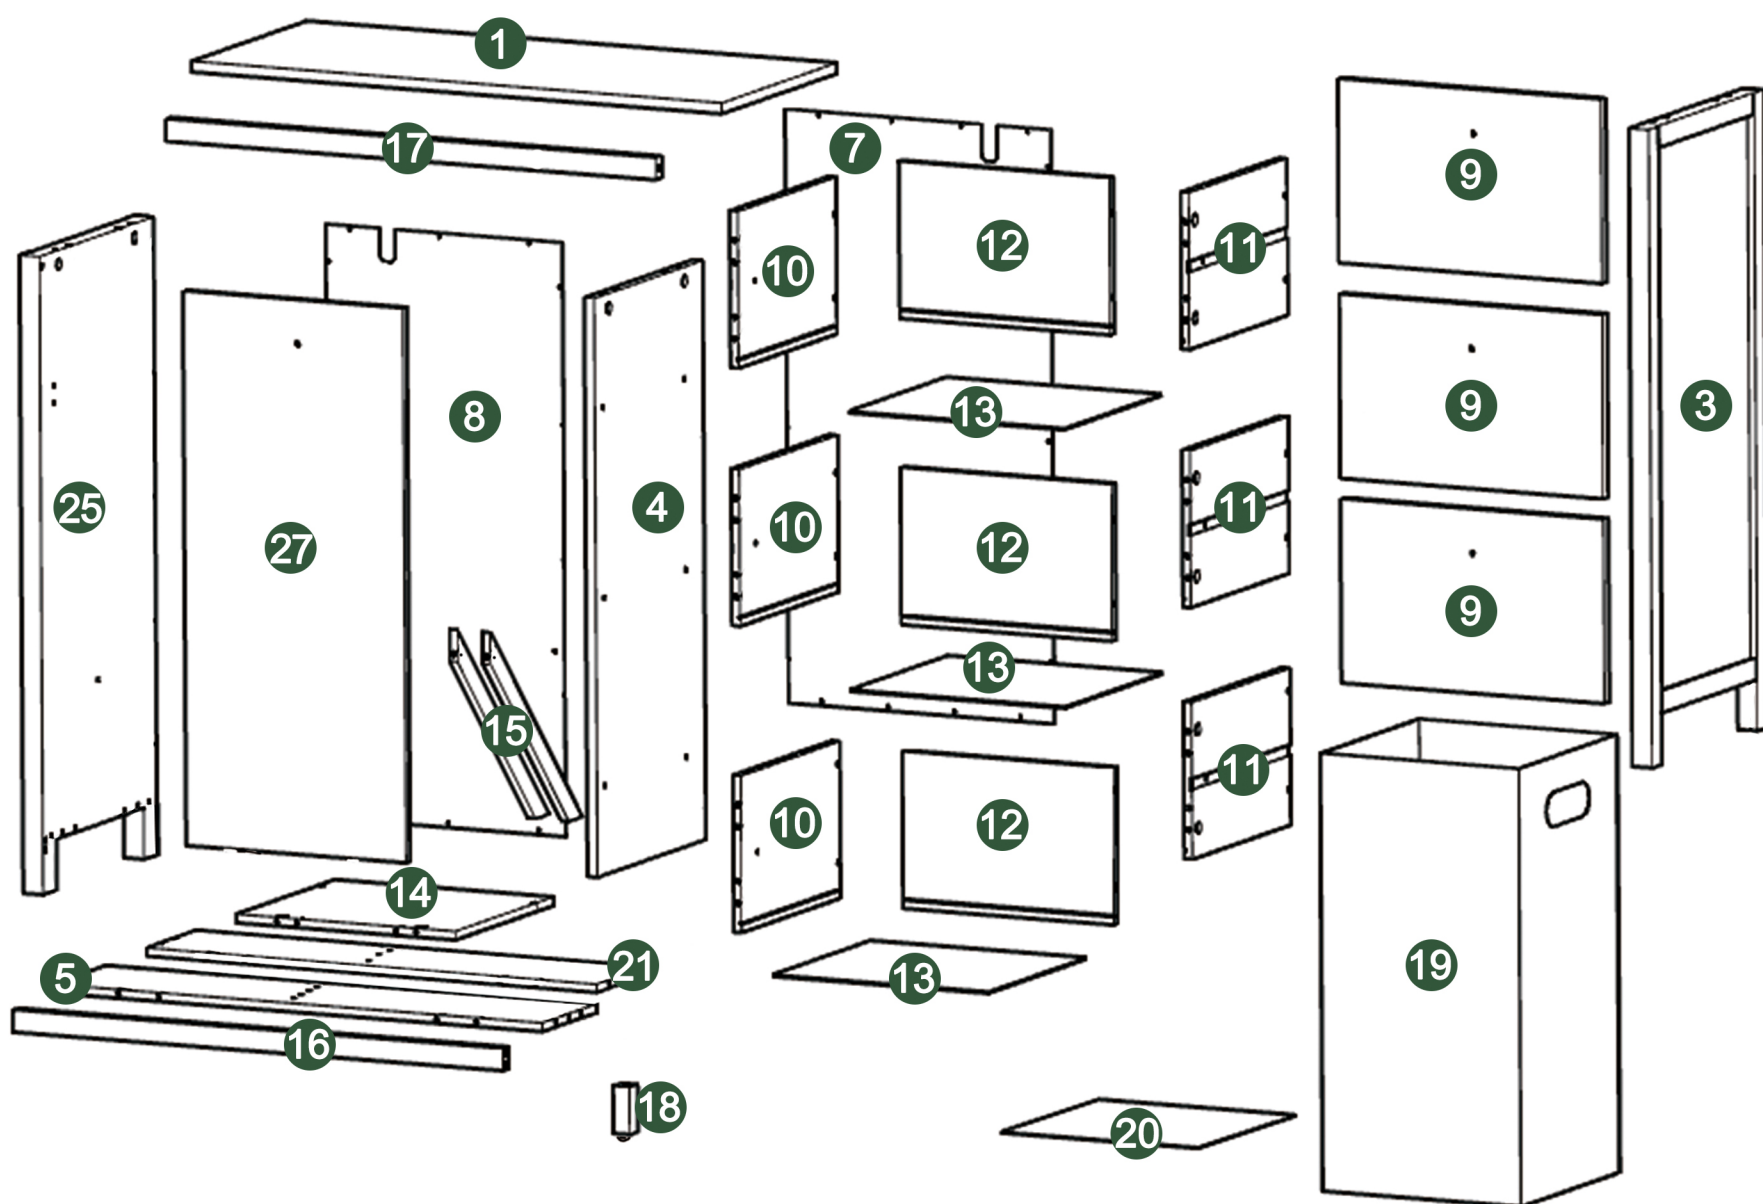


BOLT INSTALLATION AS BELOW:

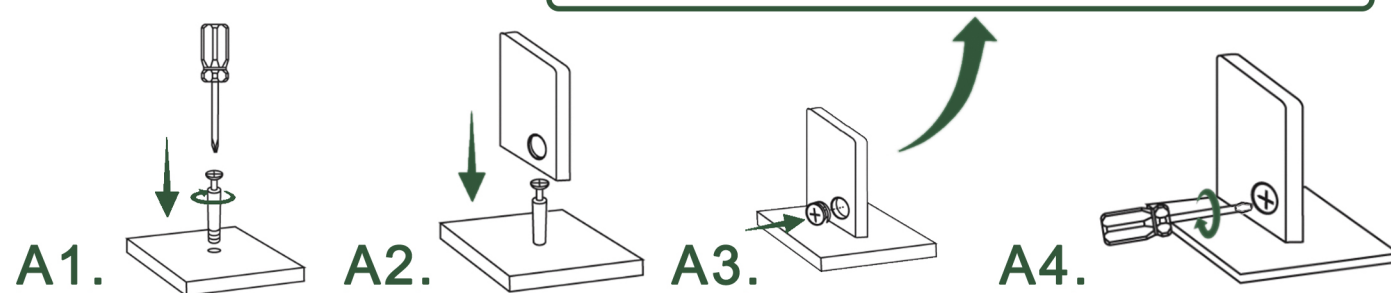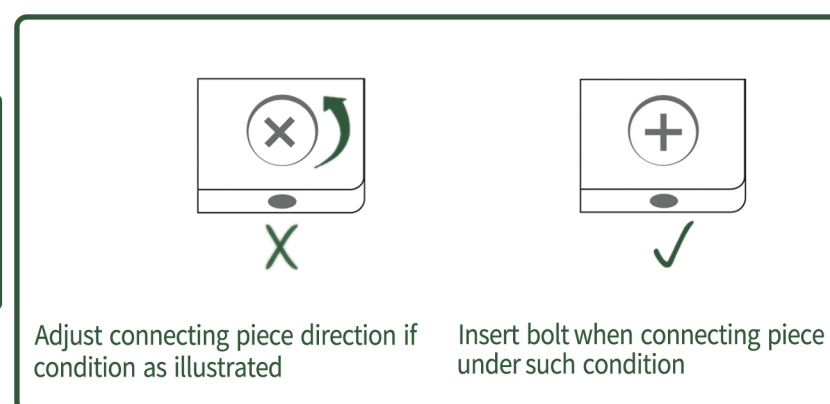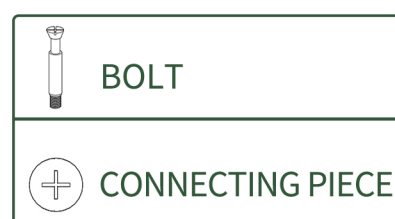


1.

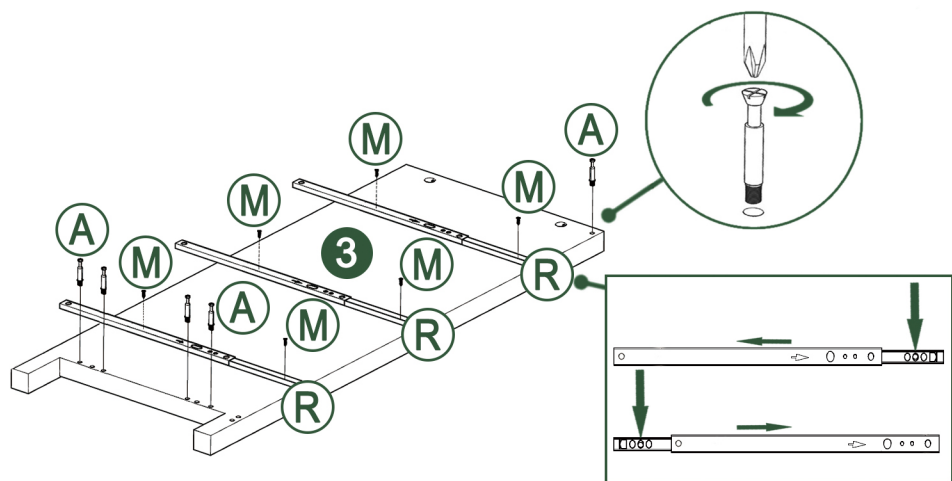


2.

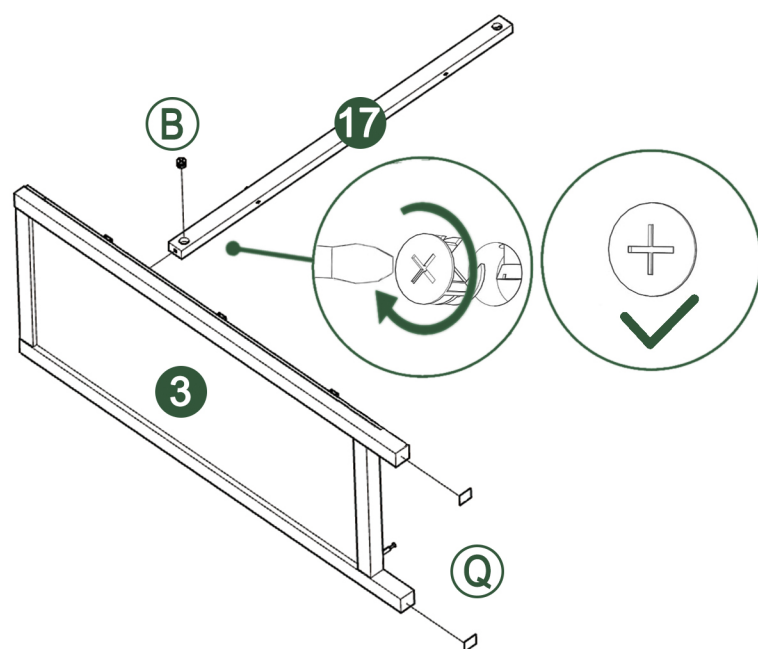


3.

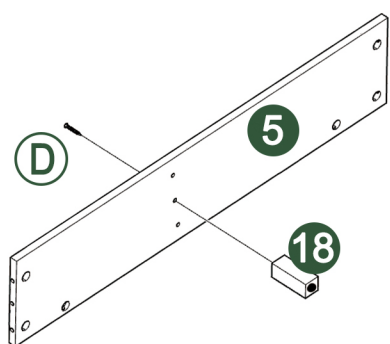


4.

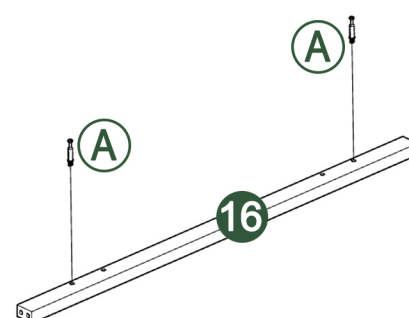


5.

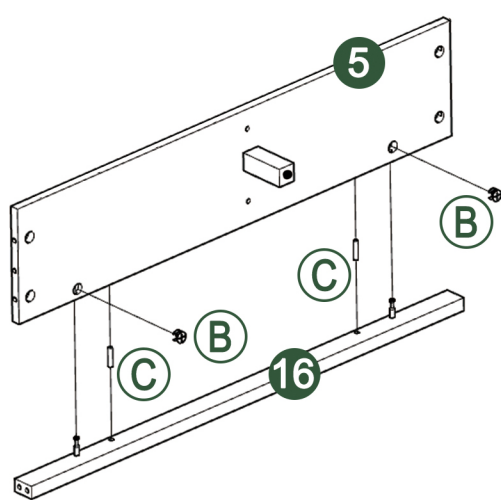


6.

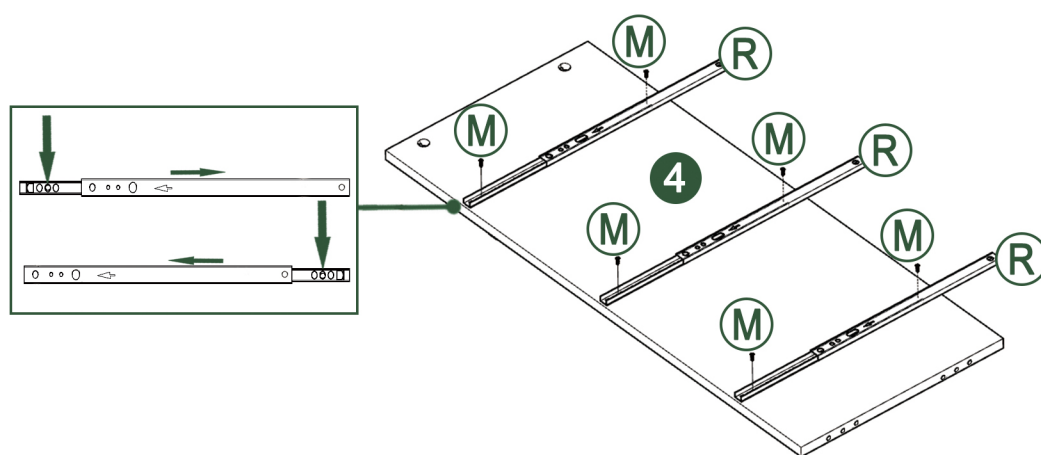


7.

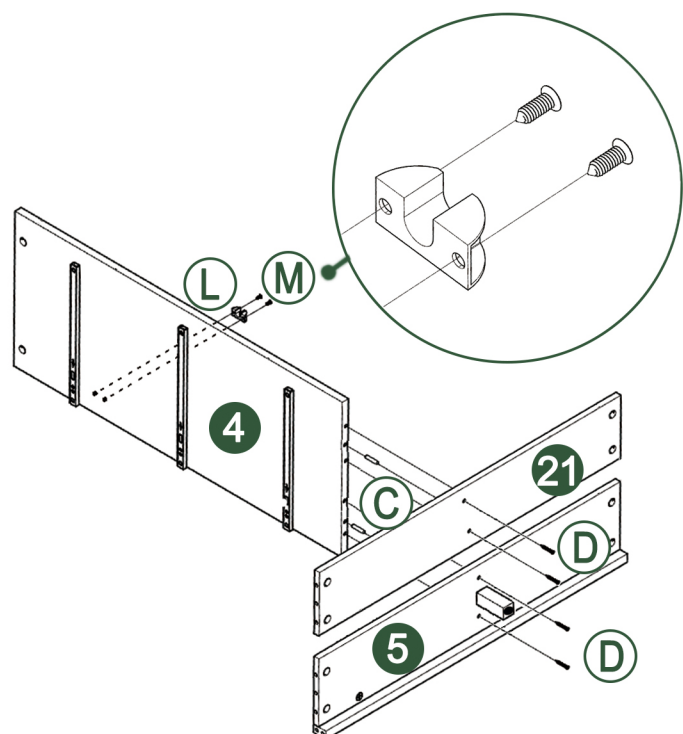


8.

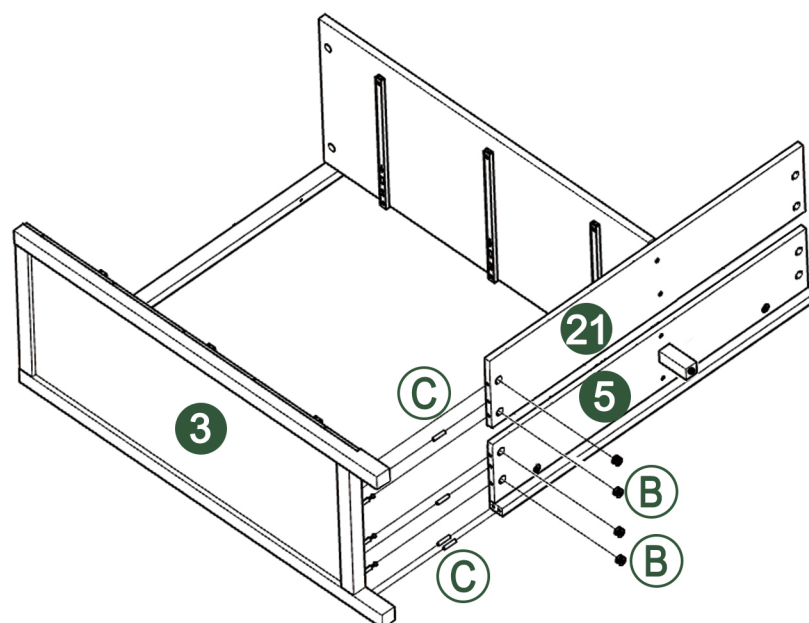


9.

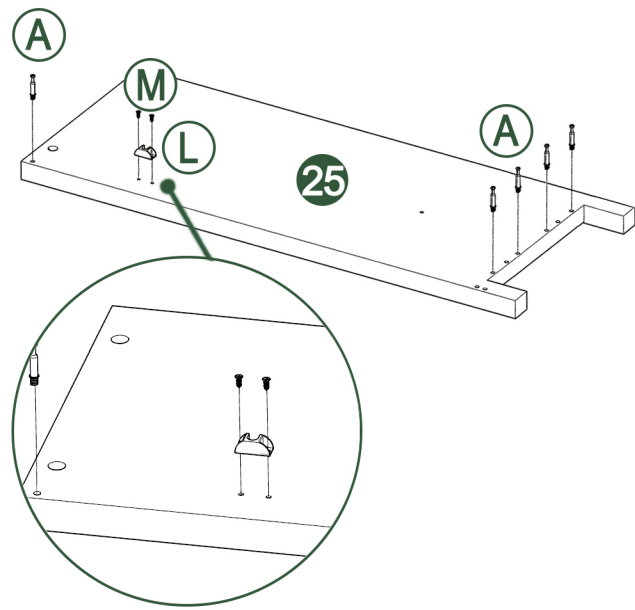


10.

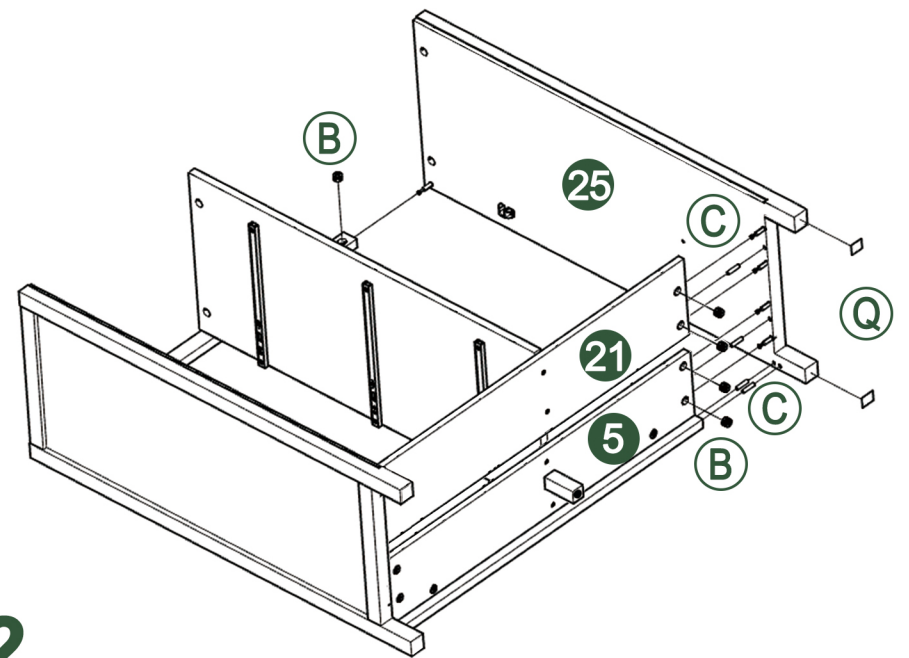


11.

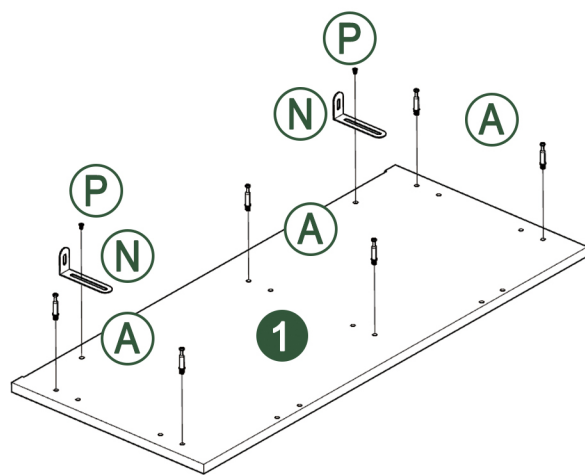


12.

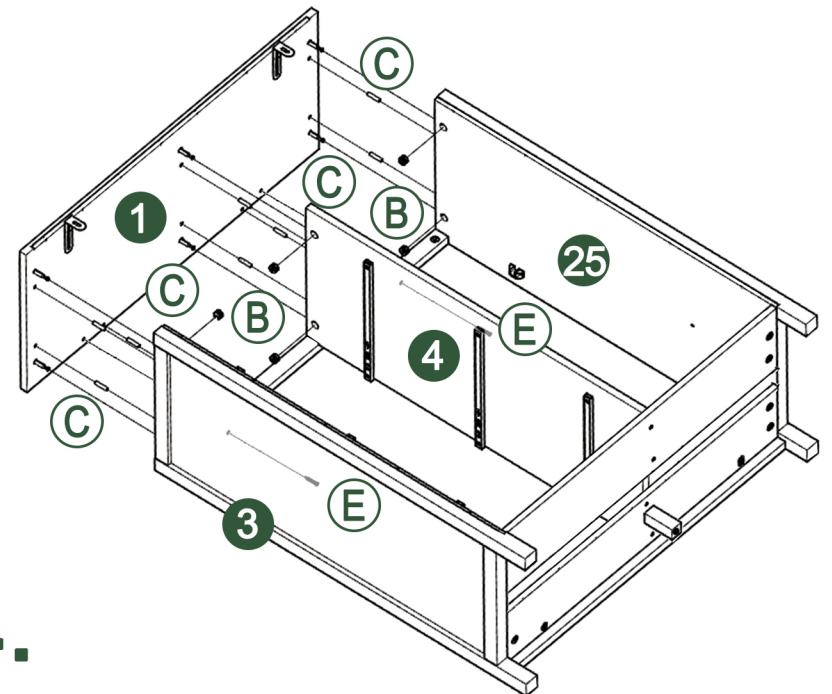


13.

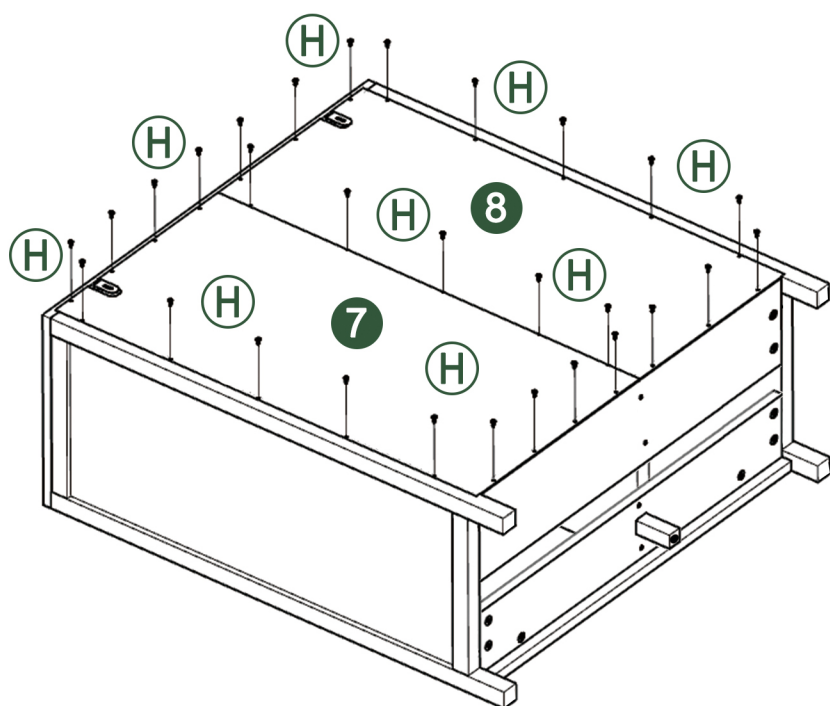


14.

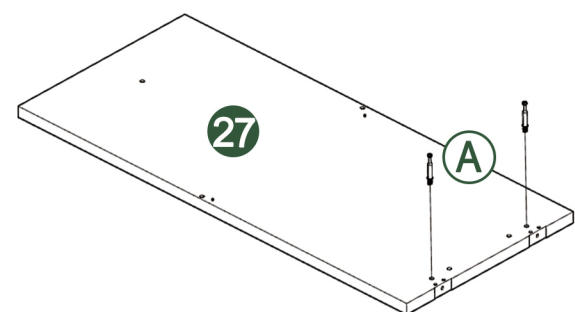


15.

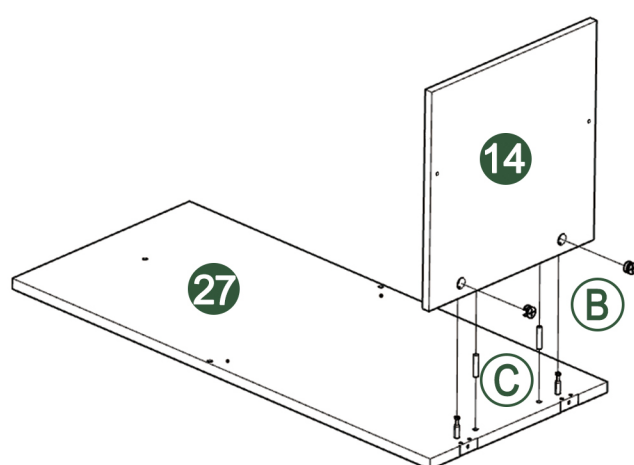


16.

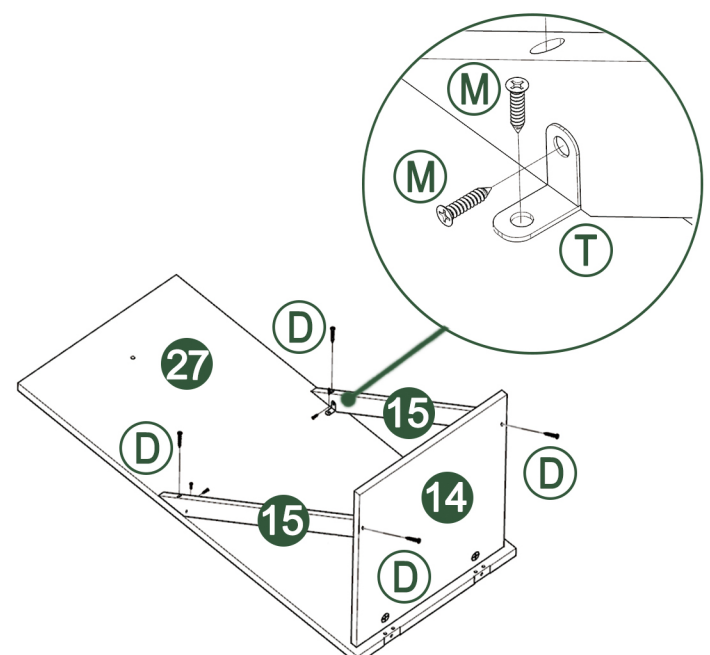


17.

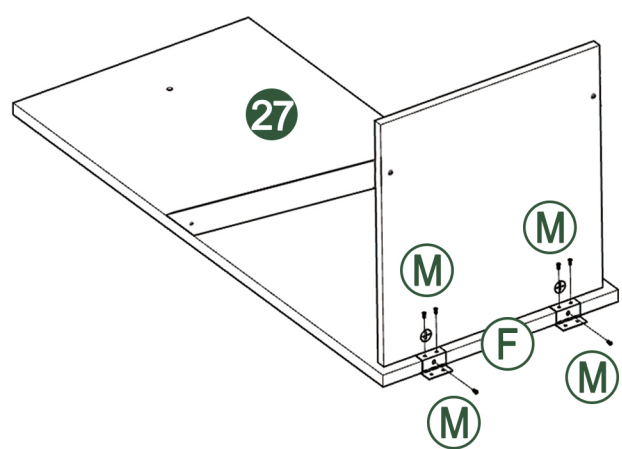


18.

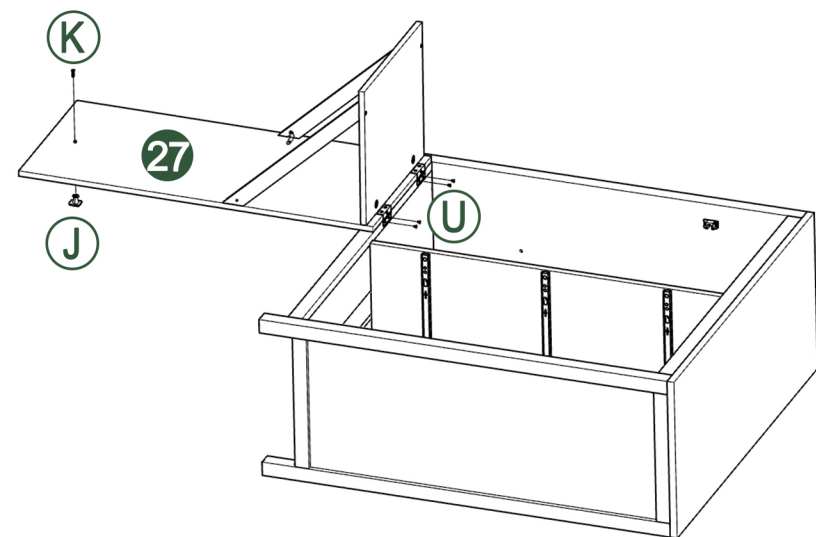


19.

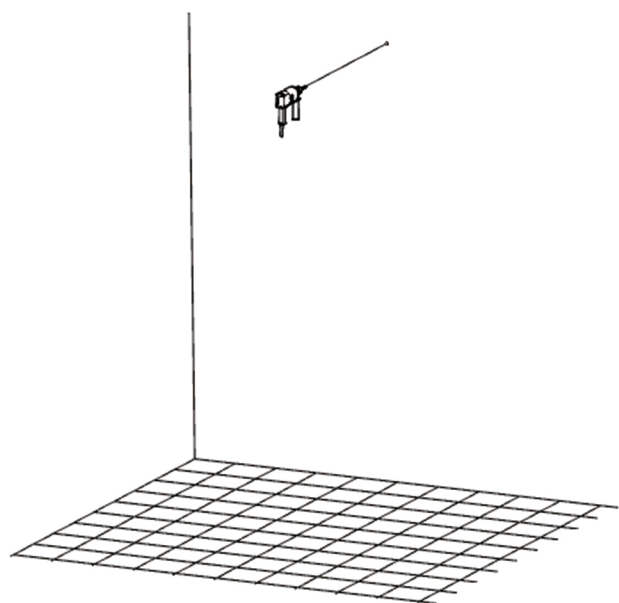


20.

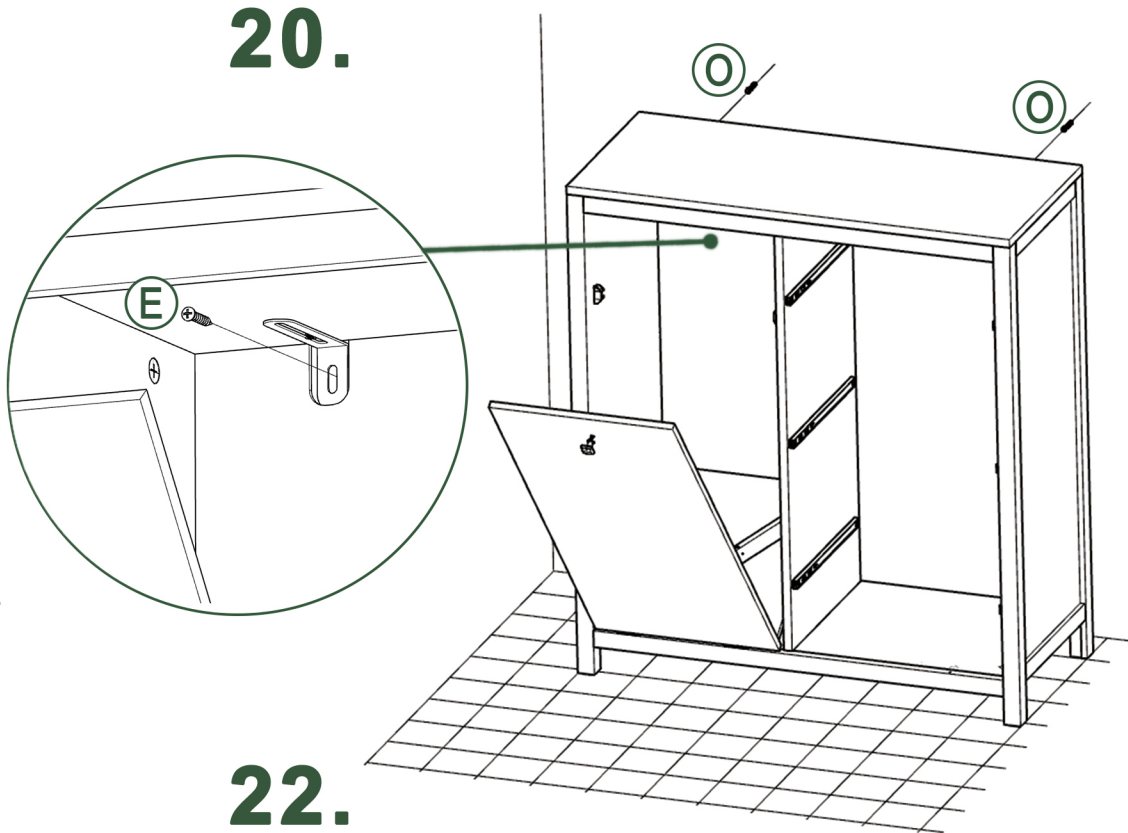


21.

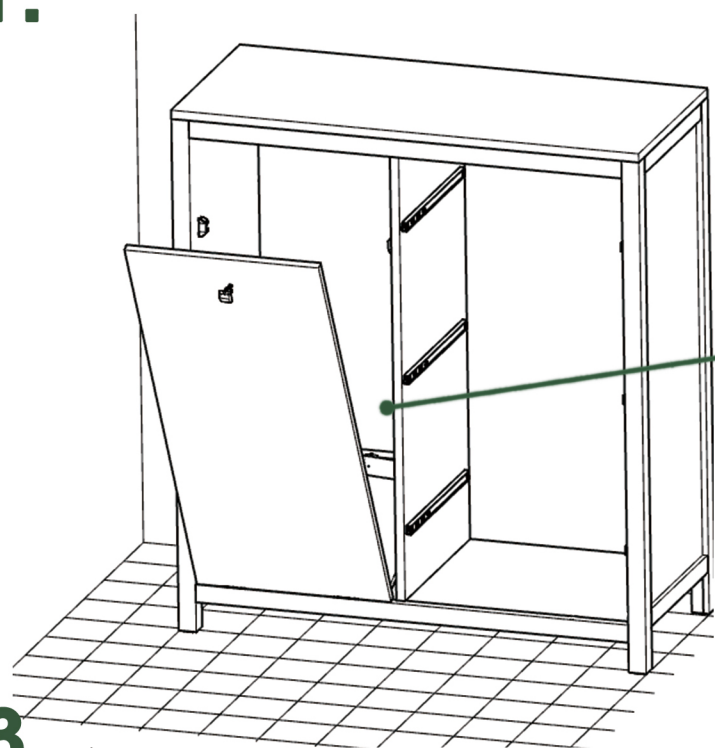


22.

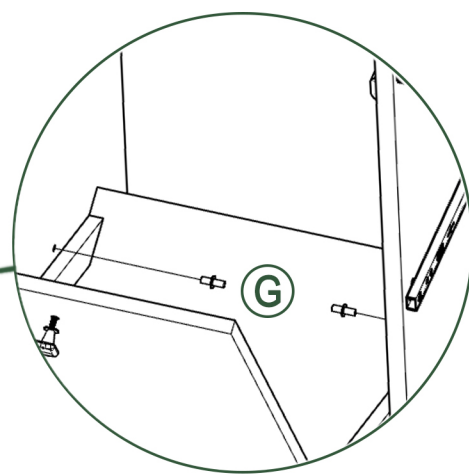


23.

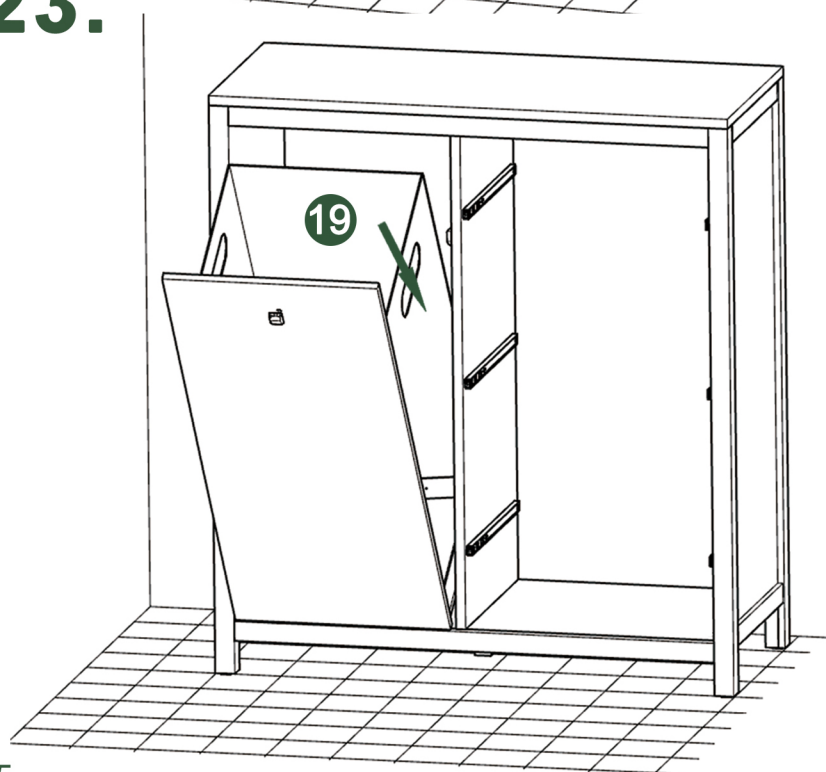


24(X3).

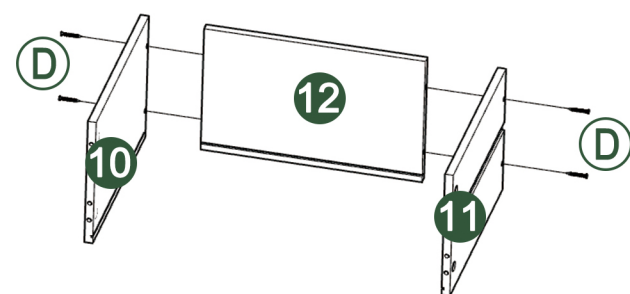


25(X3).

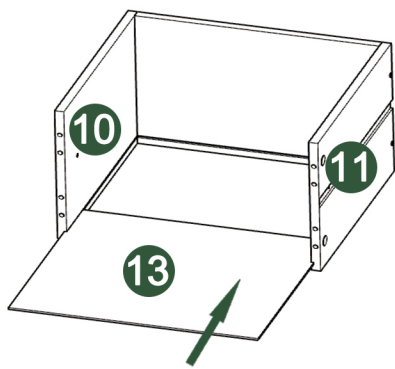


26(X3).

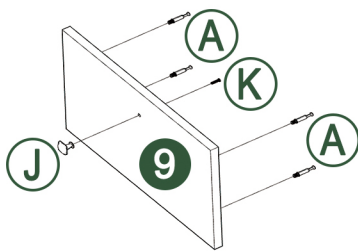


27(X3).

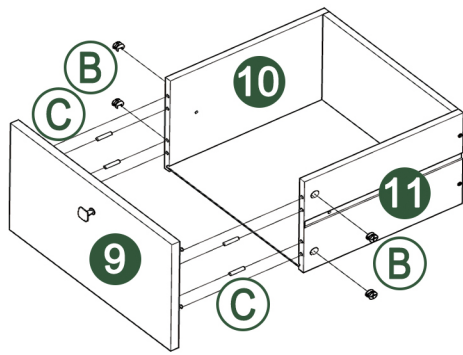

28

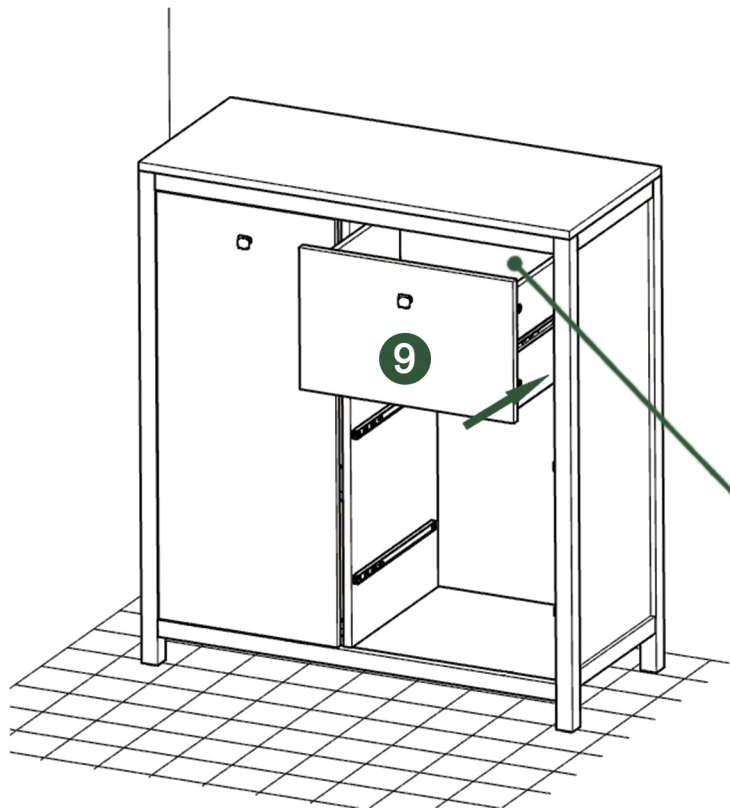

29.

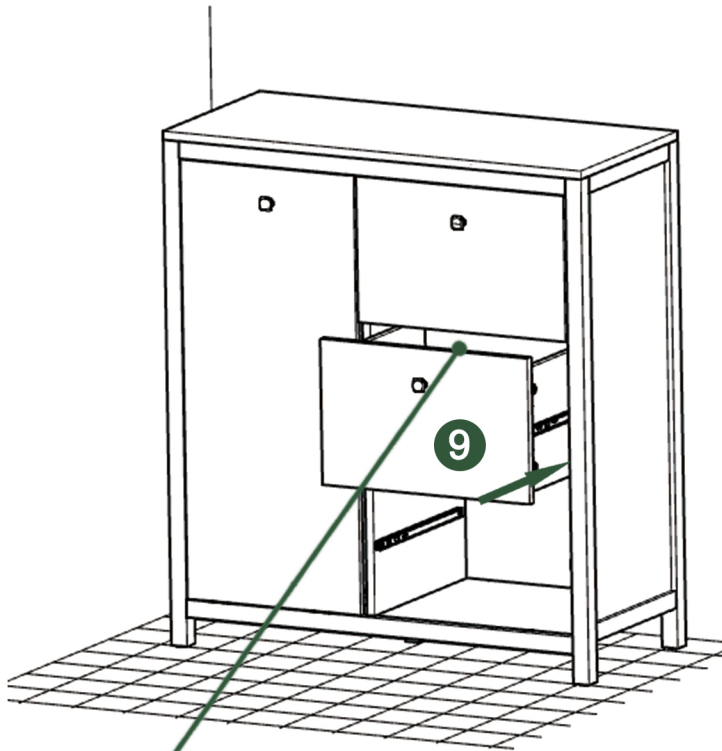

30.

