



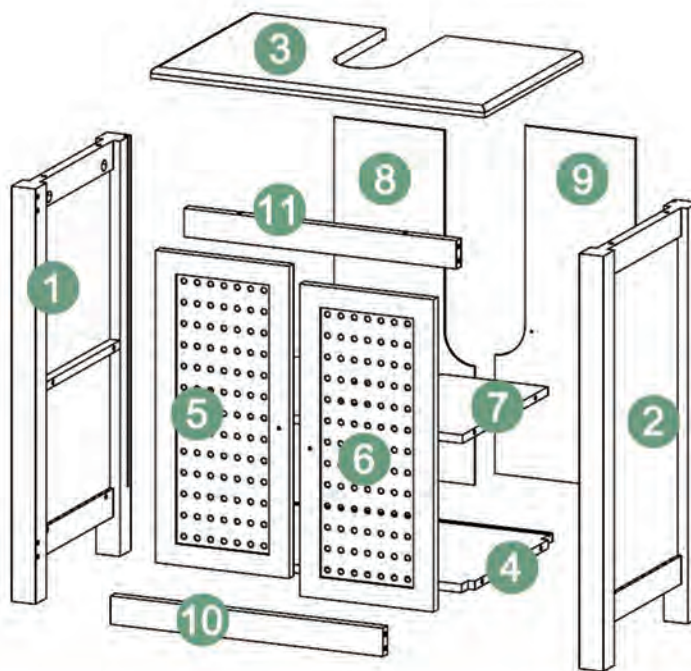

BZR35

SoBuy®

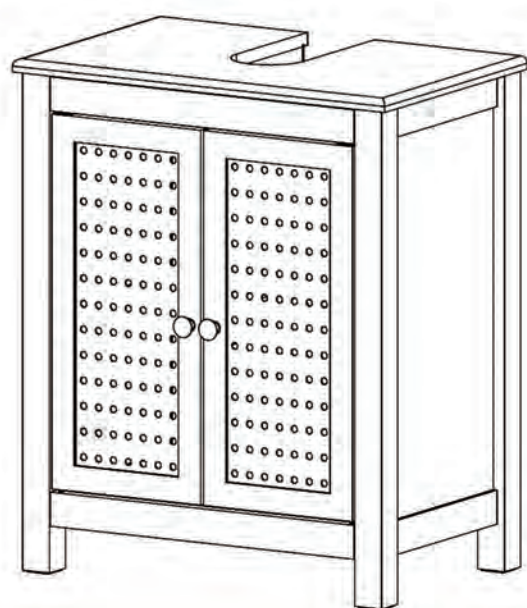

TOOLS:



UNIT:MM

1




585×312×36

2



585×312×36

3

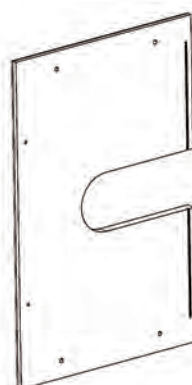

500×320×15

4



430×298×12

5



440×200×15

UNIT:MM

6




440×200×15

7




408×275×12

8

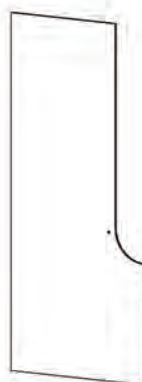

495×210×3

9

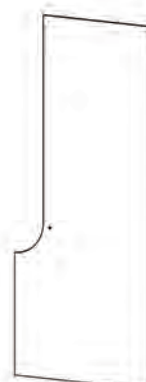

495×210×3

10



408×40×15

11



408×40×15

UNIT:MM

A
×14

B
×14

C
×6

D
×2

E
×2

F
×10

G

H
×2

J
×6

K
×2

L
×2

M
×2

N
×4

P
×2

Q
×4




M6×35




Φ15×9.5



Φ6×30

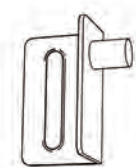

Φ5×17×11.5



Φ5×17×11.5



M3×12



45×15×14



35×12×1.2



M3×14




M3×12



Φ23.5×21.5



M4×16

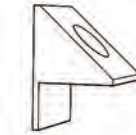

10×10



M4×45





30×30




Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:03.2020


BOLT INSTALLATION AS BELOW:

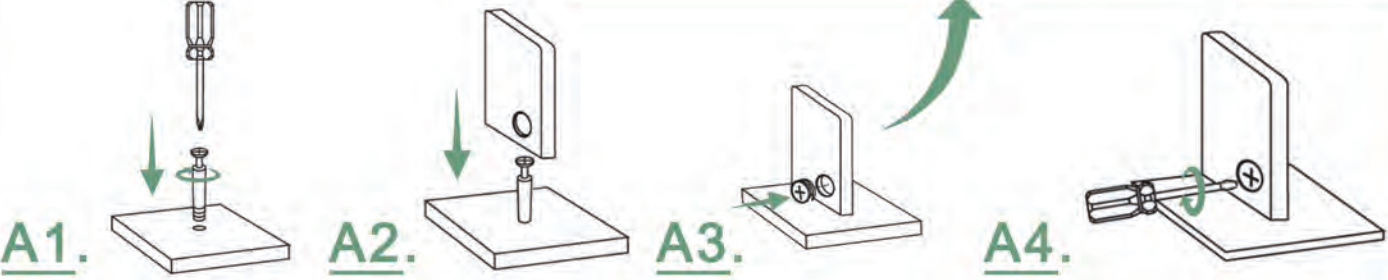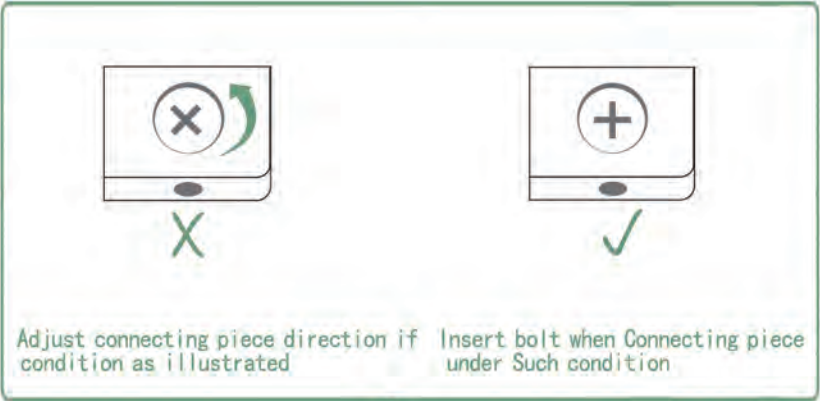

BACKPLATE BUCKLE INSTALLATION AS BELOW:


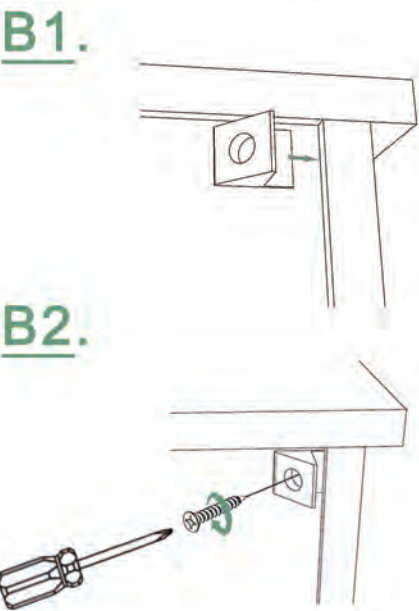


SPIALE INSTALLATION AS BELOW:

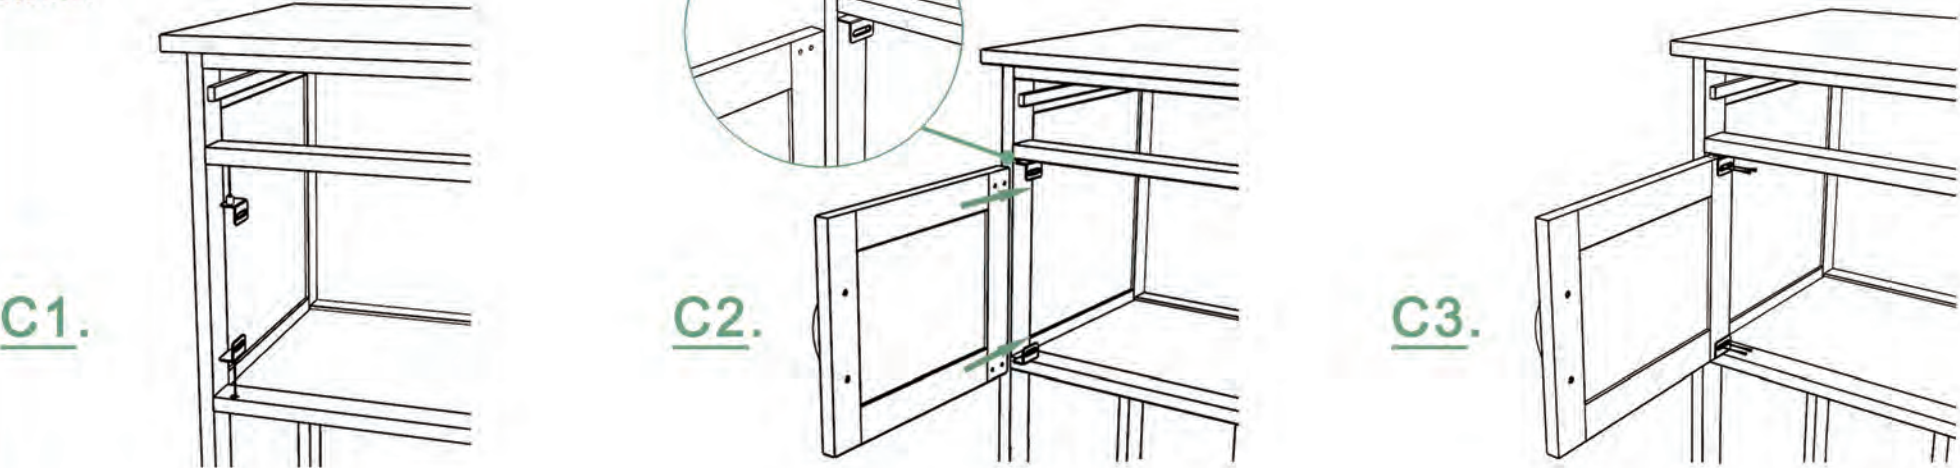


1.


2.

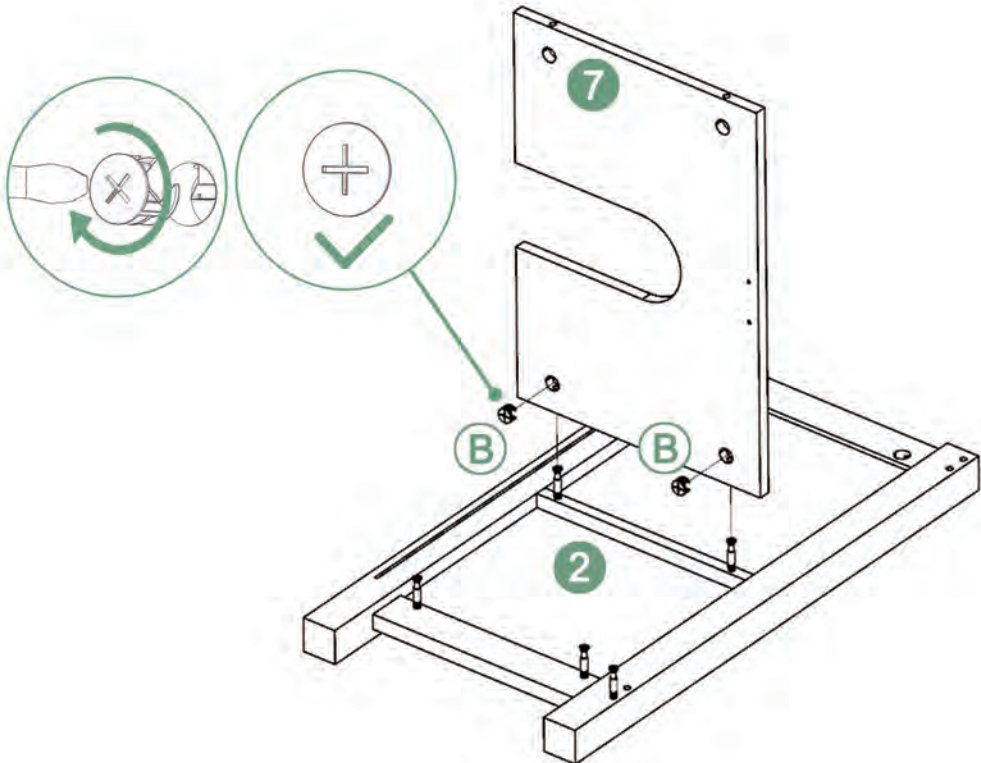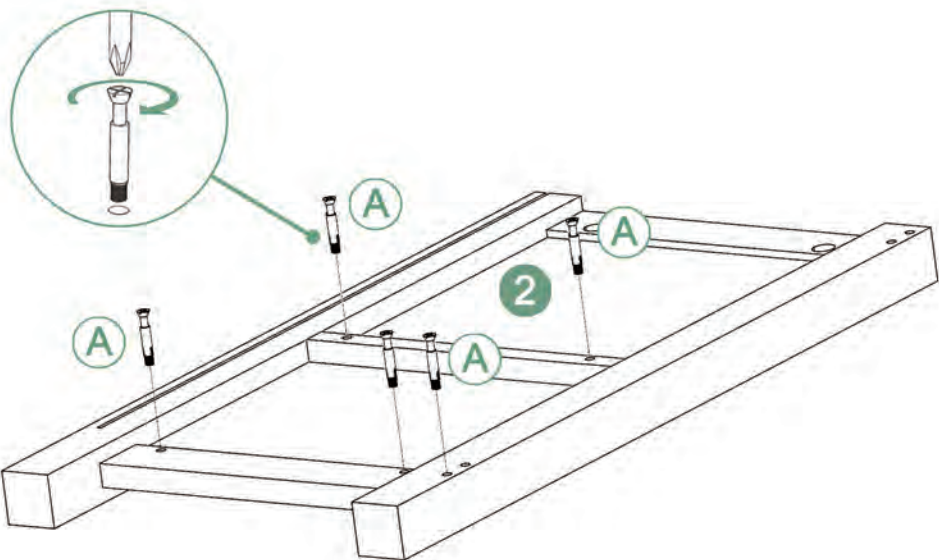


3.

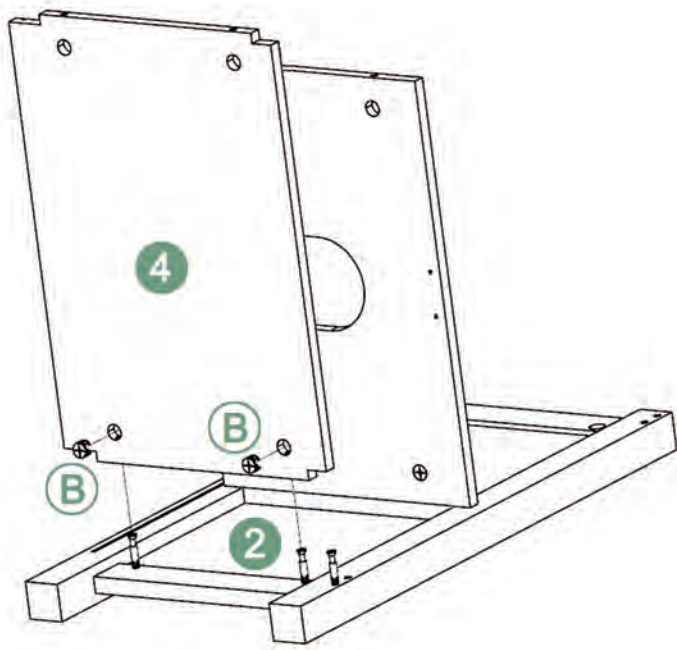


4.

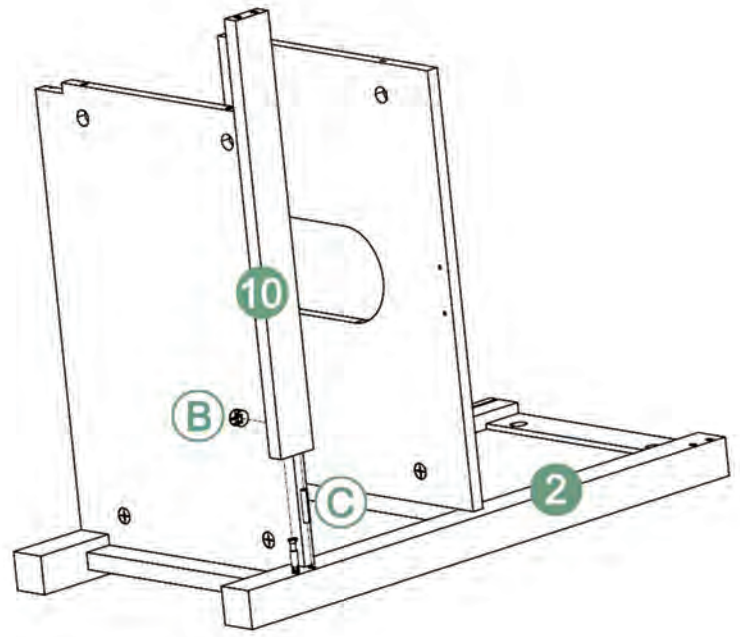


5.

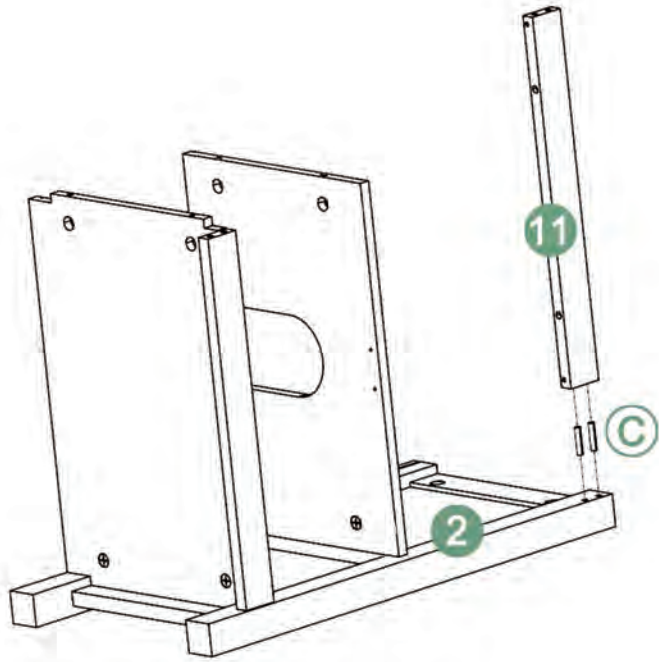


6.

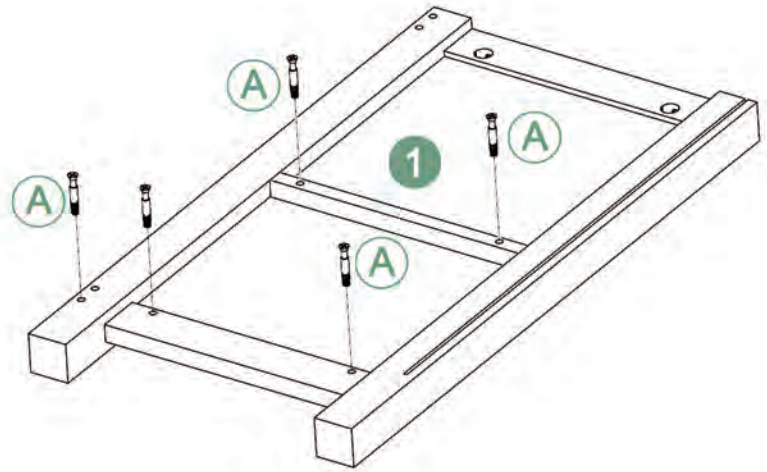


7.

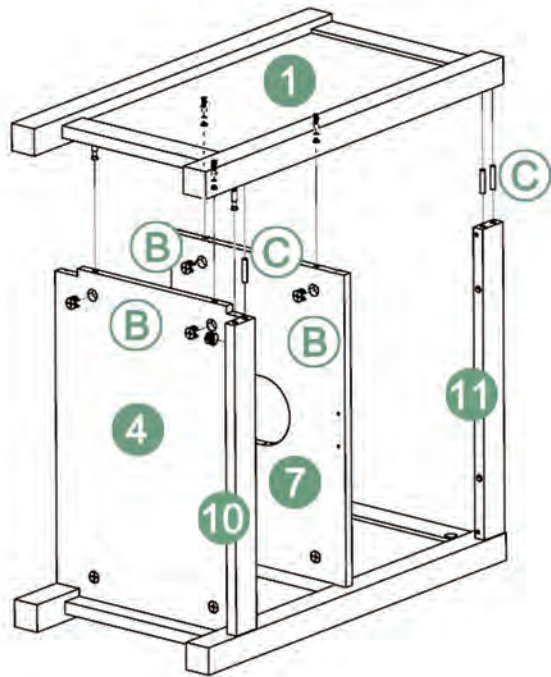


8.

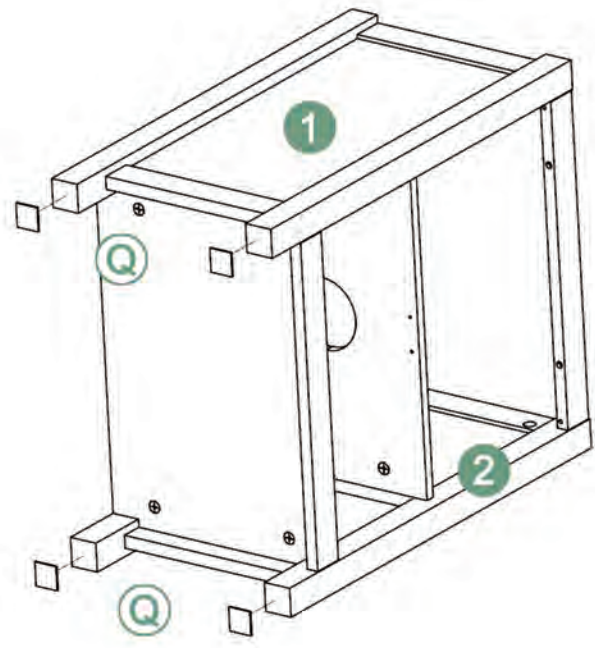


9.

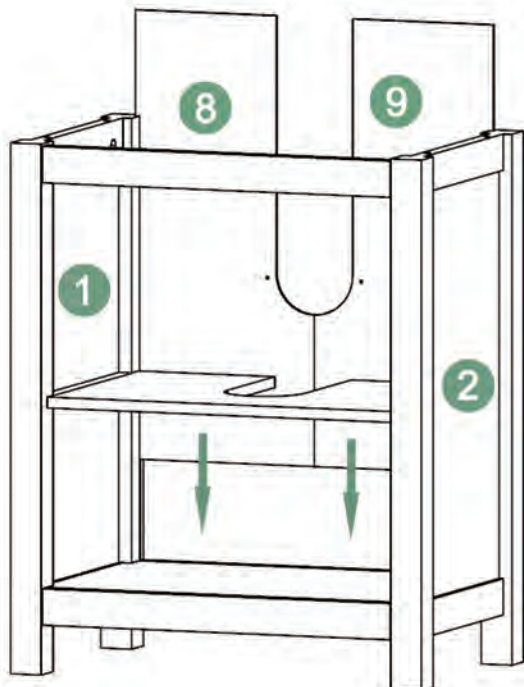


10.

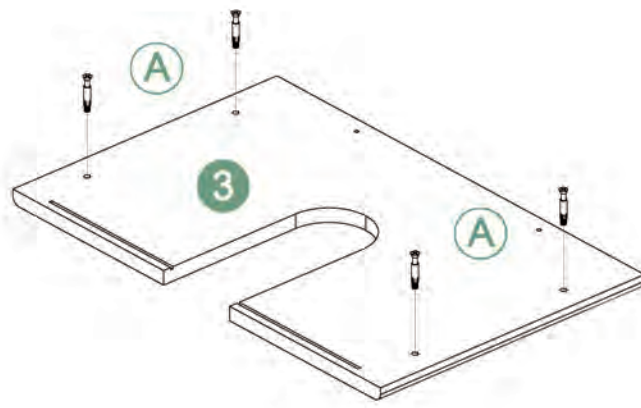


11.

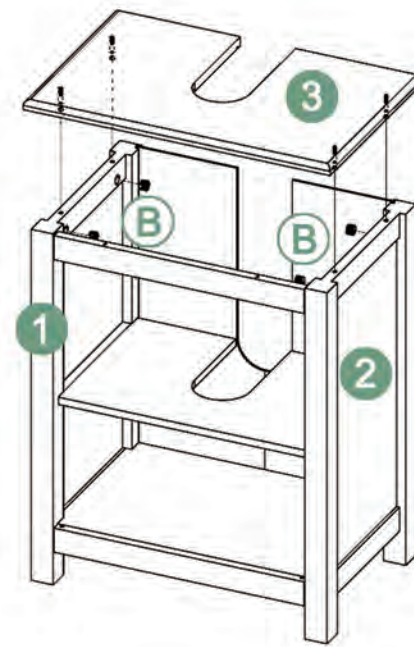


12.

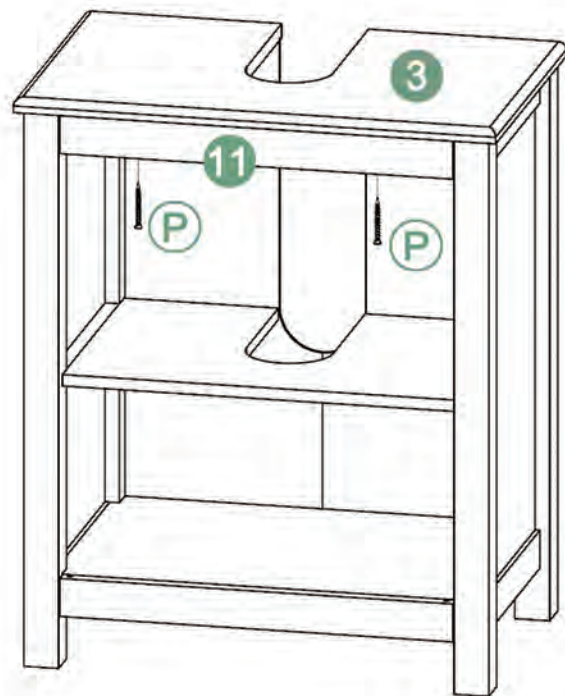


13.

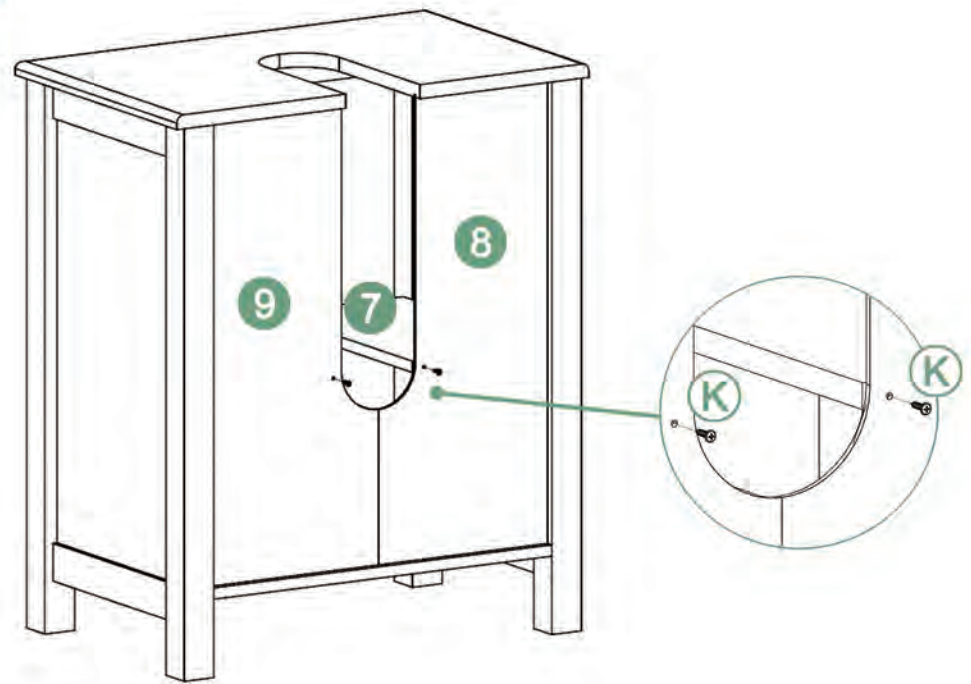


14.

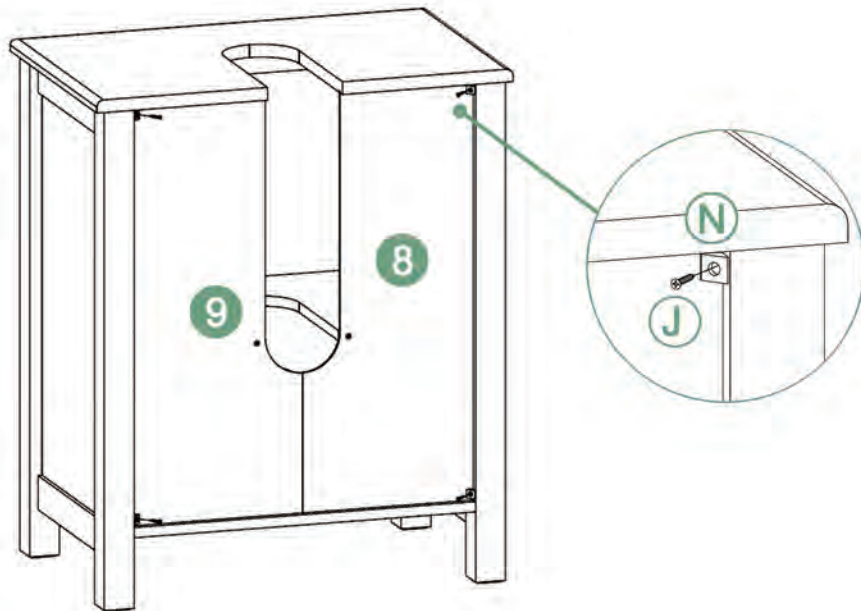


15.

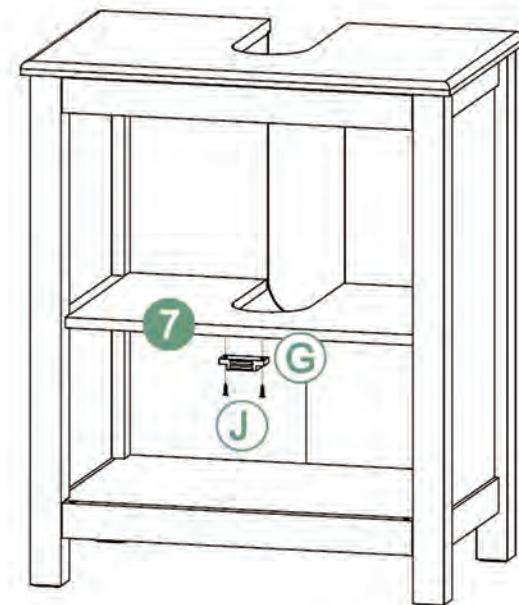


16.

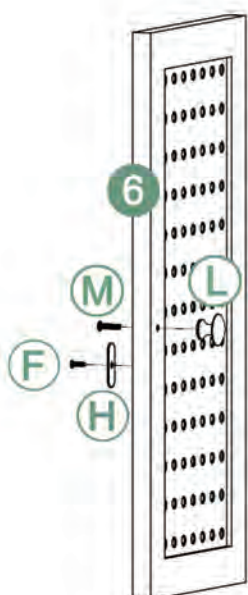


17.

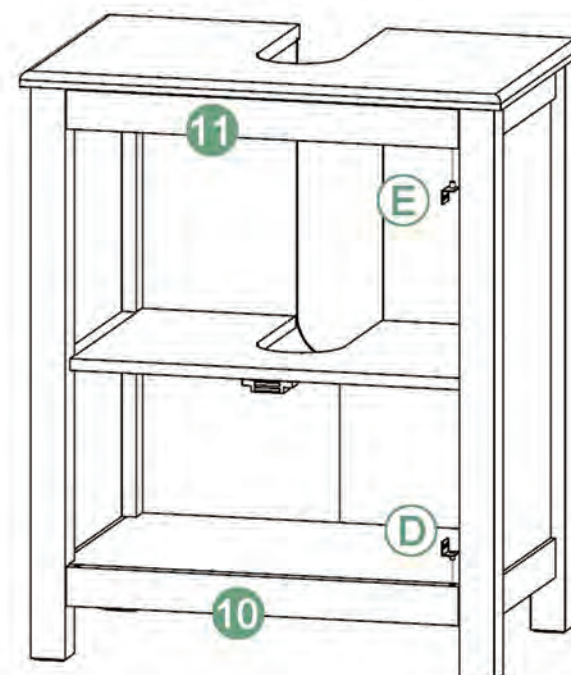


18.

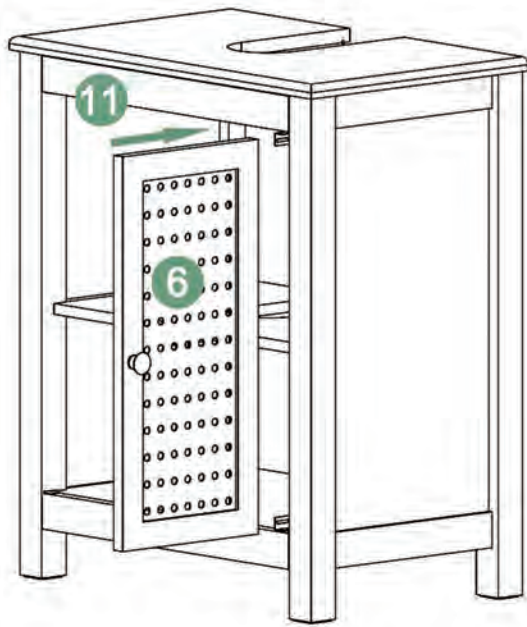


19.

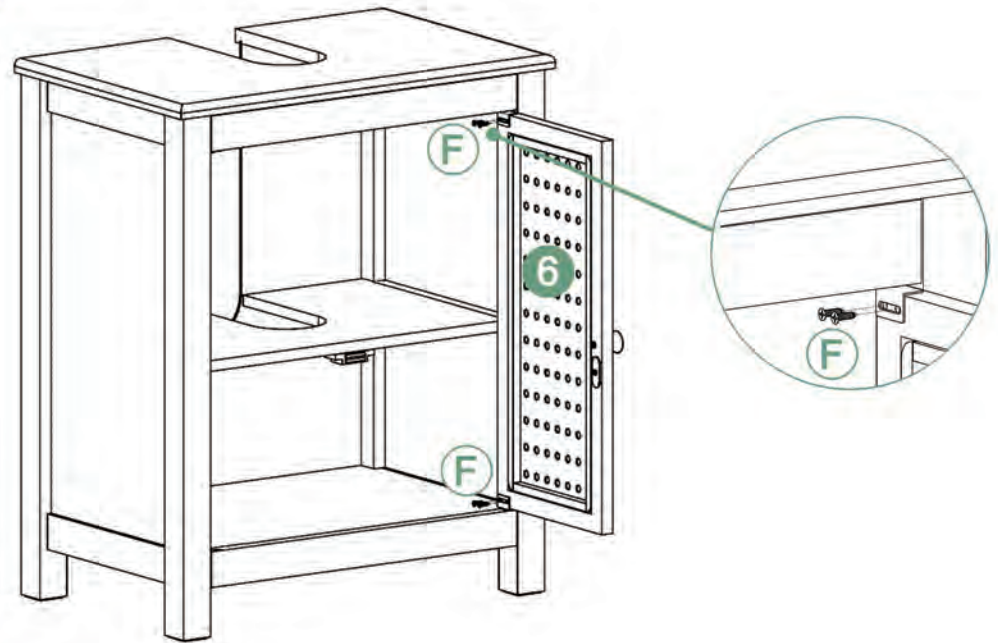


20.

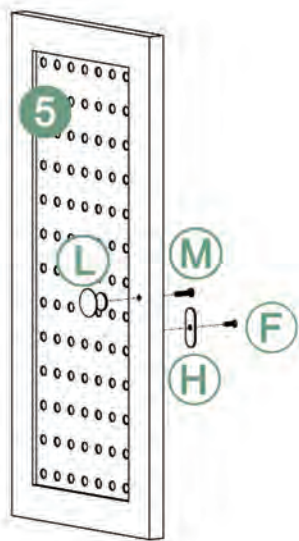


21.

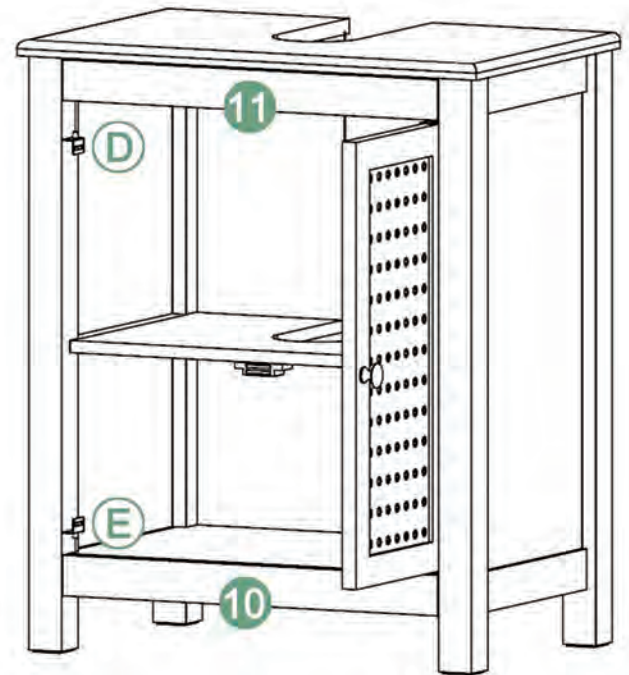

22.

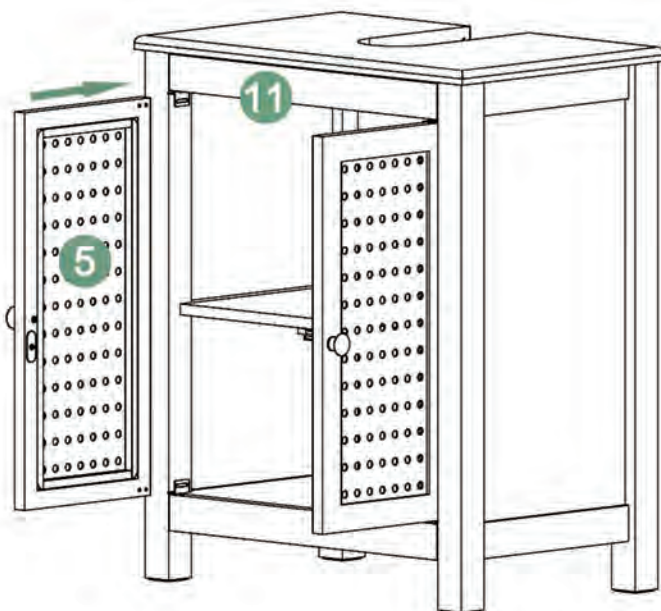

23.

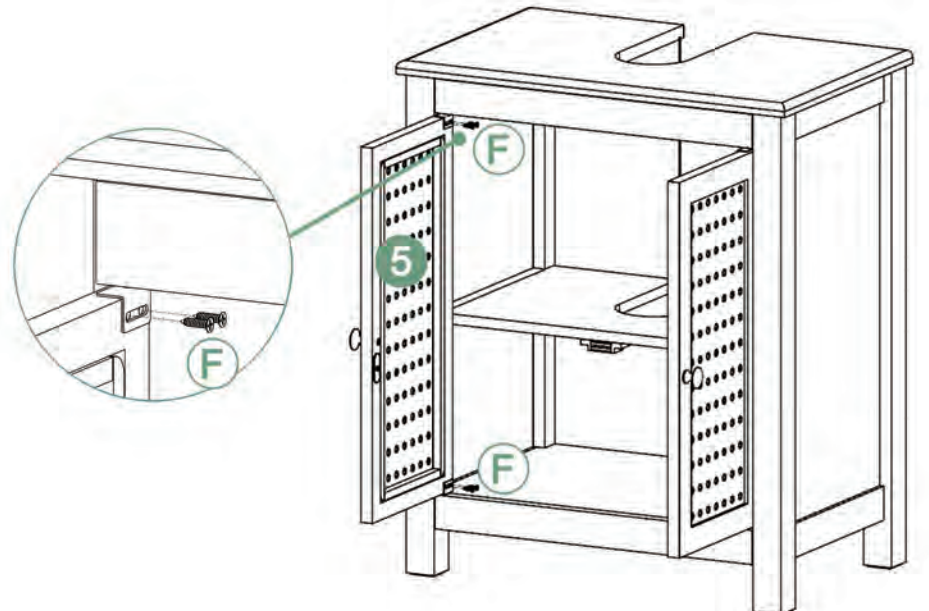

24.

