



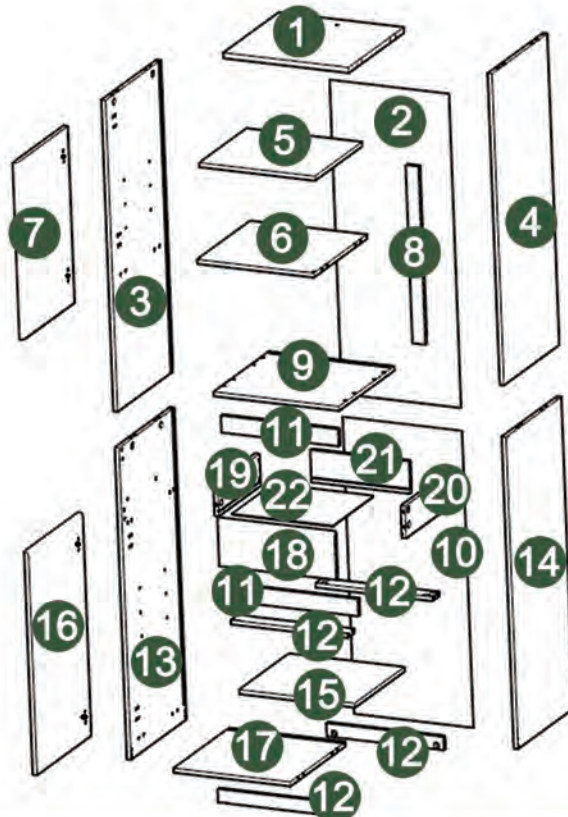

2022-01

BZR80


SoBuy®

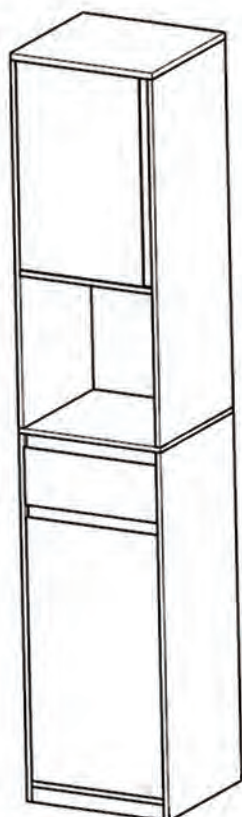


TOOLS:




UNIT:MM

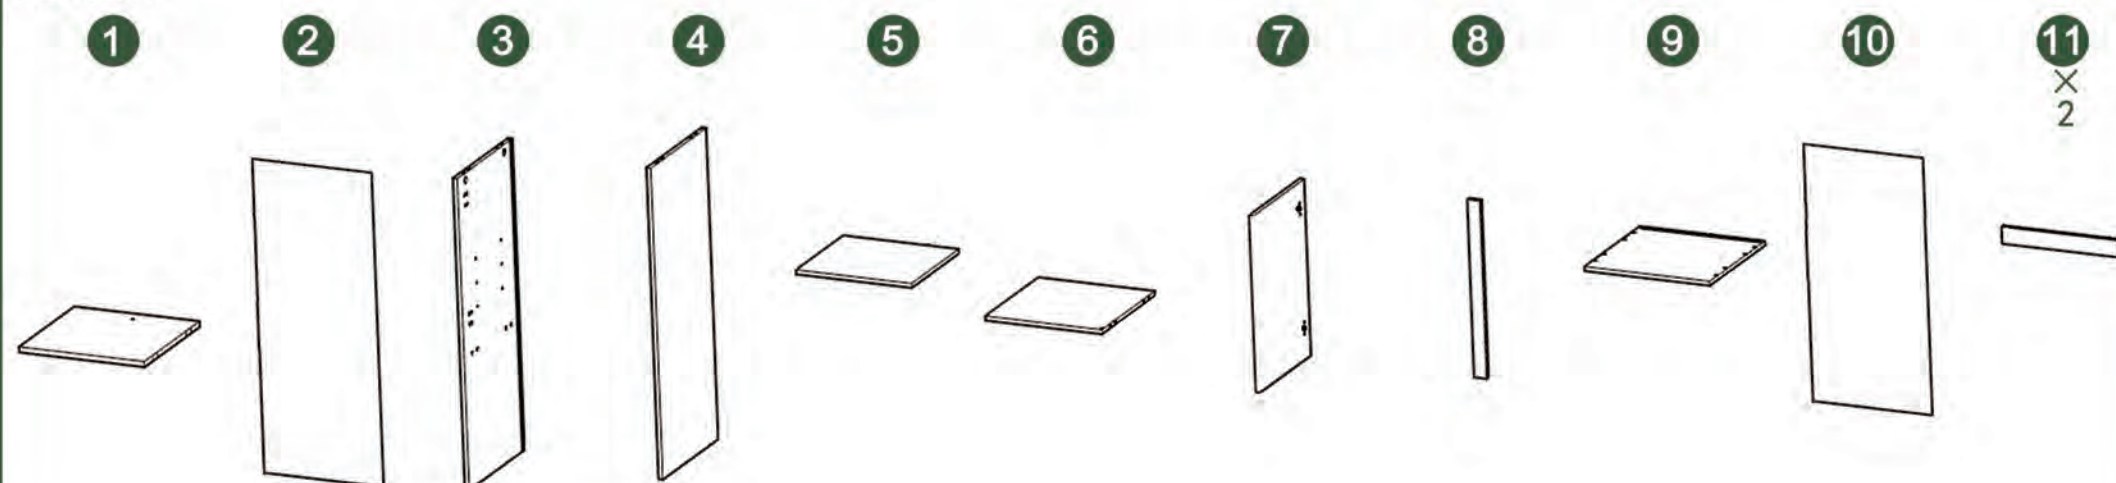

UNIT:MM

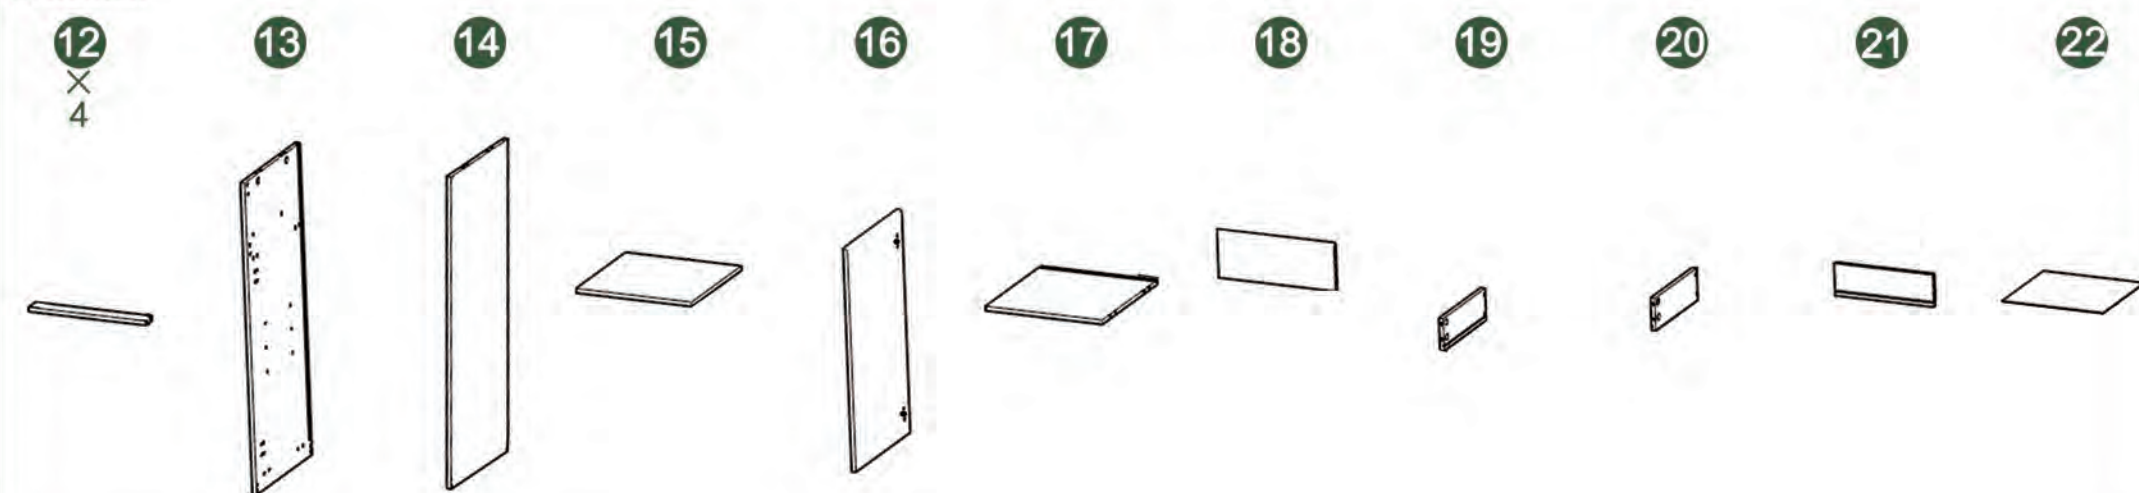




UNIT:MM

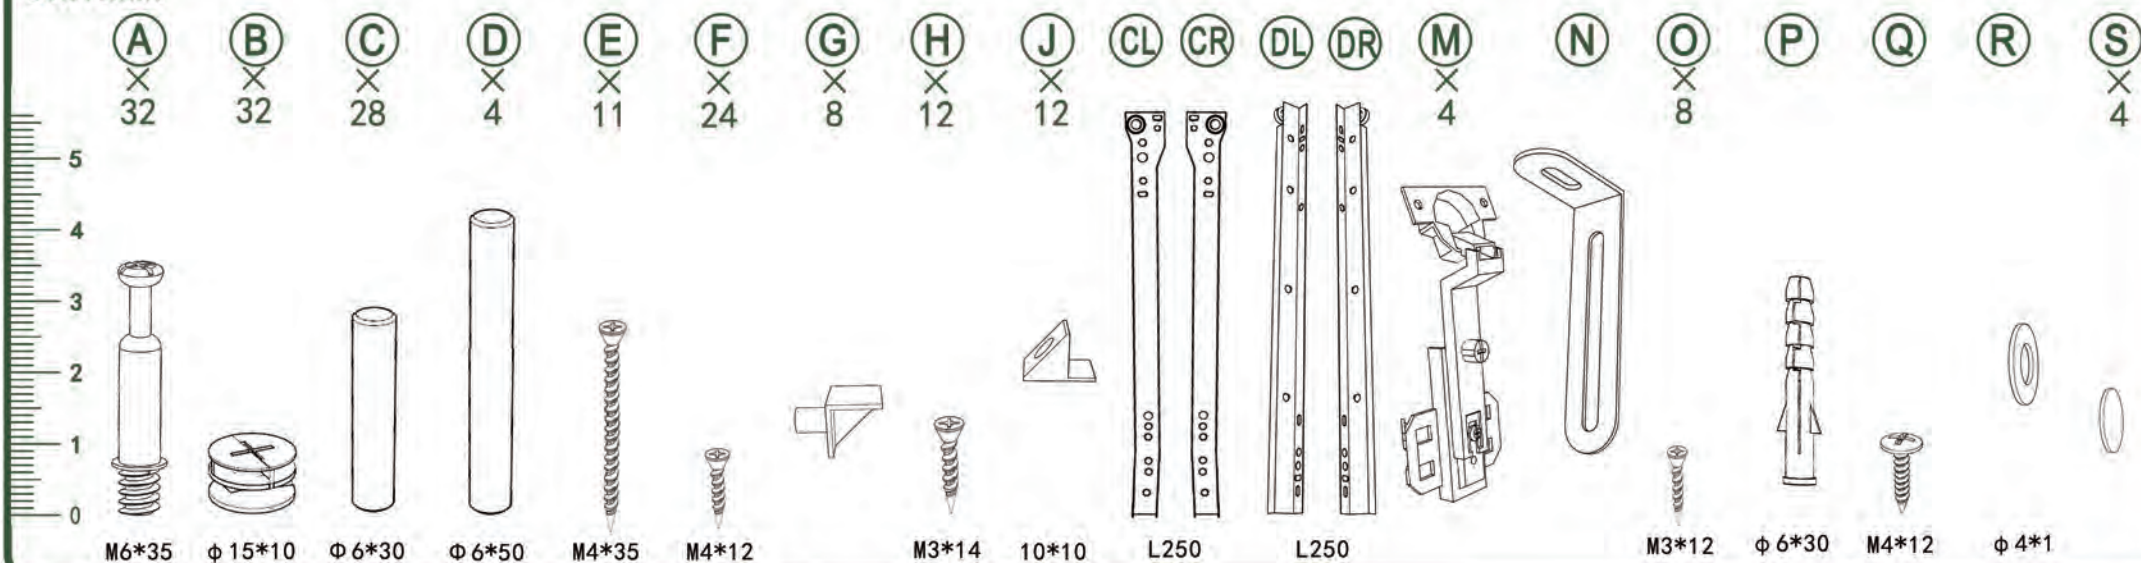

Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:09.2022


BOLT INSTALLATION AS BELOW:

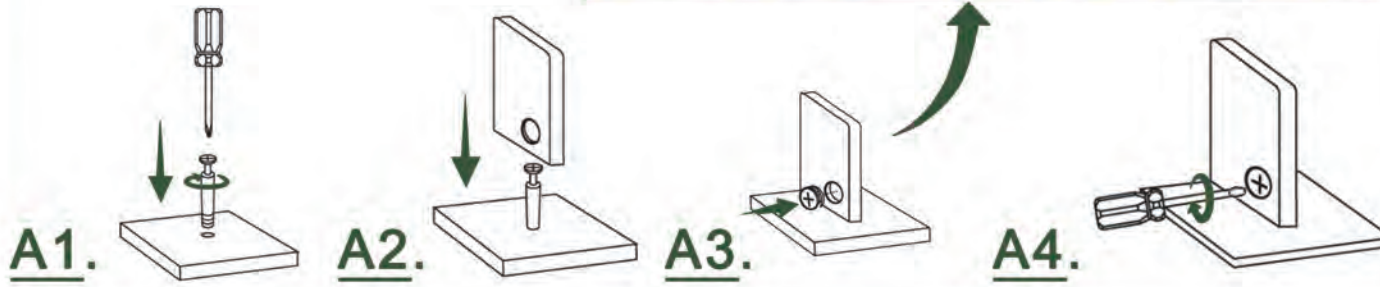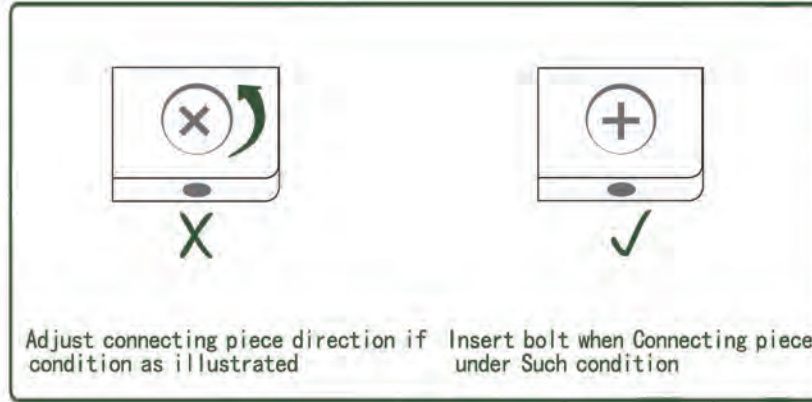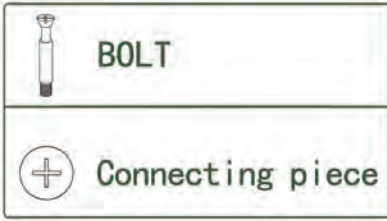


BACKPLATE BUCKLE INSTALLATION AS BELOW:




B1.

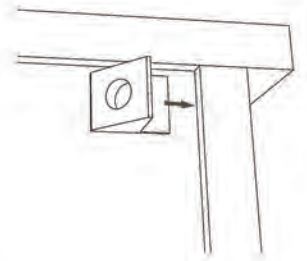


B2.

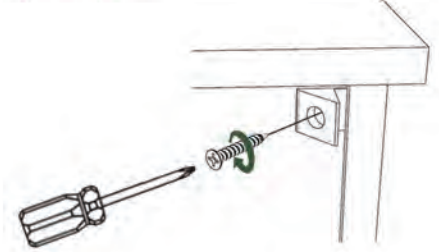


1.

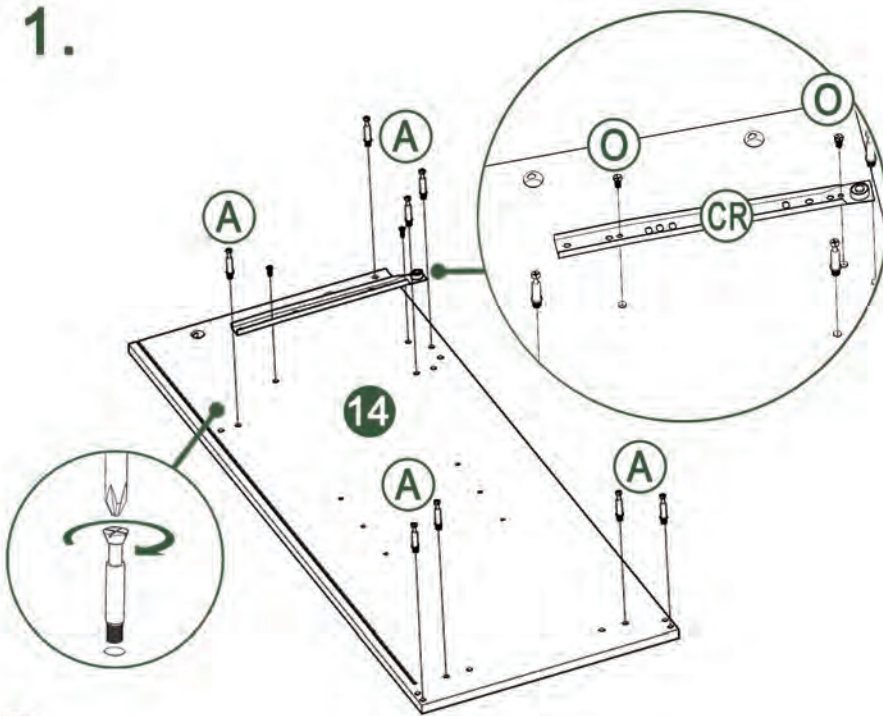


2.

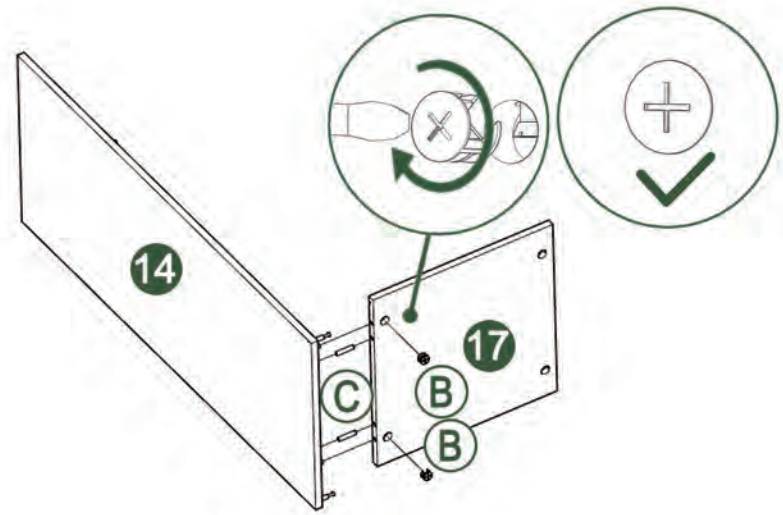


3.

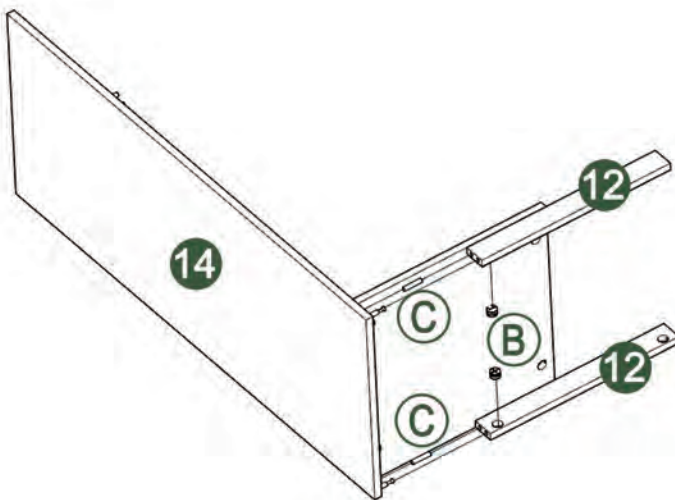


4.

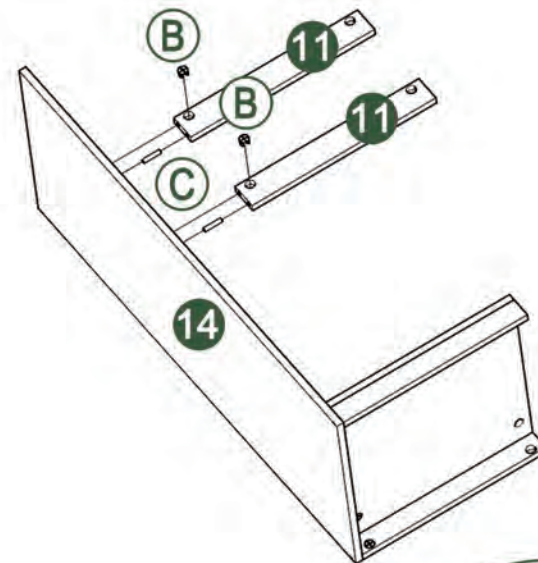


5.

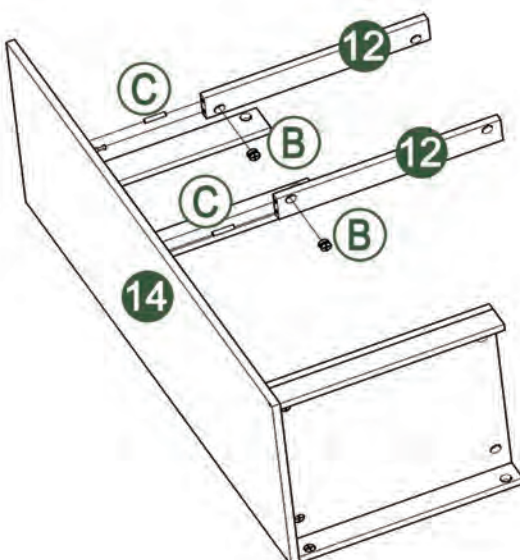


6.

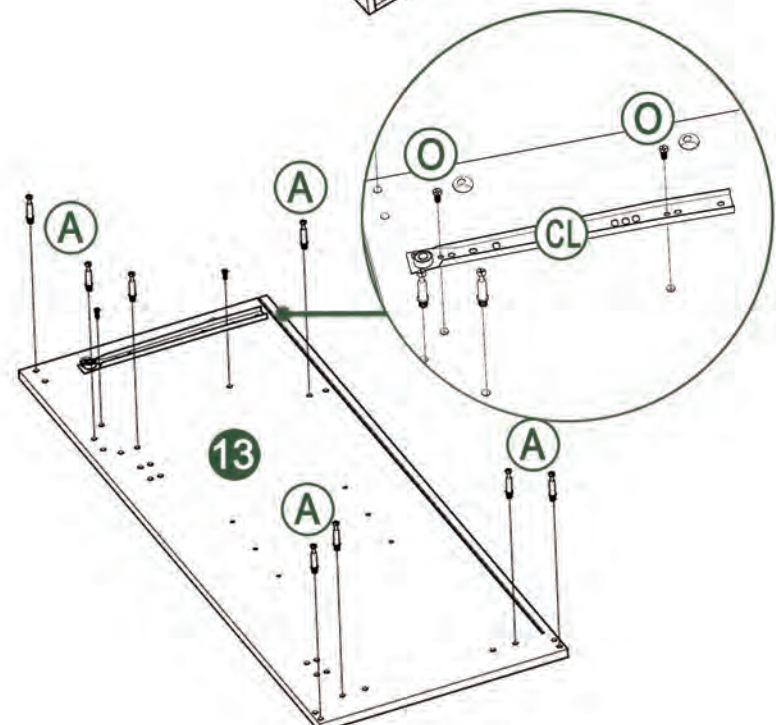


7.

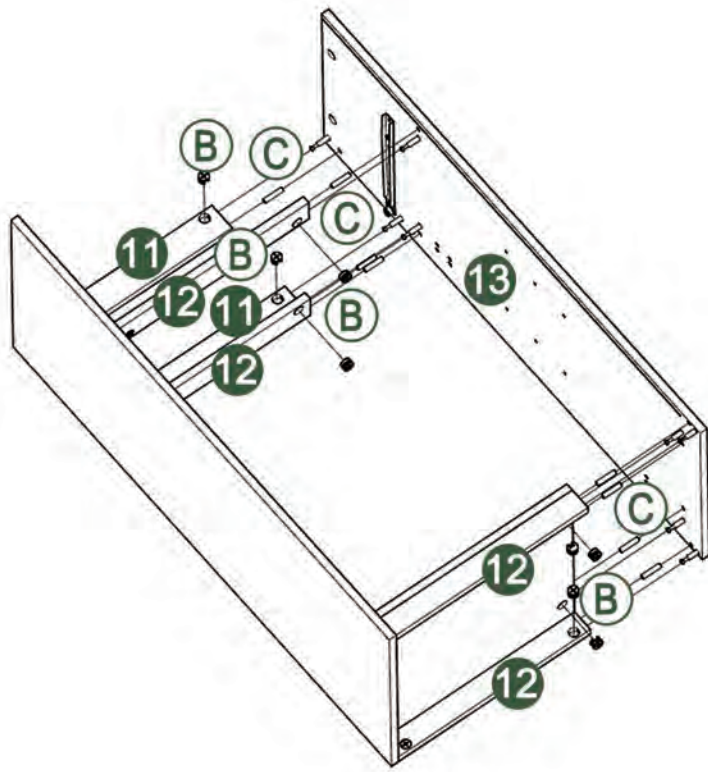


8.

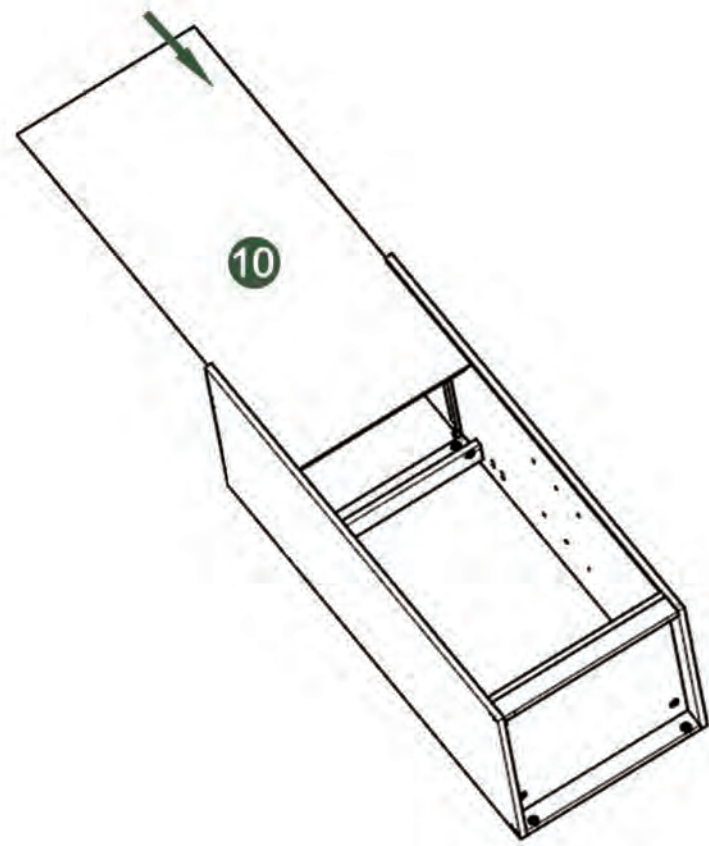


9.

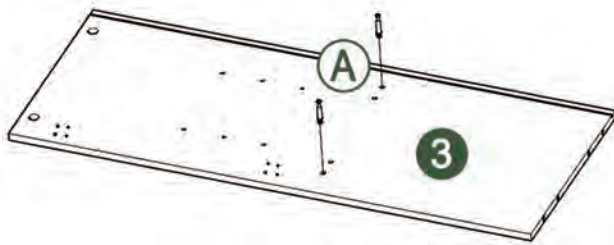


10.

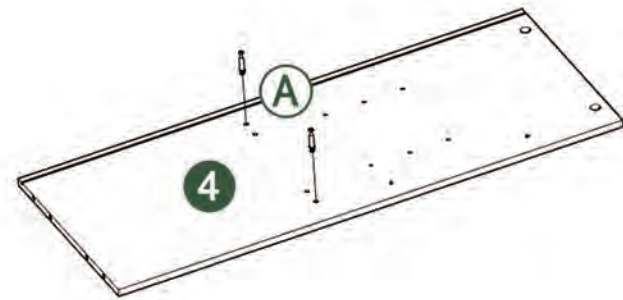


11.

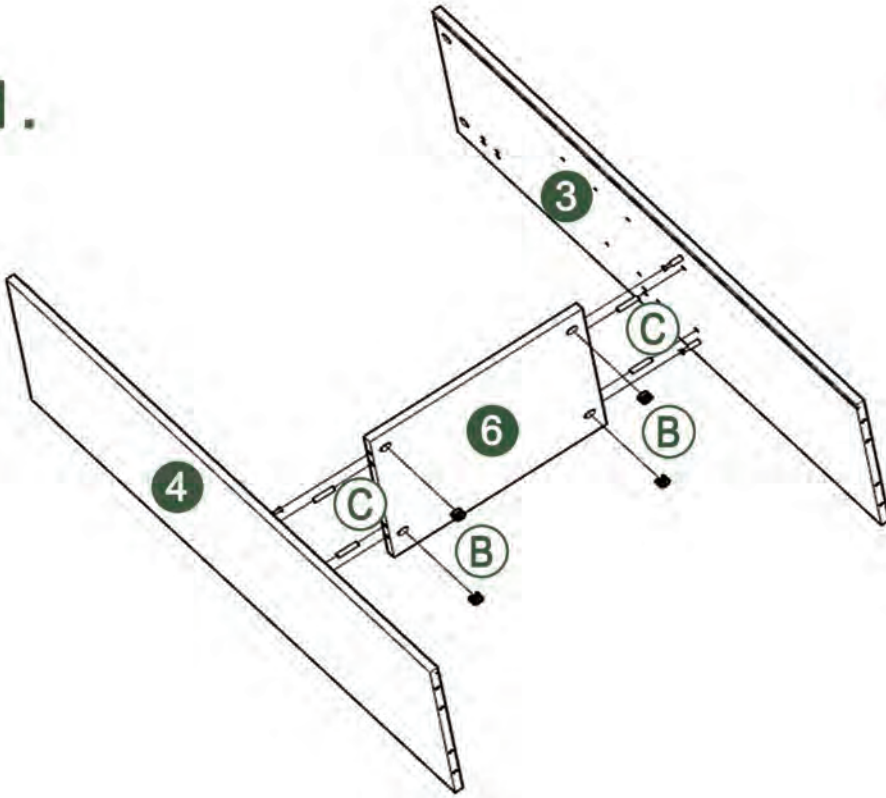


12.

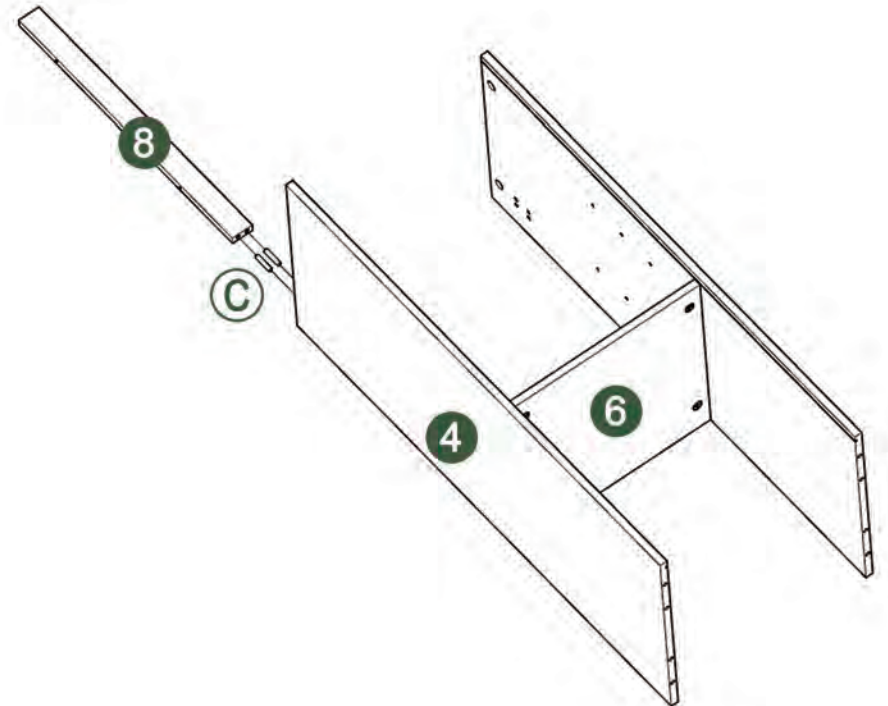


13.

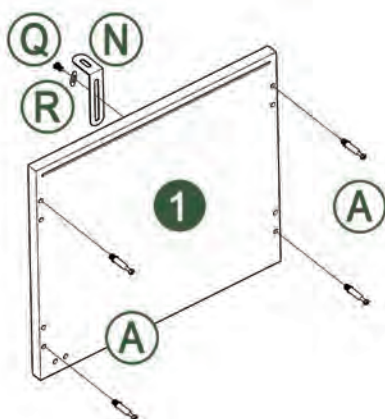


14.

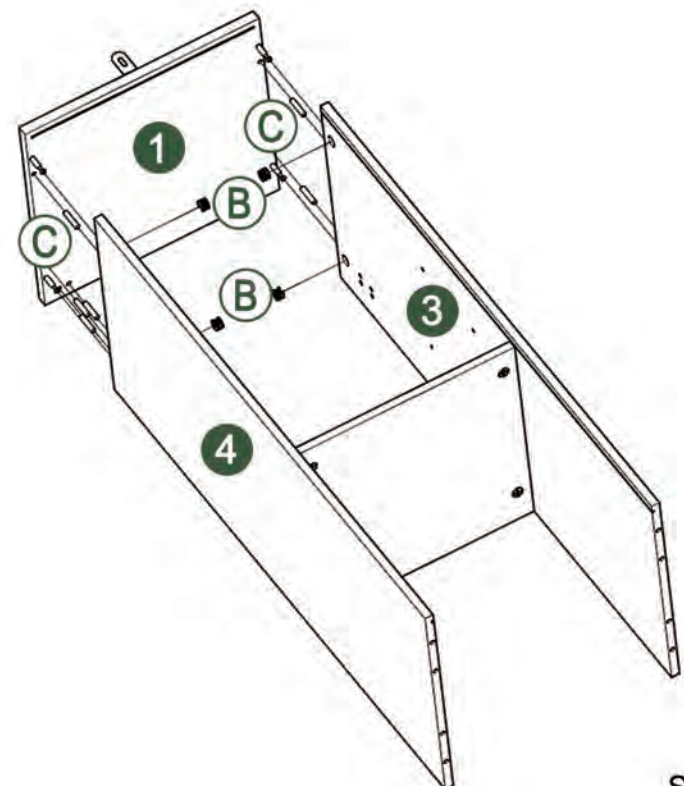


15.

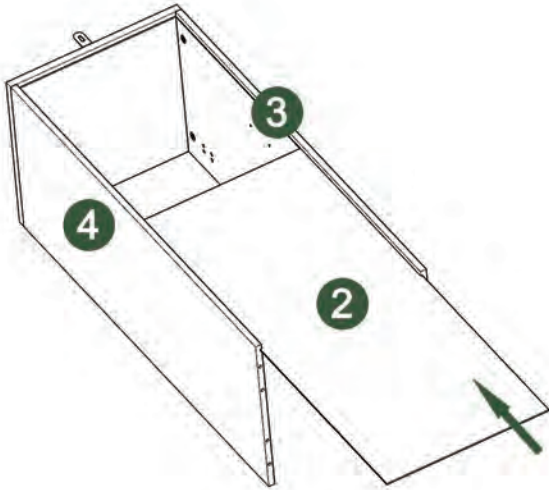


16.

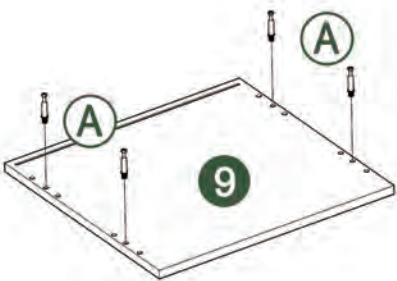


17.

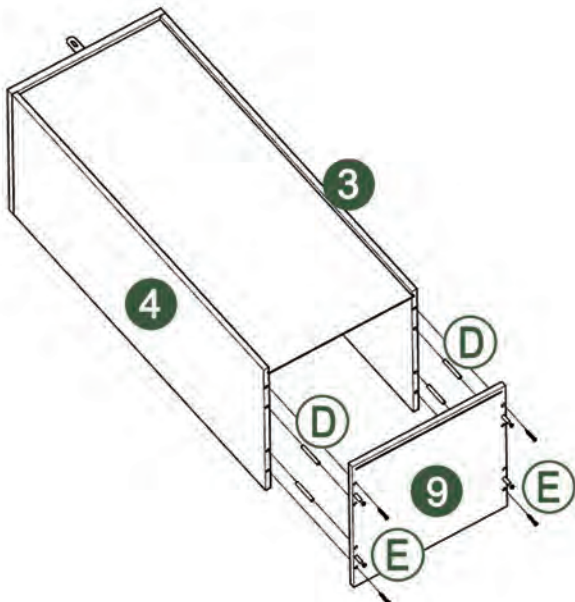


18.

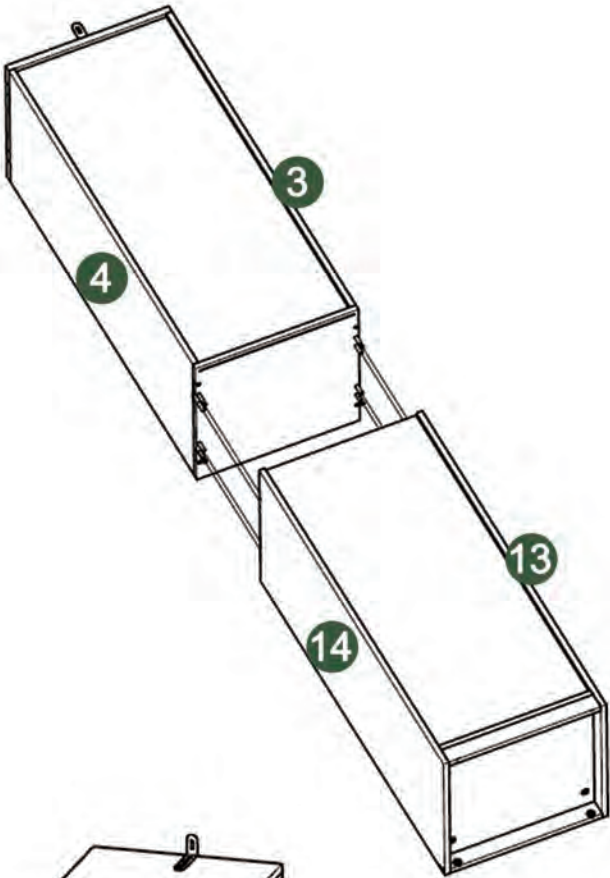


19.

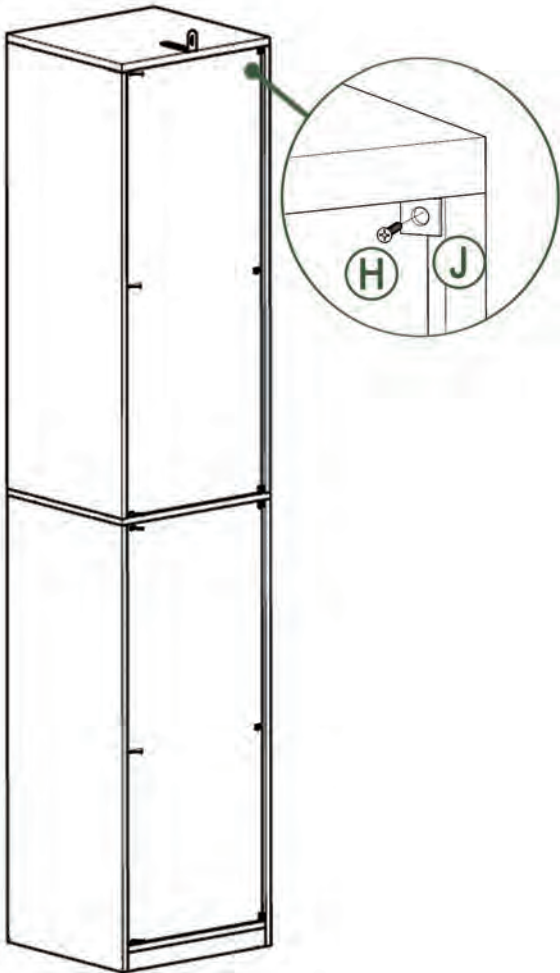


20.

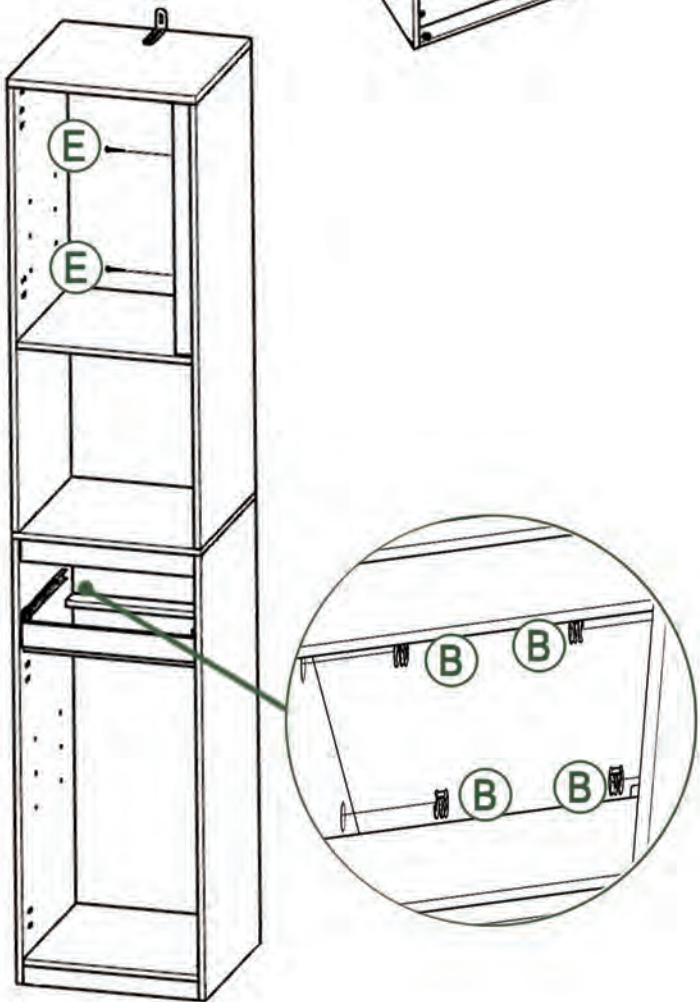


21.

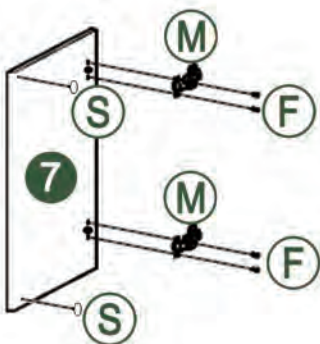


22.

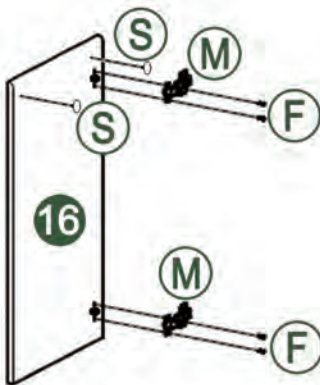


23.

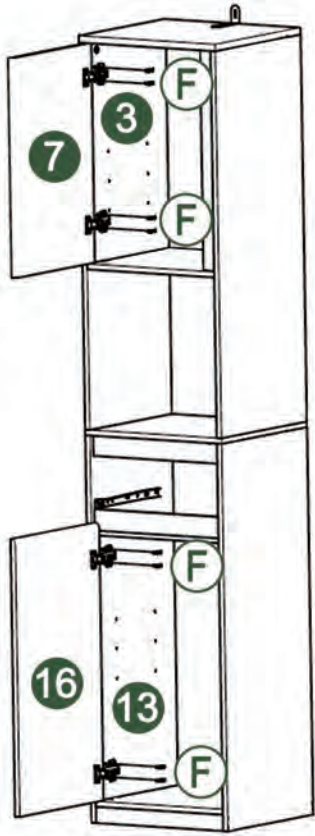


24.

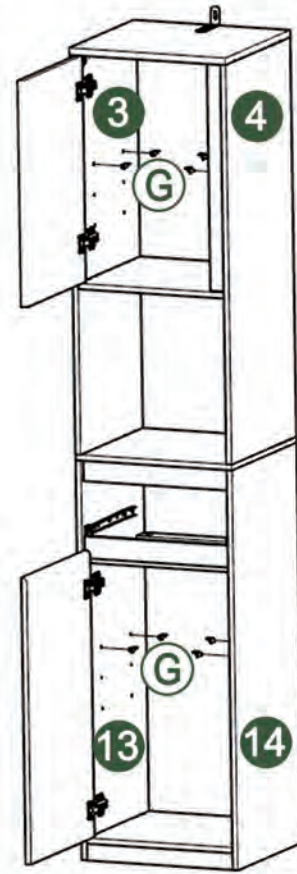


25.

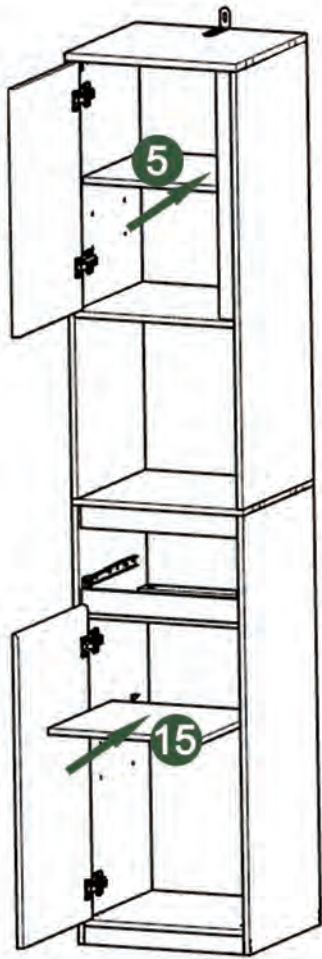


26.

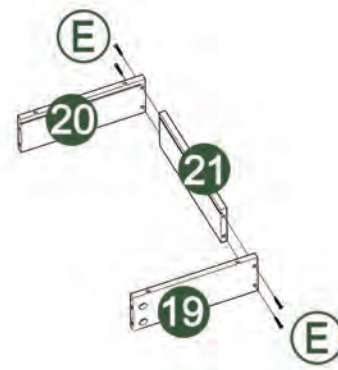


27.

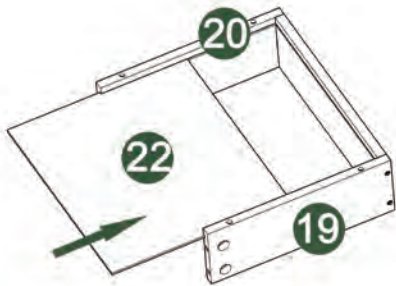


28.

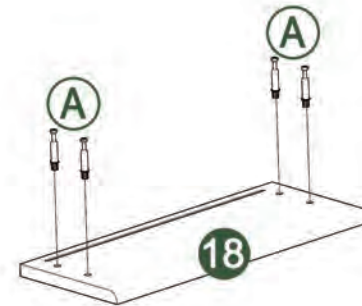


29.

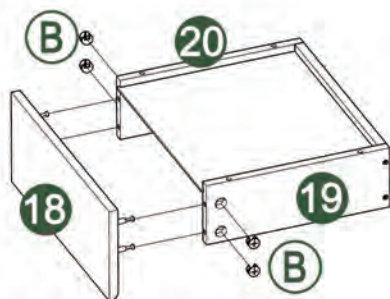


30.

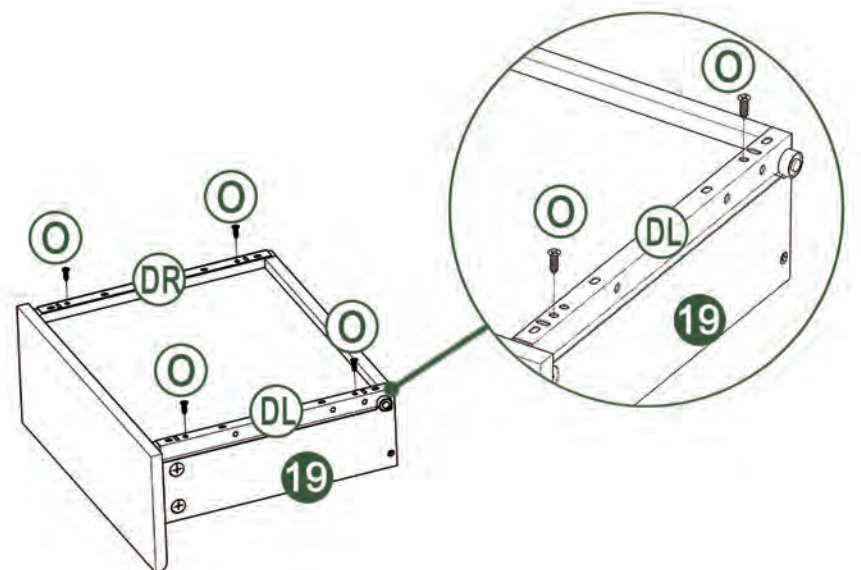

31.

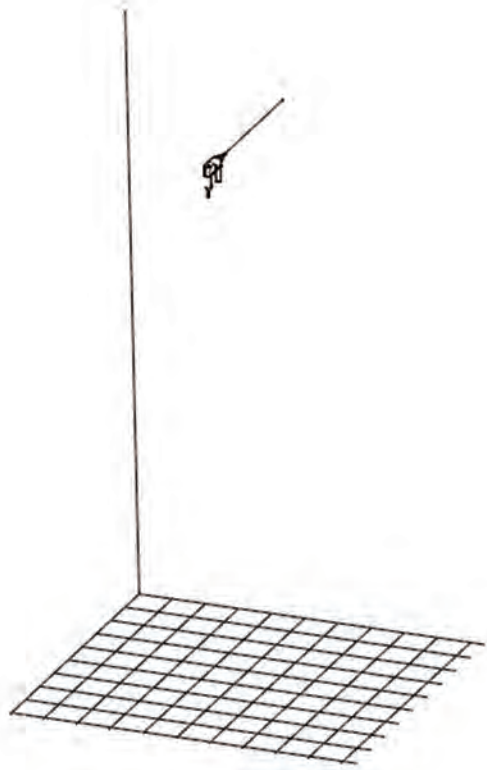

32.

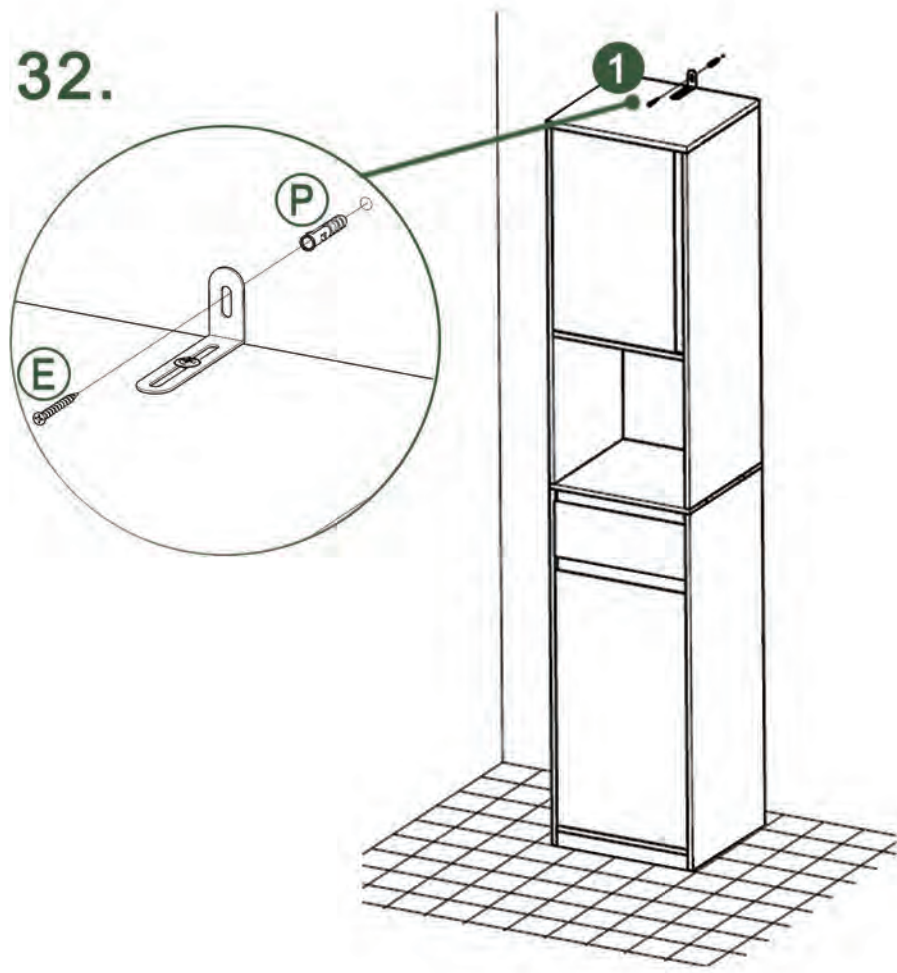

33.

