


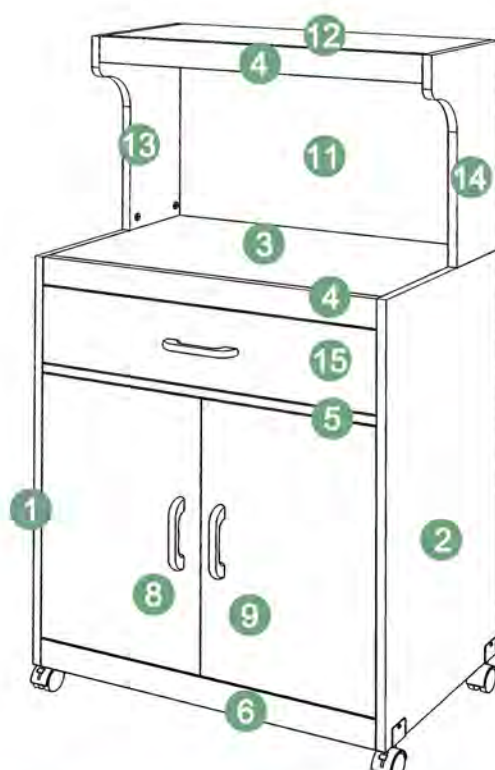

2018-01

FSB12

SoBuy®



TOOLS:



UNIT:MM

1



750×395×15

2



750×395×15

3



587×380×15

4

×2



587×50×15

5




587×75×15

6




587×50×15

7

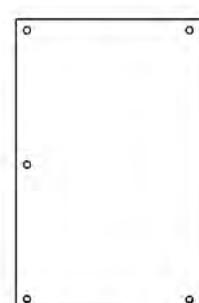

587×380×15

8

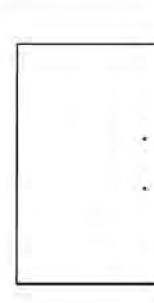

480×290×15

9



480×290×15

10

×2



594×345×3


UNIT:MM

11




594×382×3

12

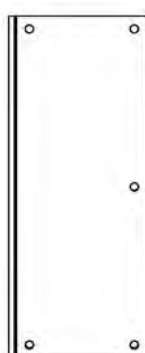


587×235×15

13

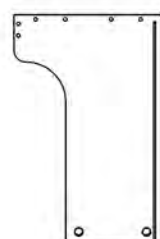

390×252×15

14

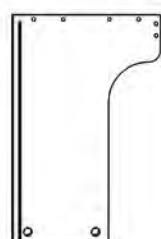

390×252×15

15



580×143×15

16



538×106×12

17




342×106×12

18



342×106×12

19

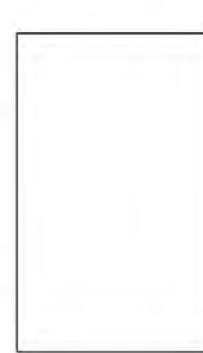

545×337×3

UNIT:MM

A

×21



M6×35

B

×21



Φ15×9

C

×40



Φ6×30

D

×4



M4×40

E

×6



M4×22

F

×3




G

×4



H

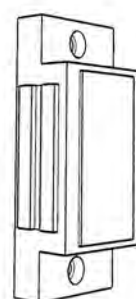

J

×10



M3×14

K

×14



M3×12


L

×2




M

×2




N

×2



O

×4

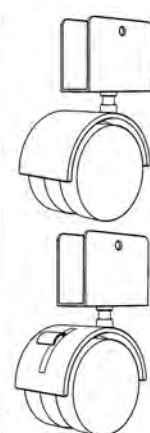

P

×4



M4×22

Q



×8




Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:09.2018


BOLT INSTALLATION AS BELOW:

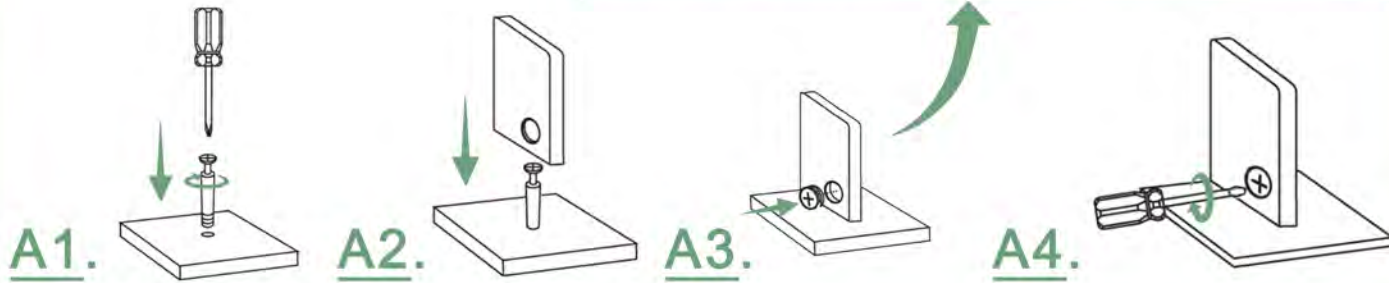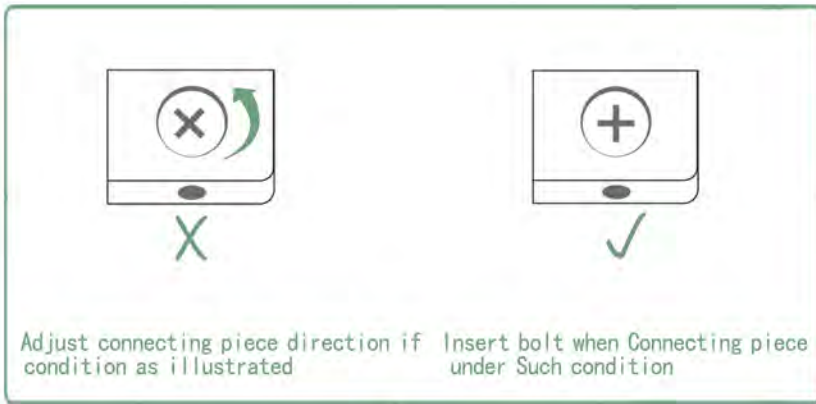


BACKPLATE BUCKLE INSTALLATION AS BELOW:

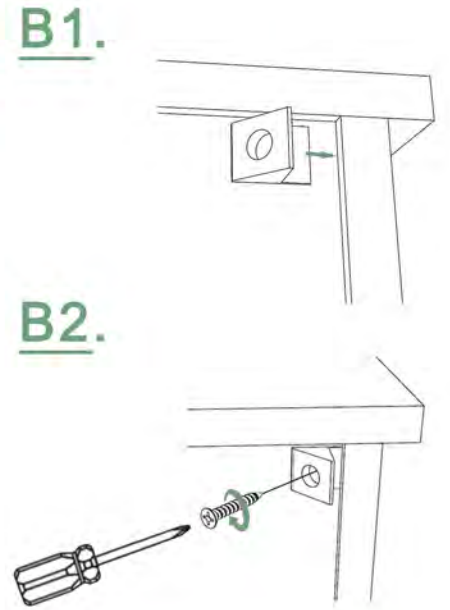


1.

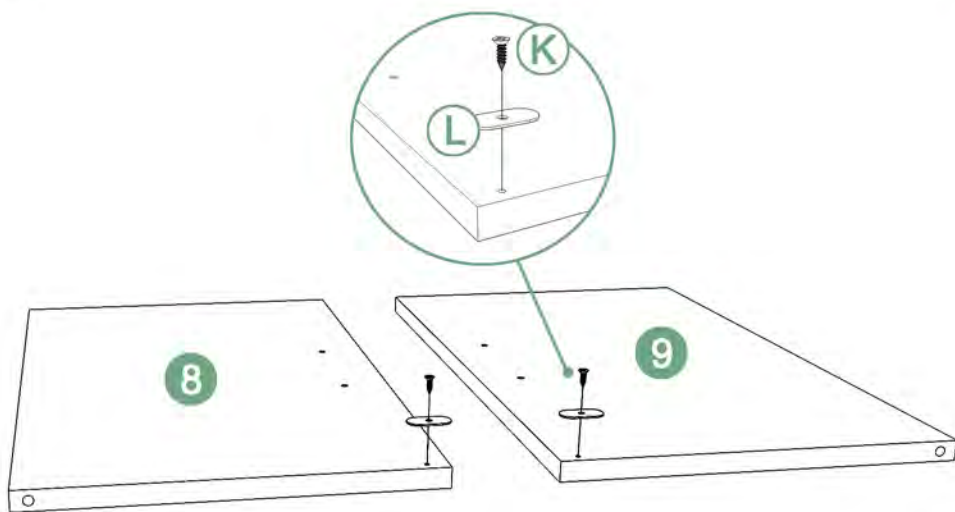


2.

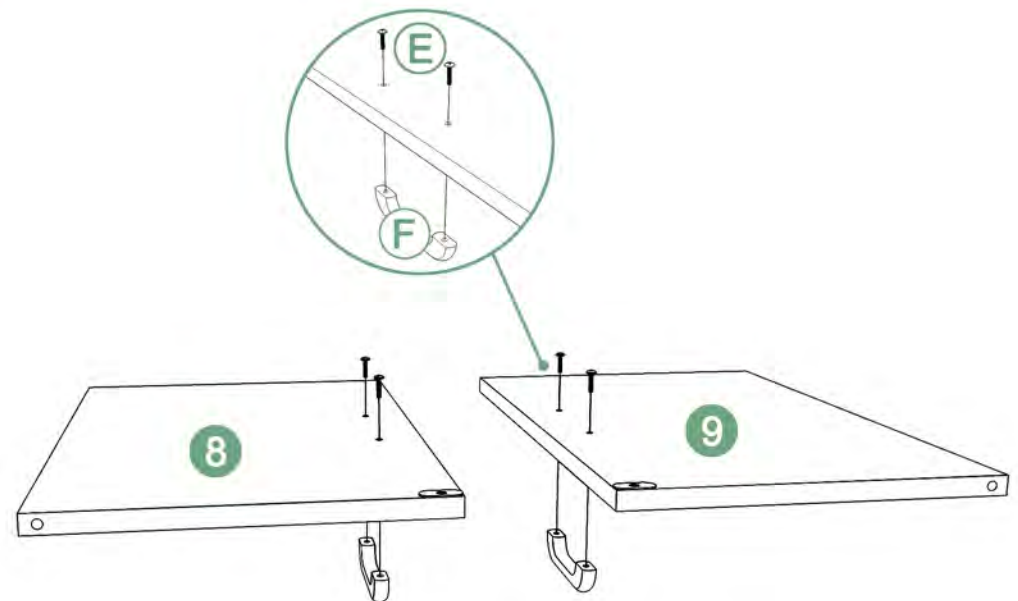


3.

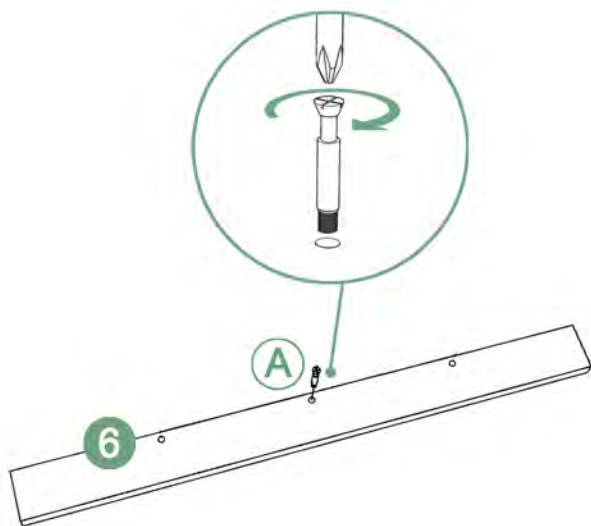


4.

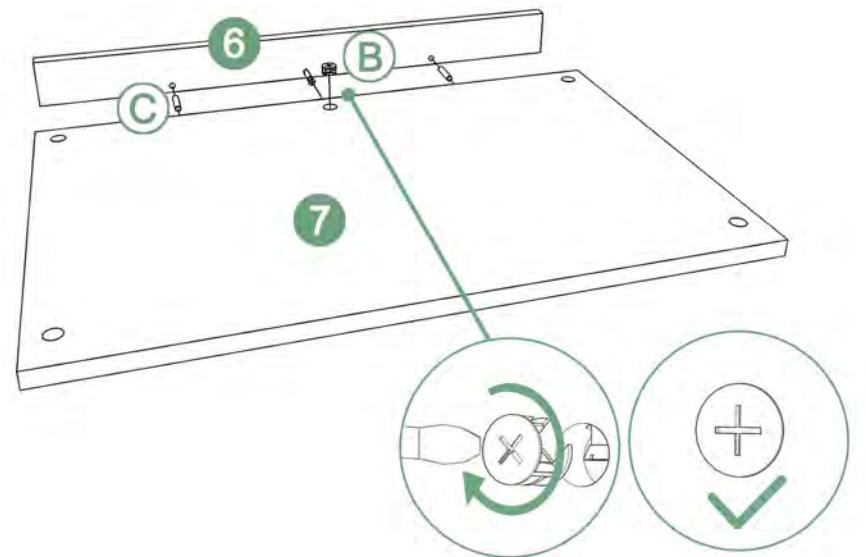


5.

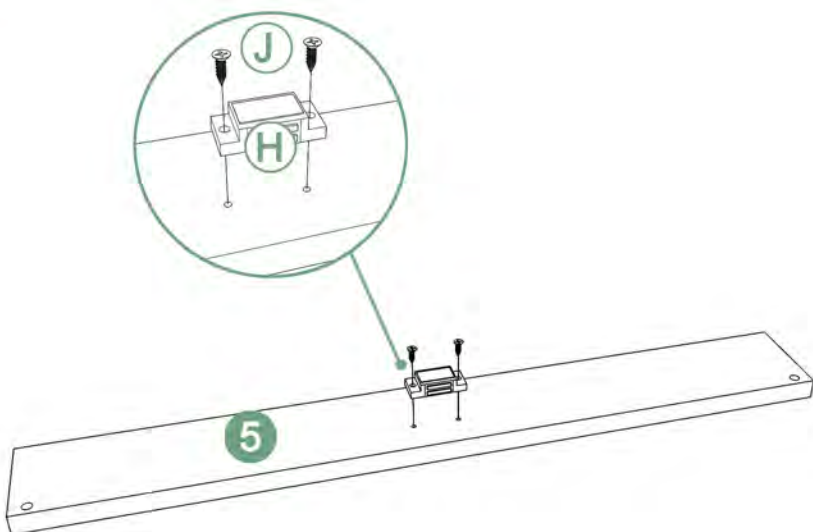


6.

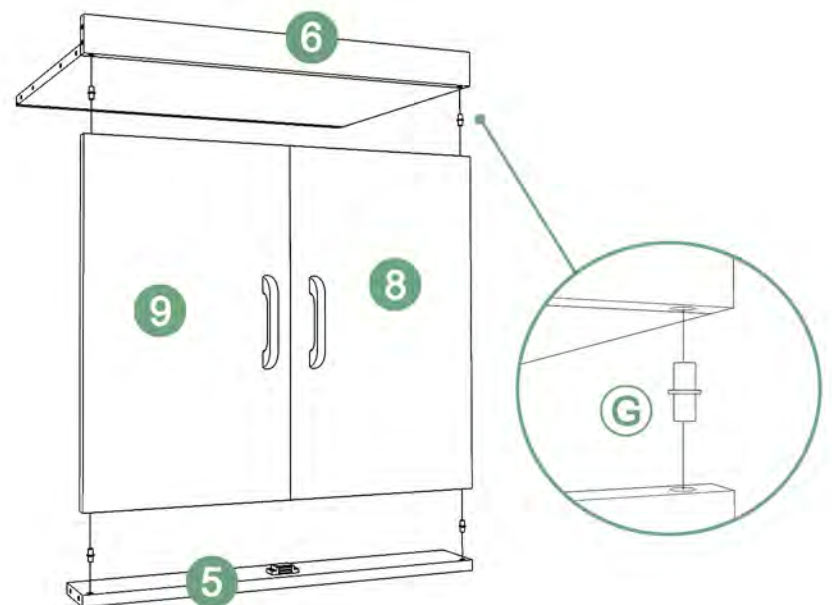


7.

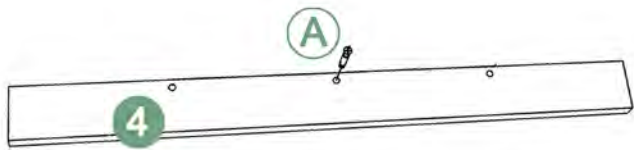


8.

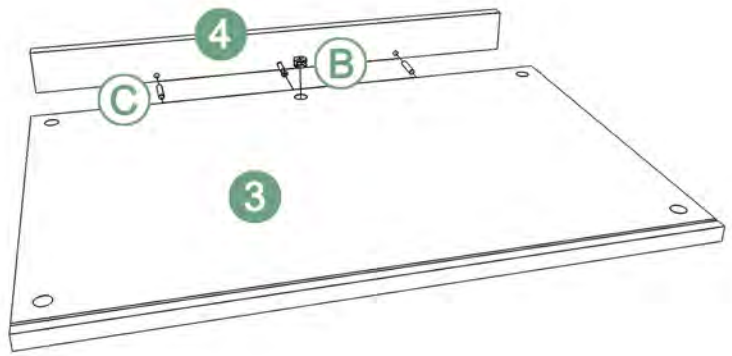


9.

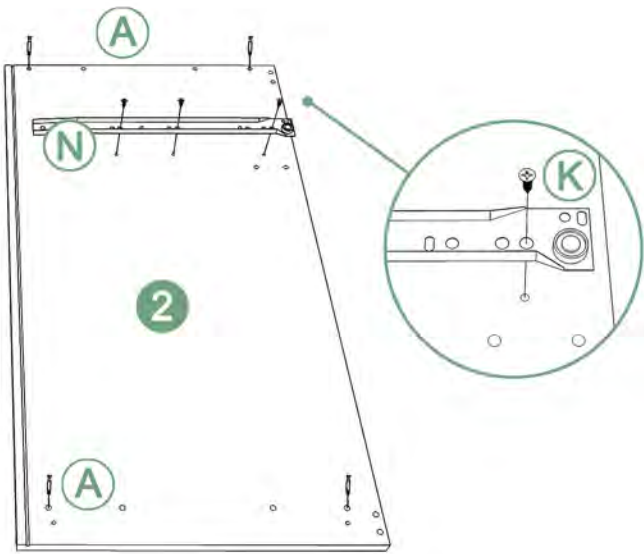


10.

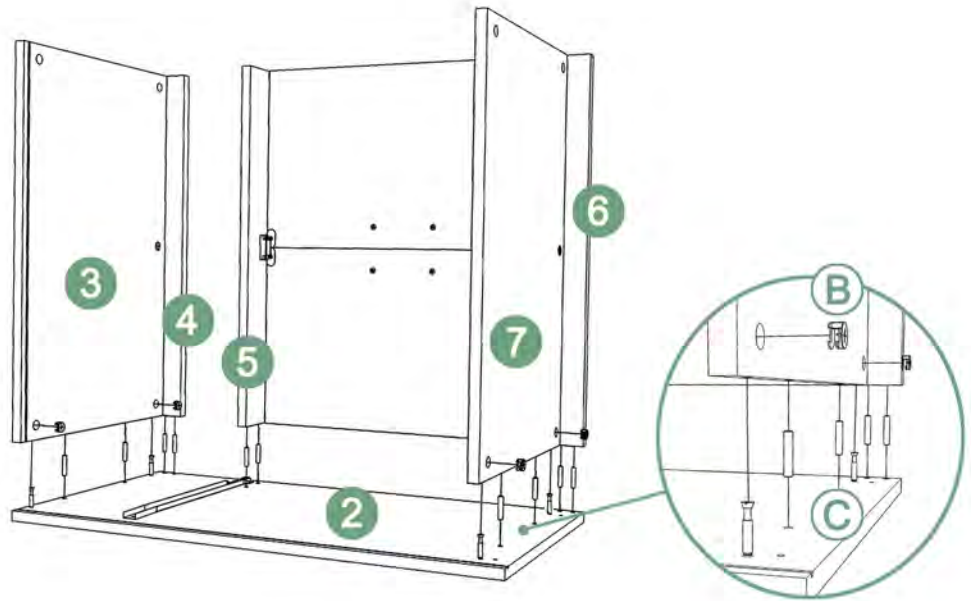


11.

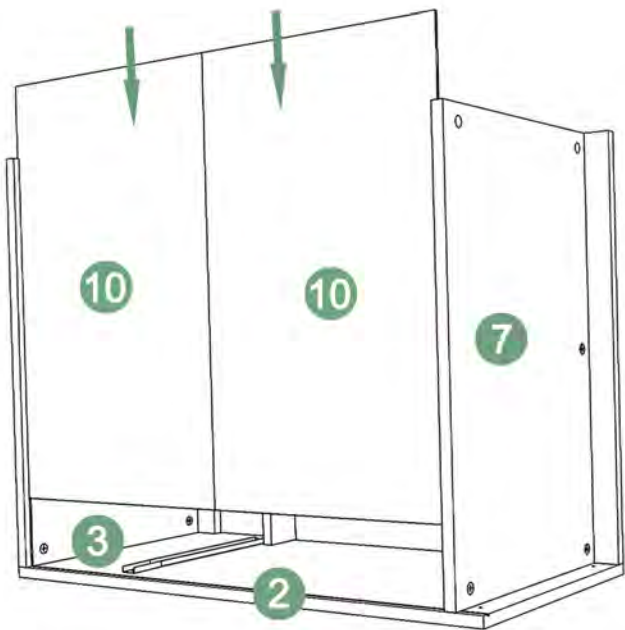


12.

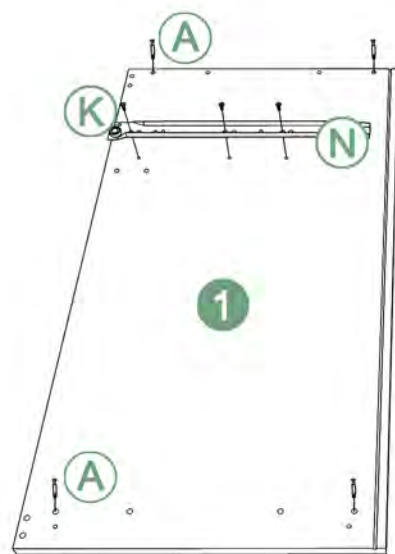


13.

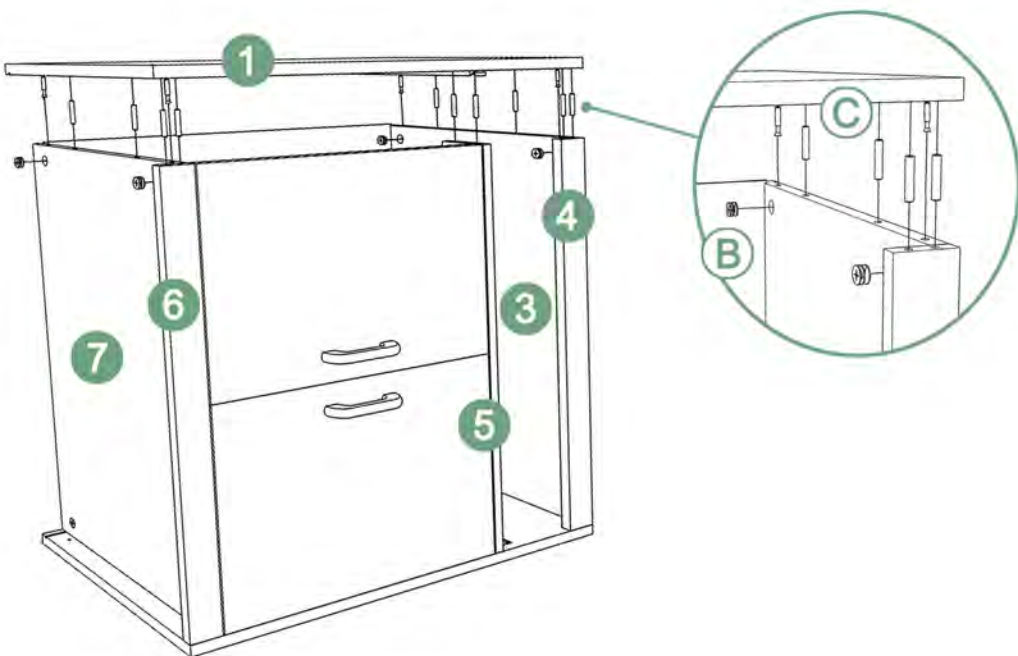


14.

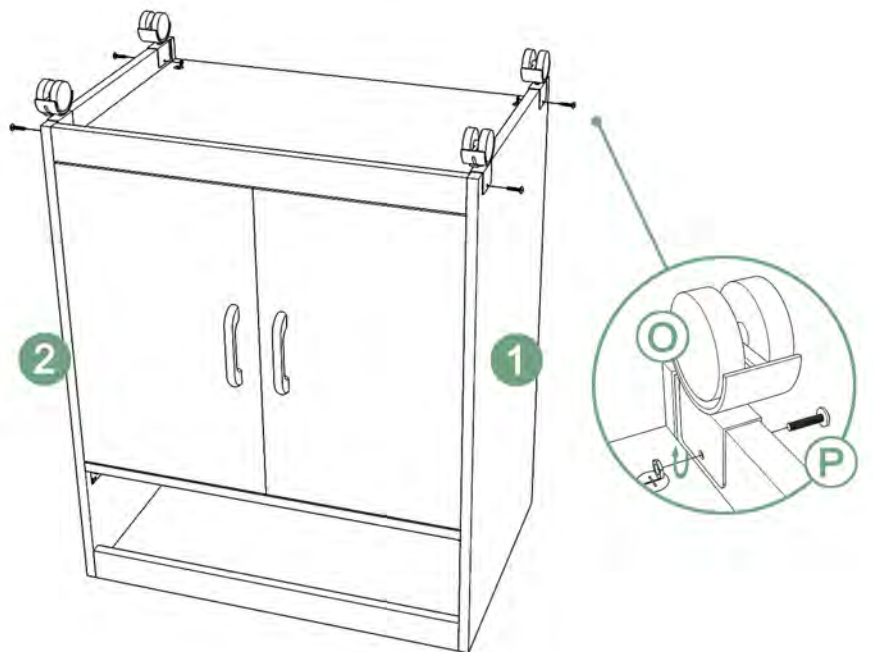



15.

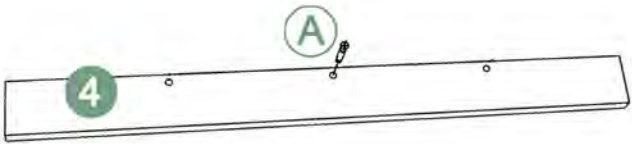


16.

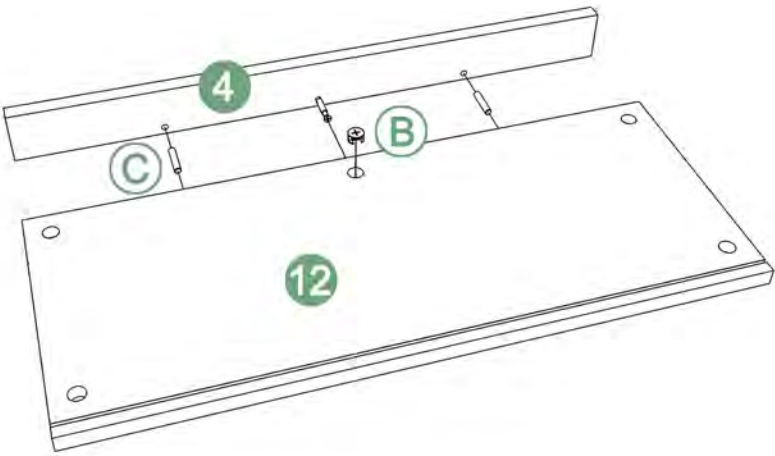


17.

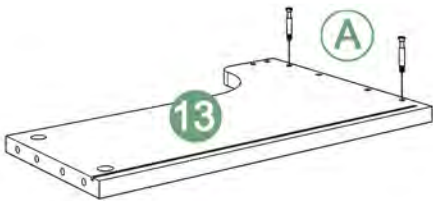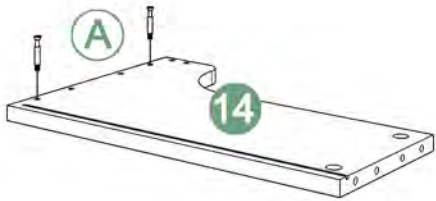


18.

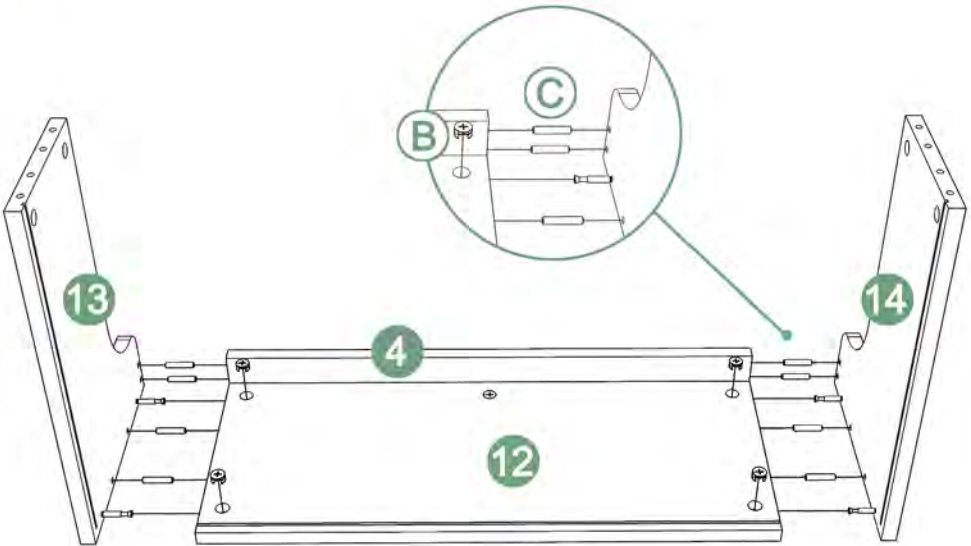


19.

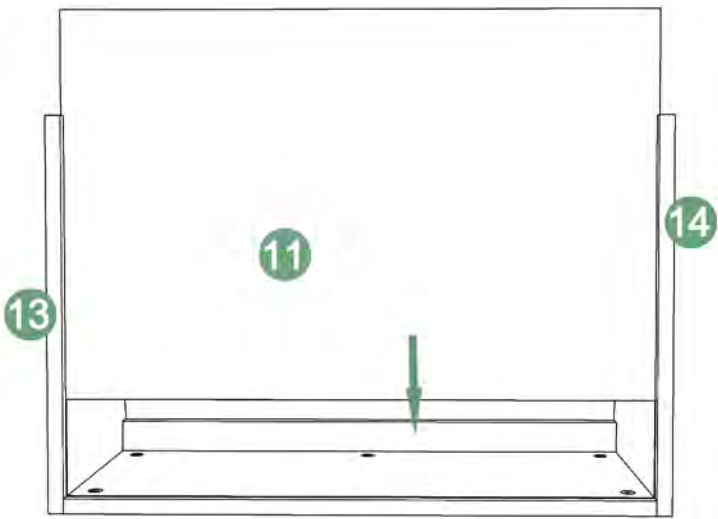


20.

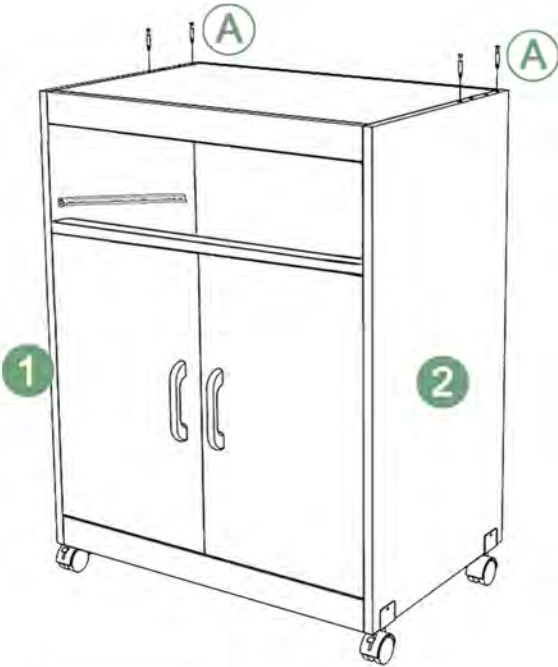


21.

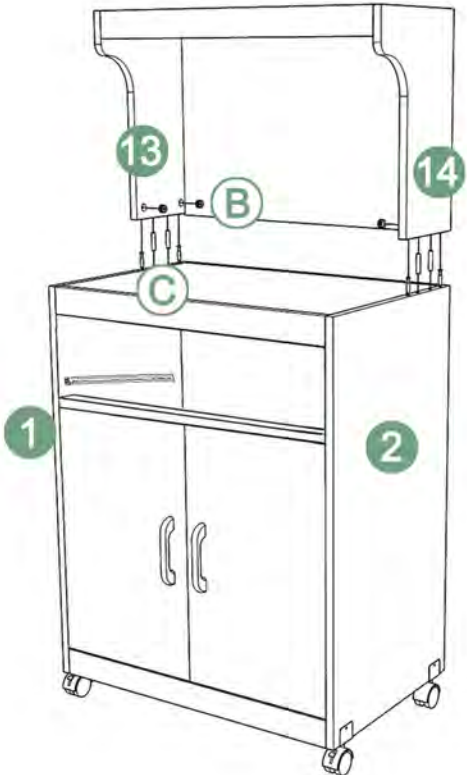


22.

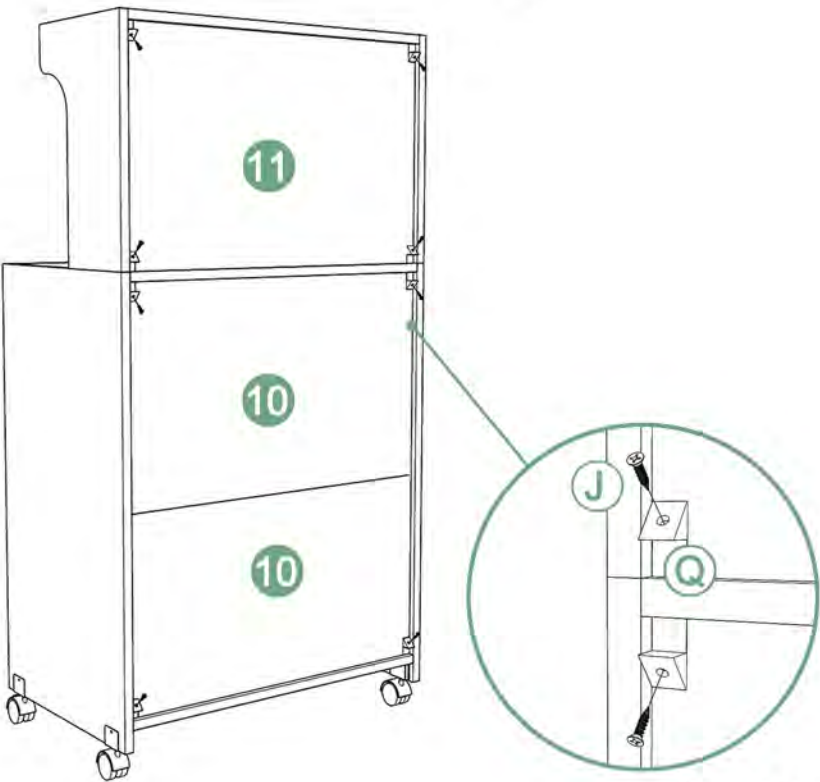


23.

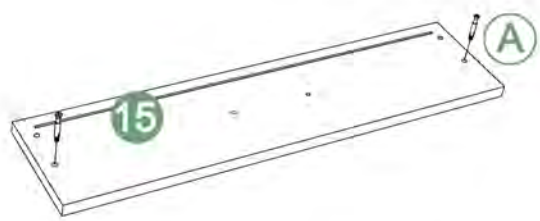


24.

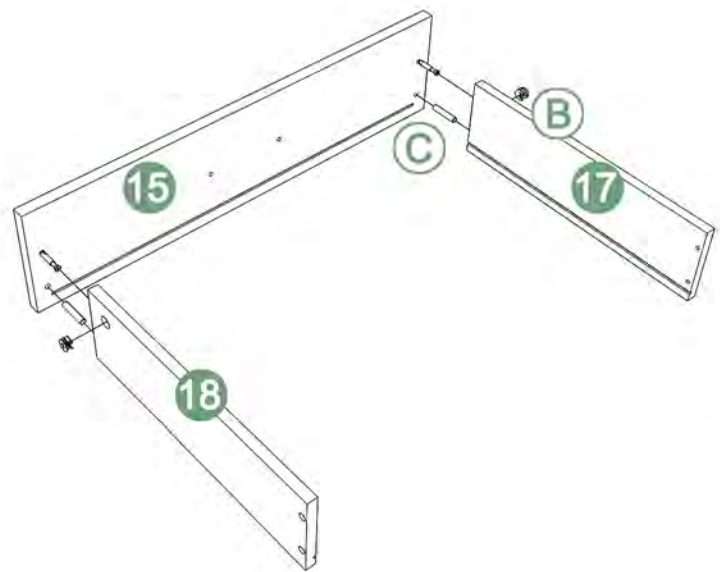


25.

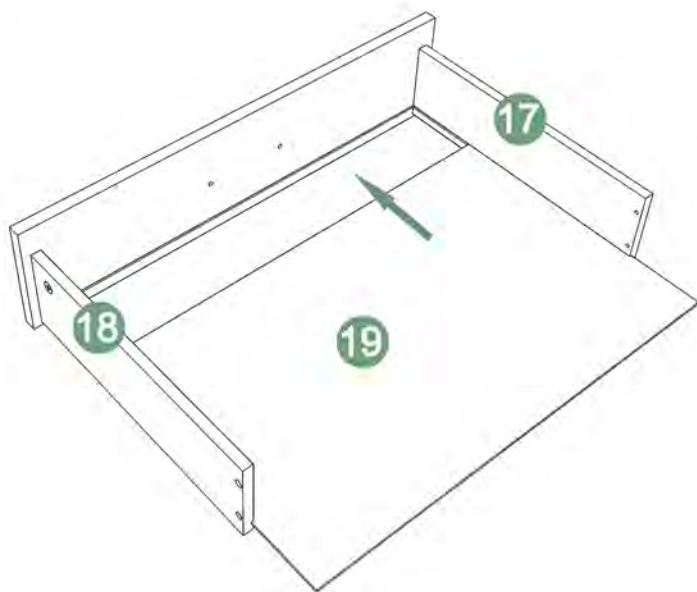


26.

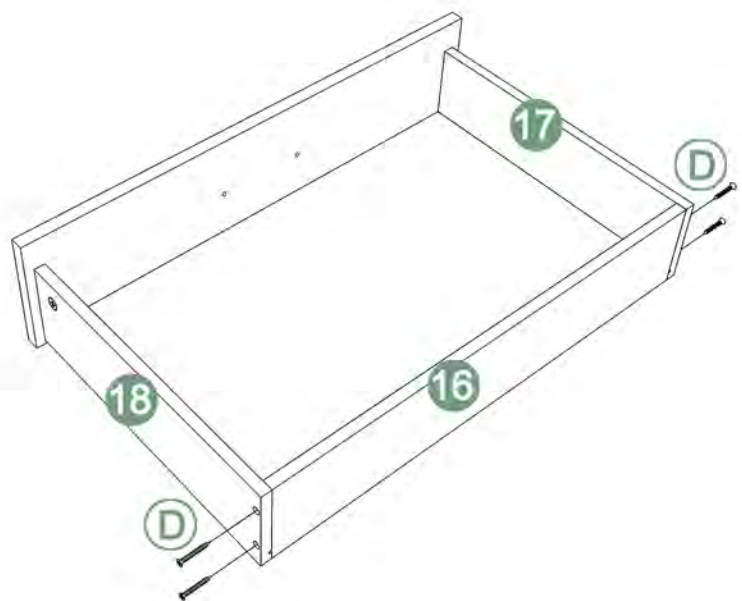

27.

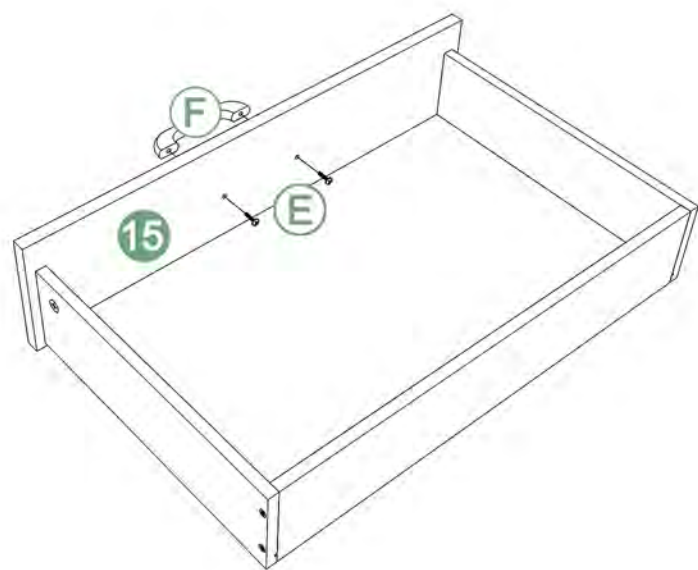

28.

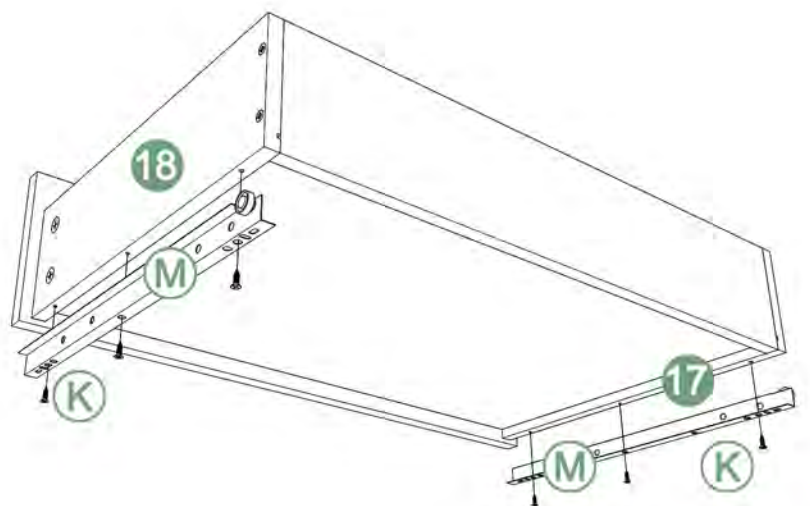

29.

