


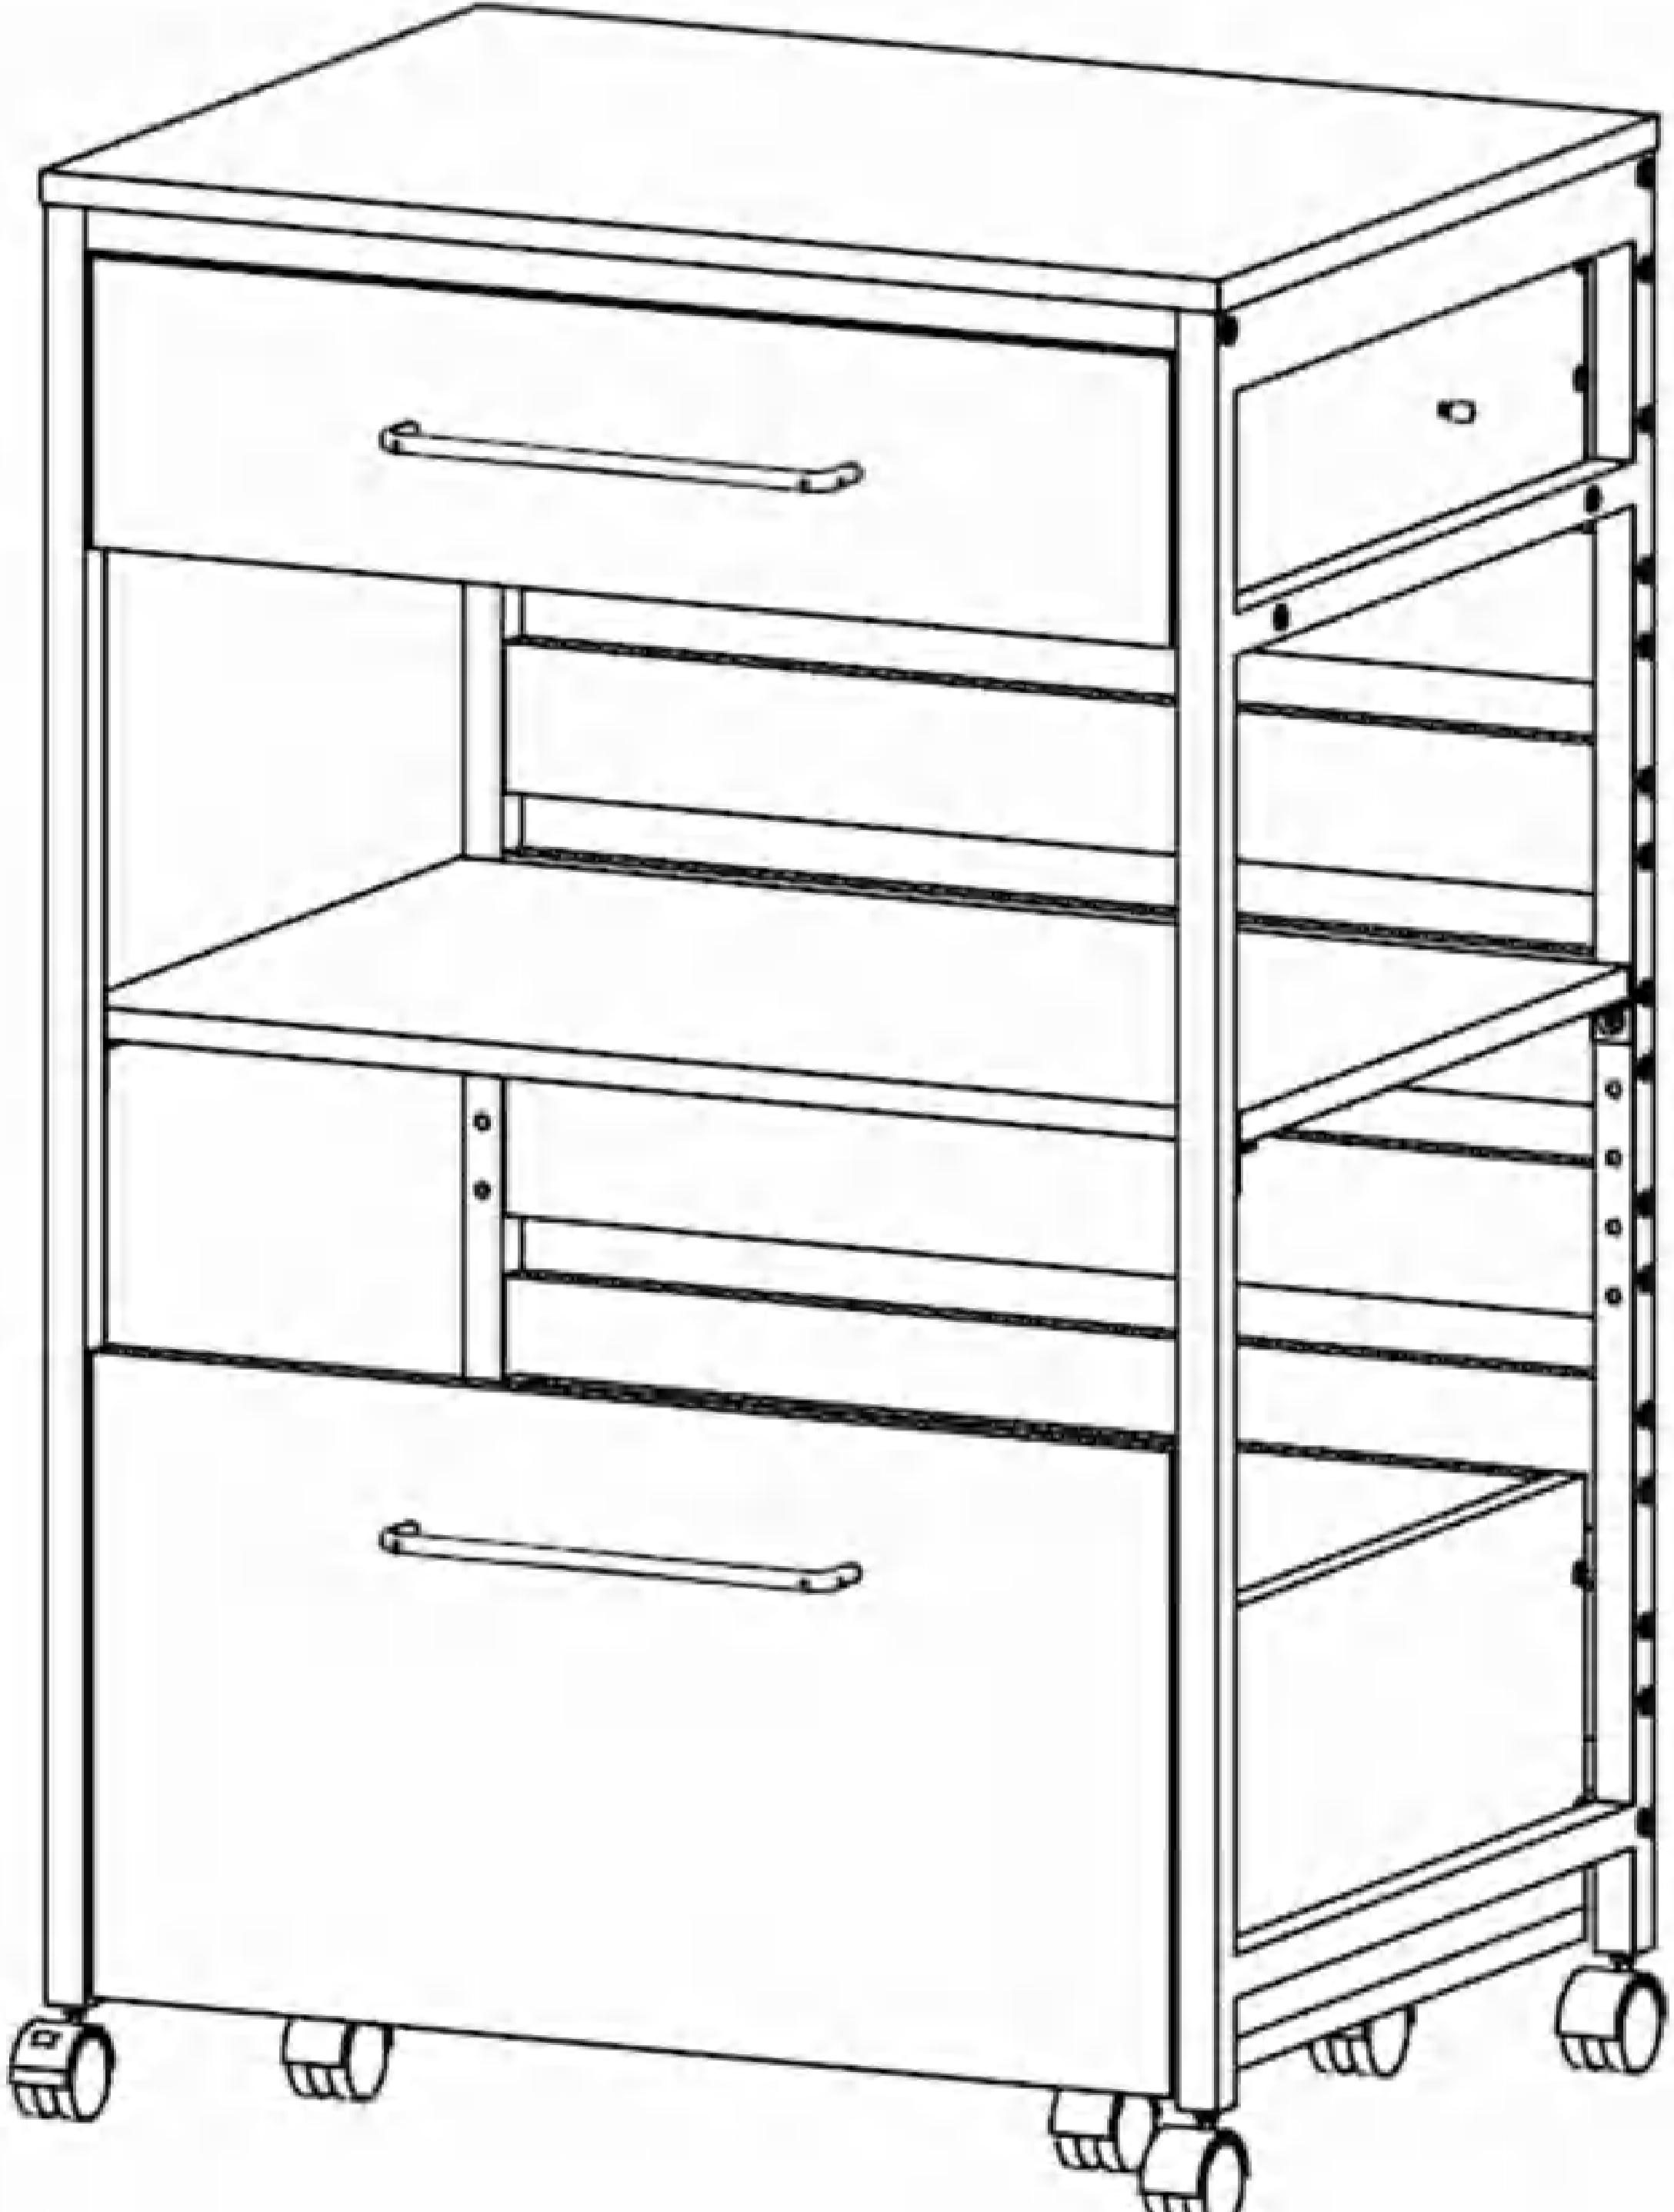


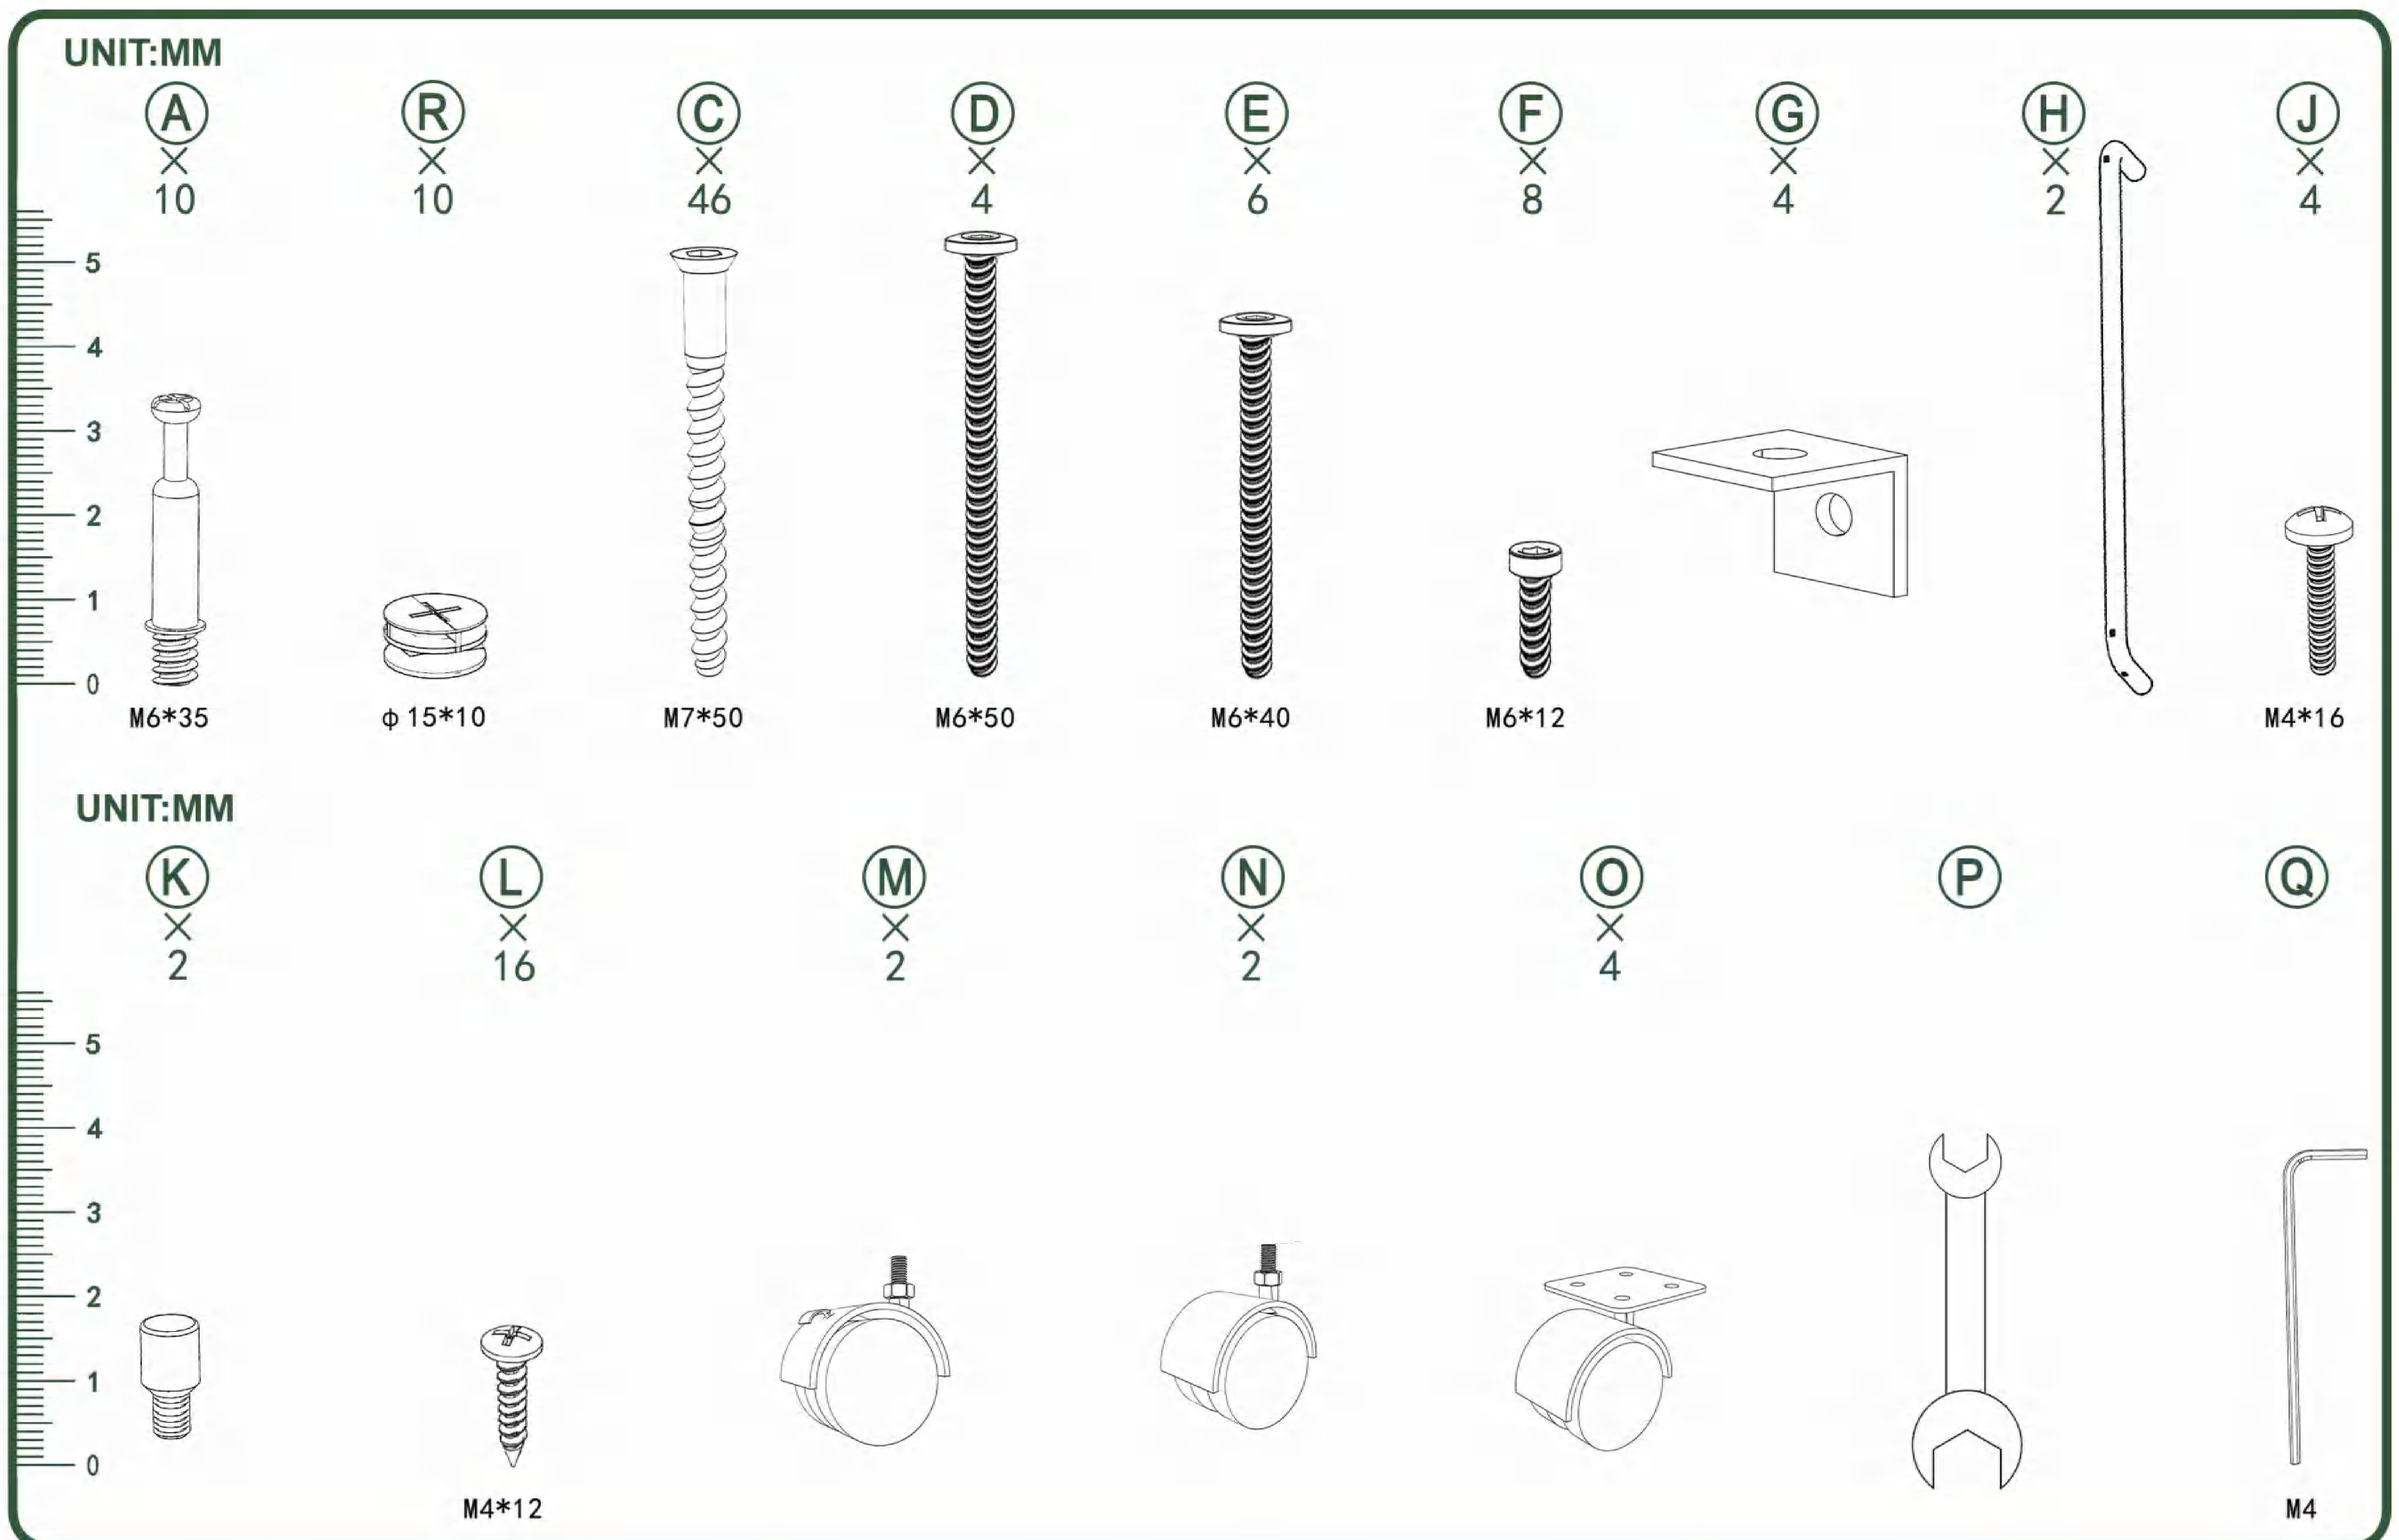


FKW118



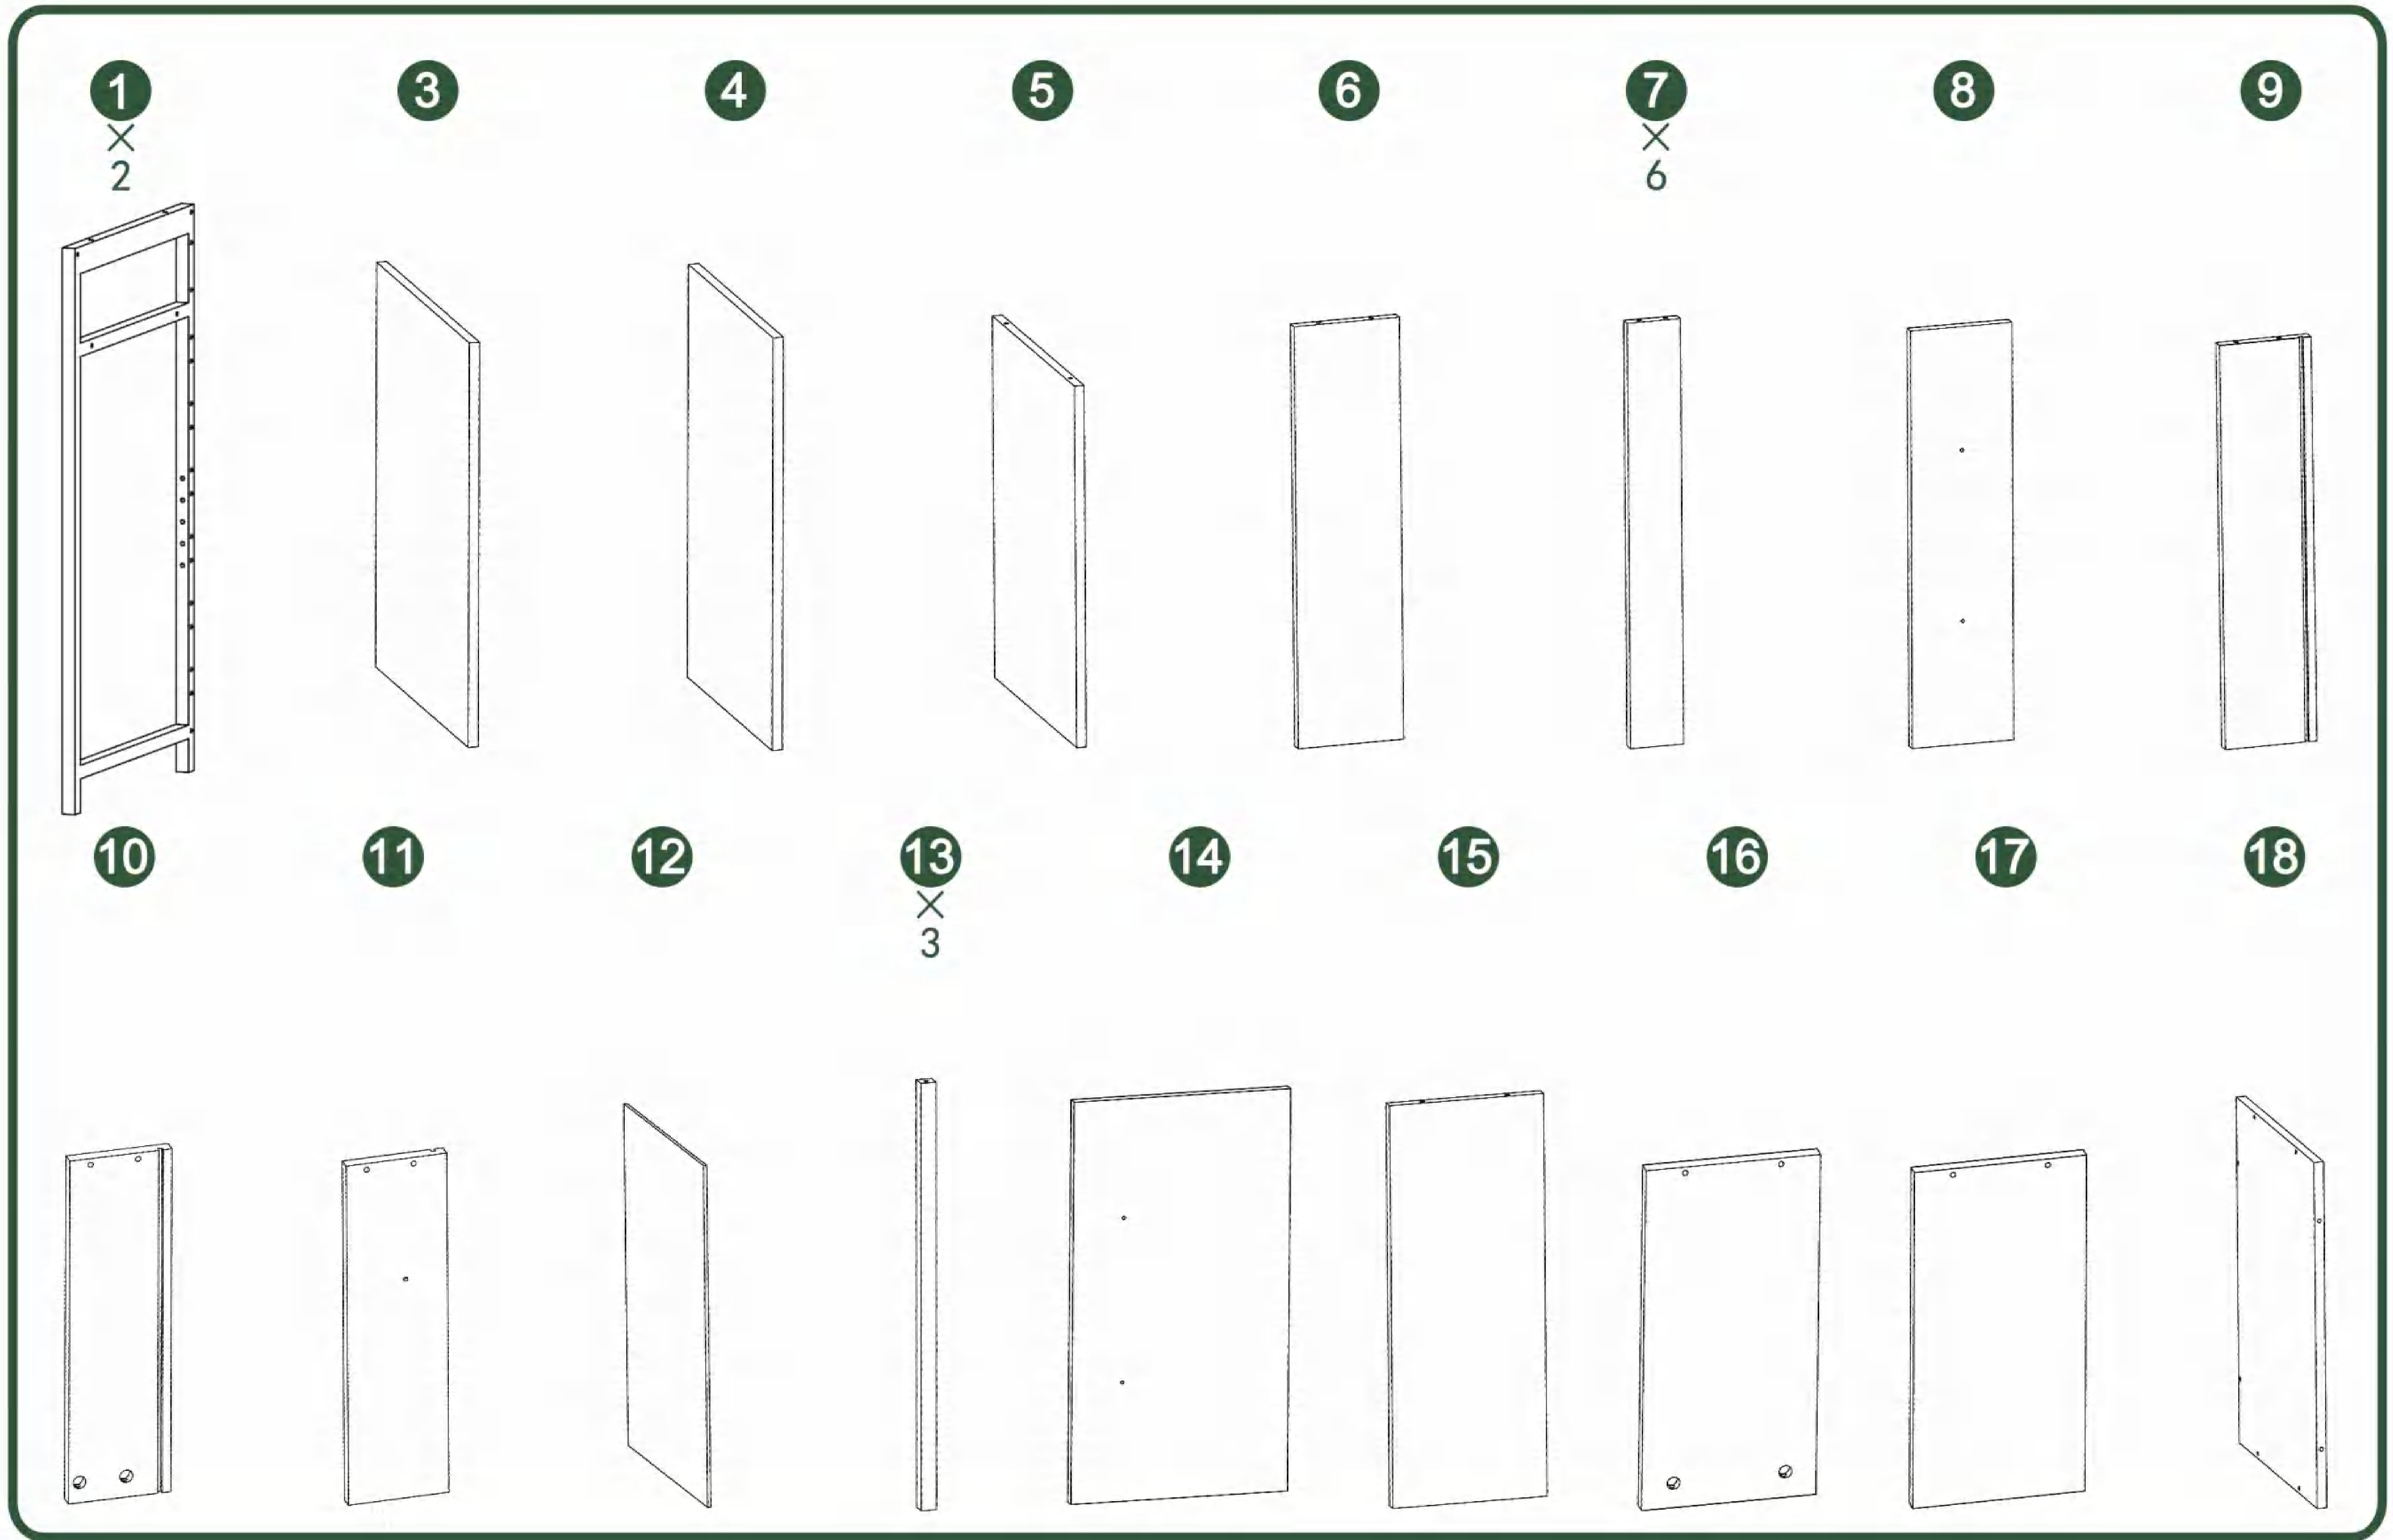










TOOLS:

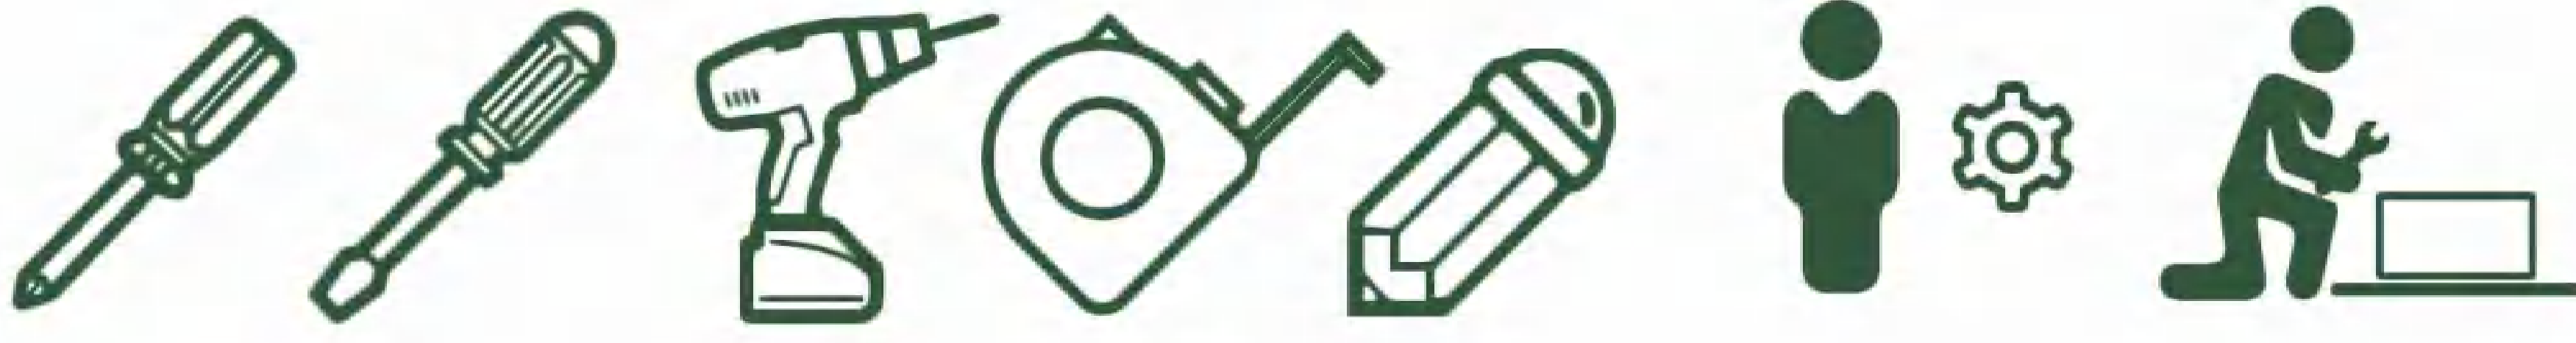

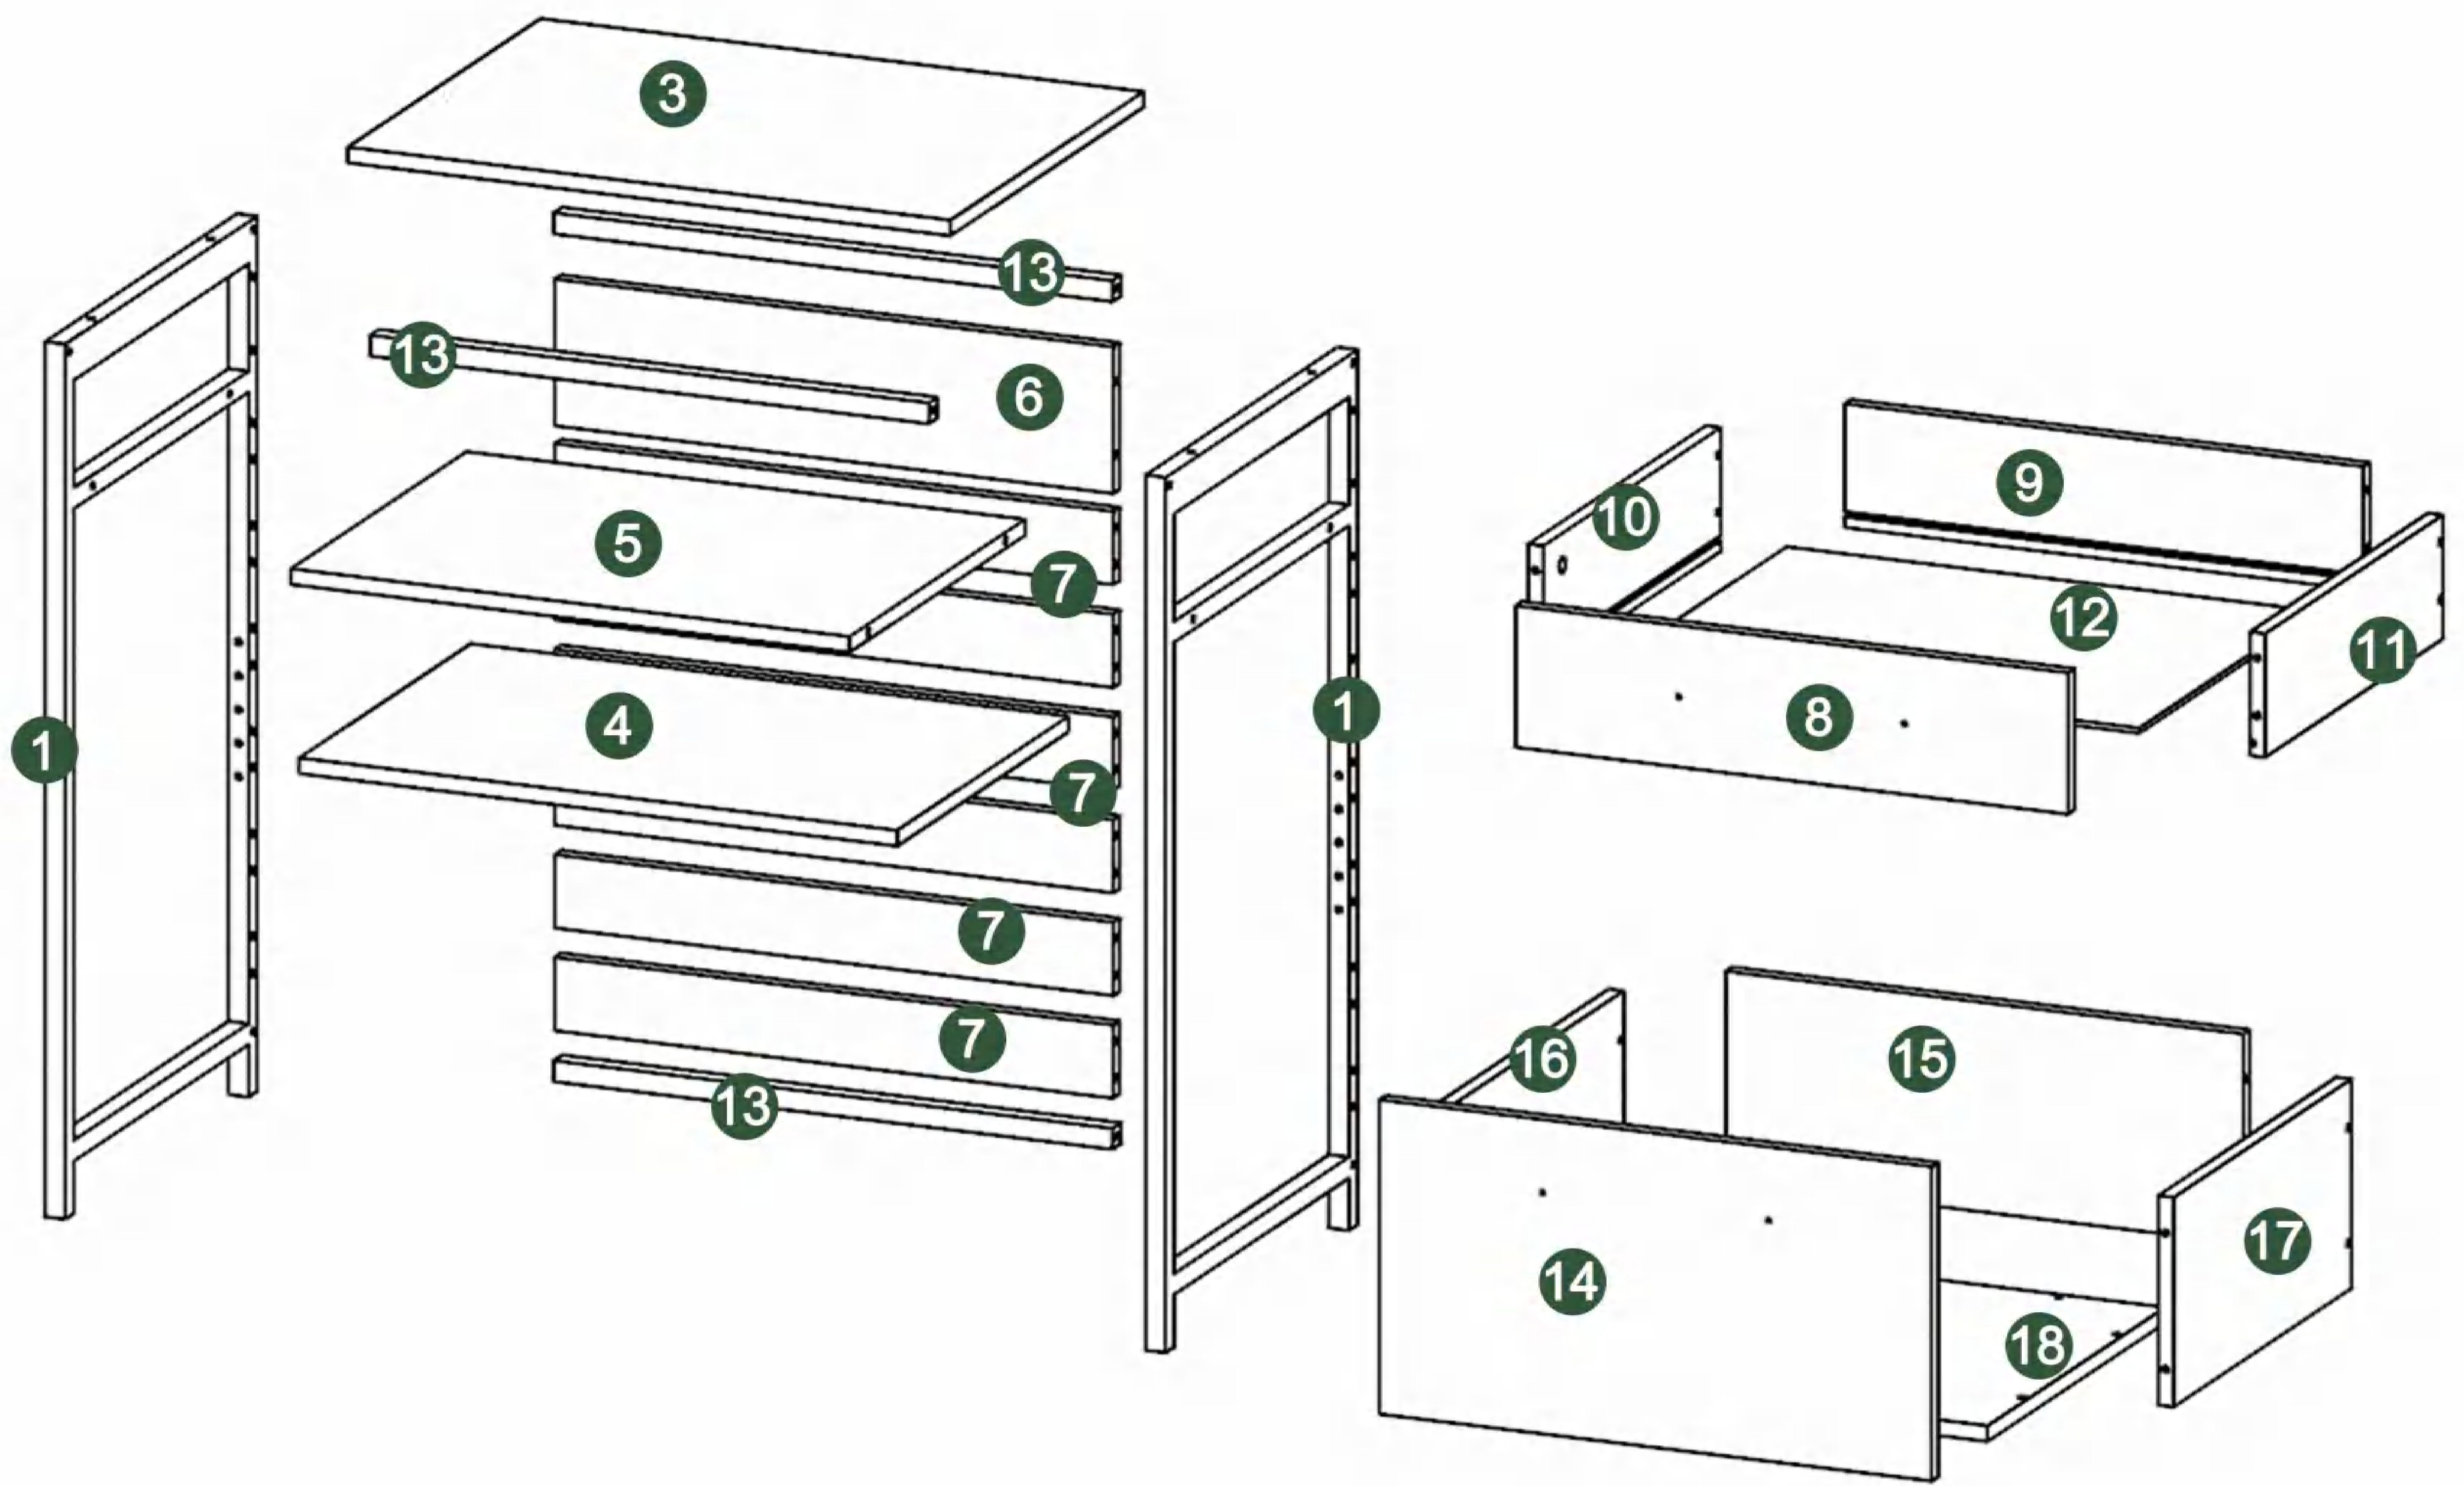


**BOLT INSTALLATION AS BELOW:**

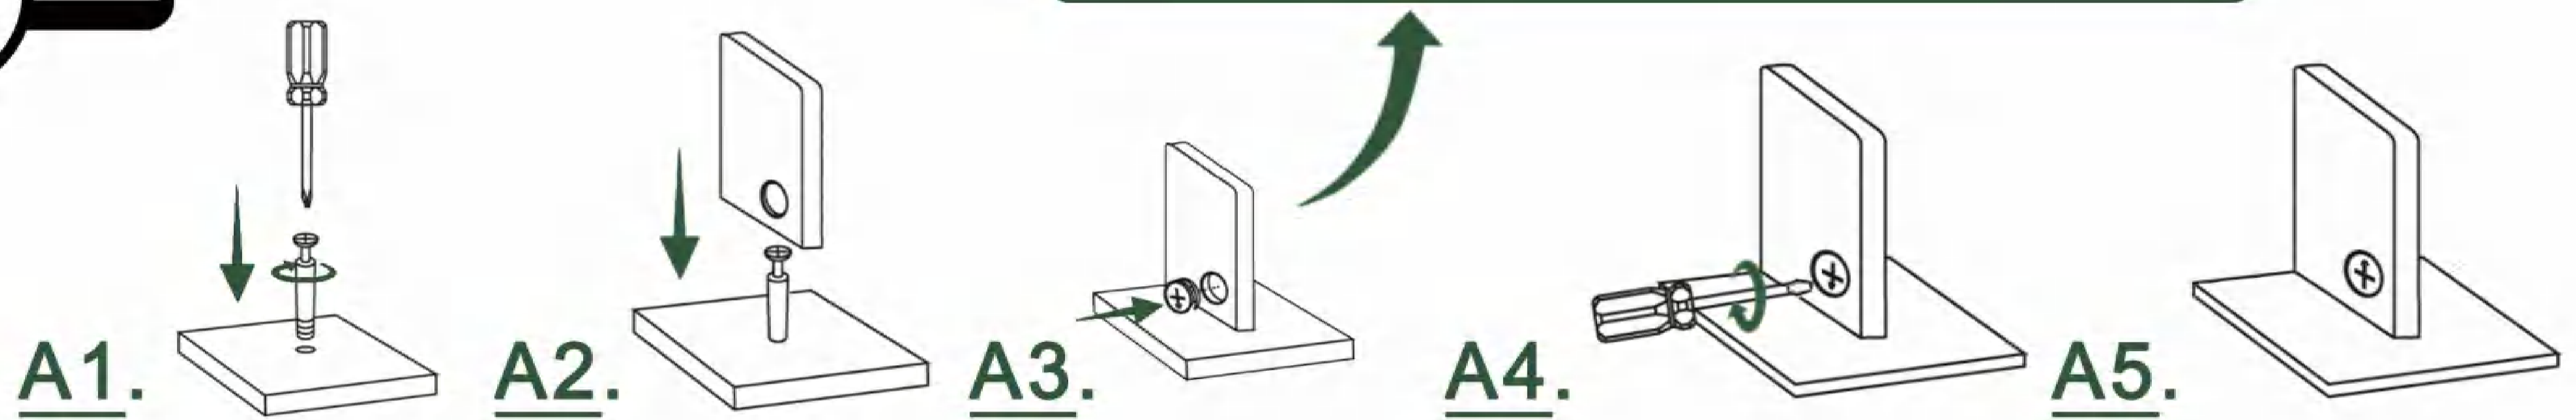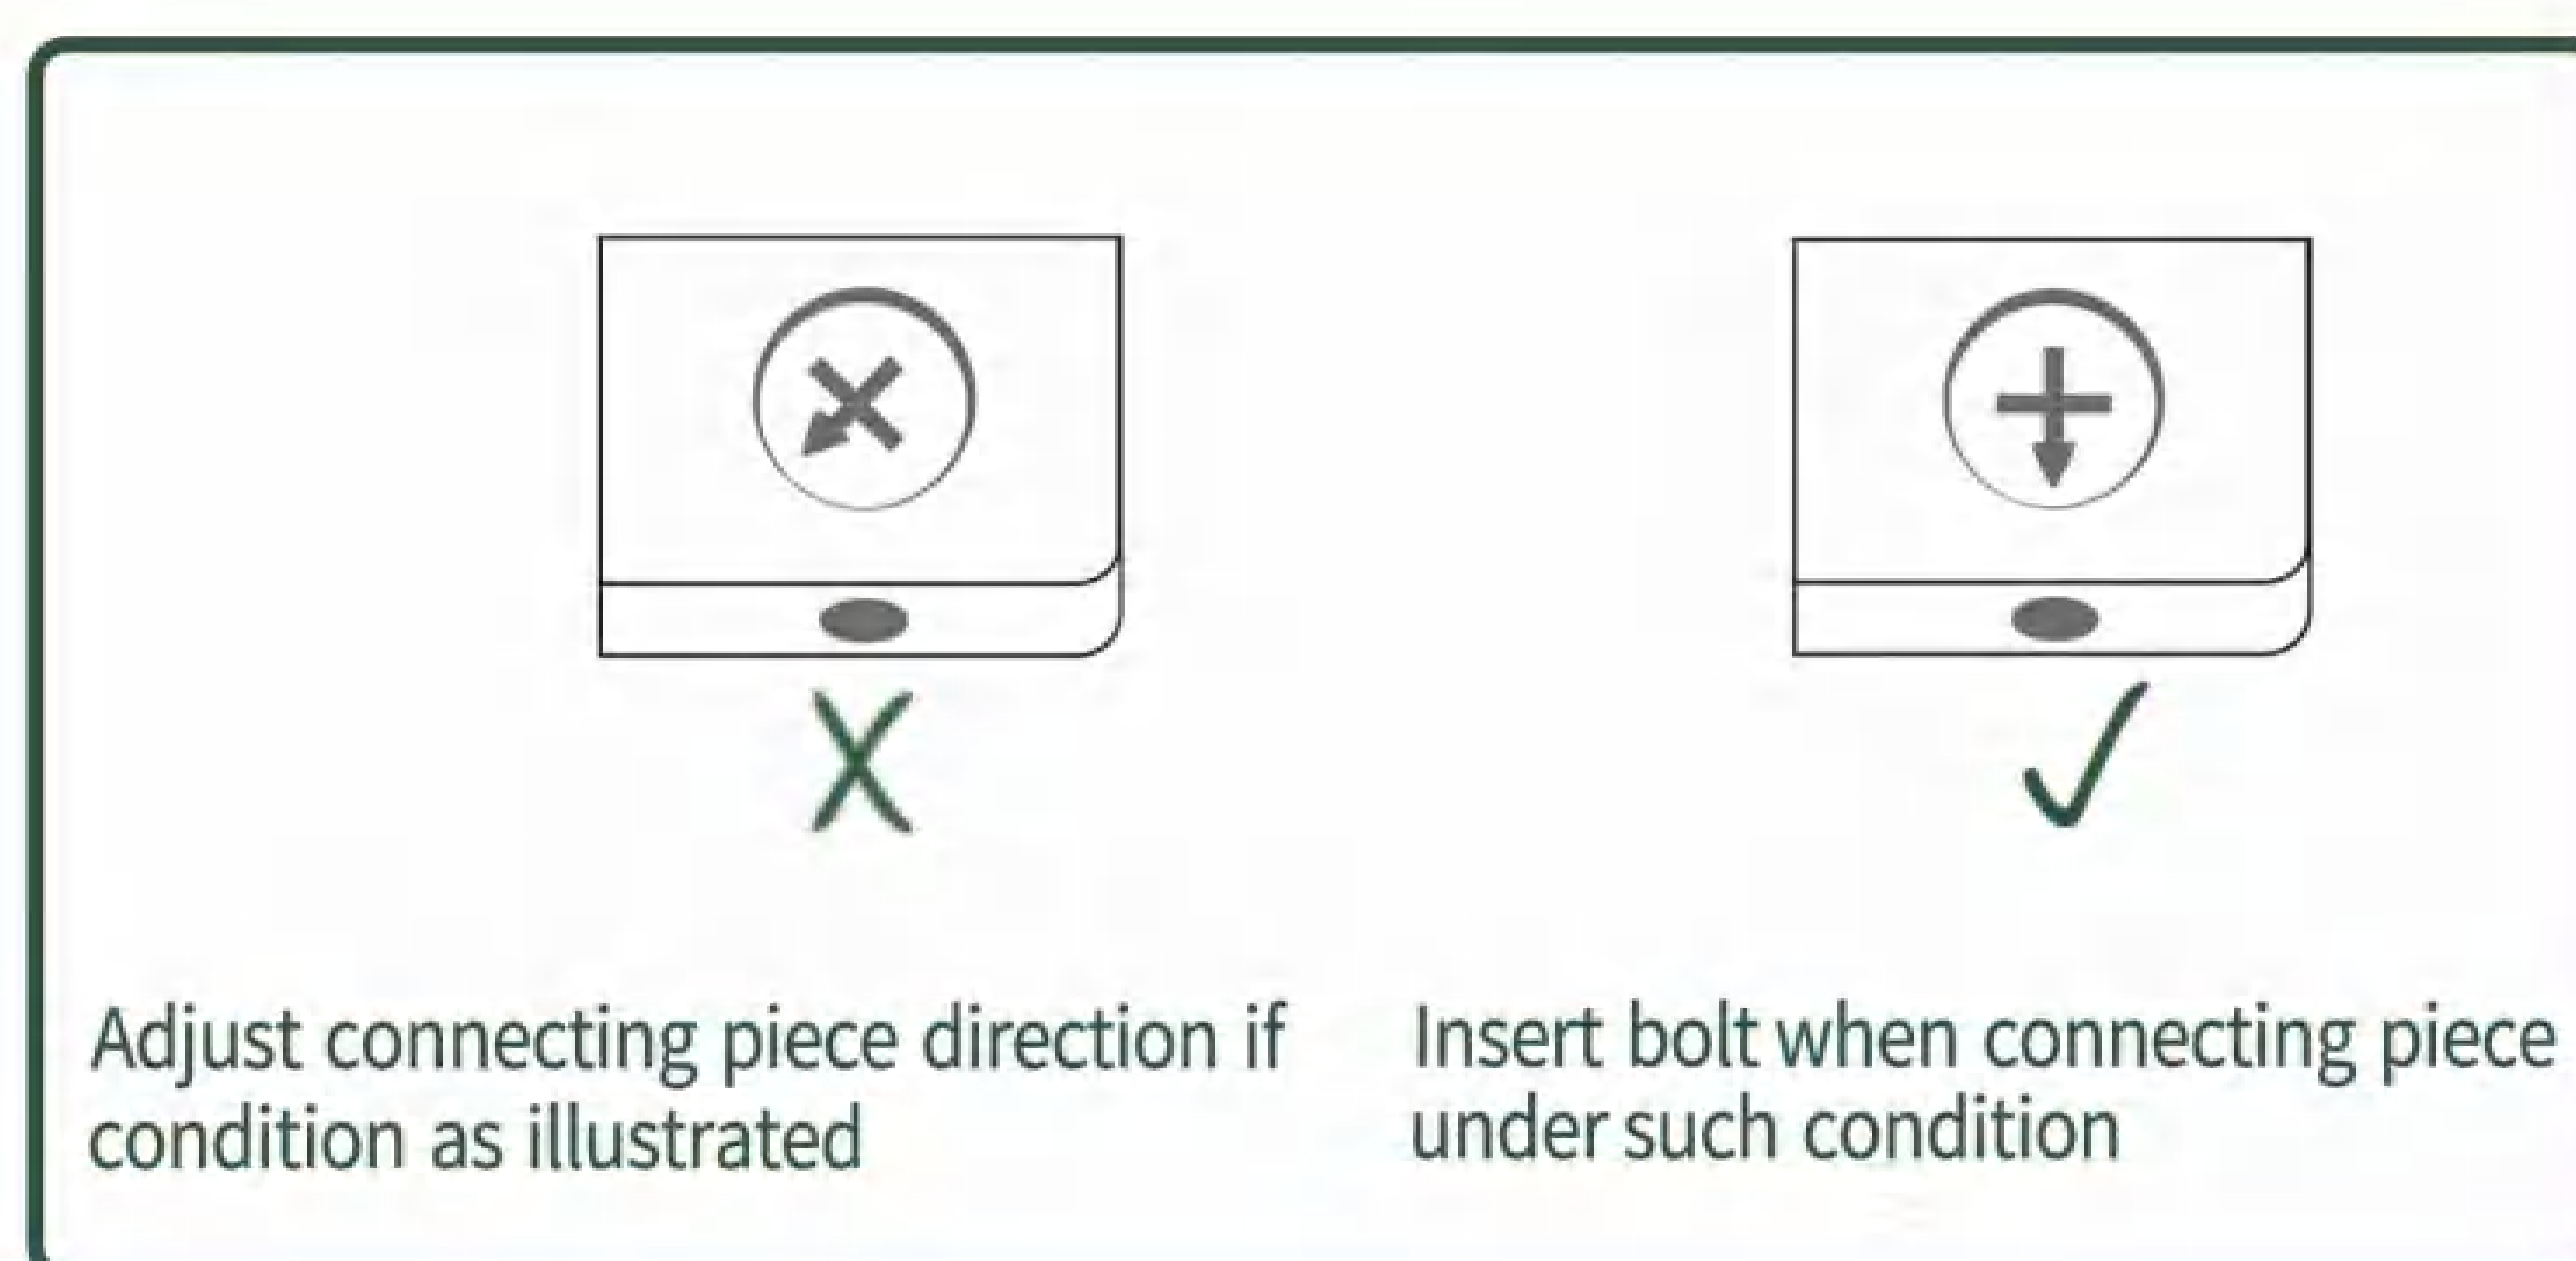
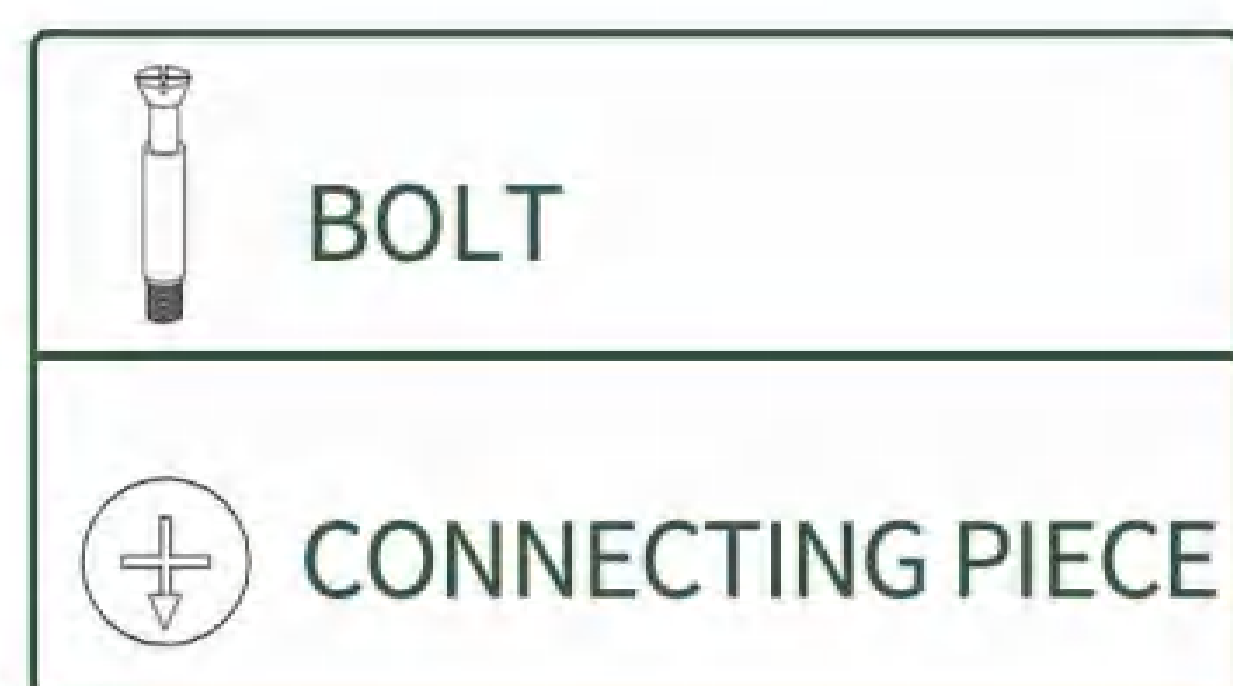


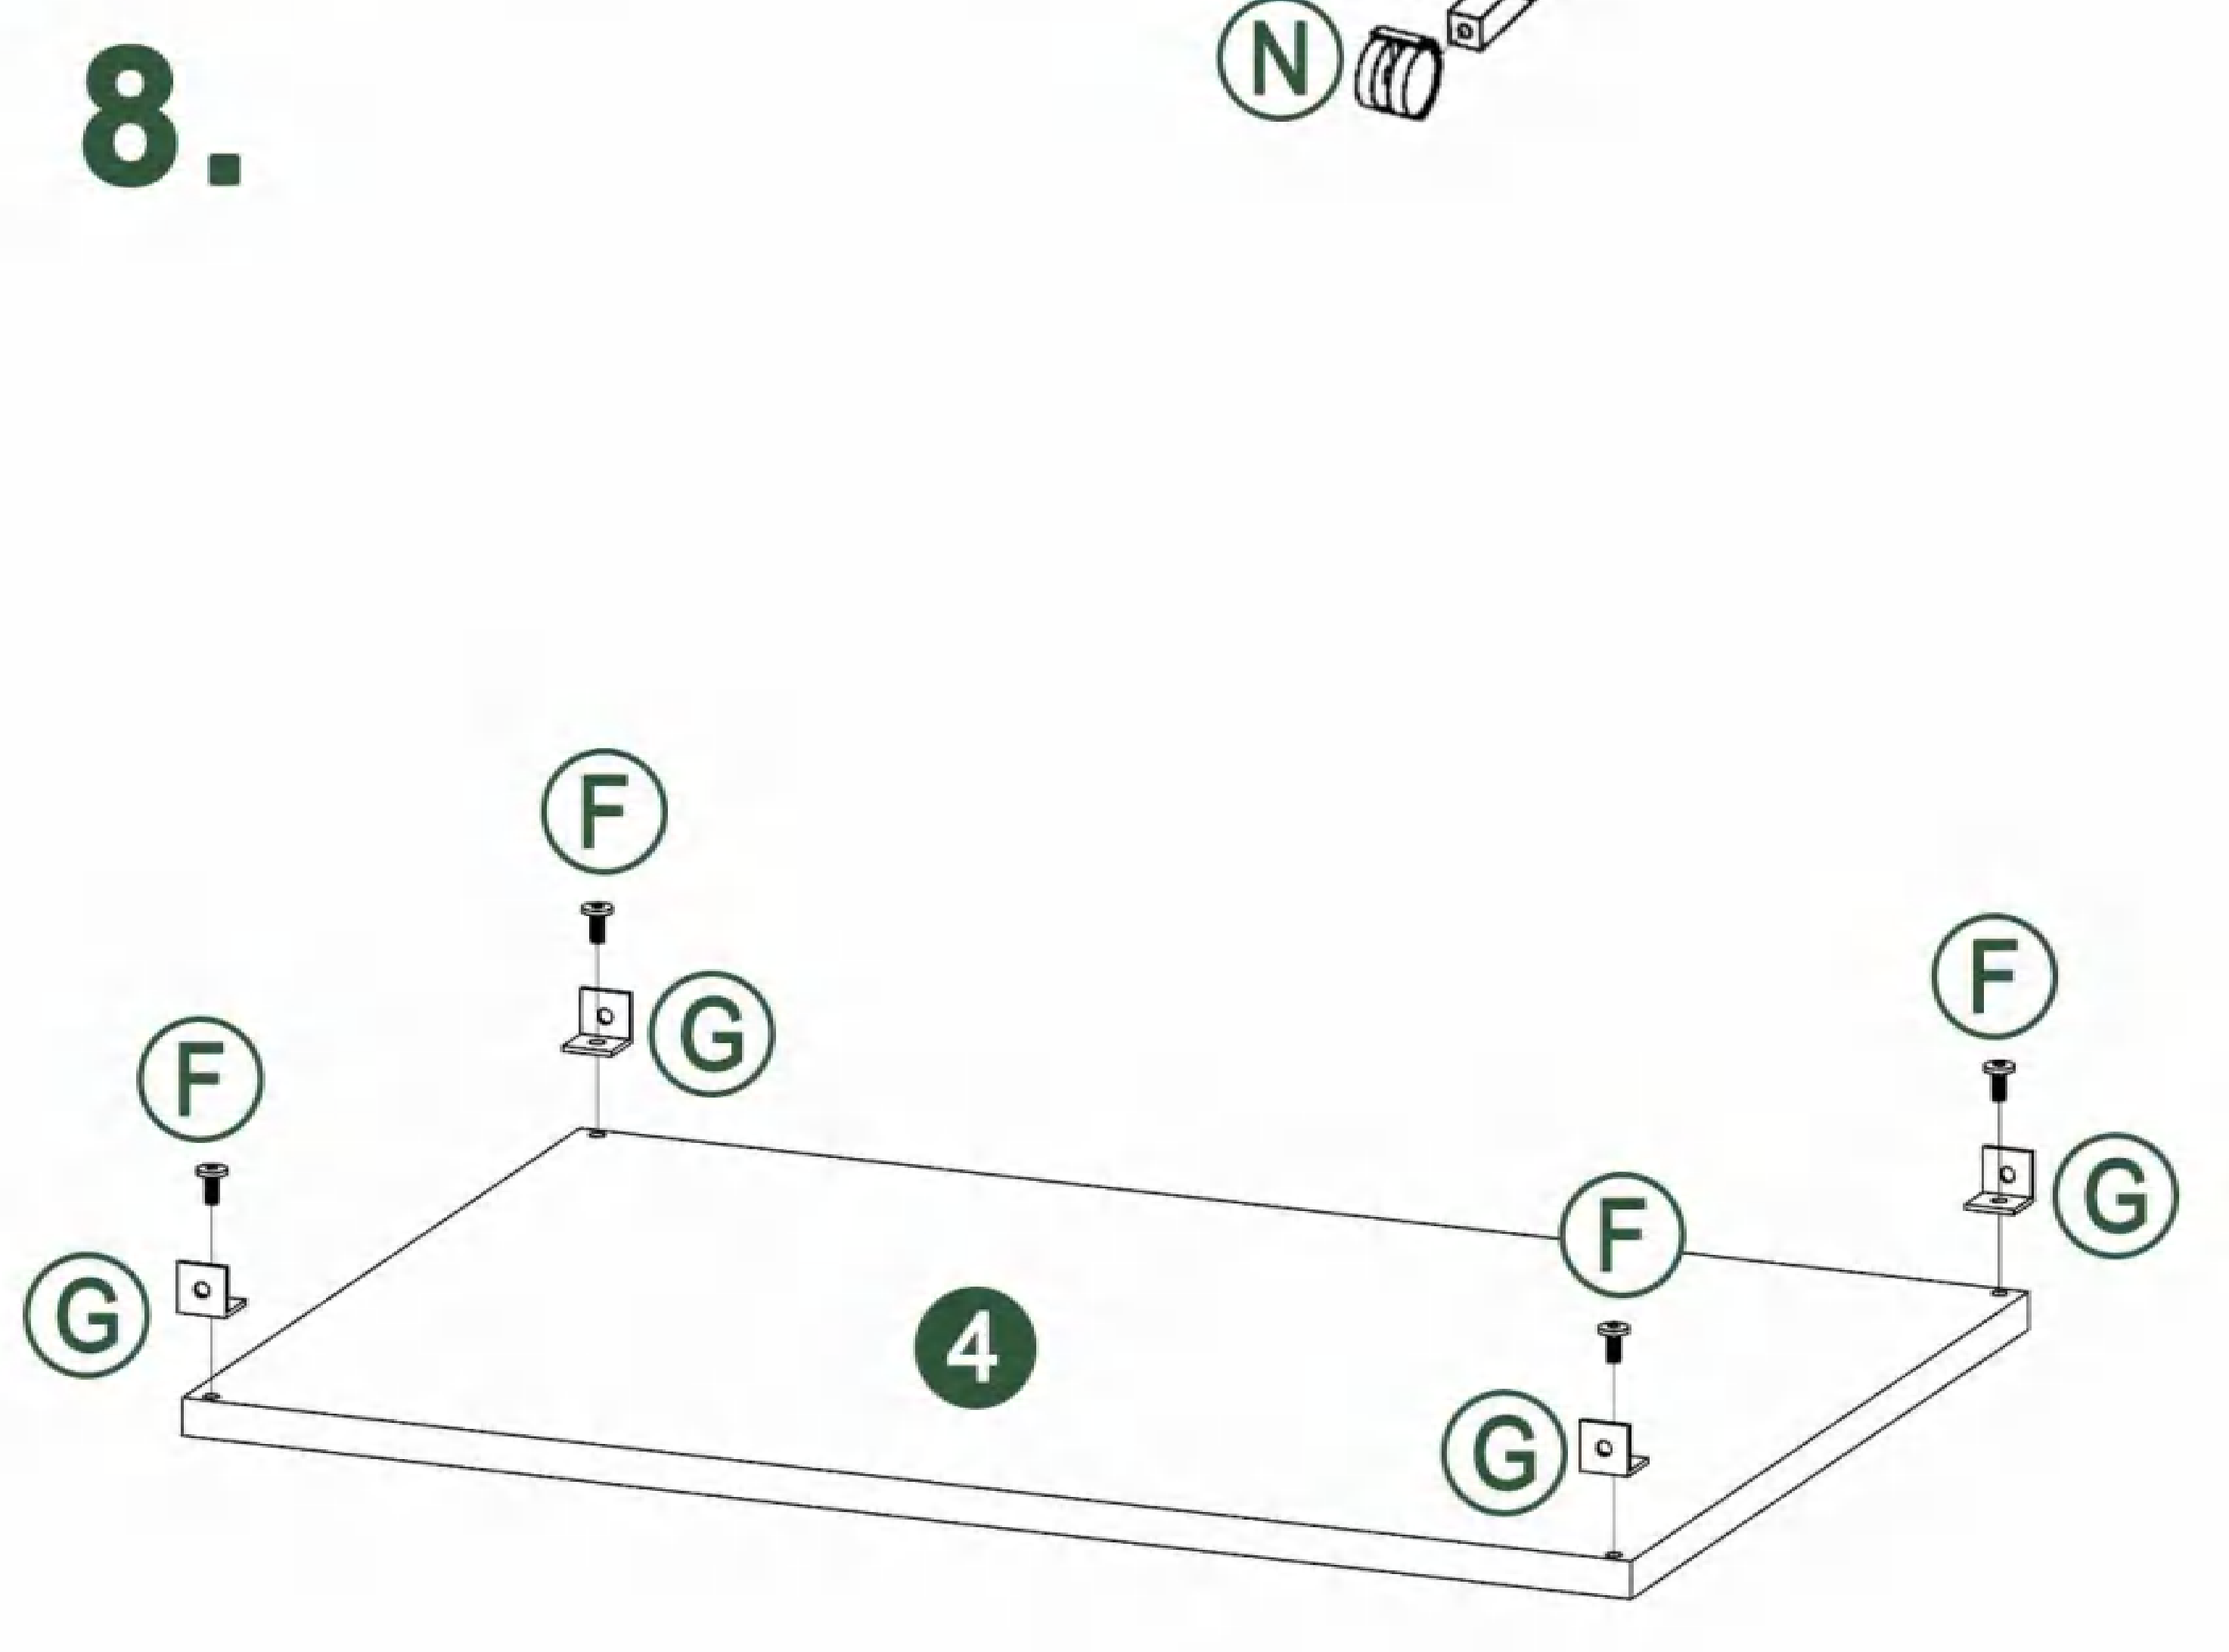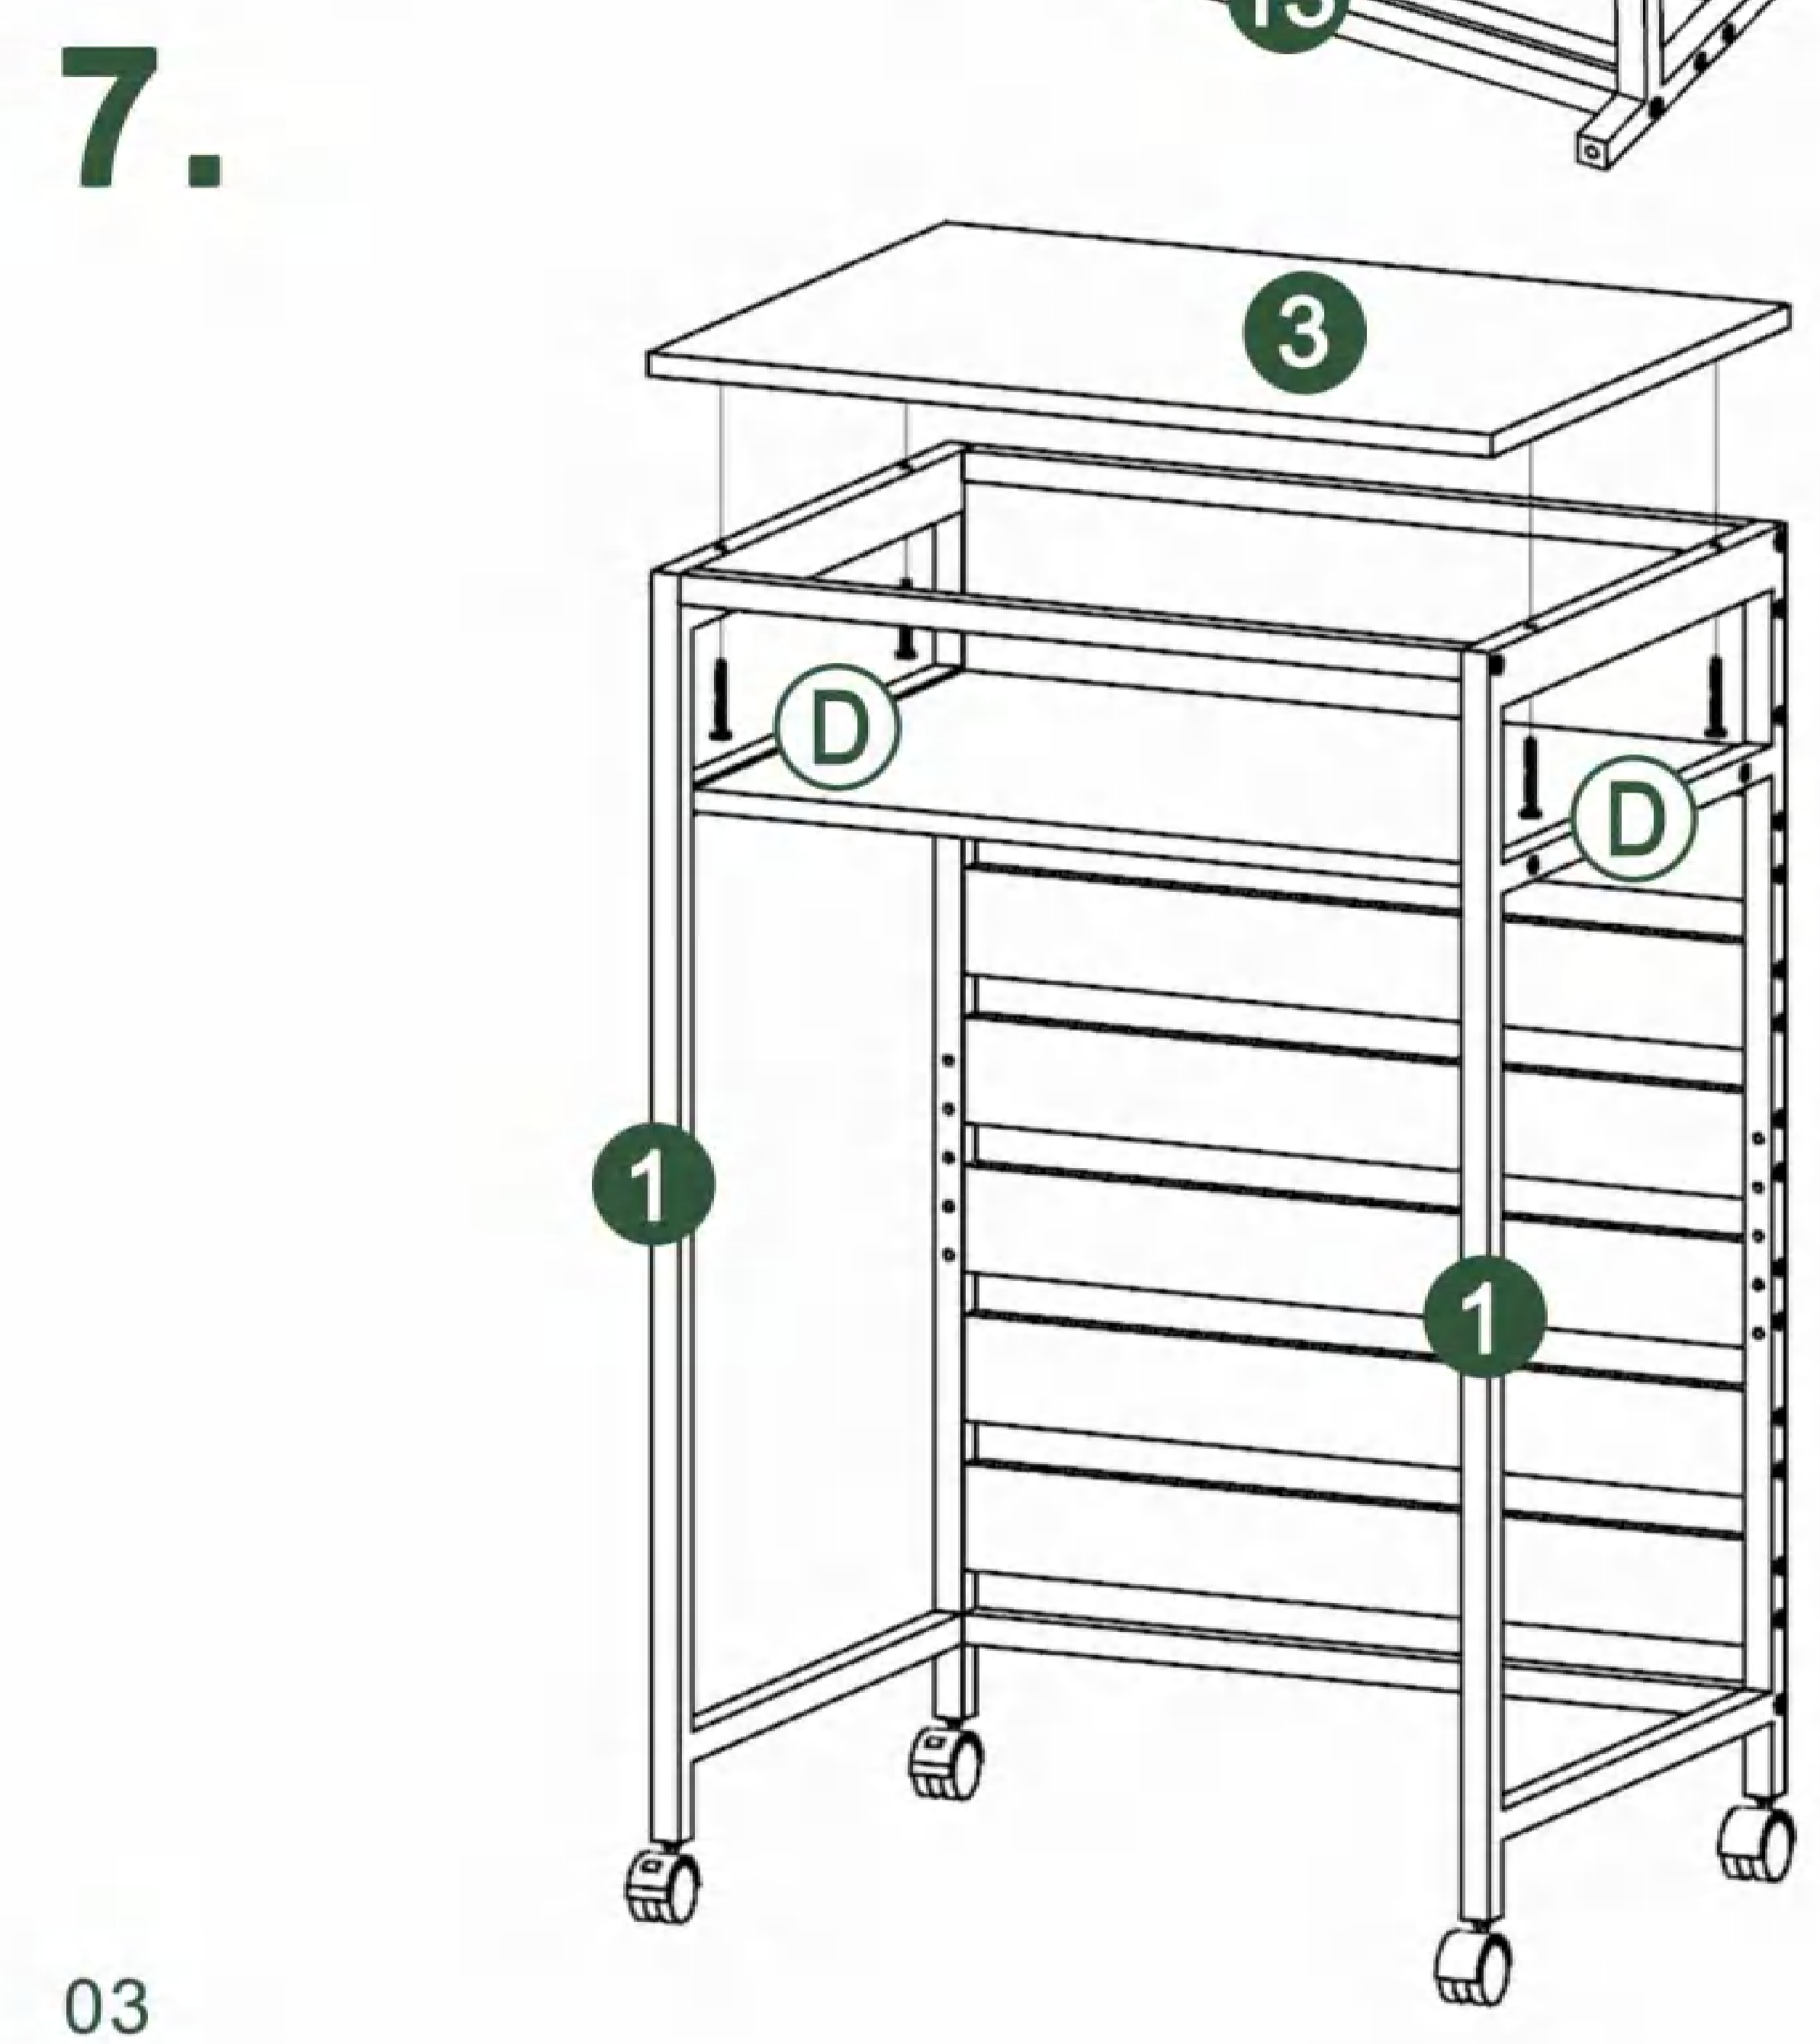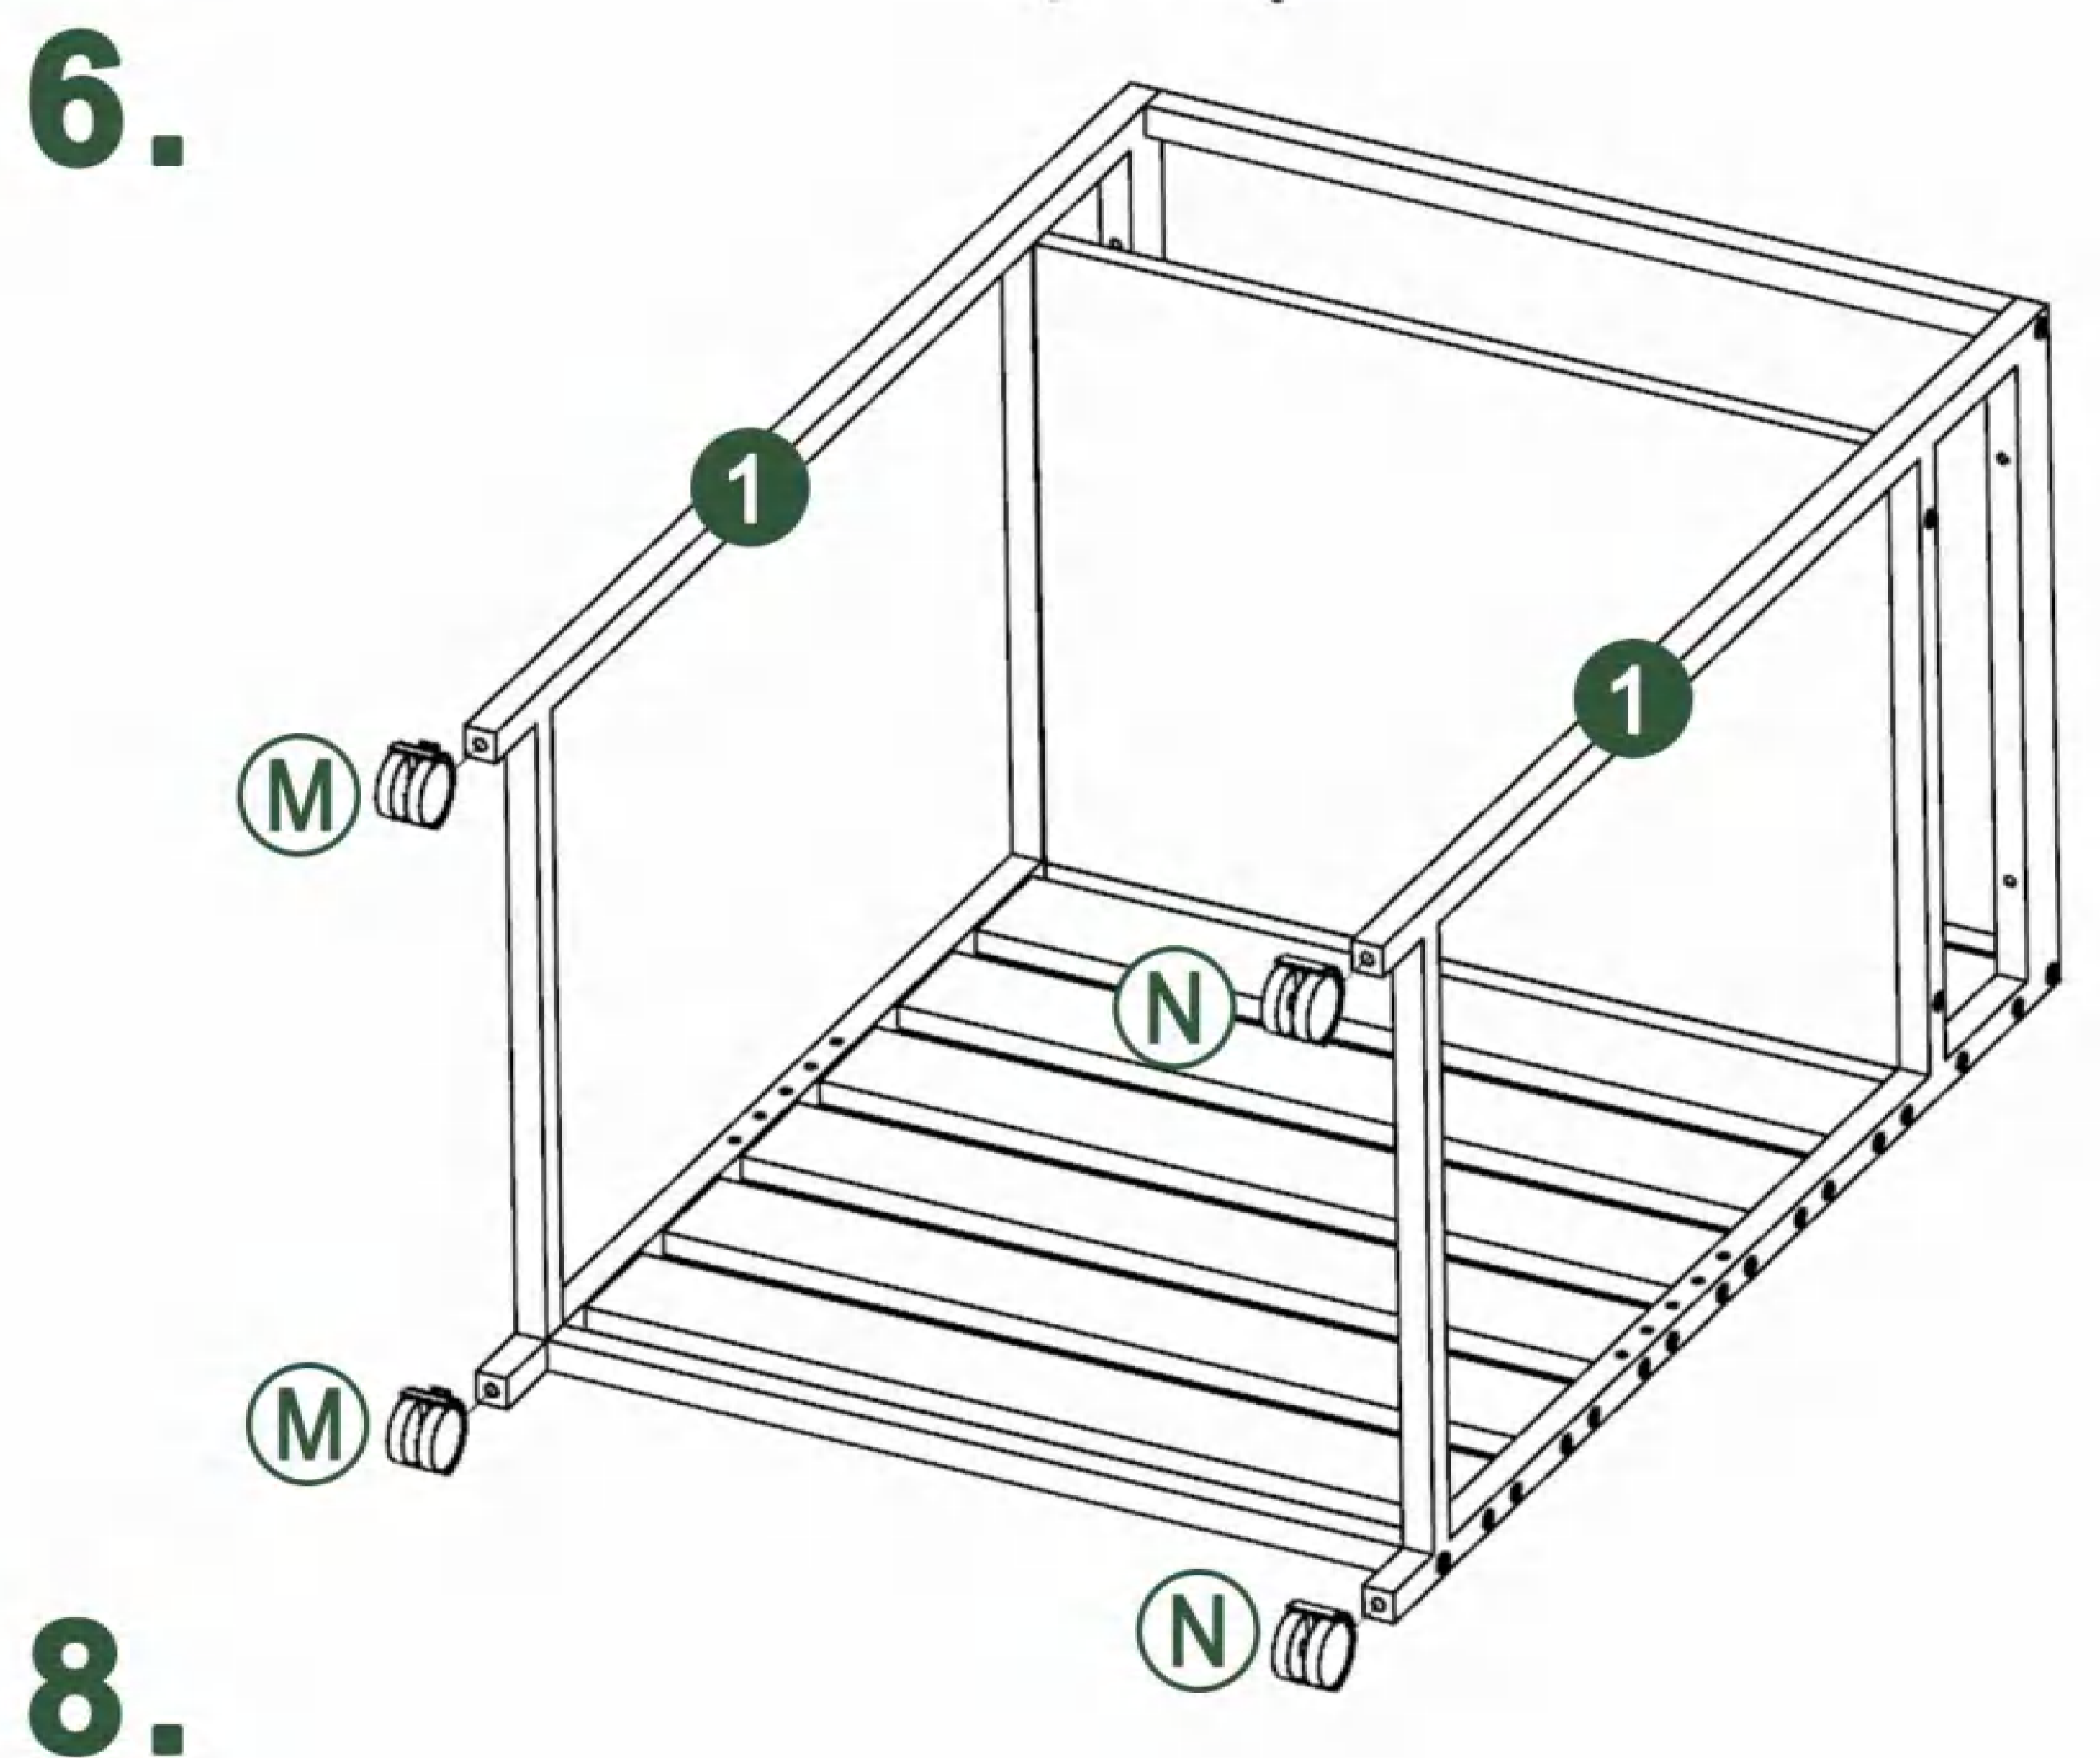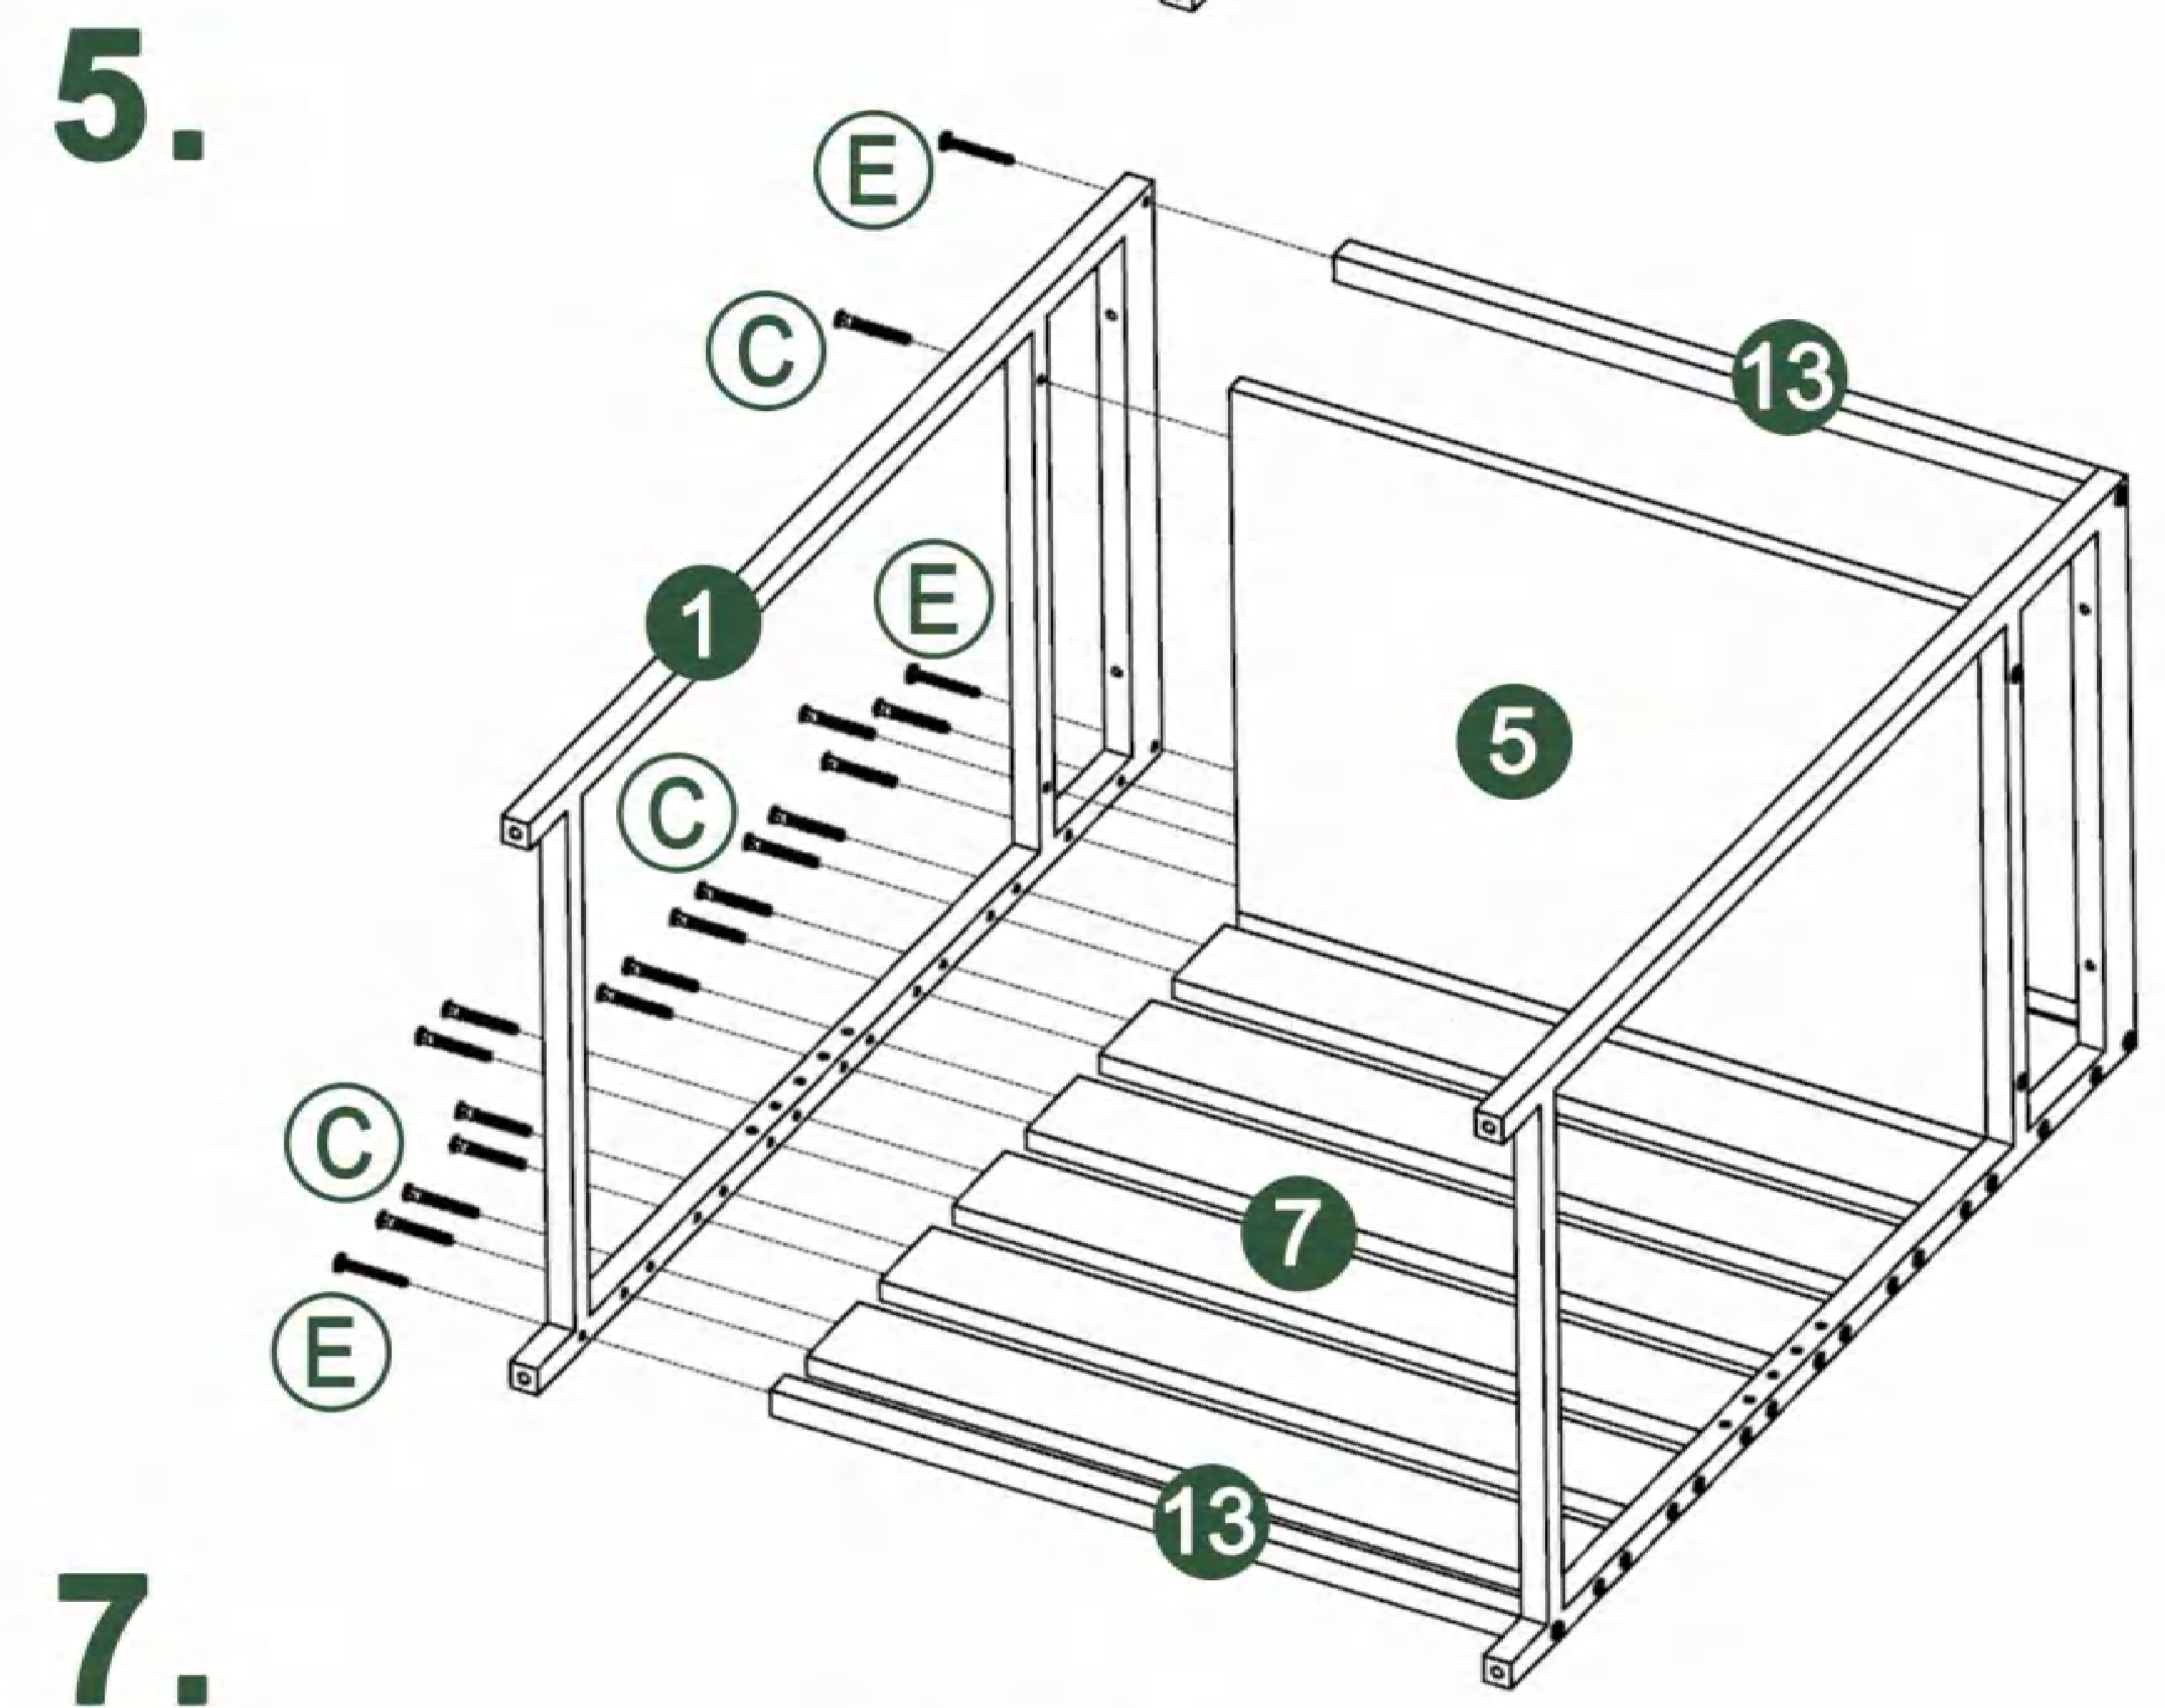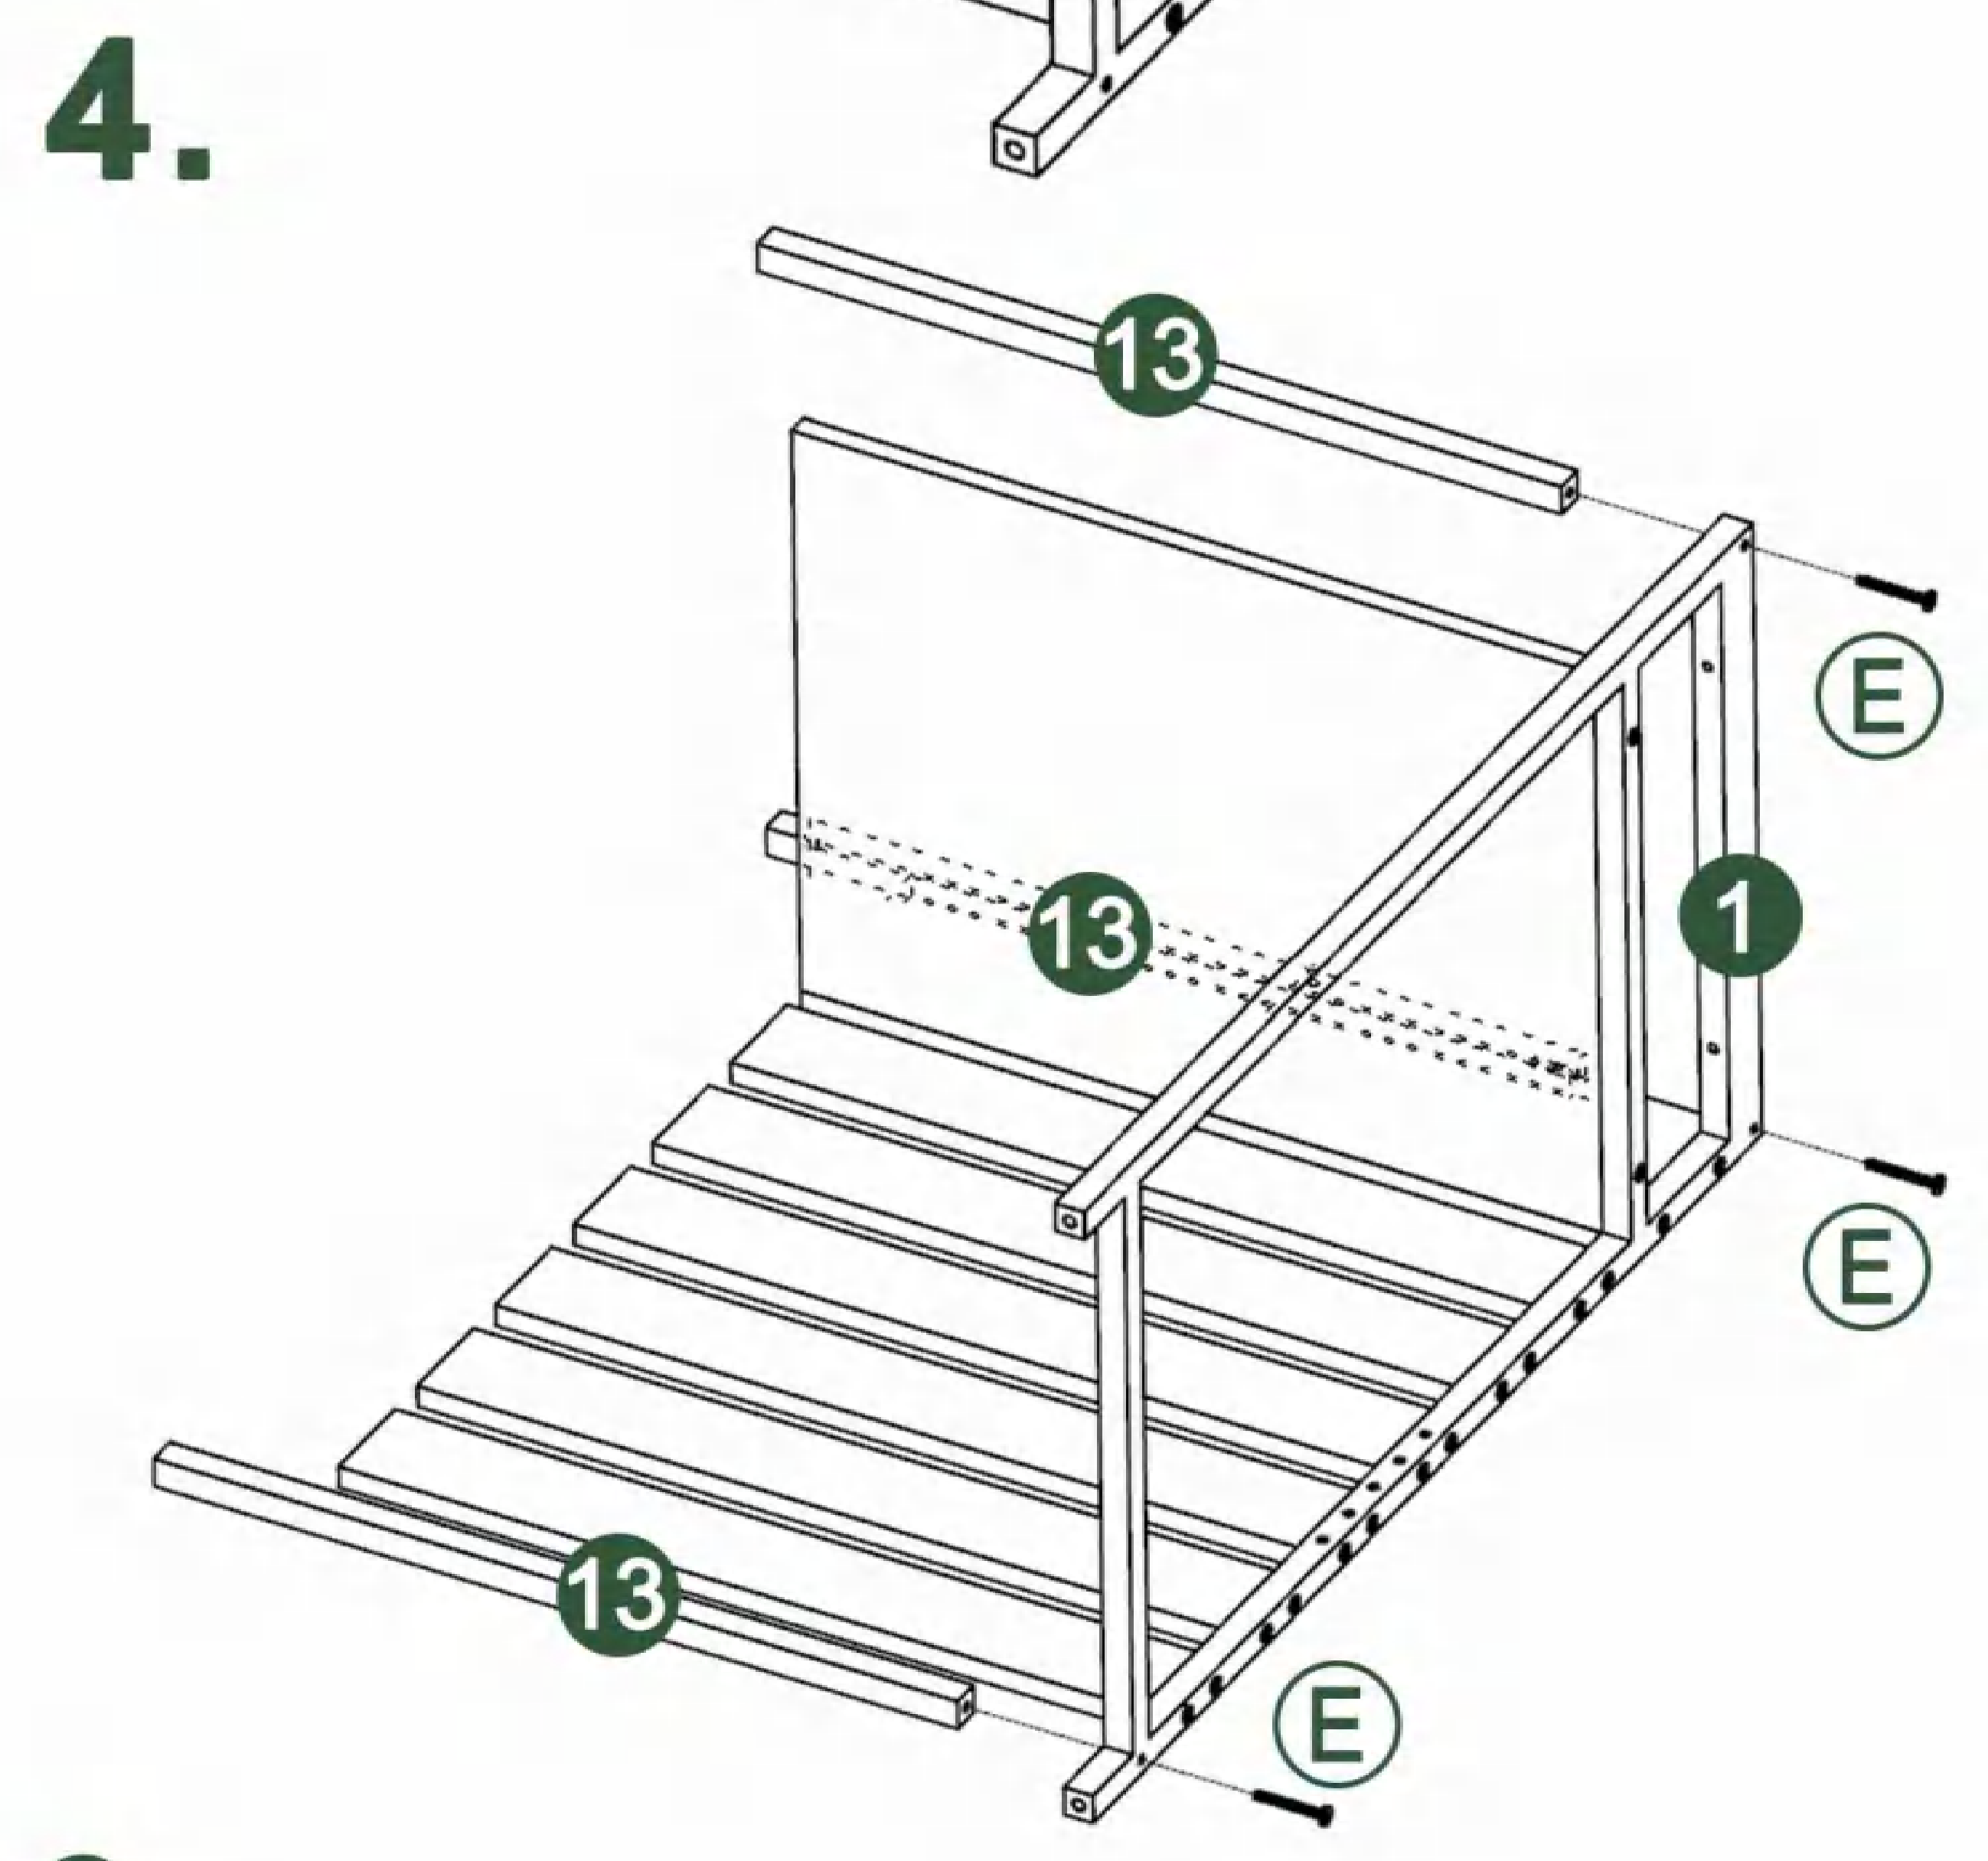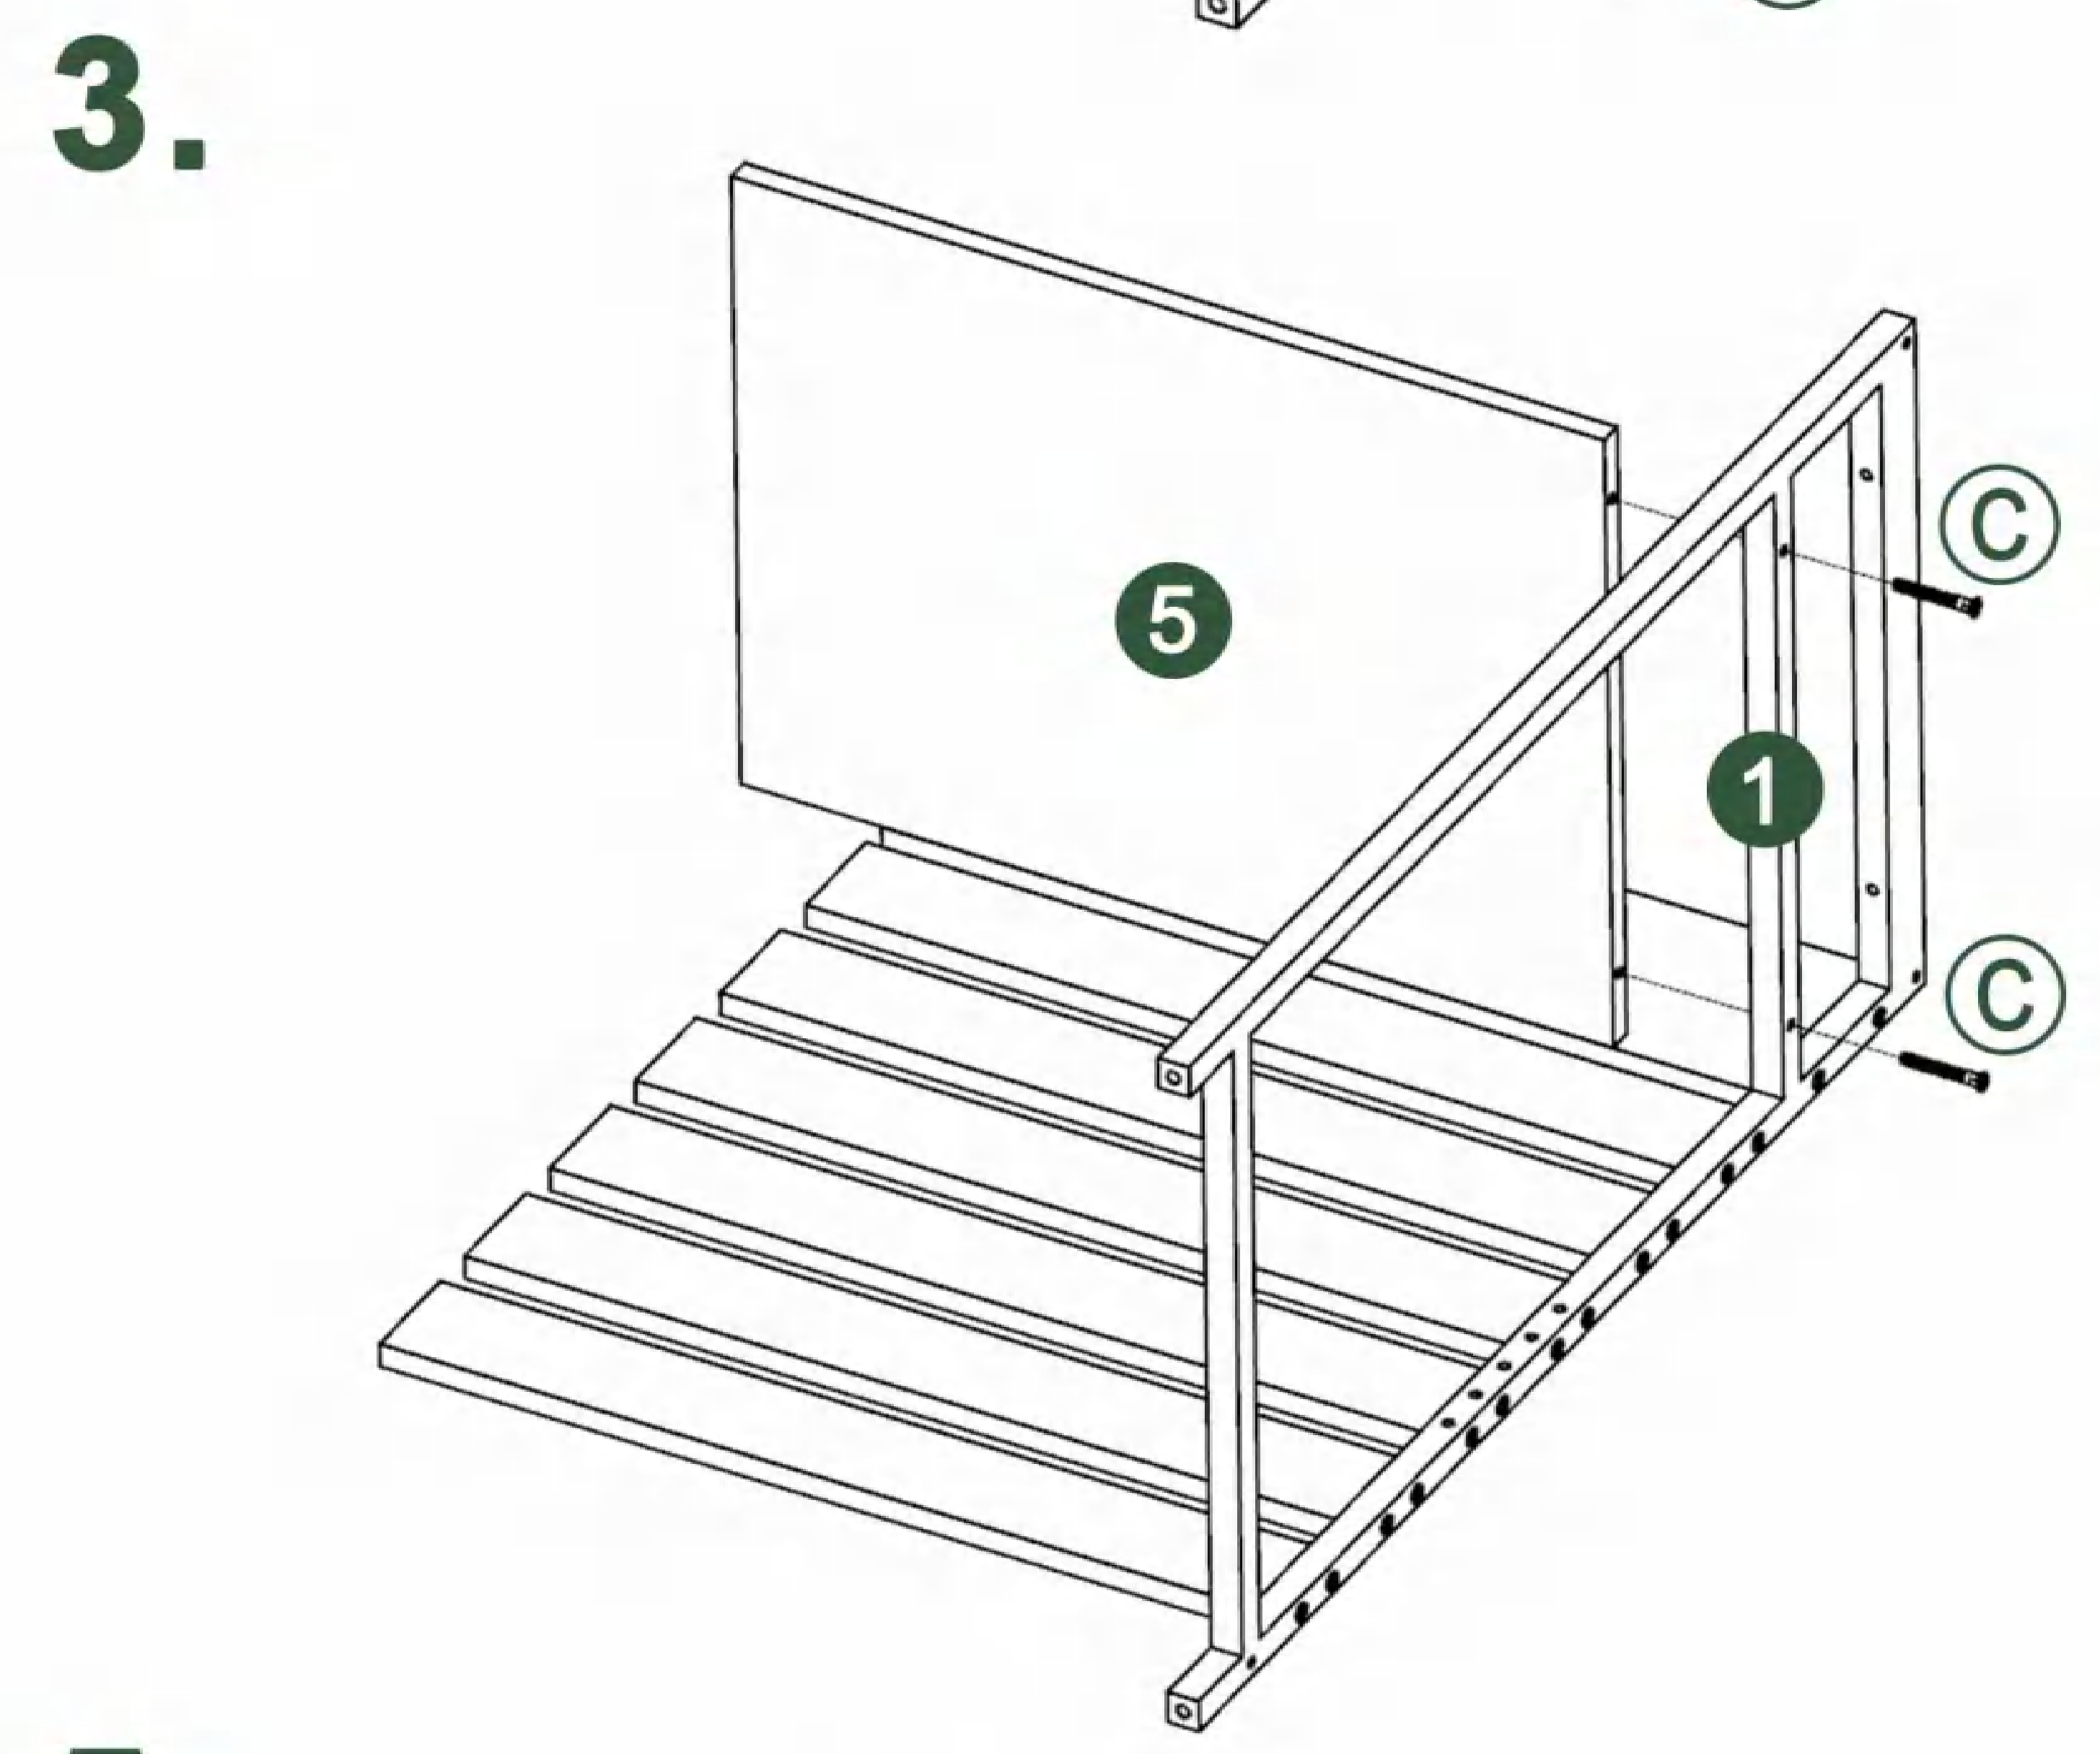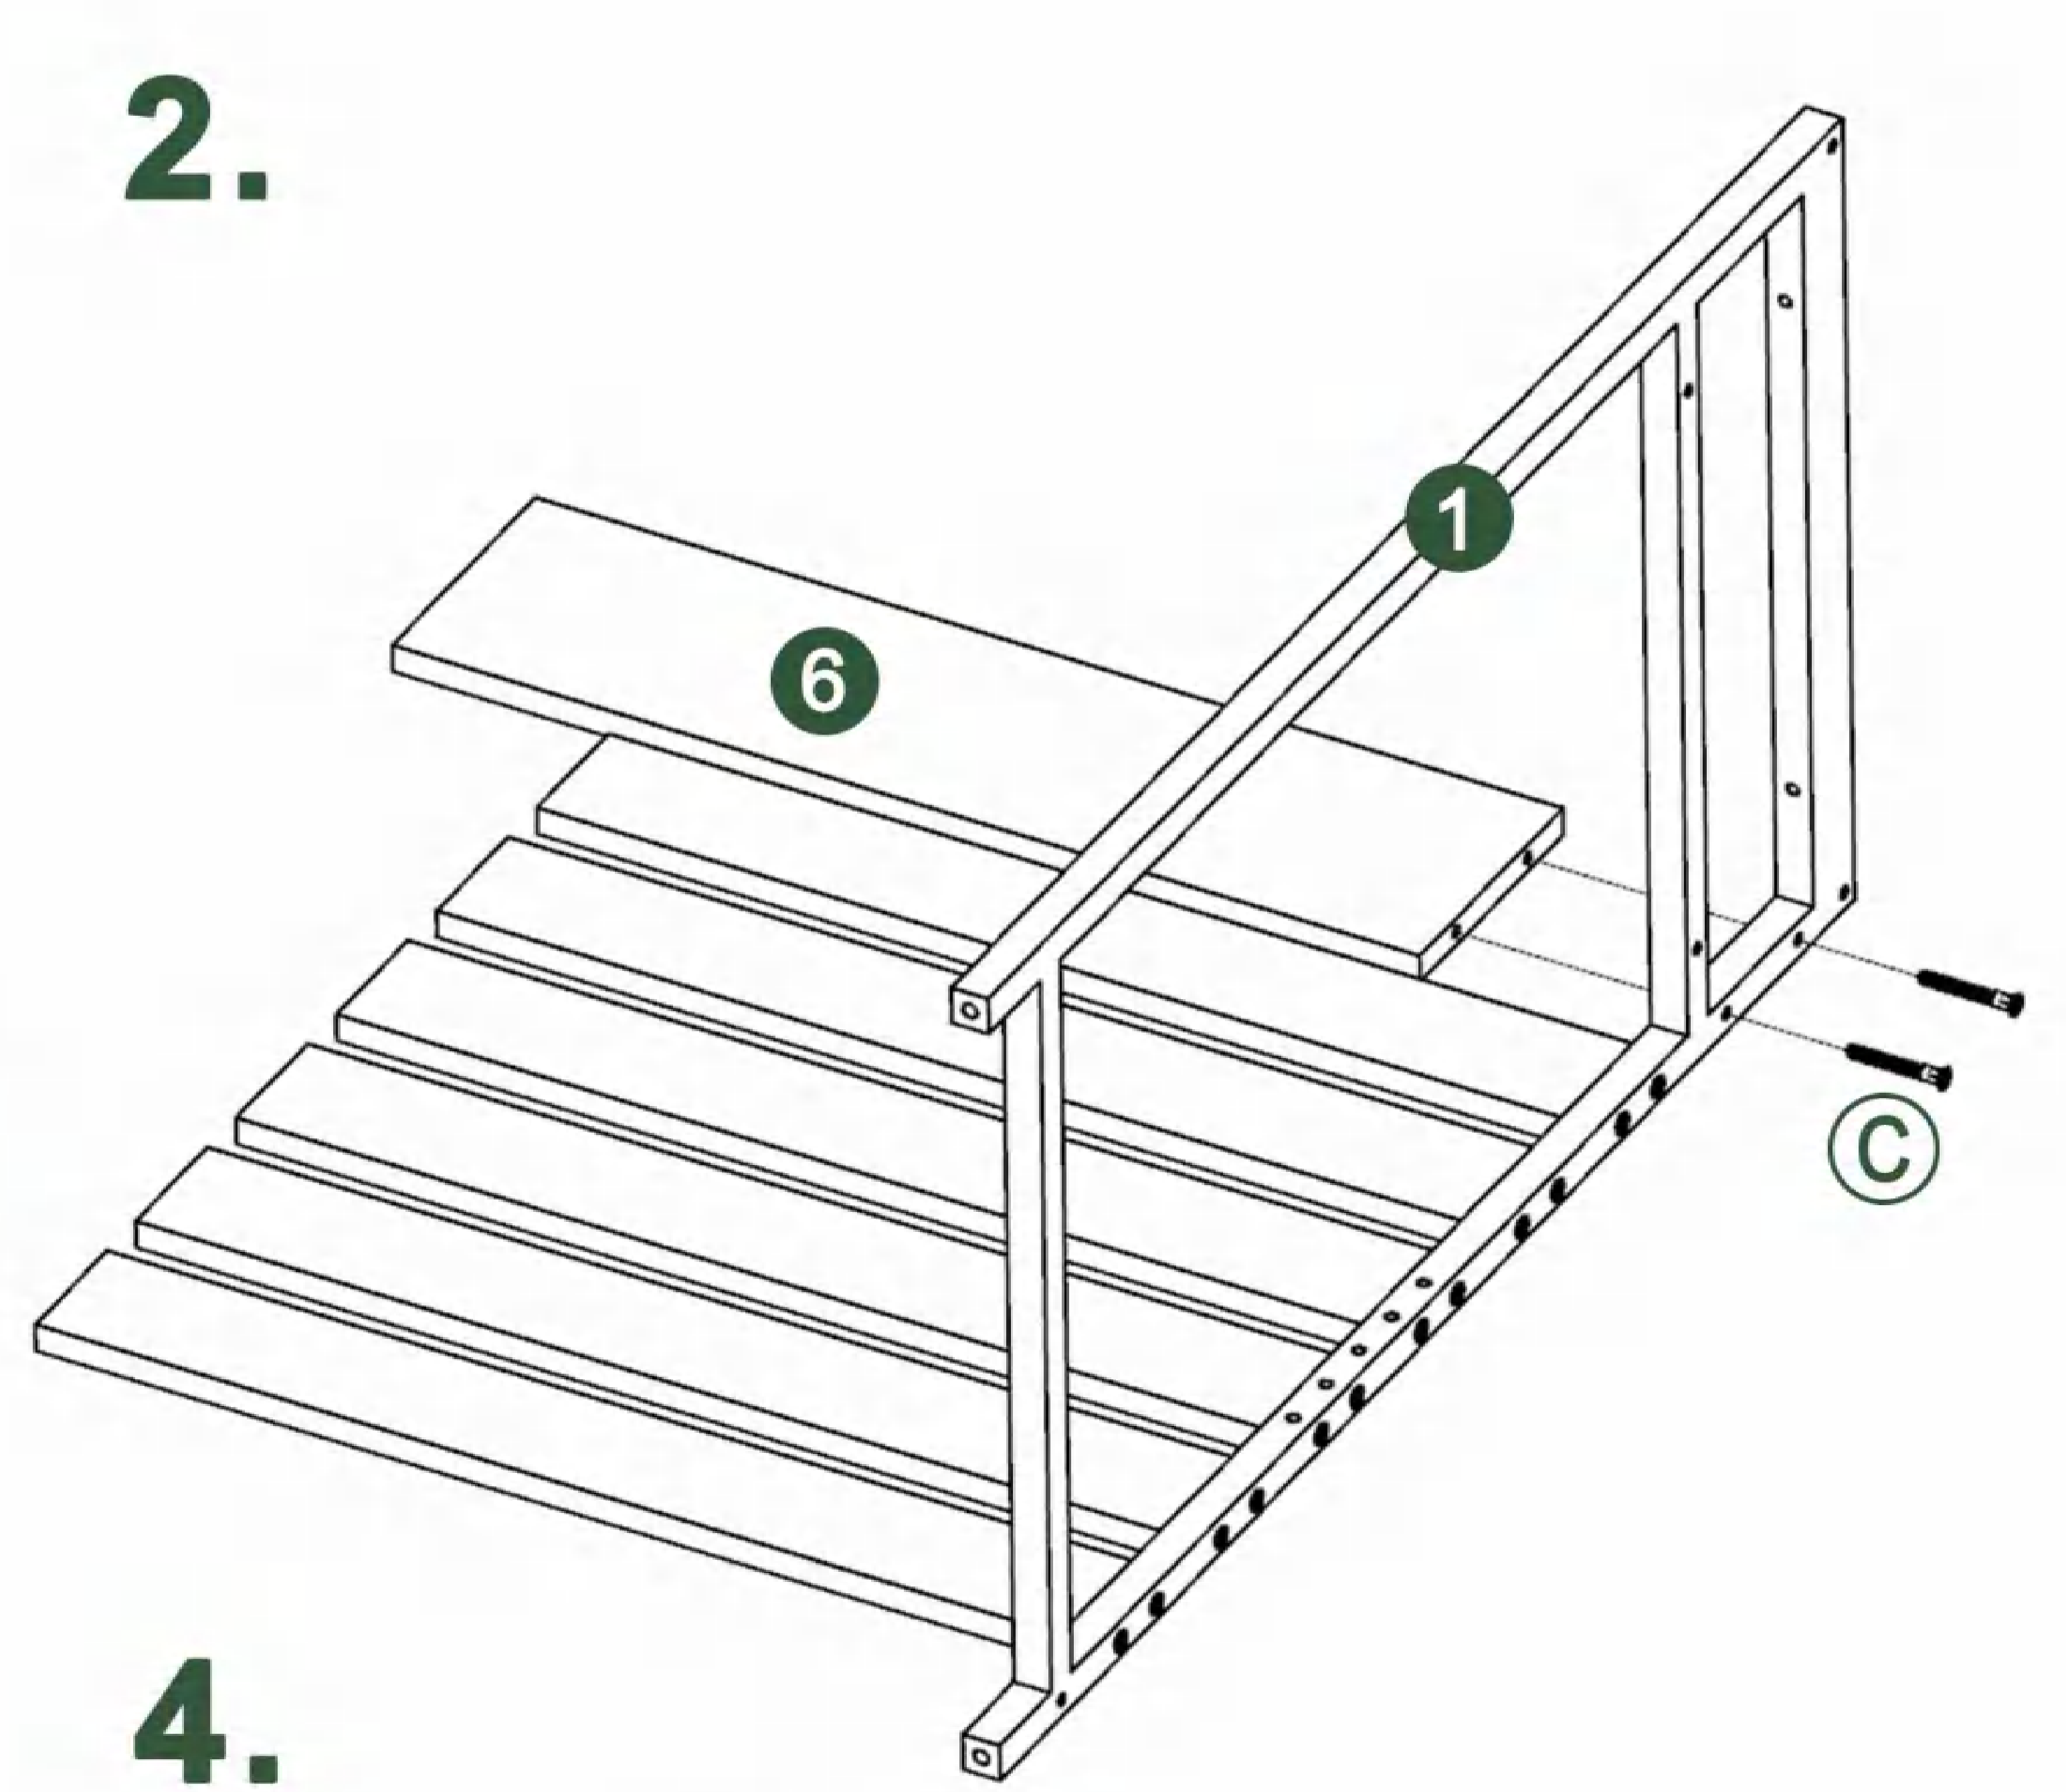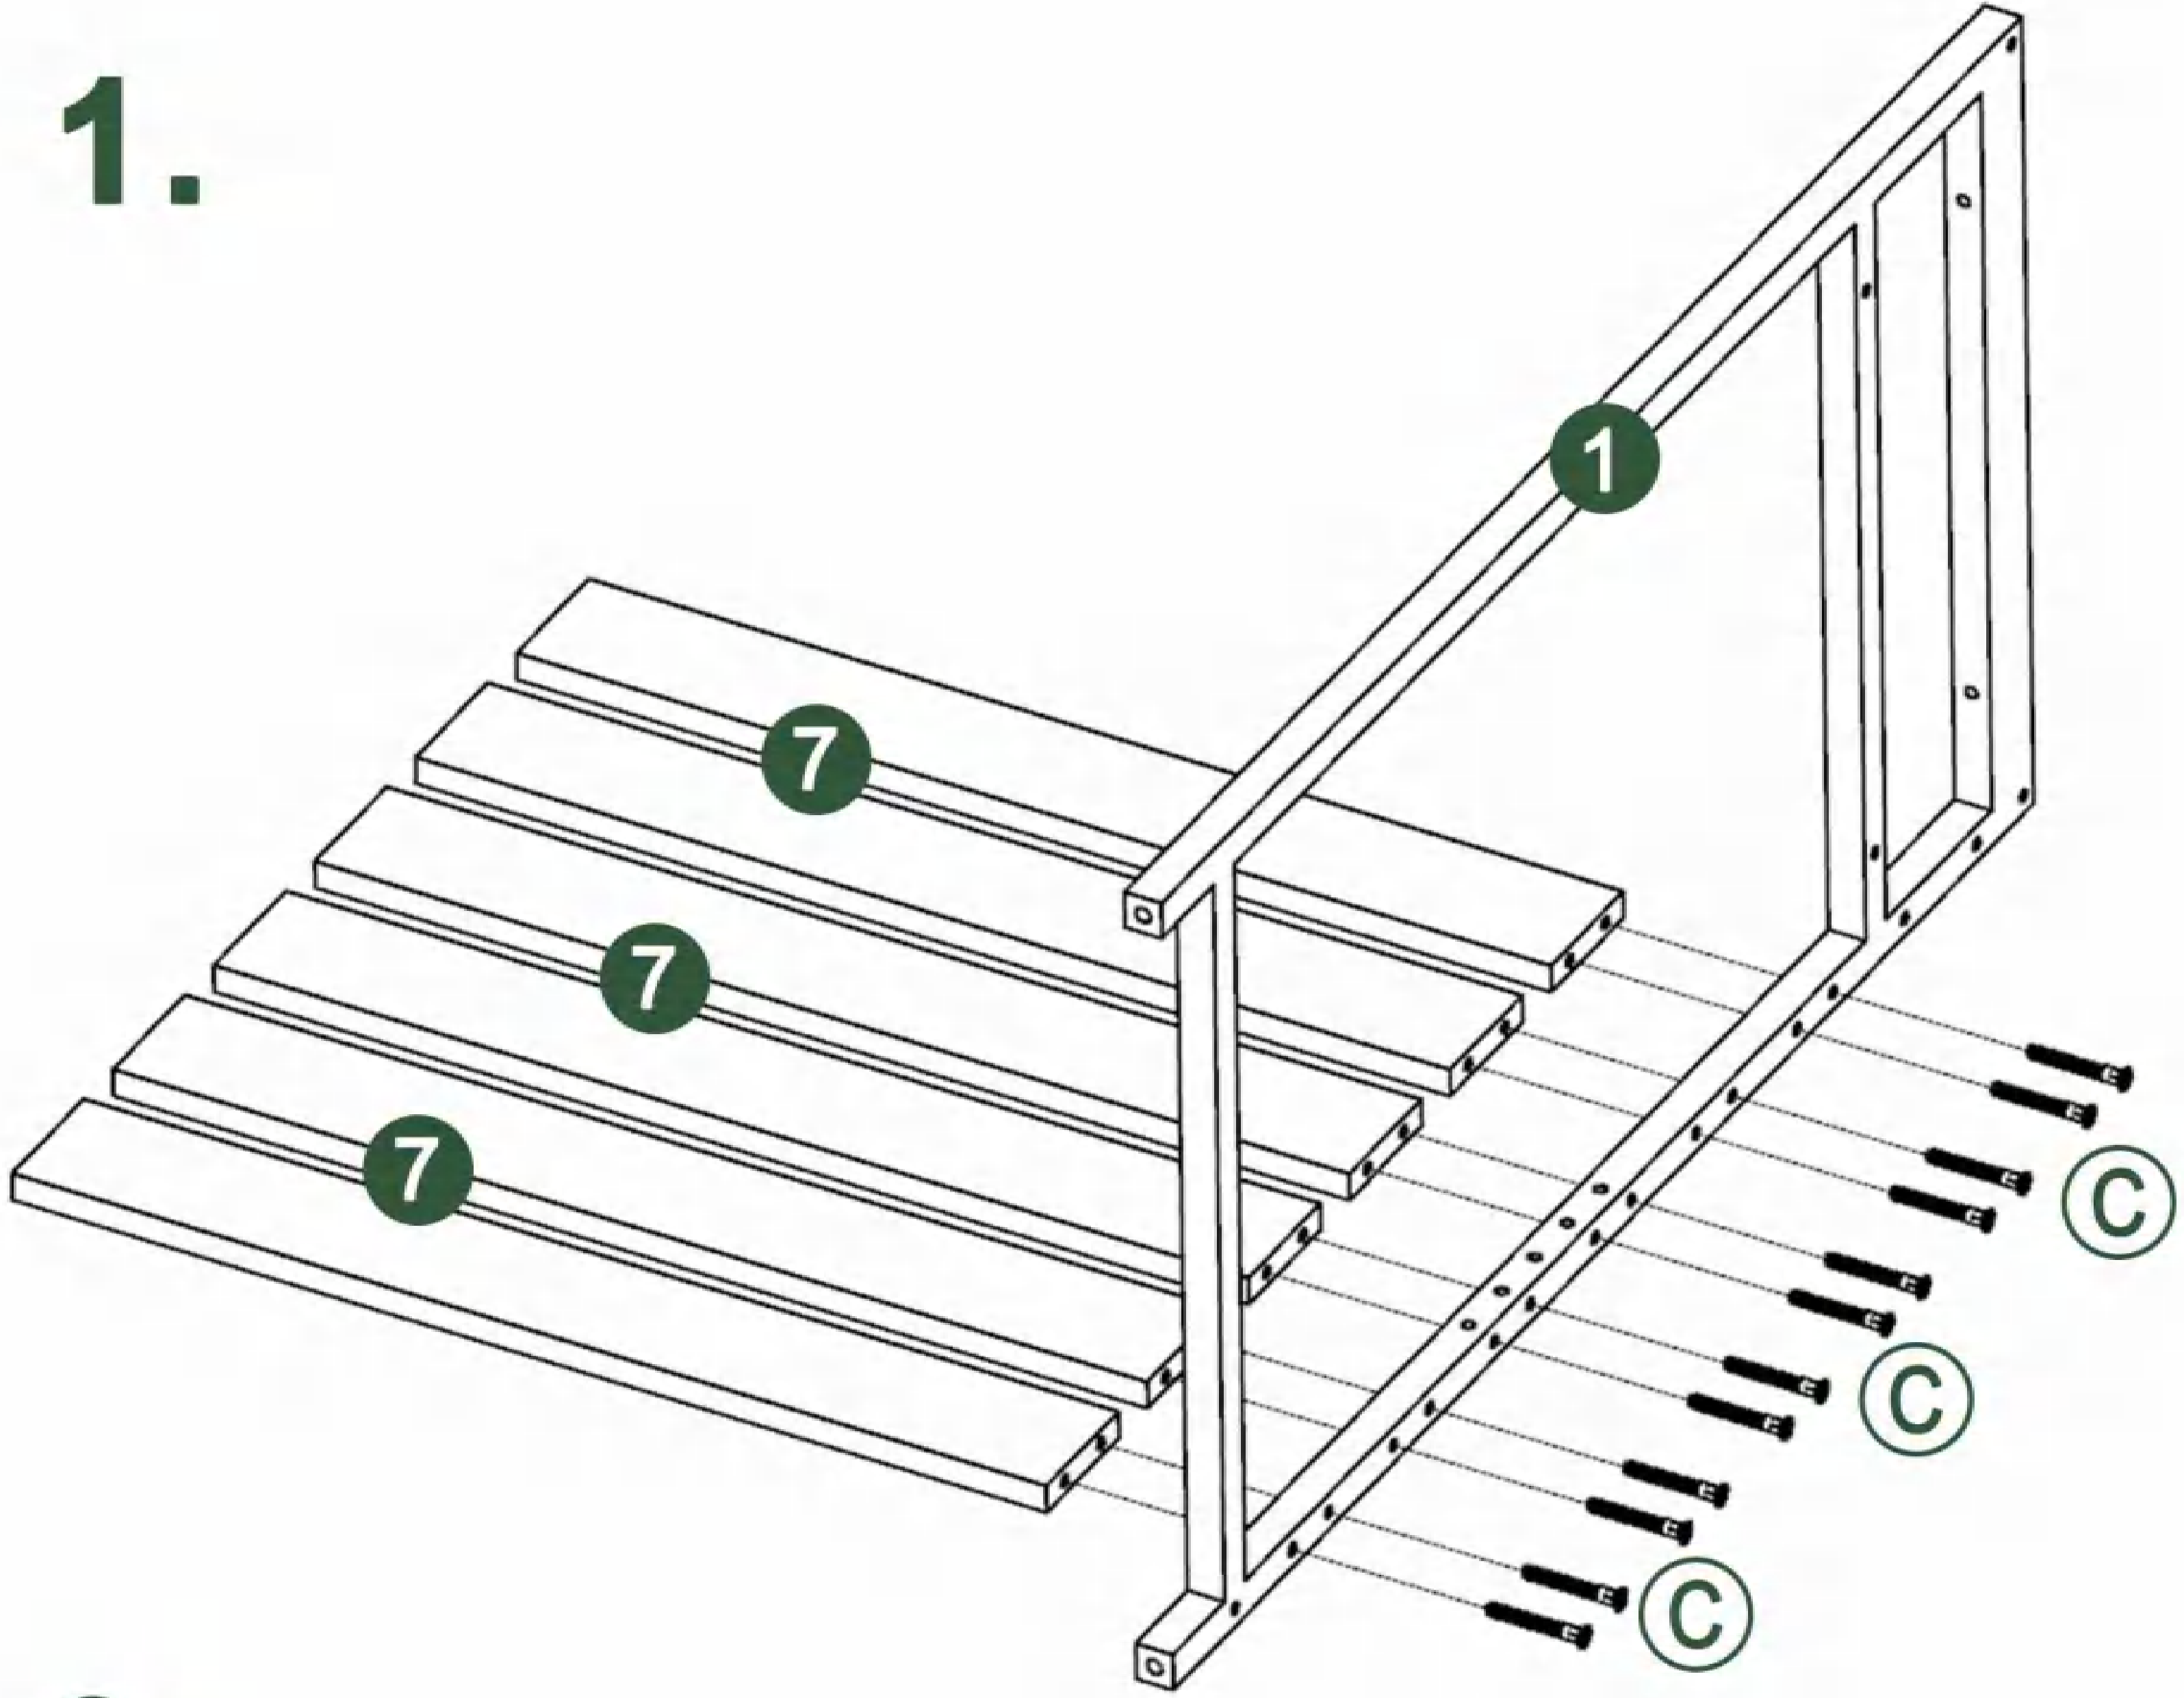


9.

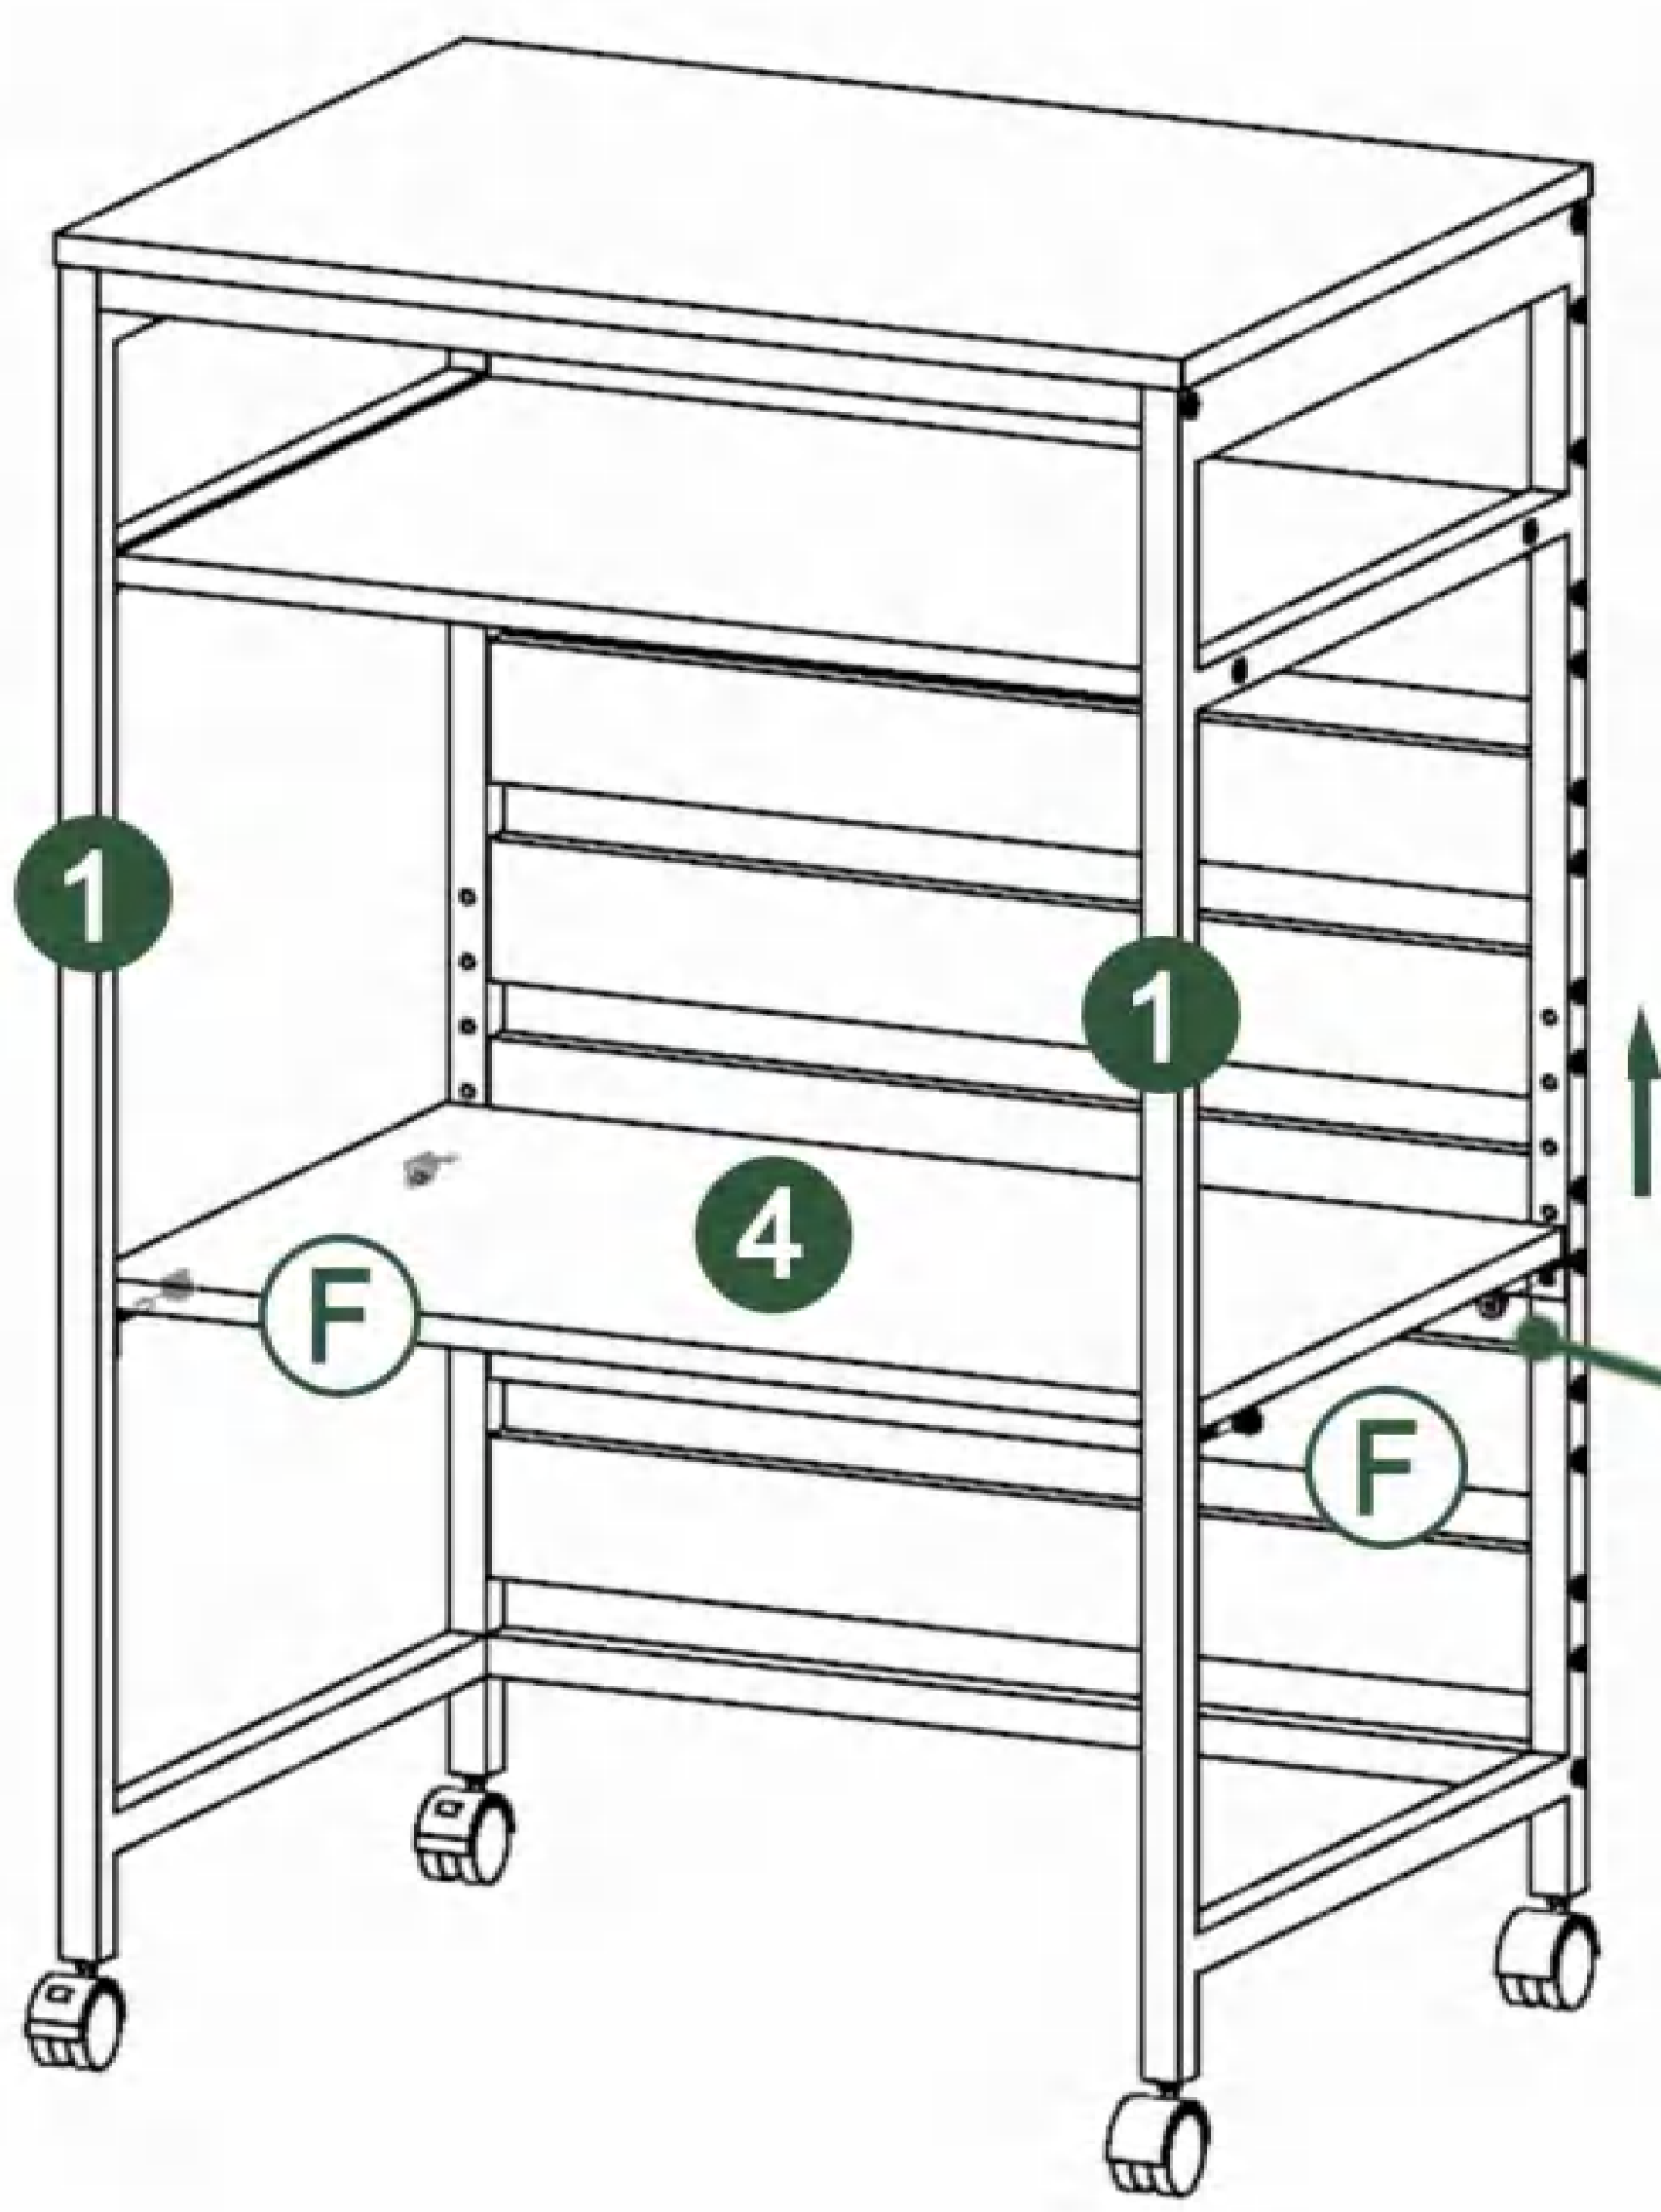


OR

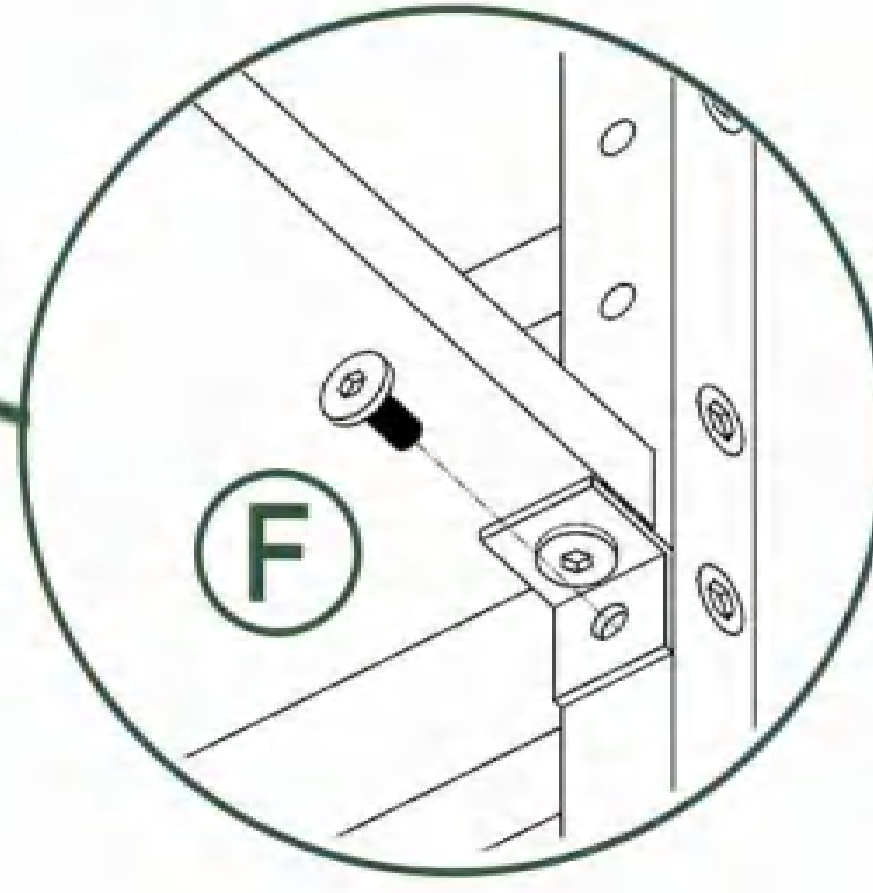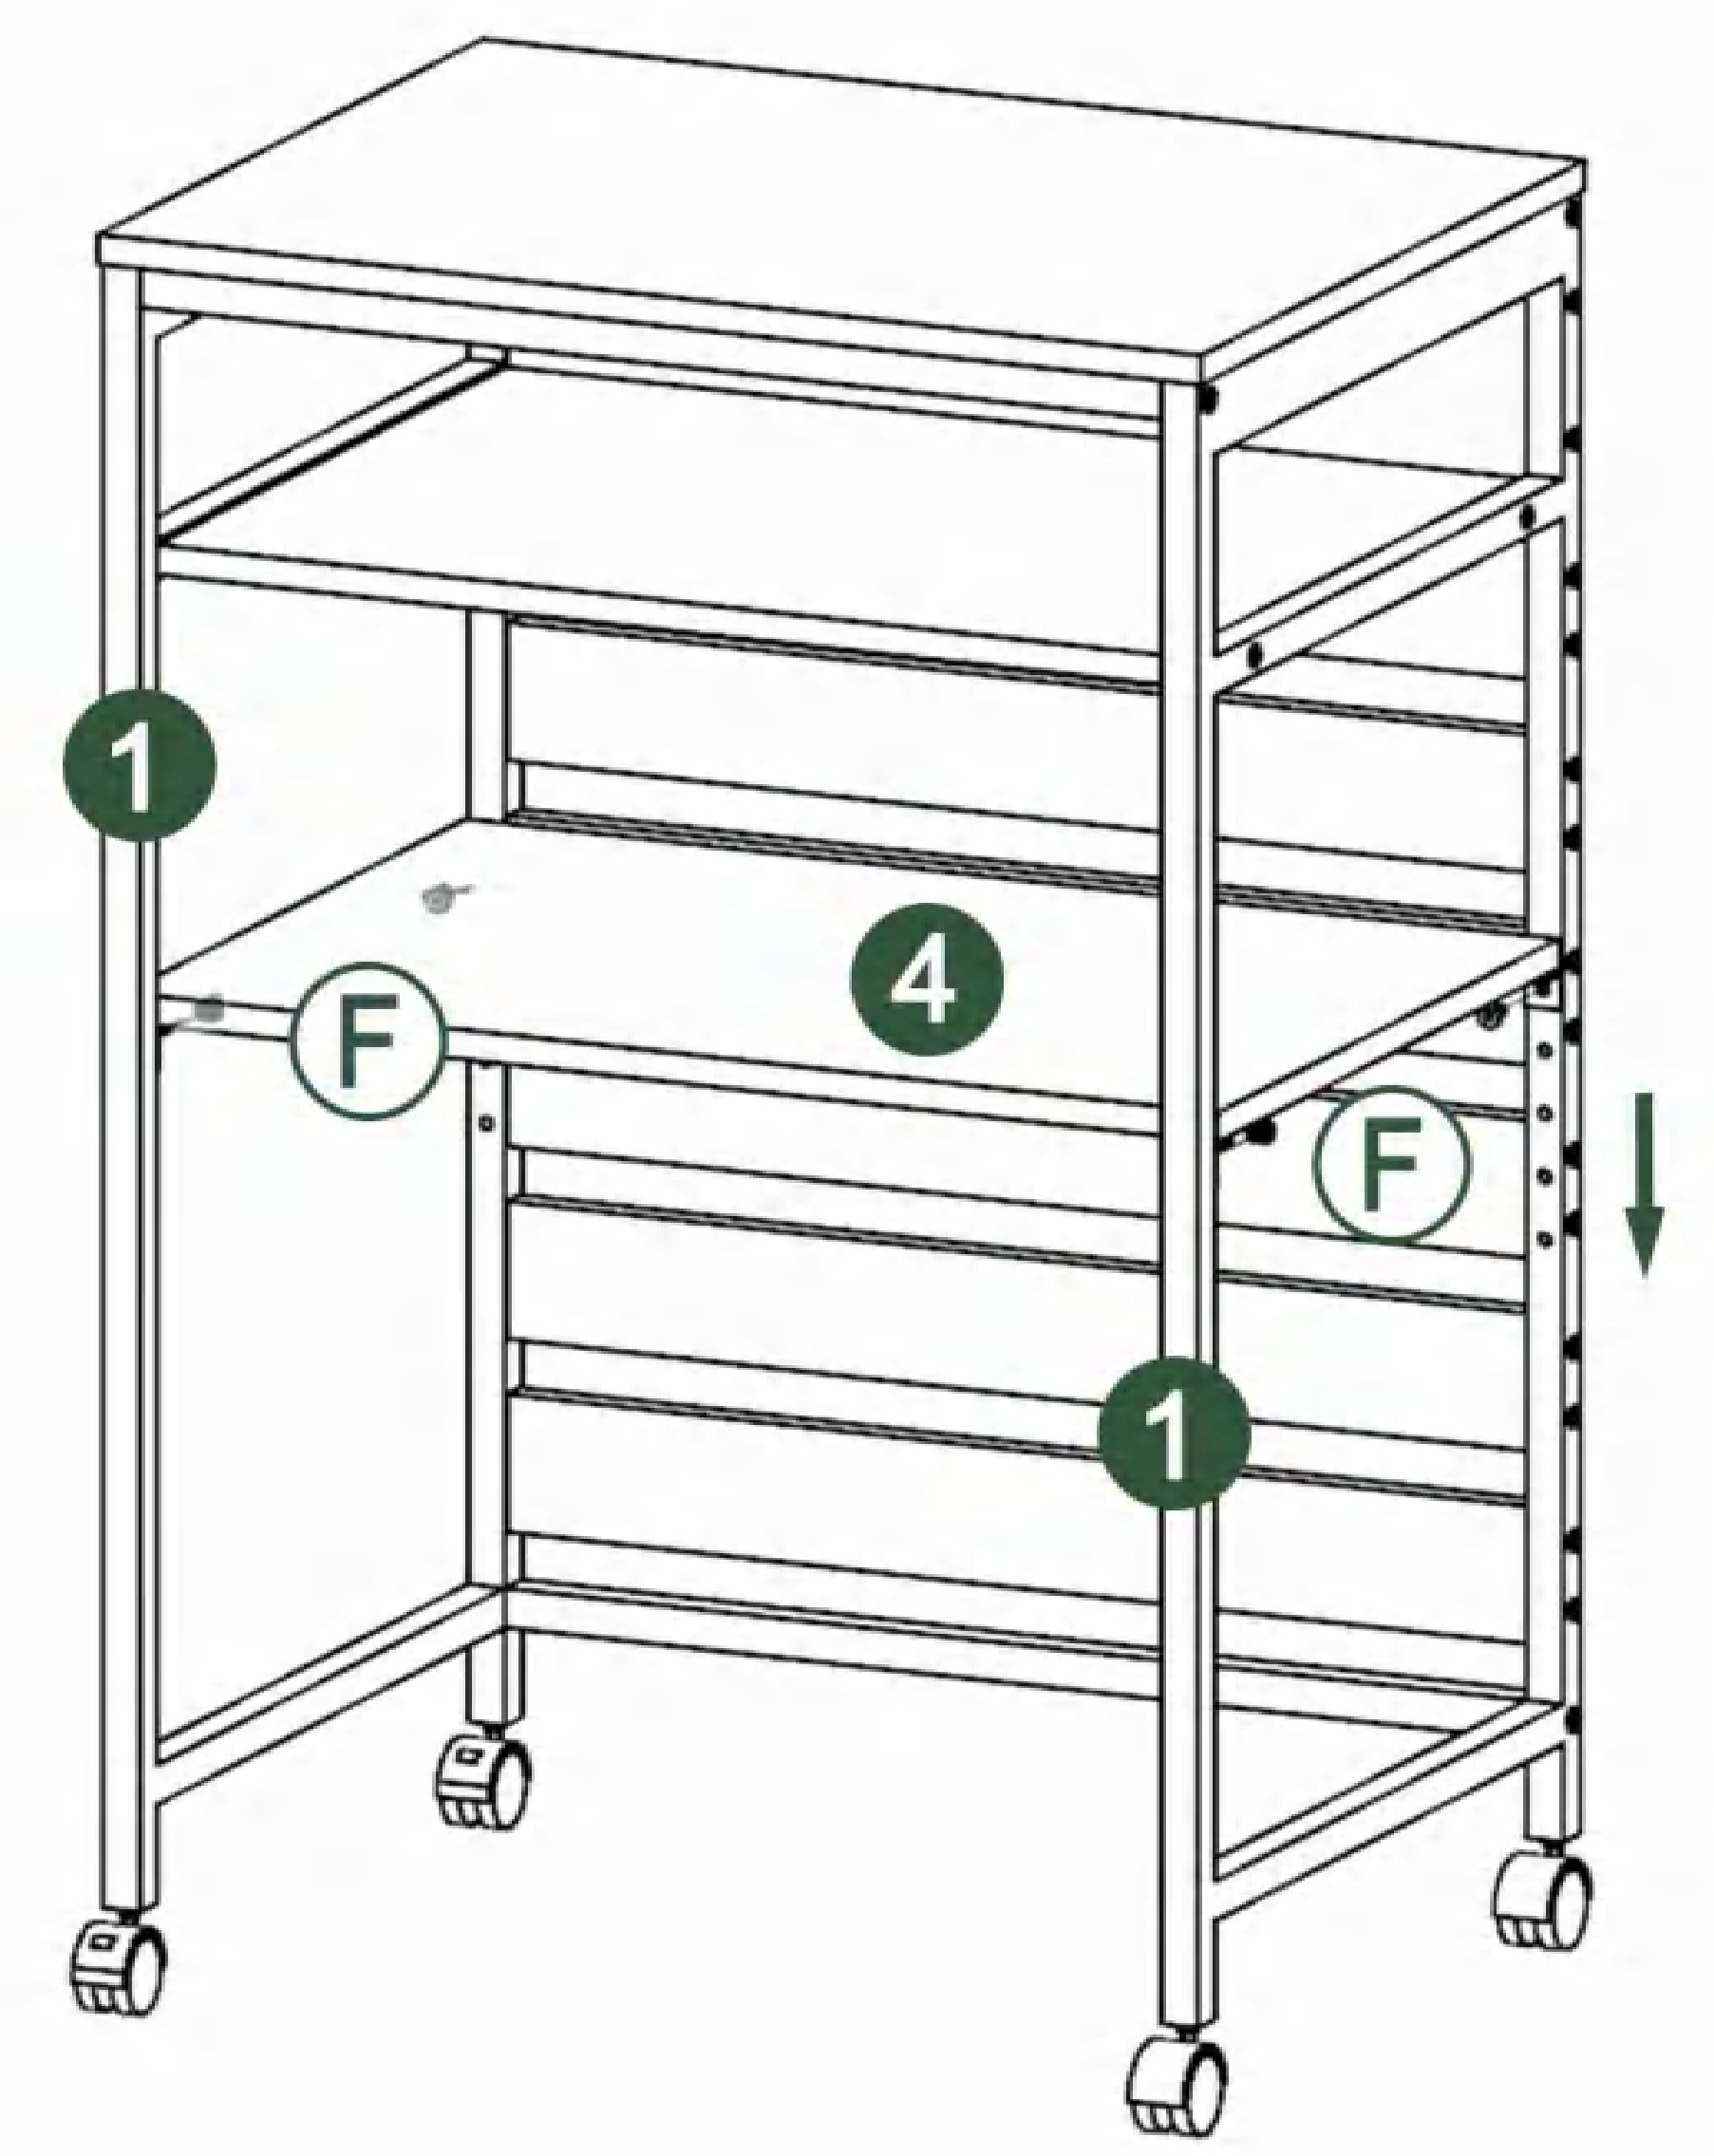


10.

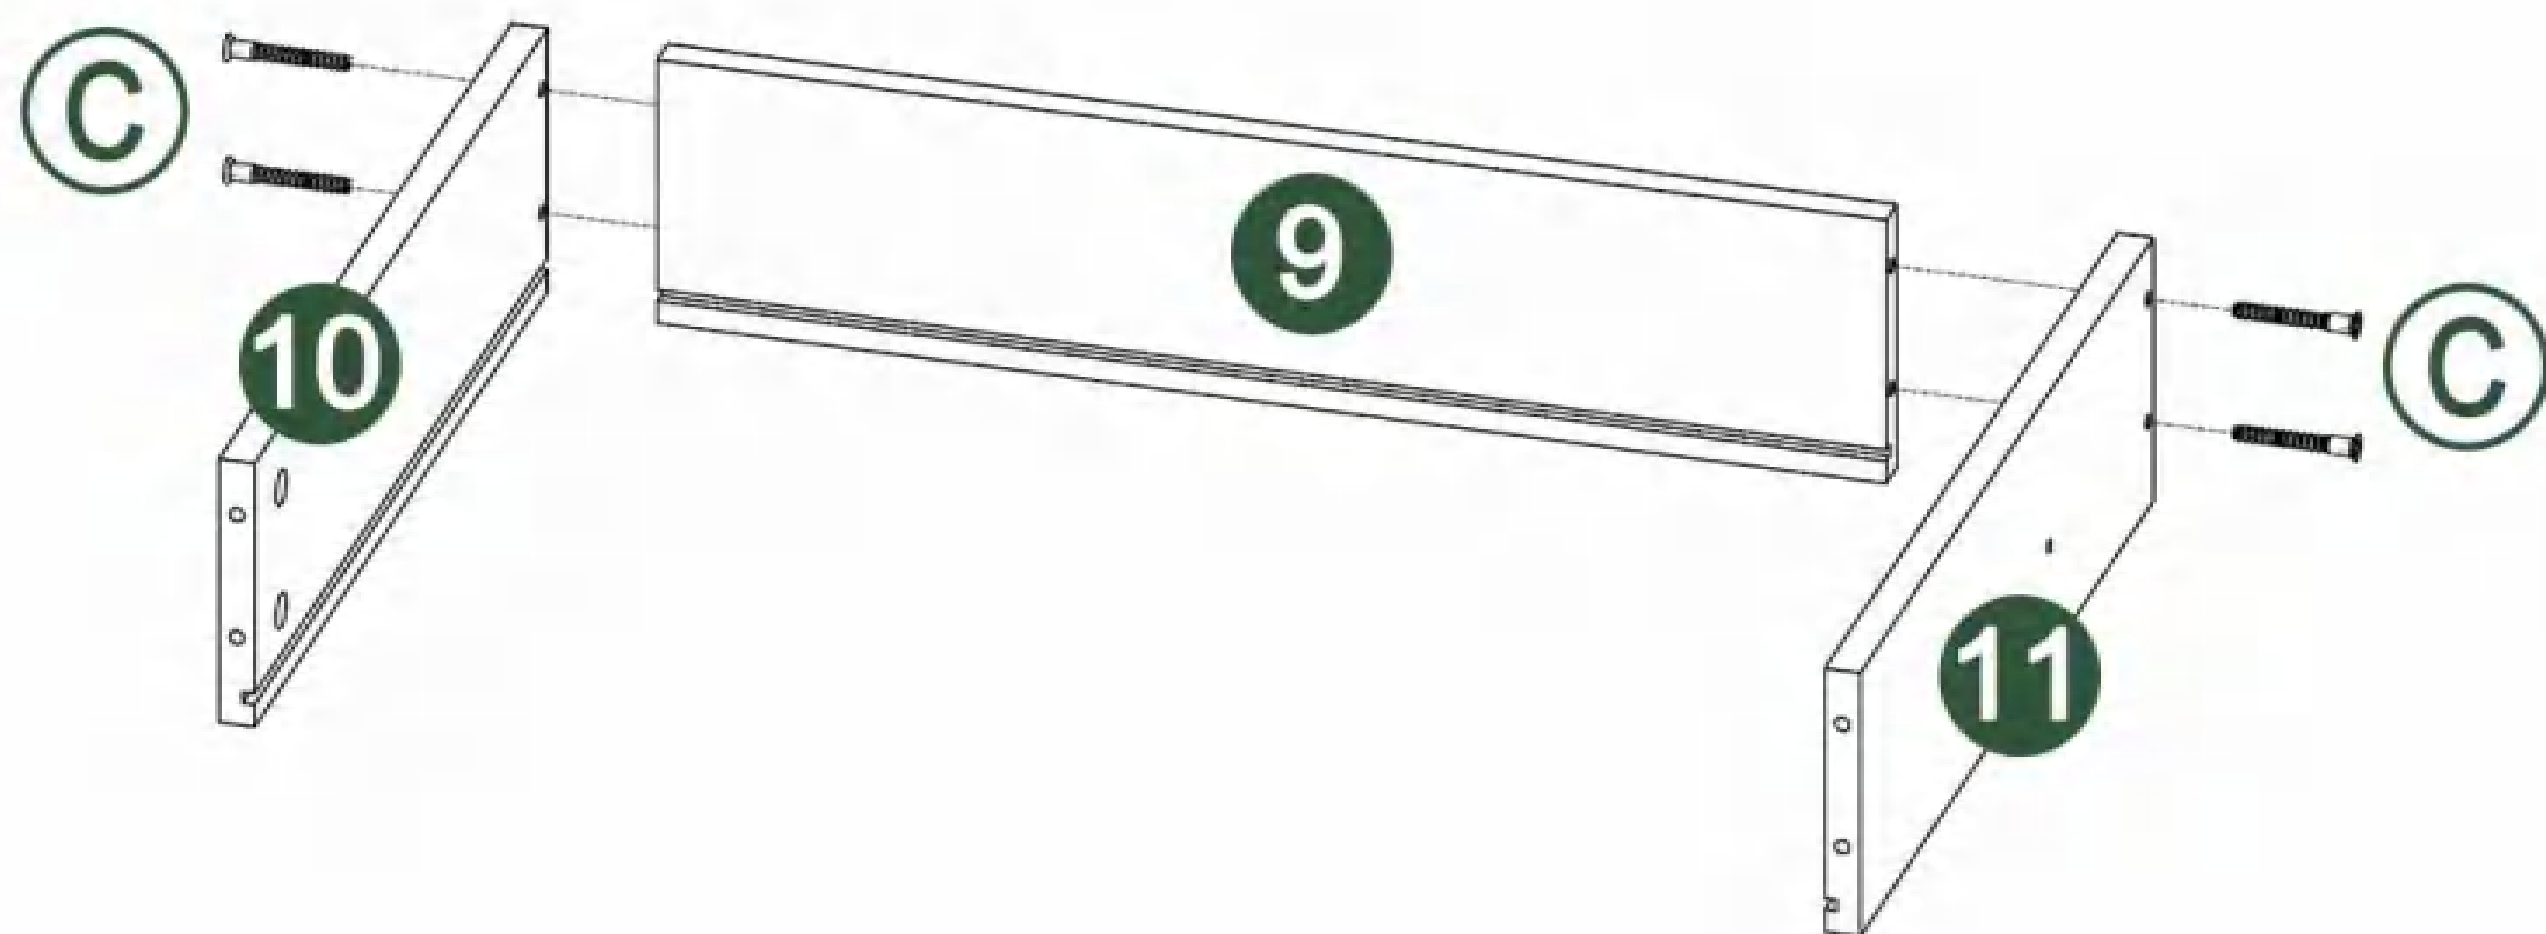


11.

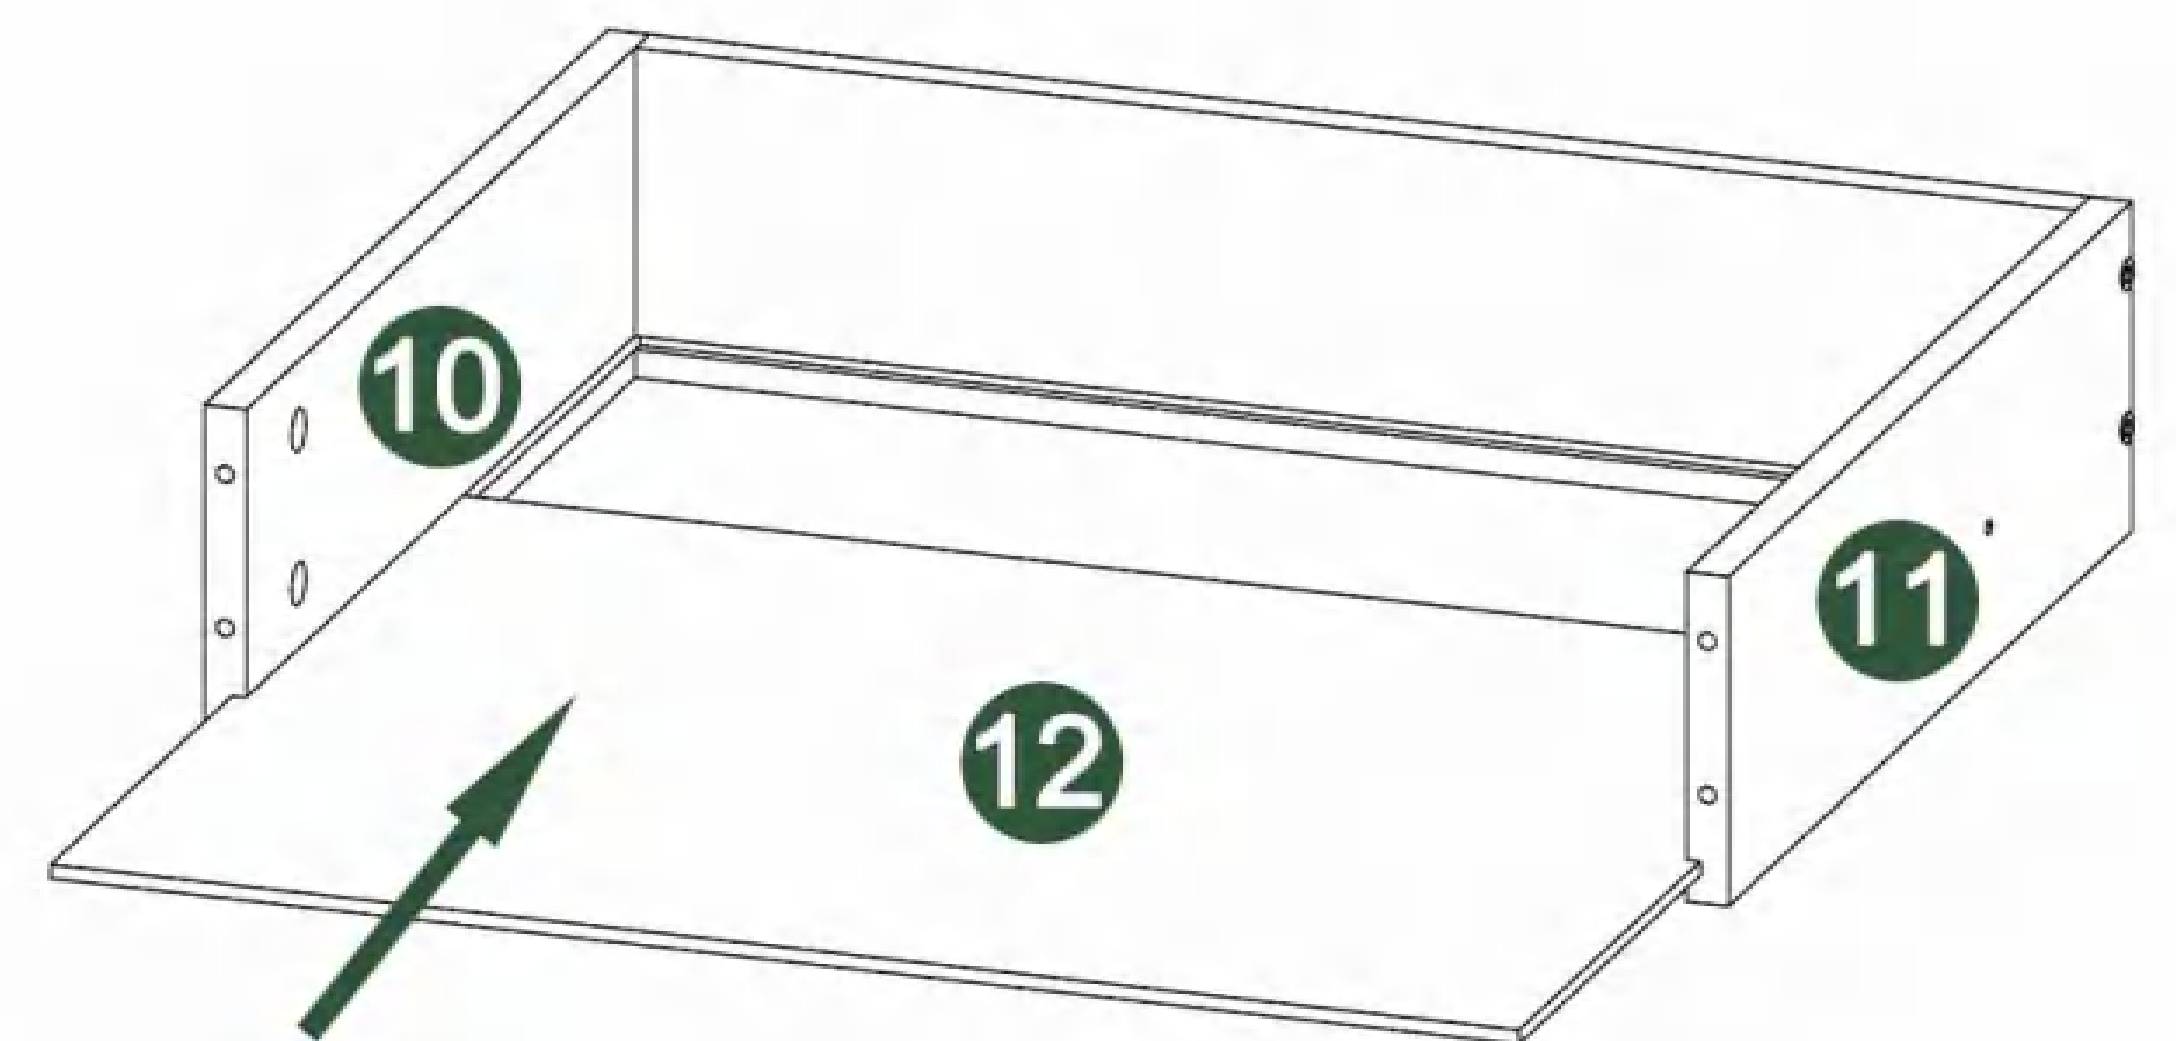


12.

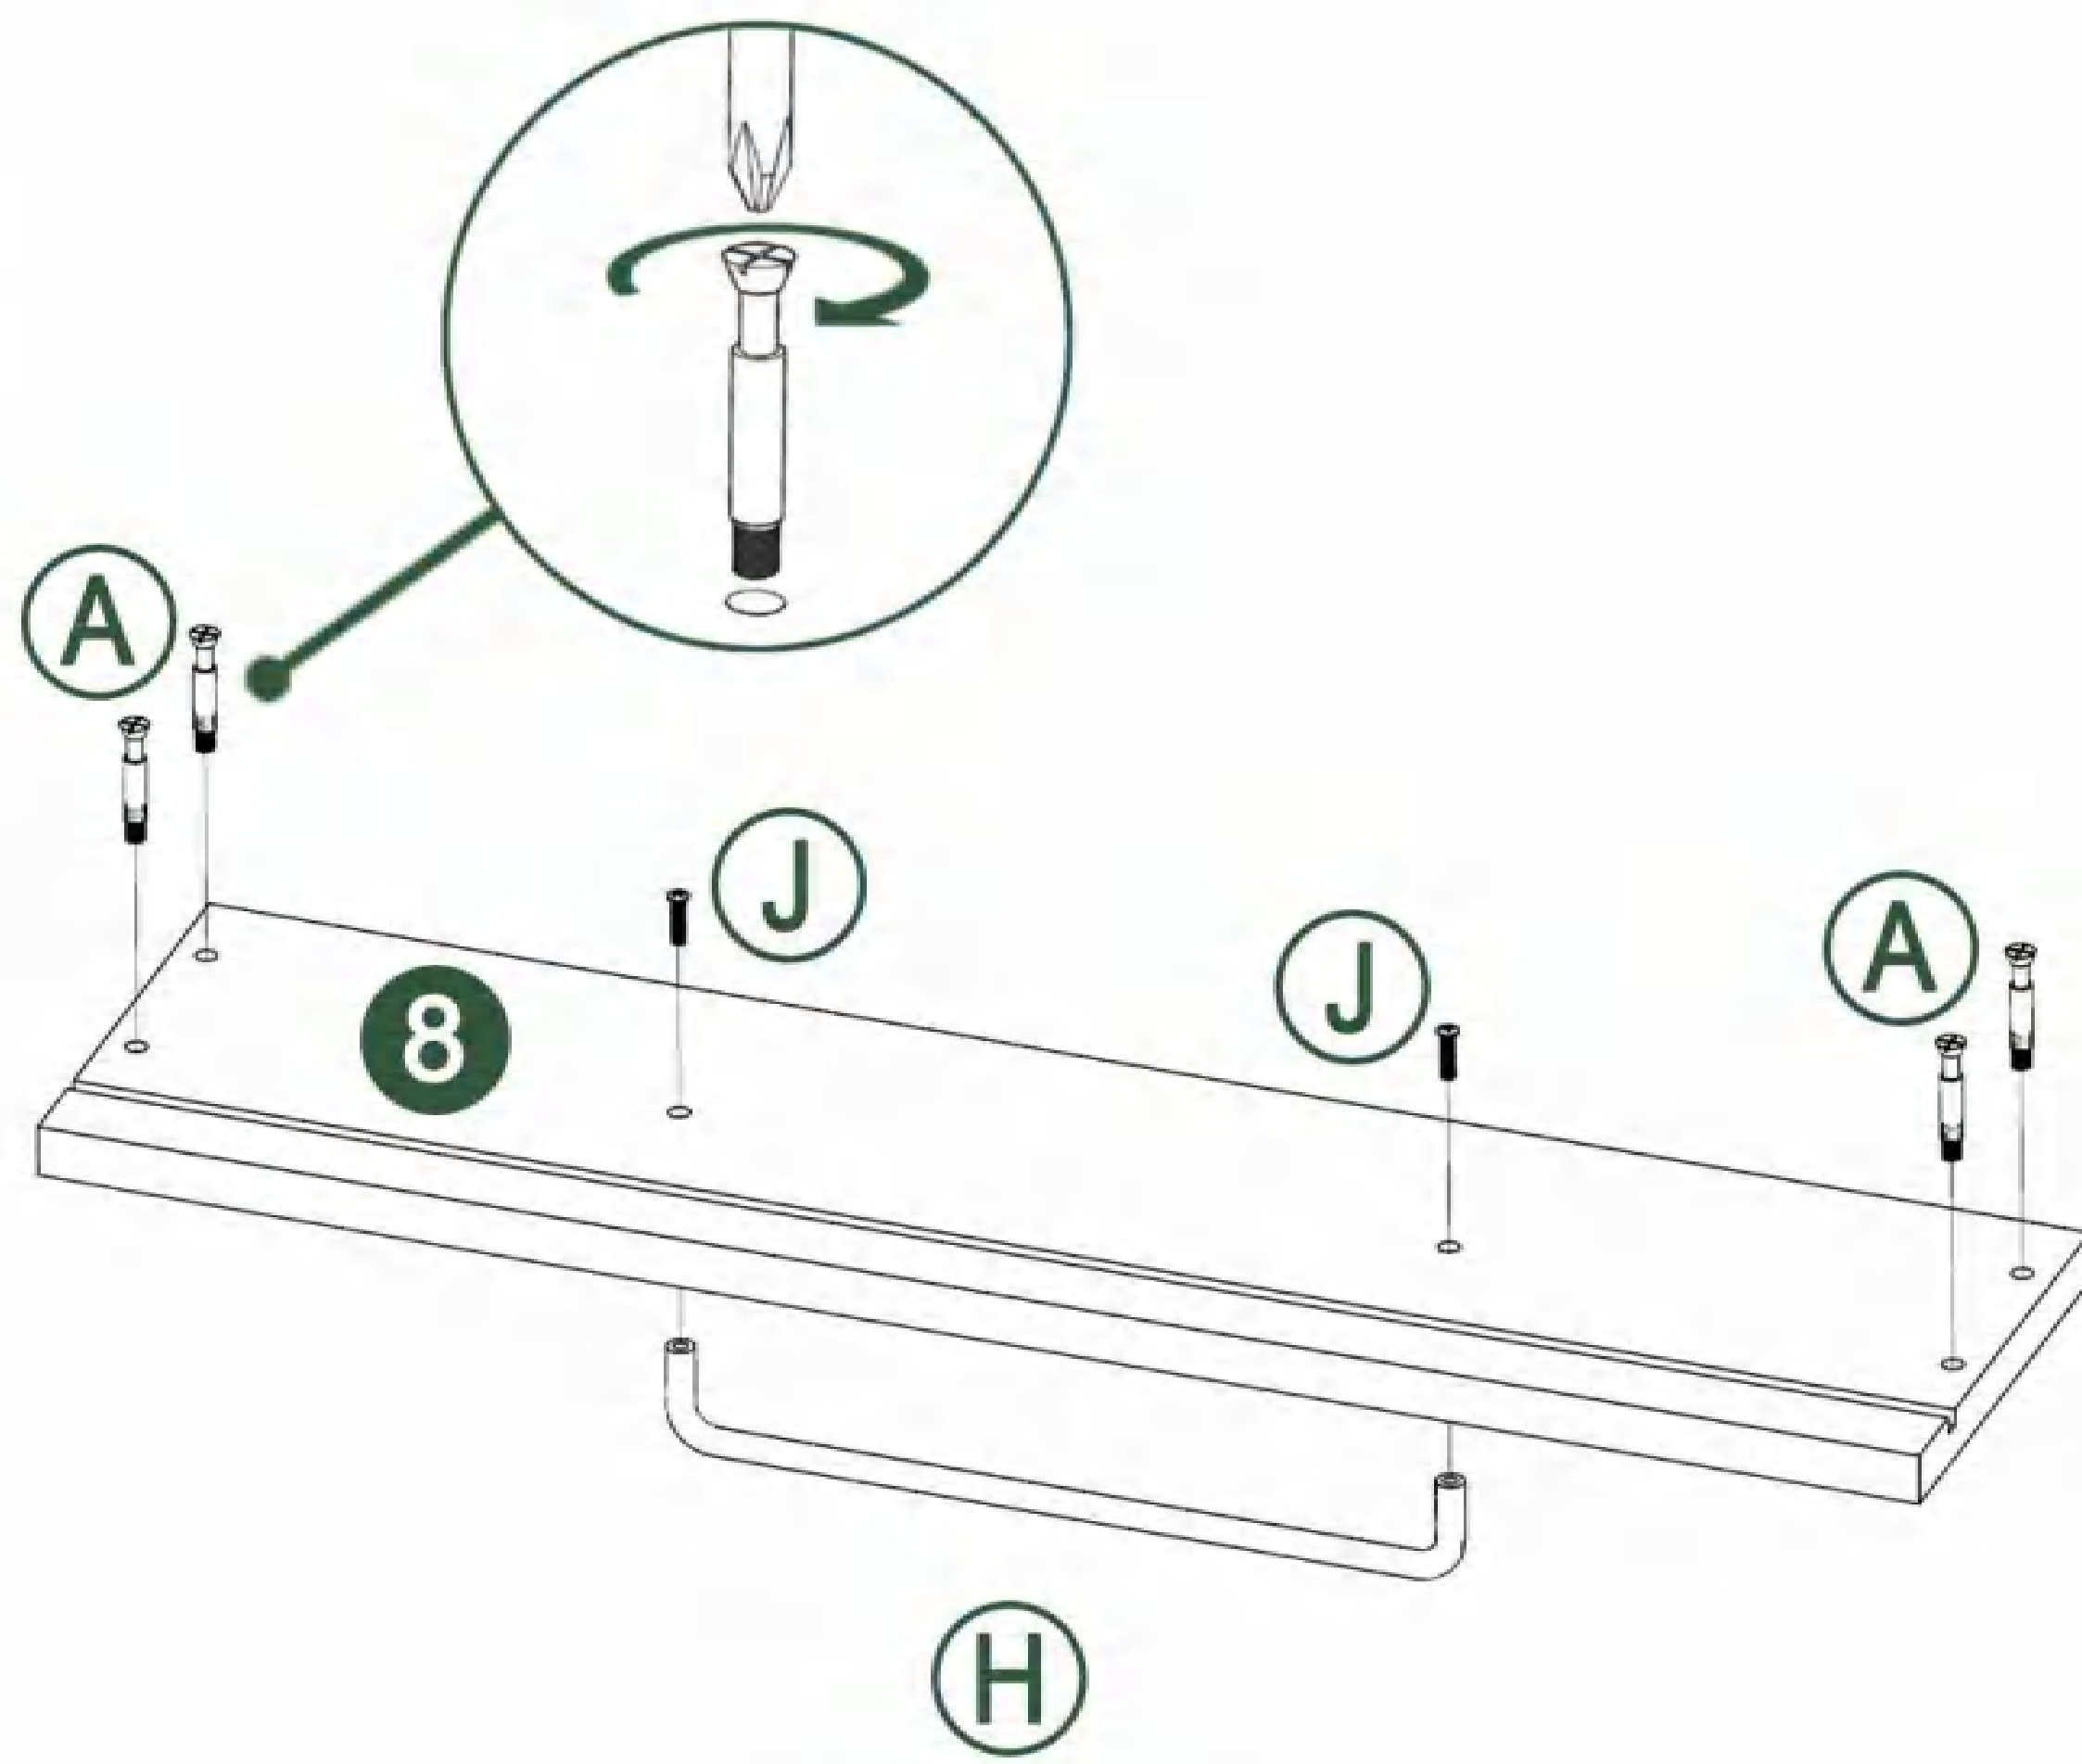


13.

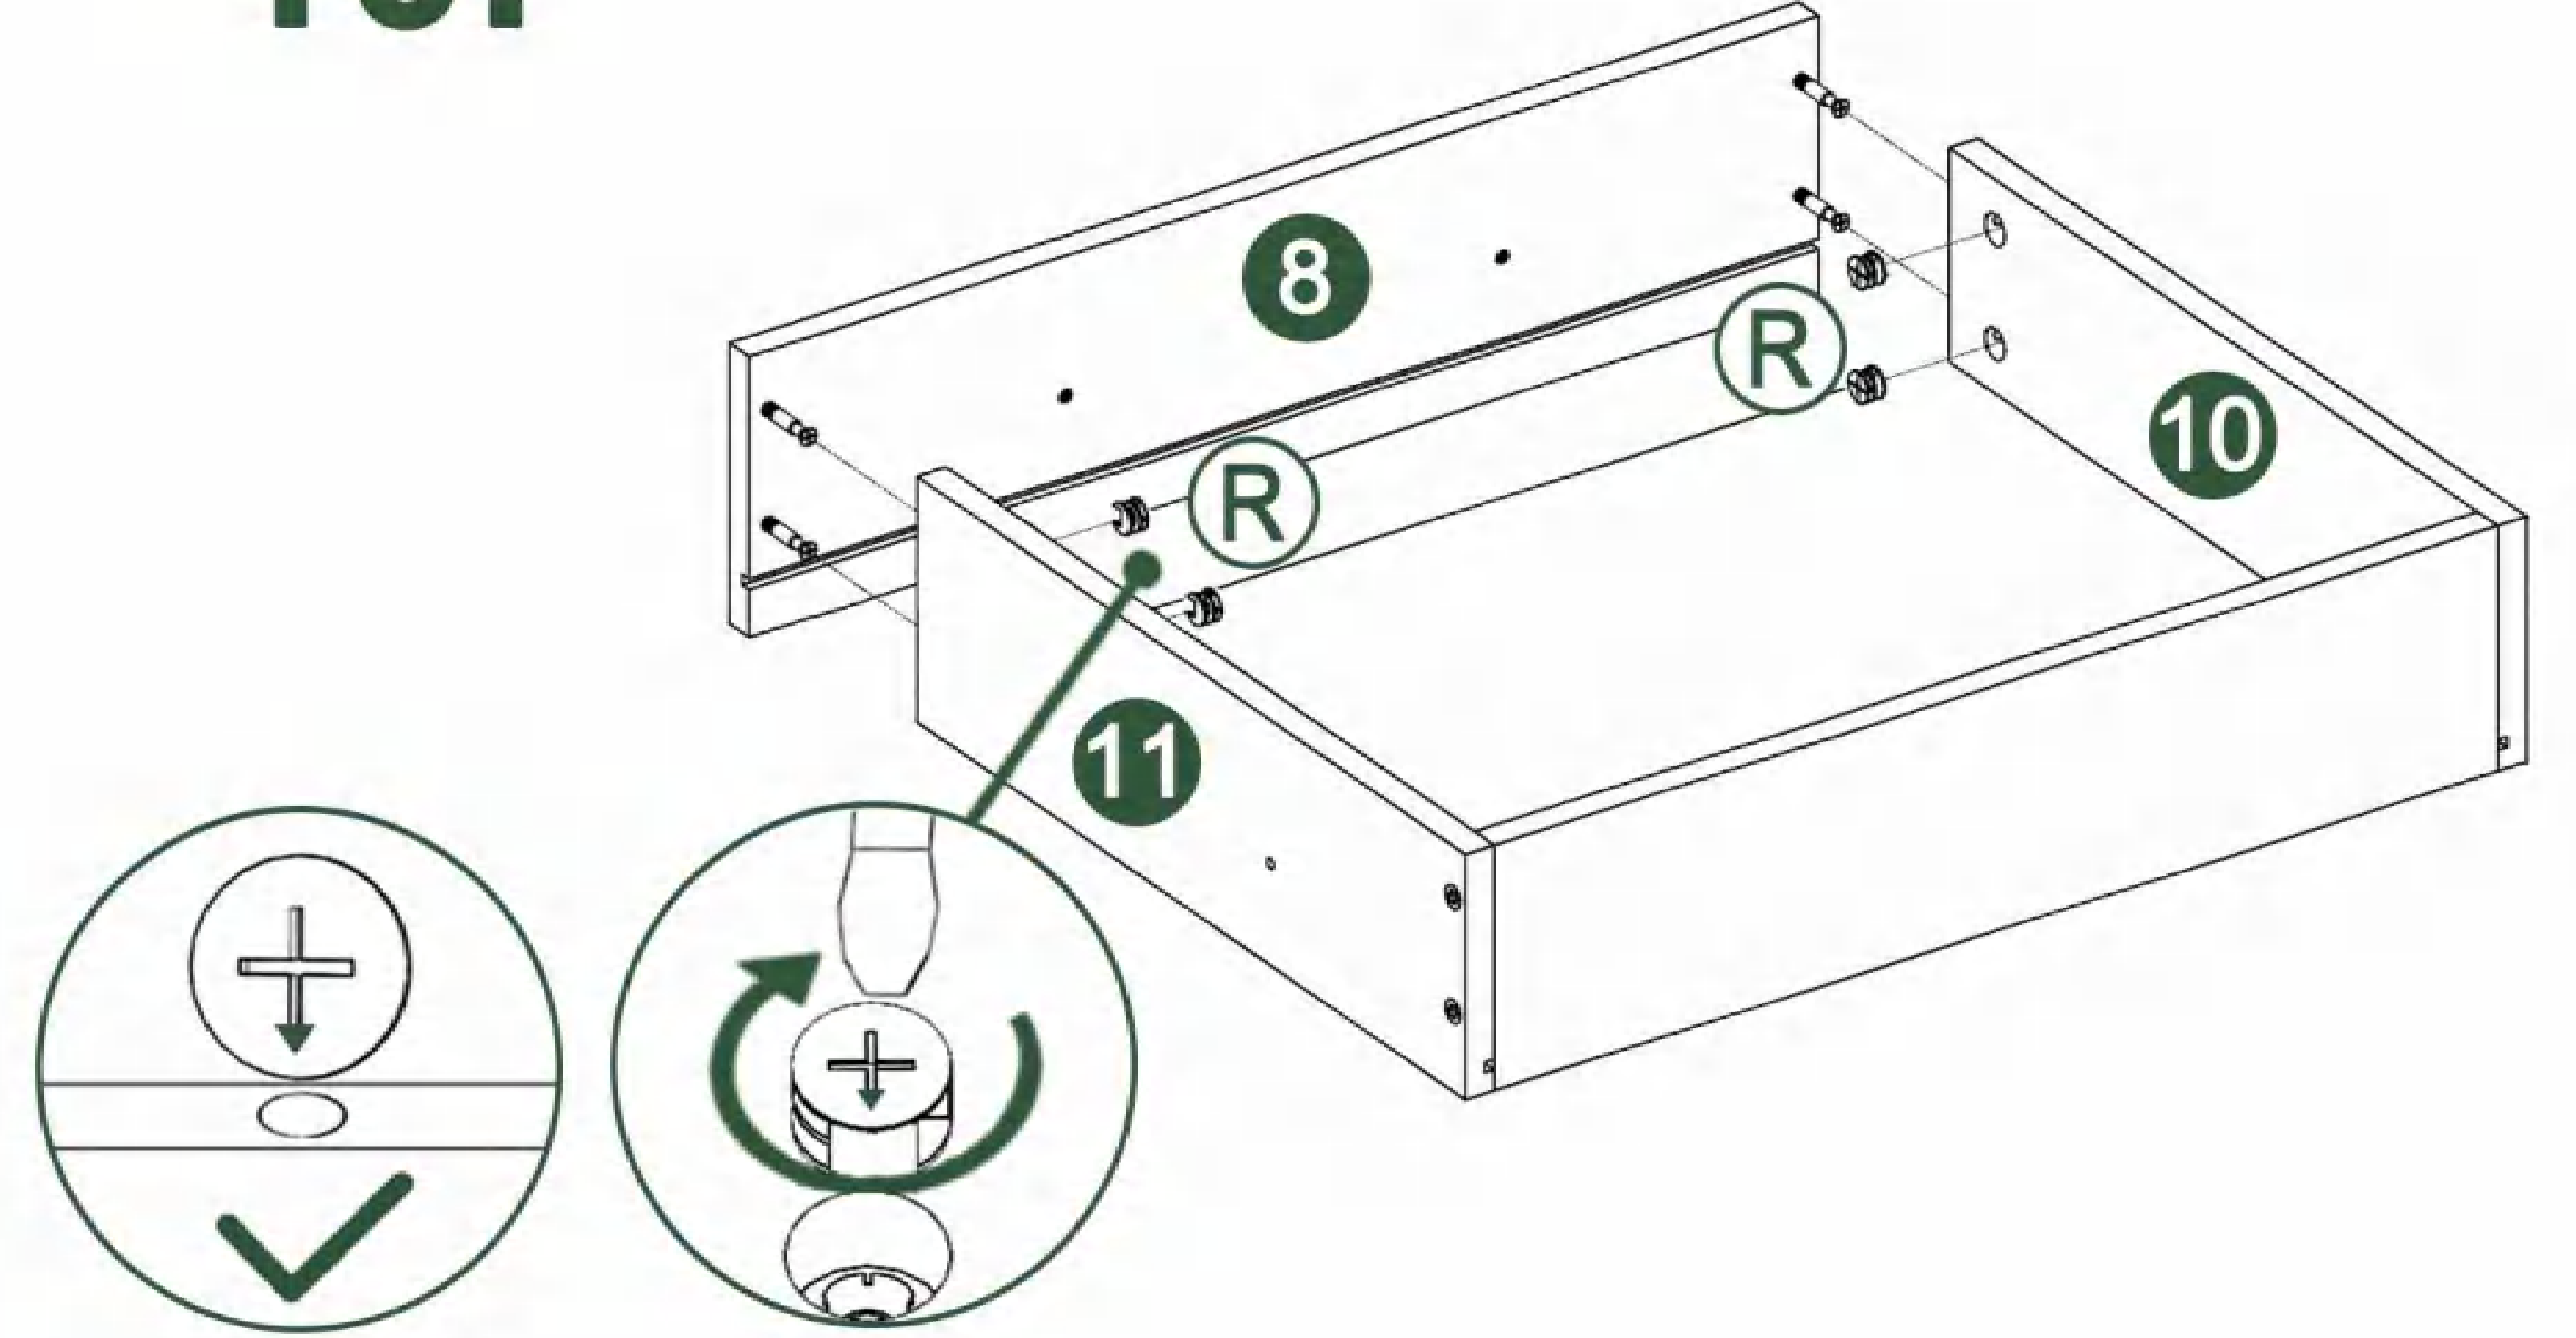


14.

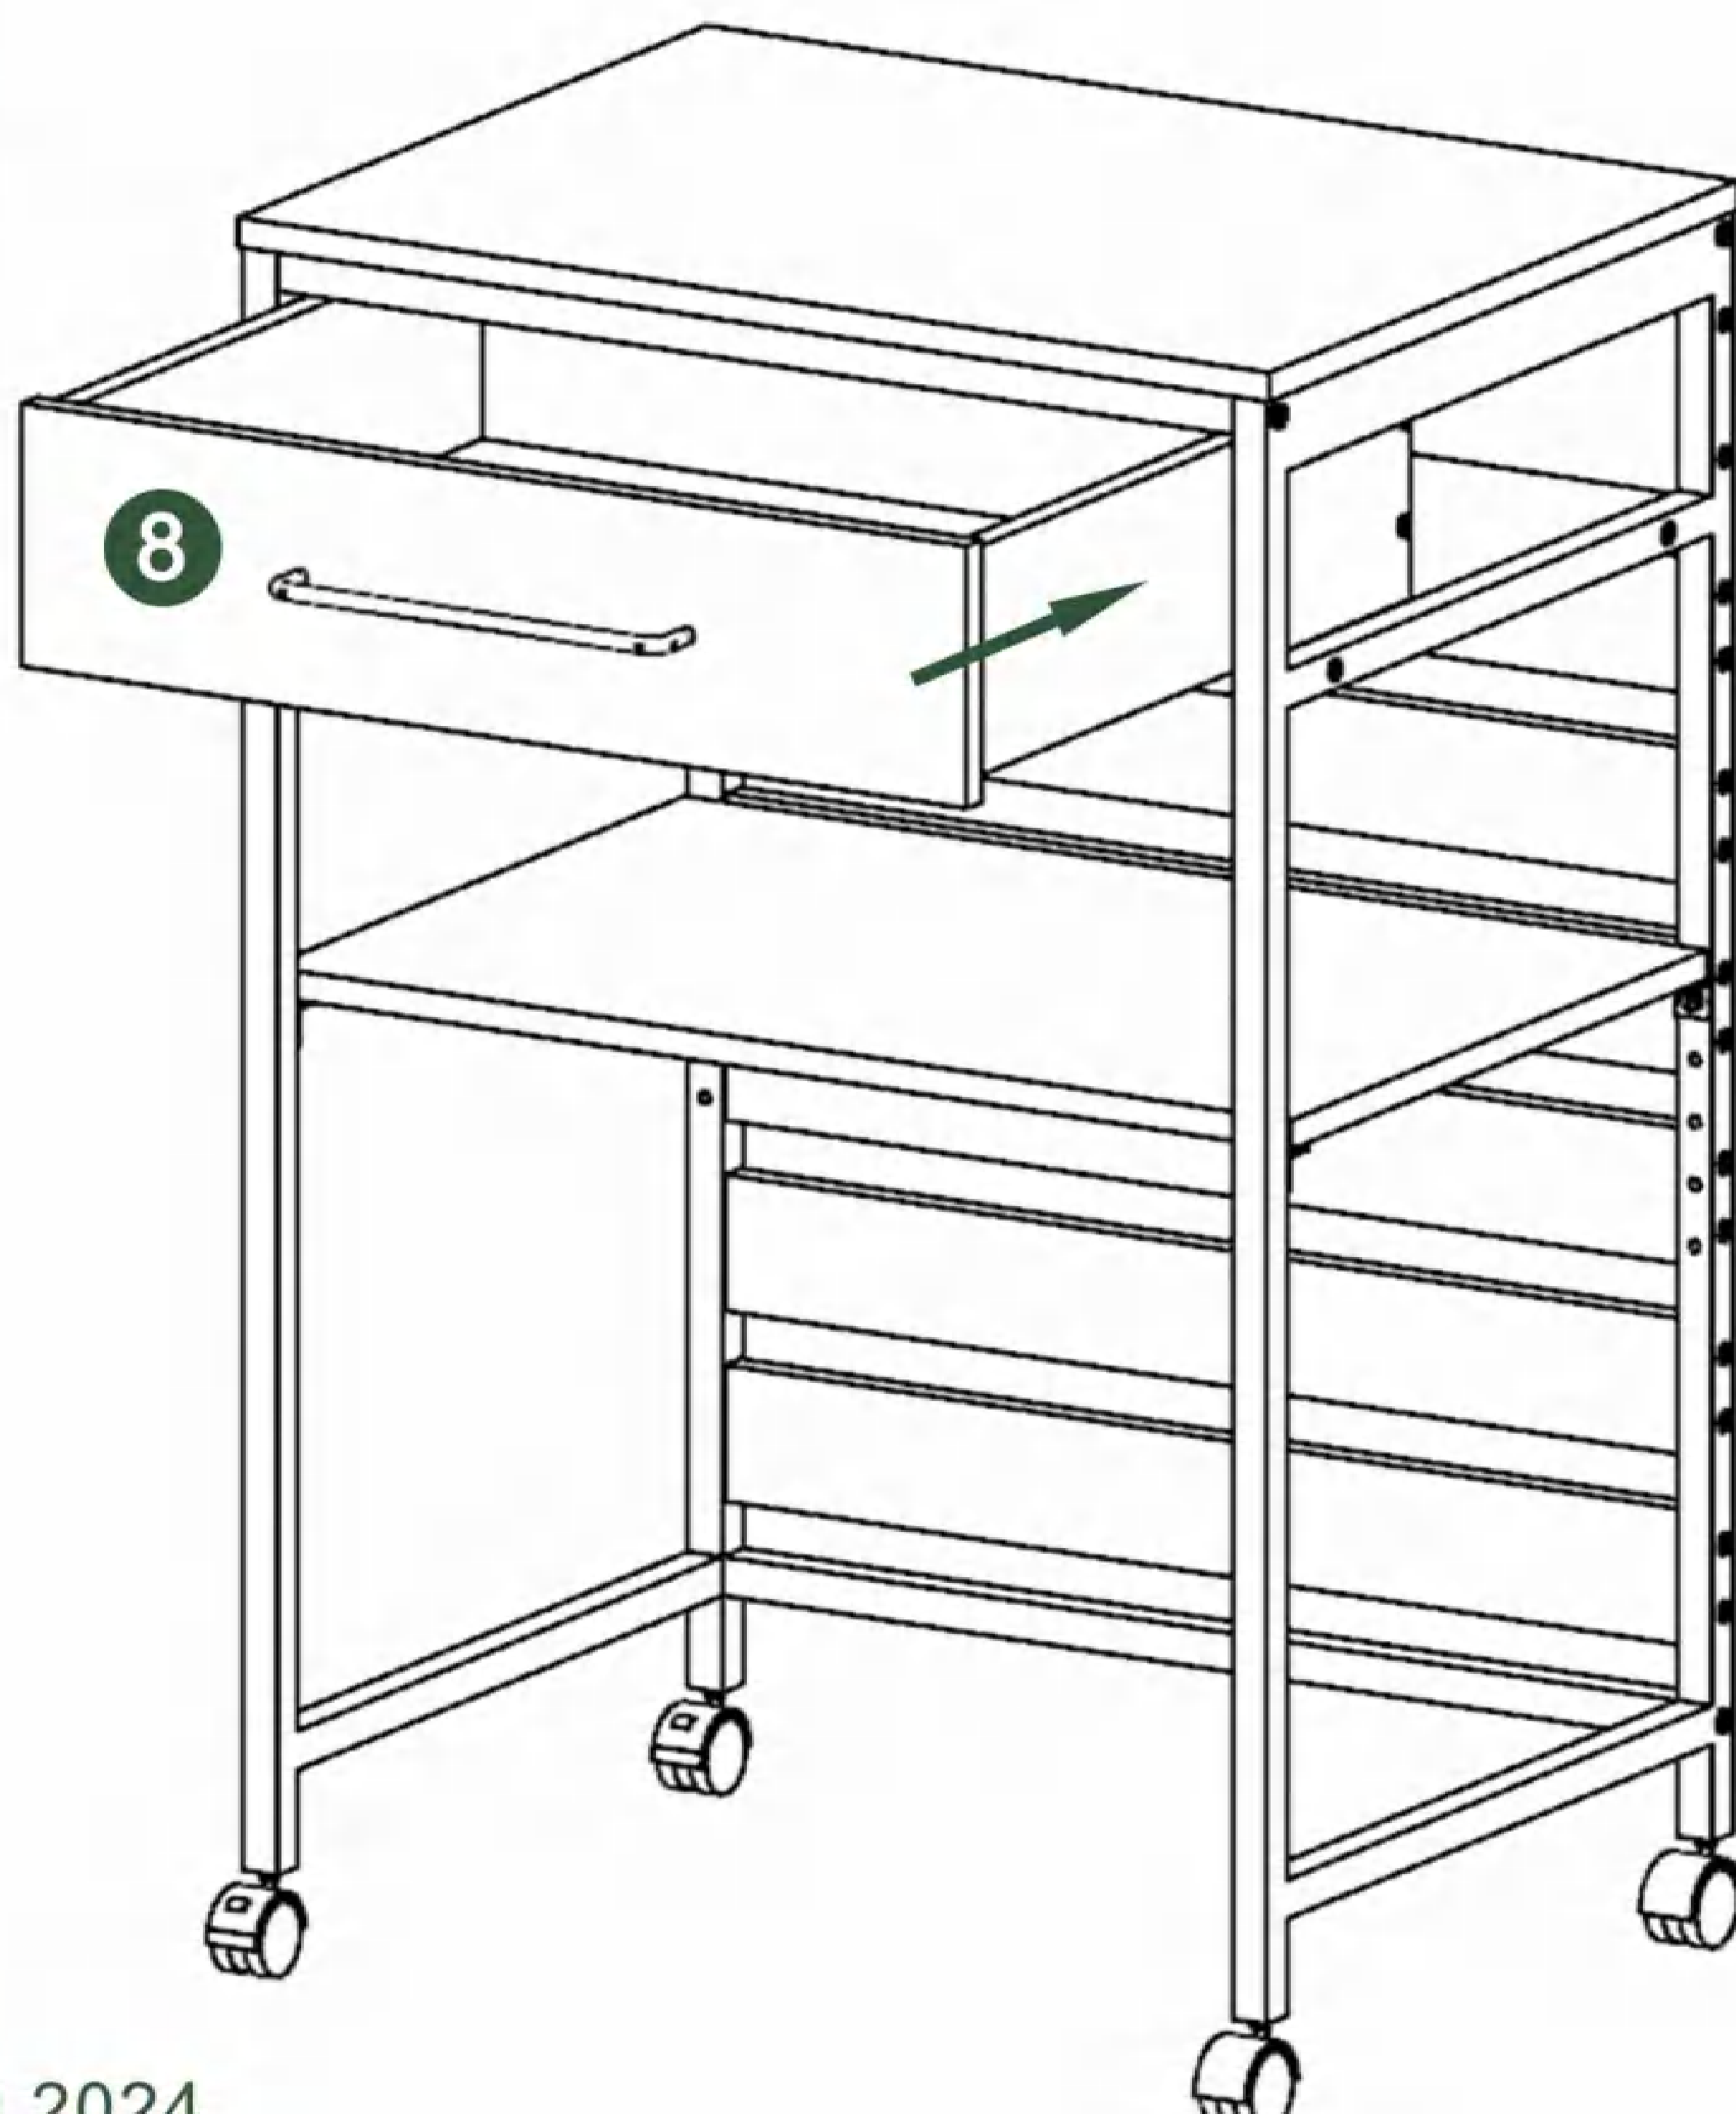


15.

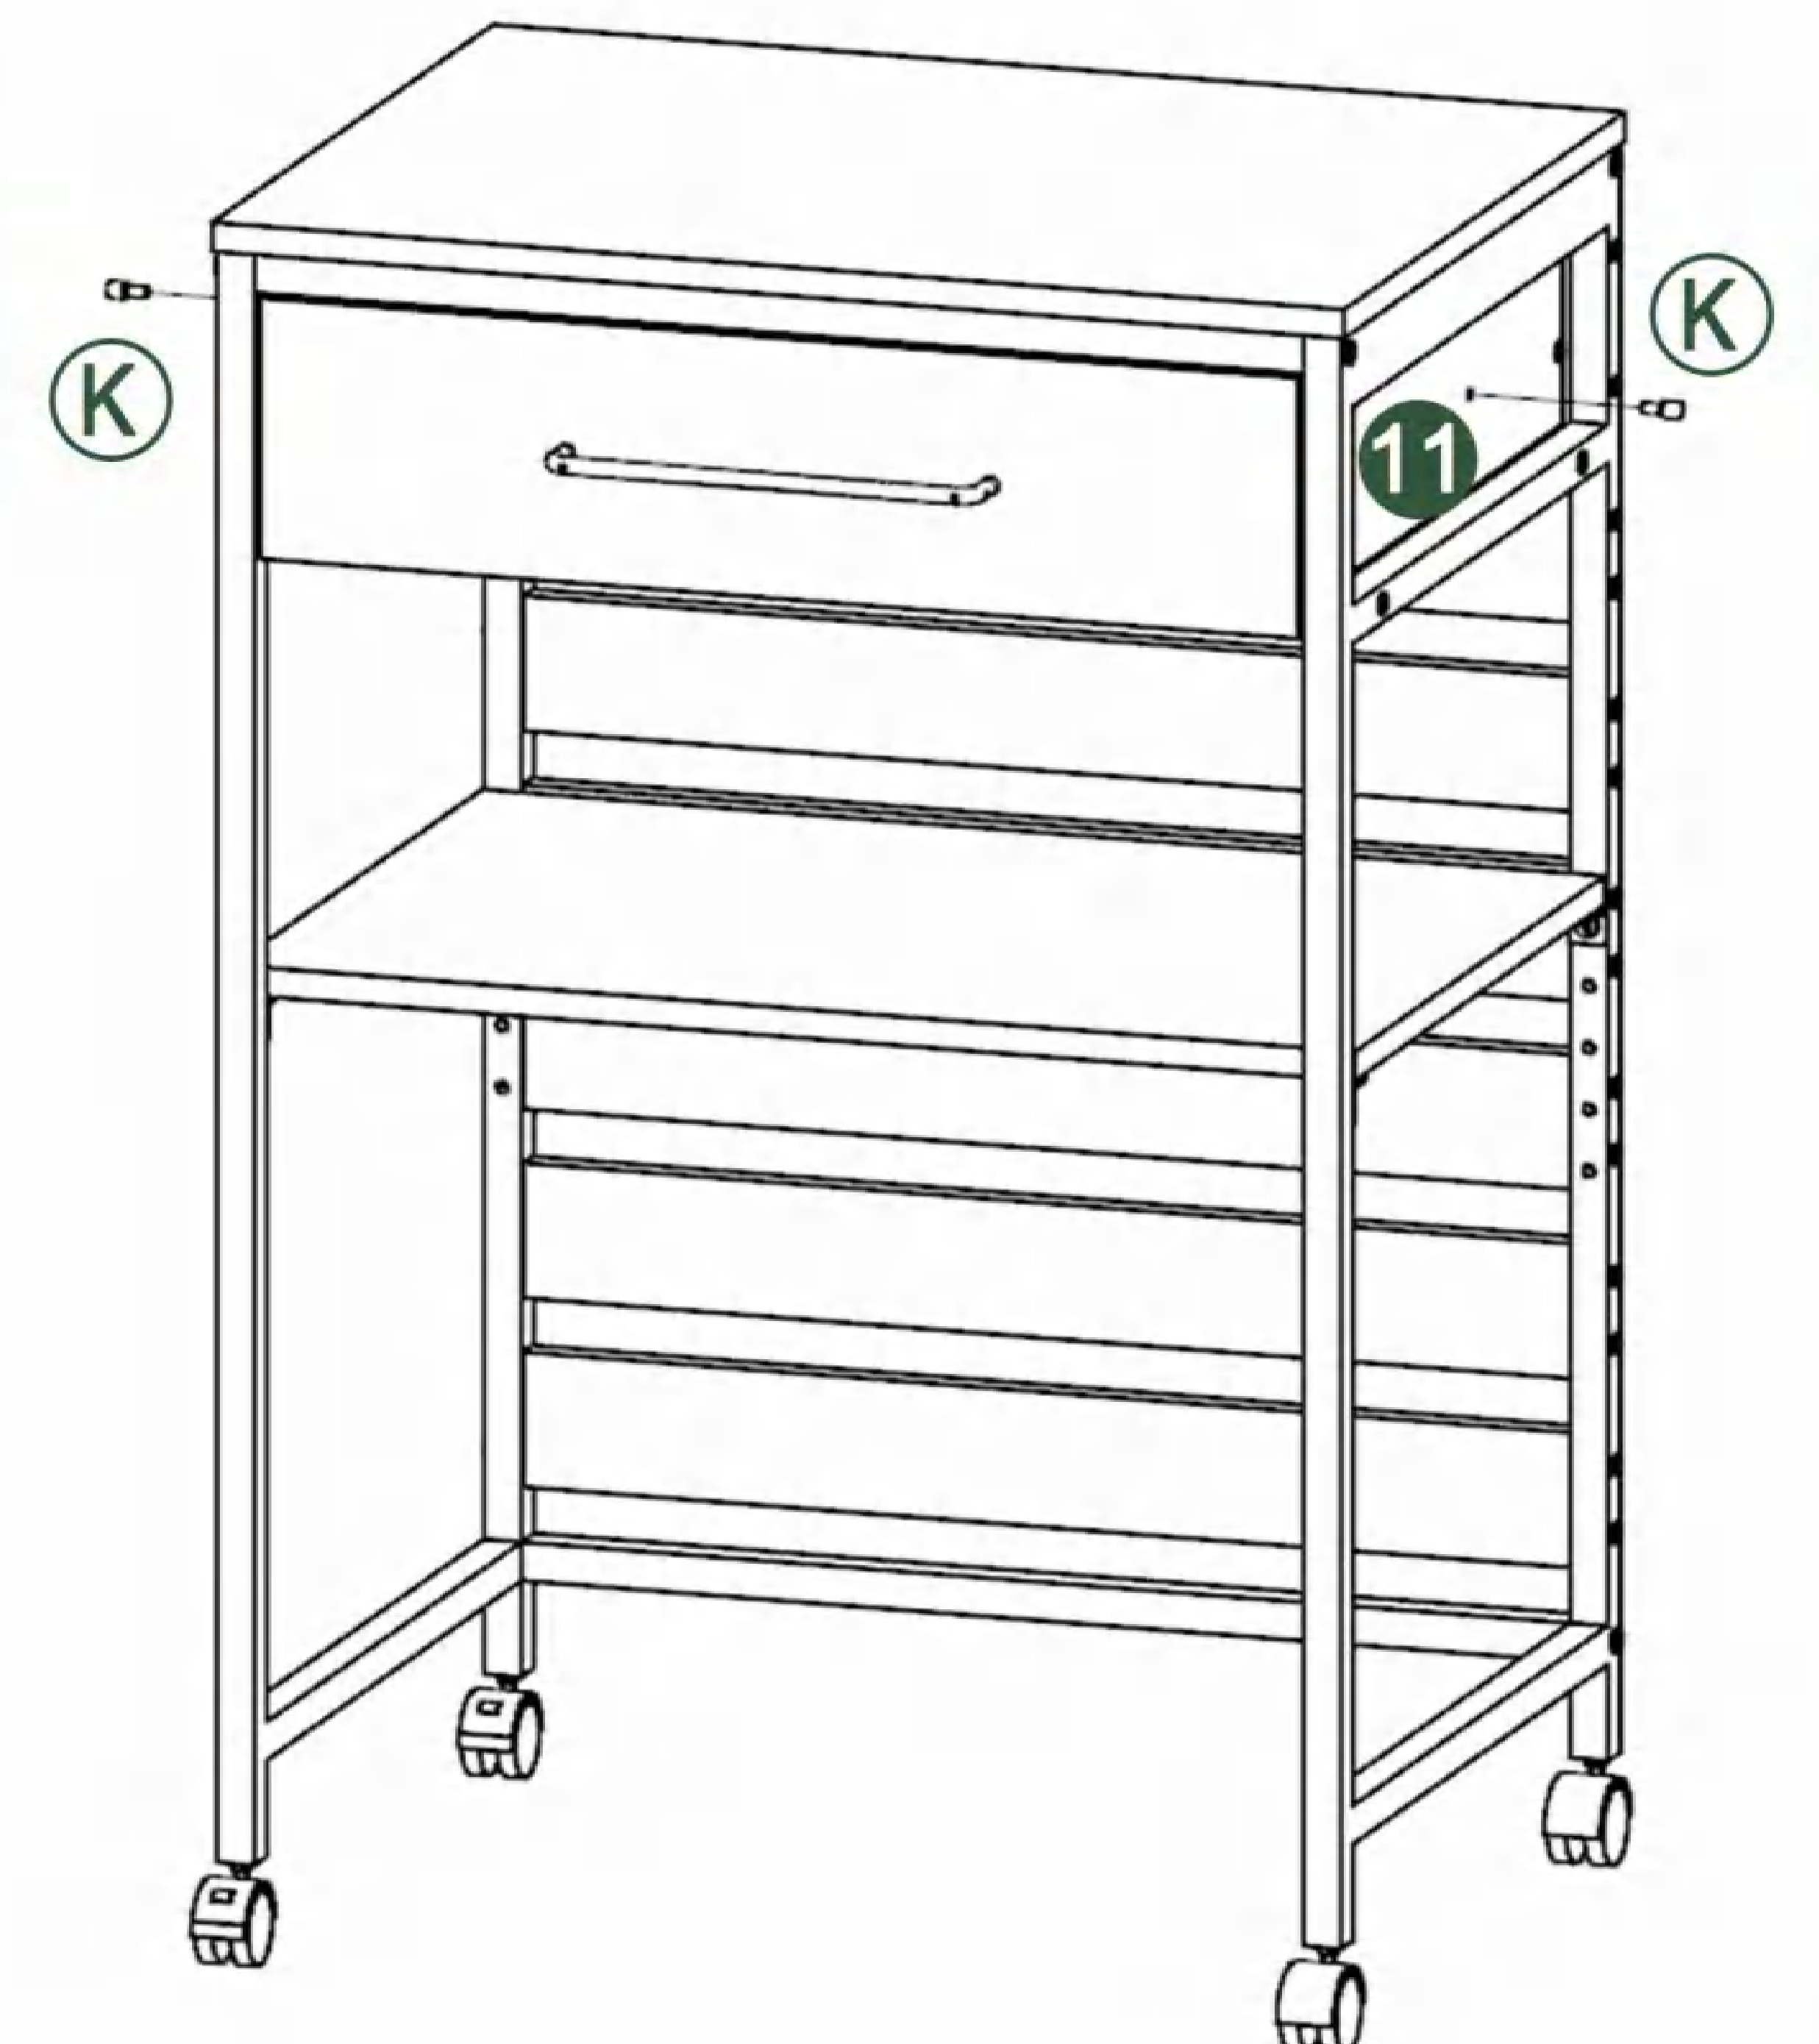


16.

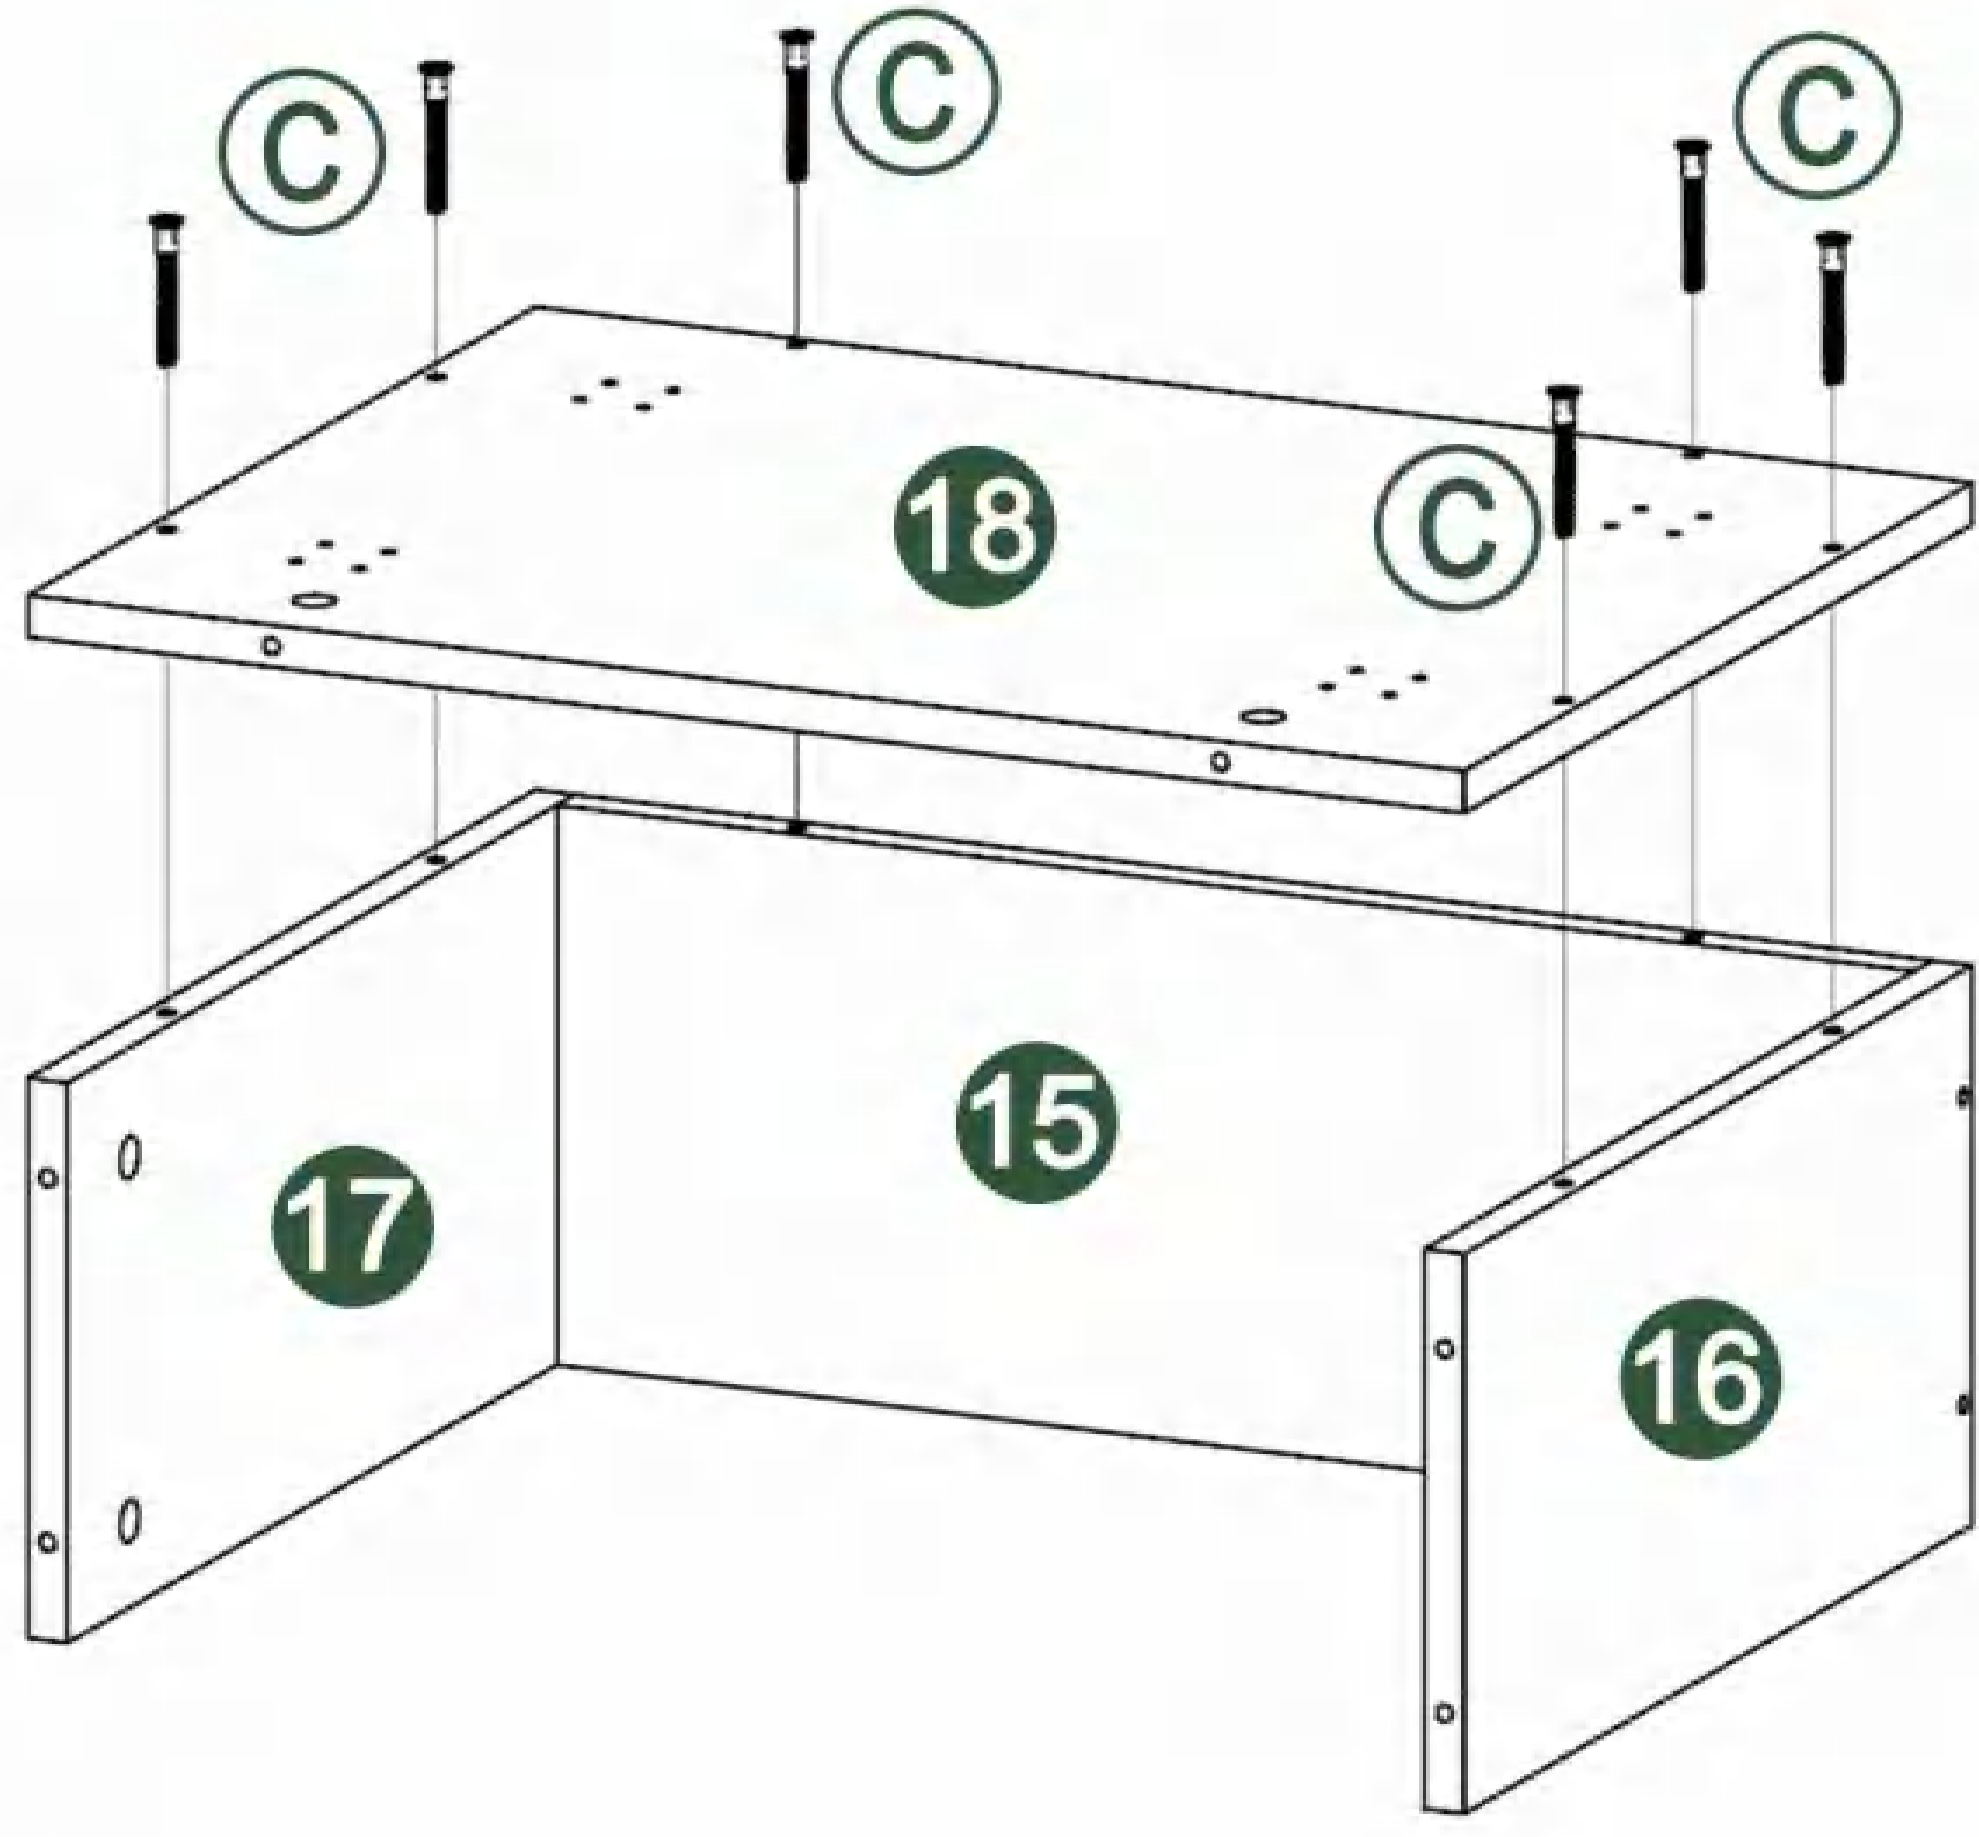


17.

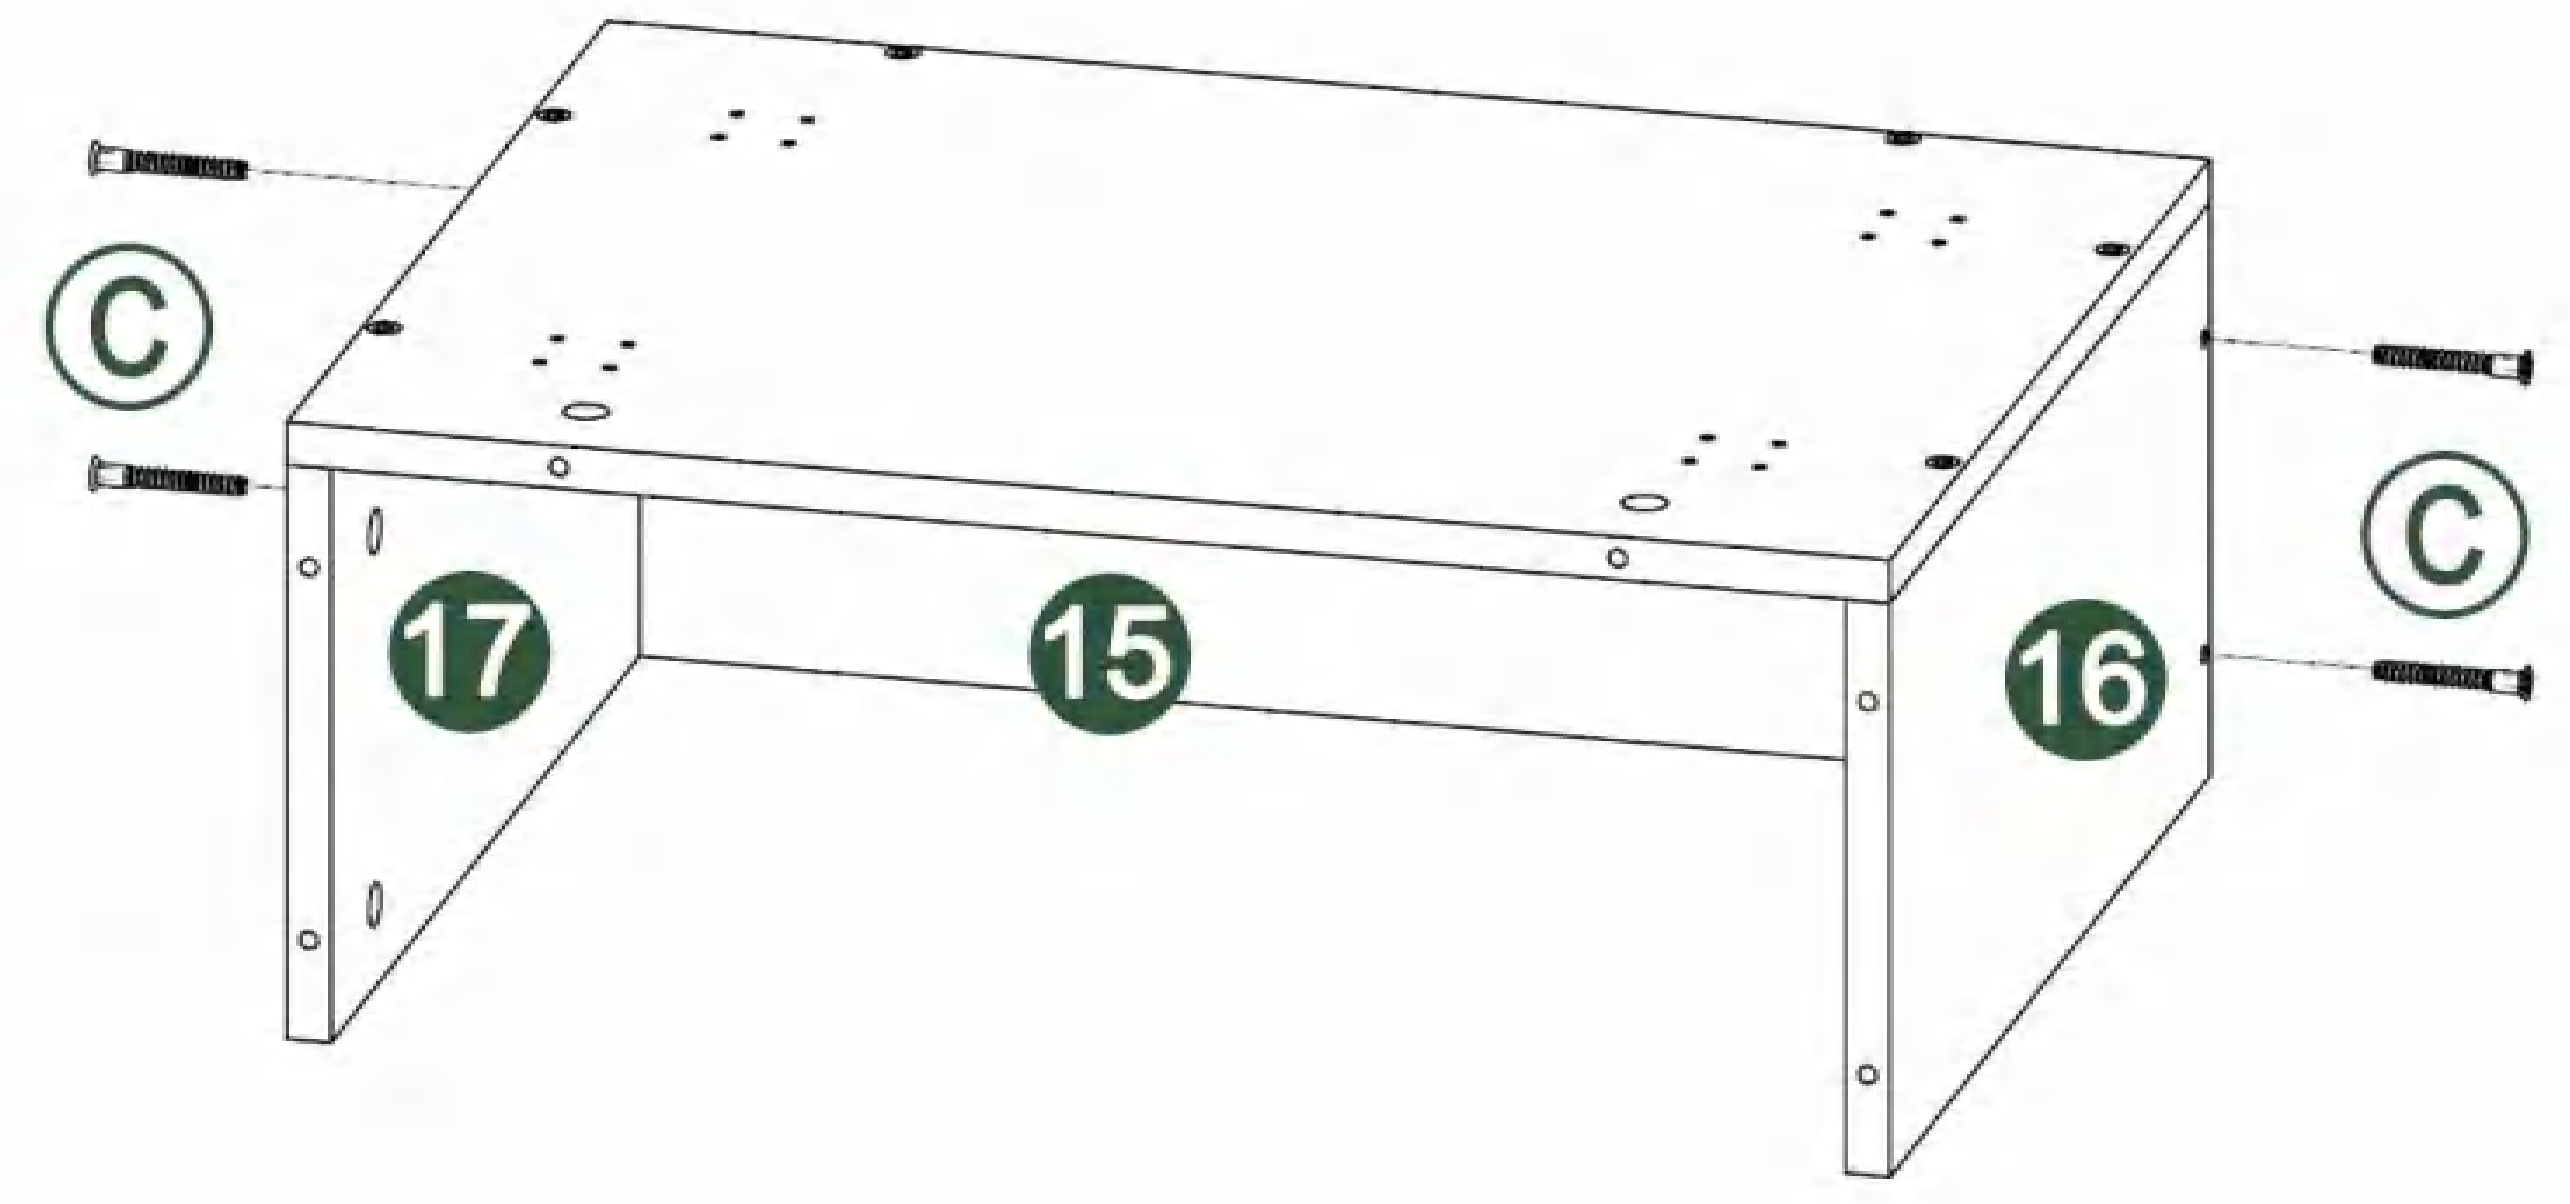


18.

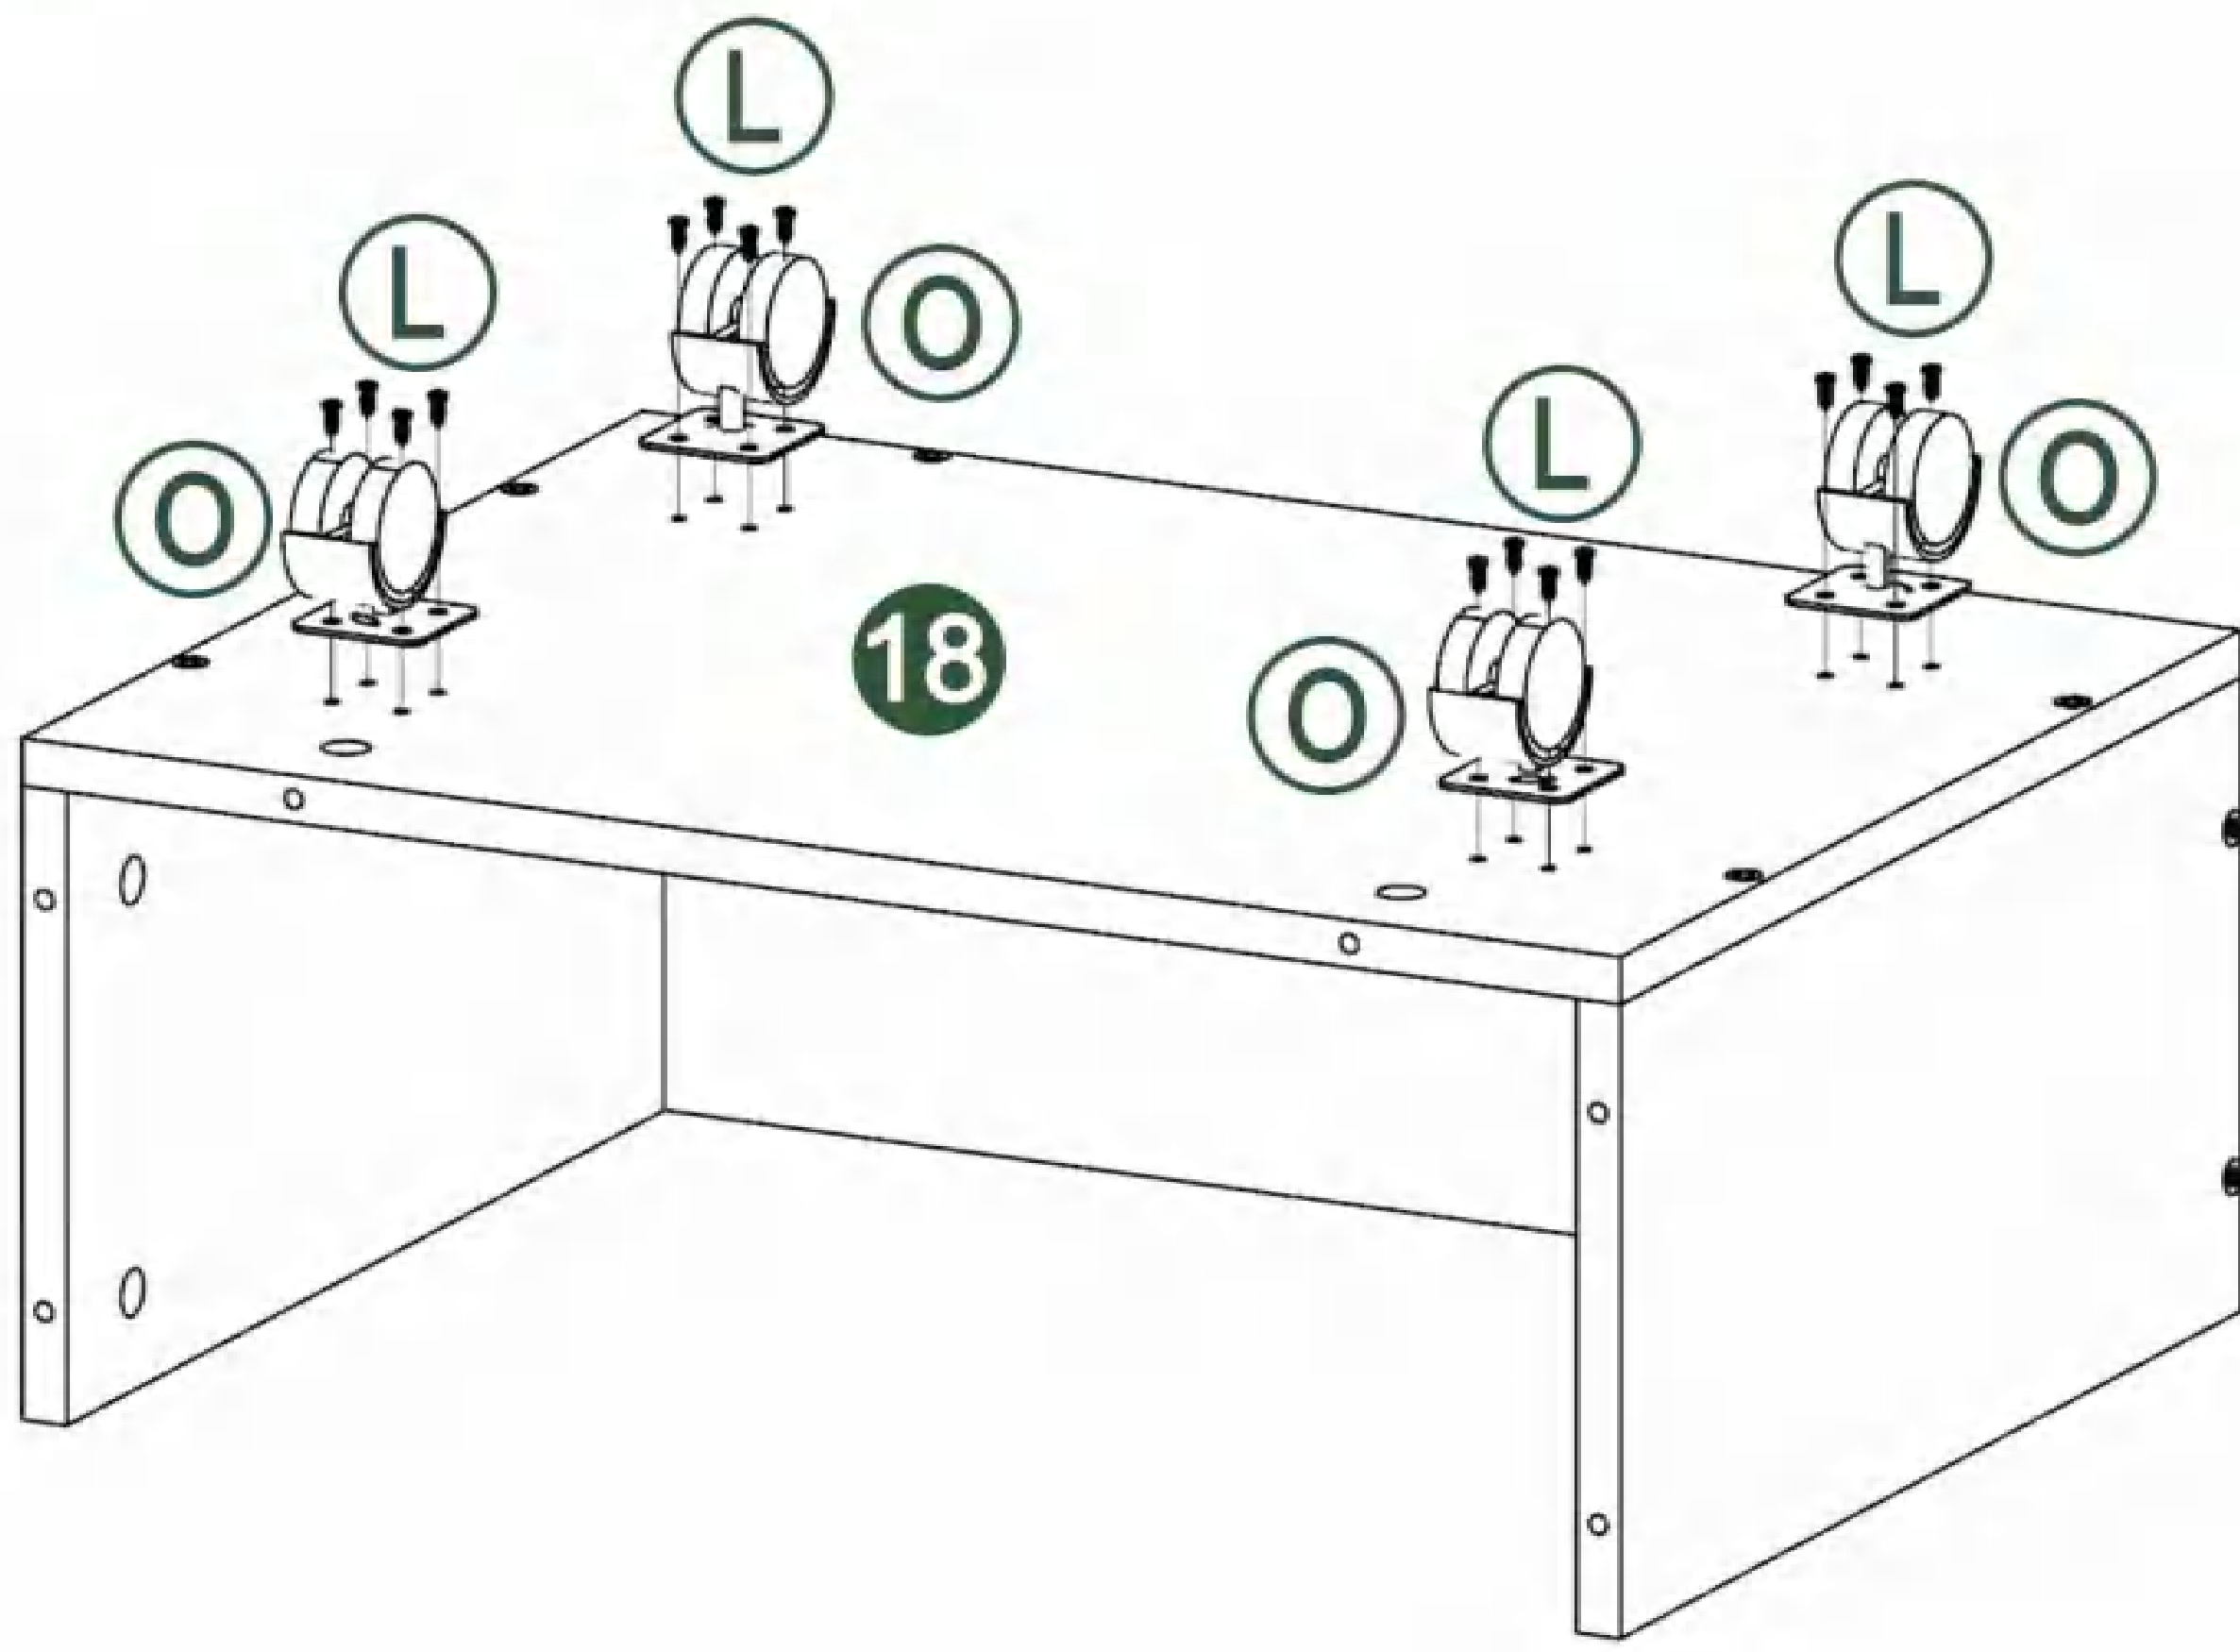


19.

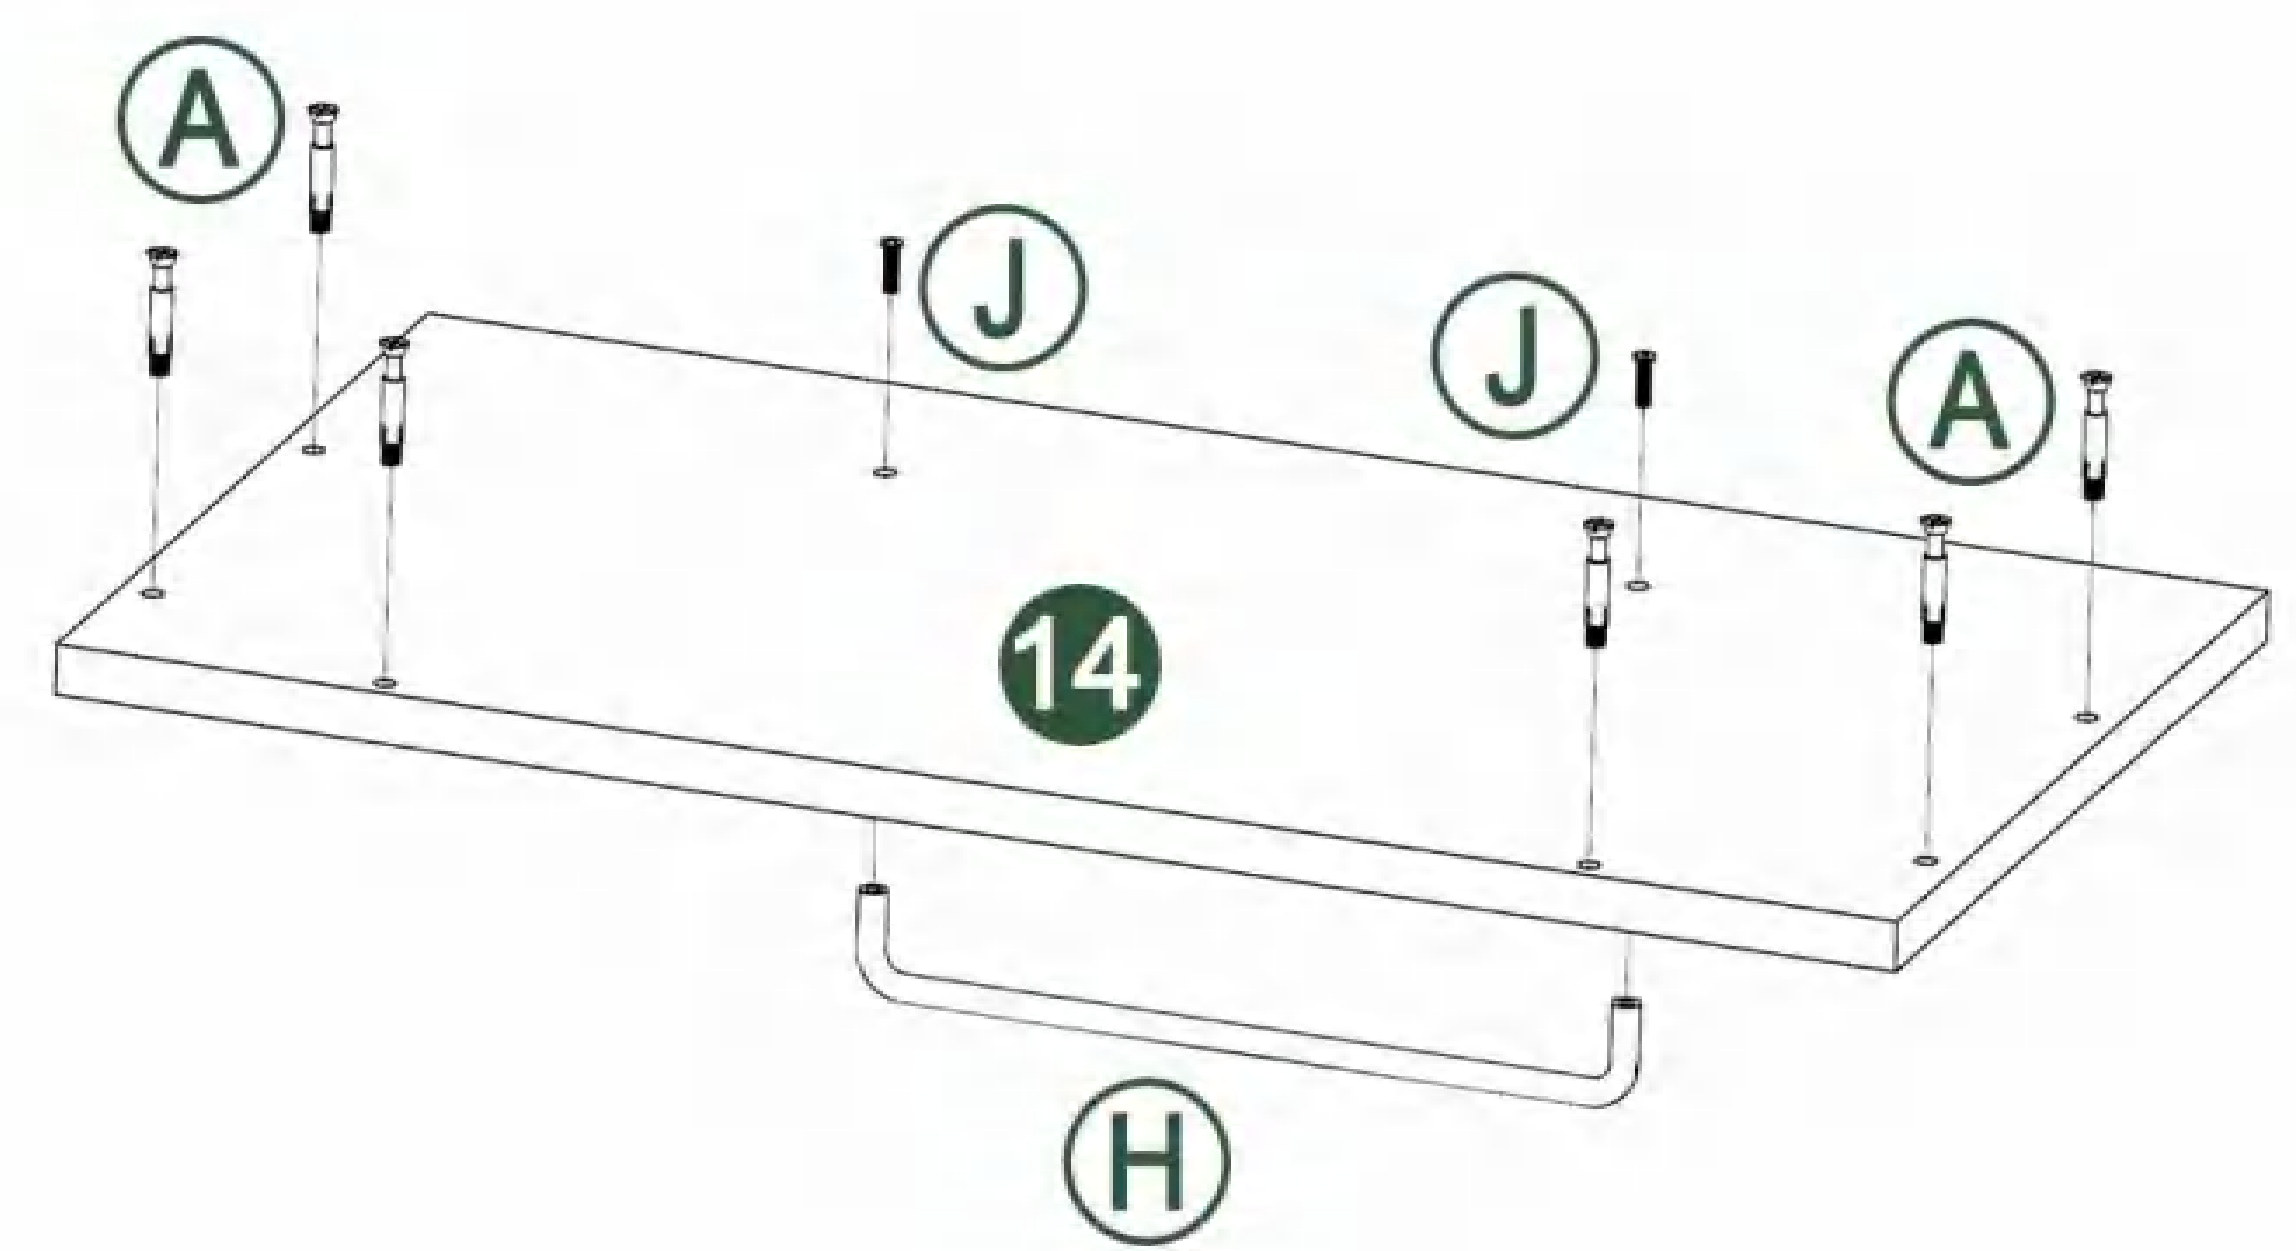

12.

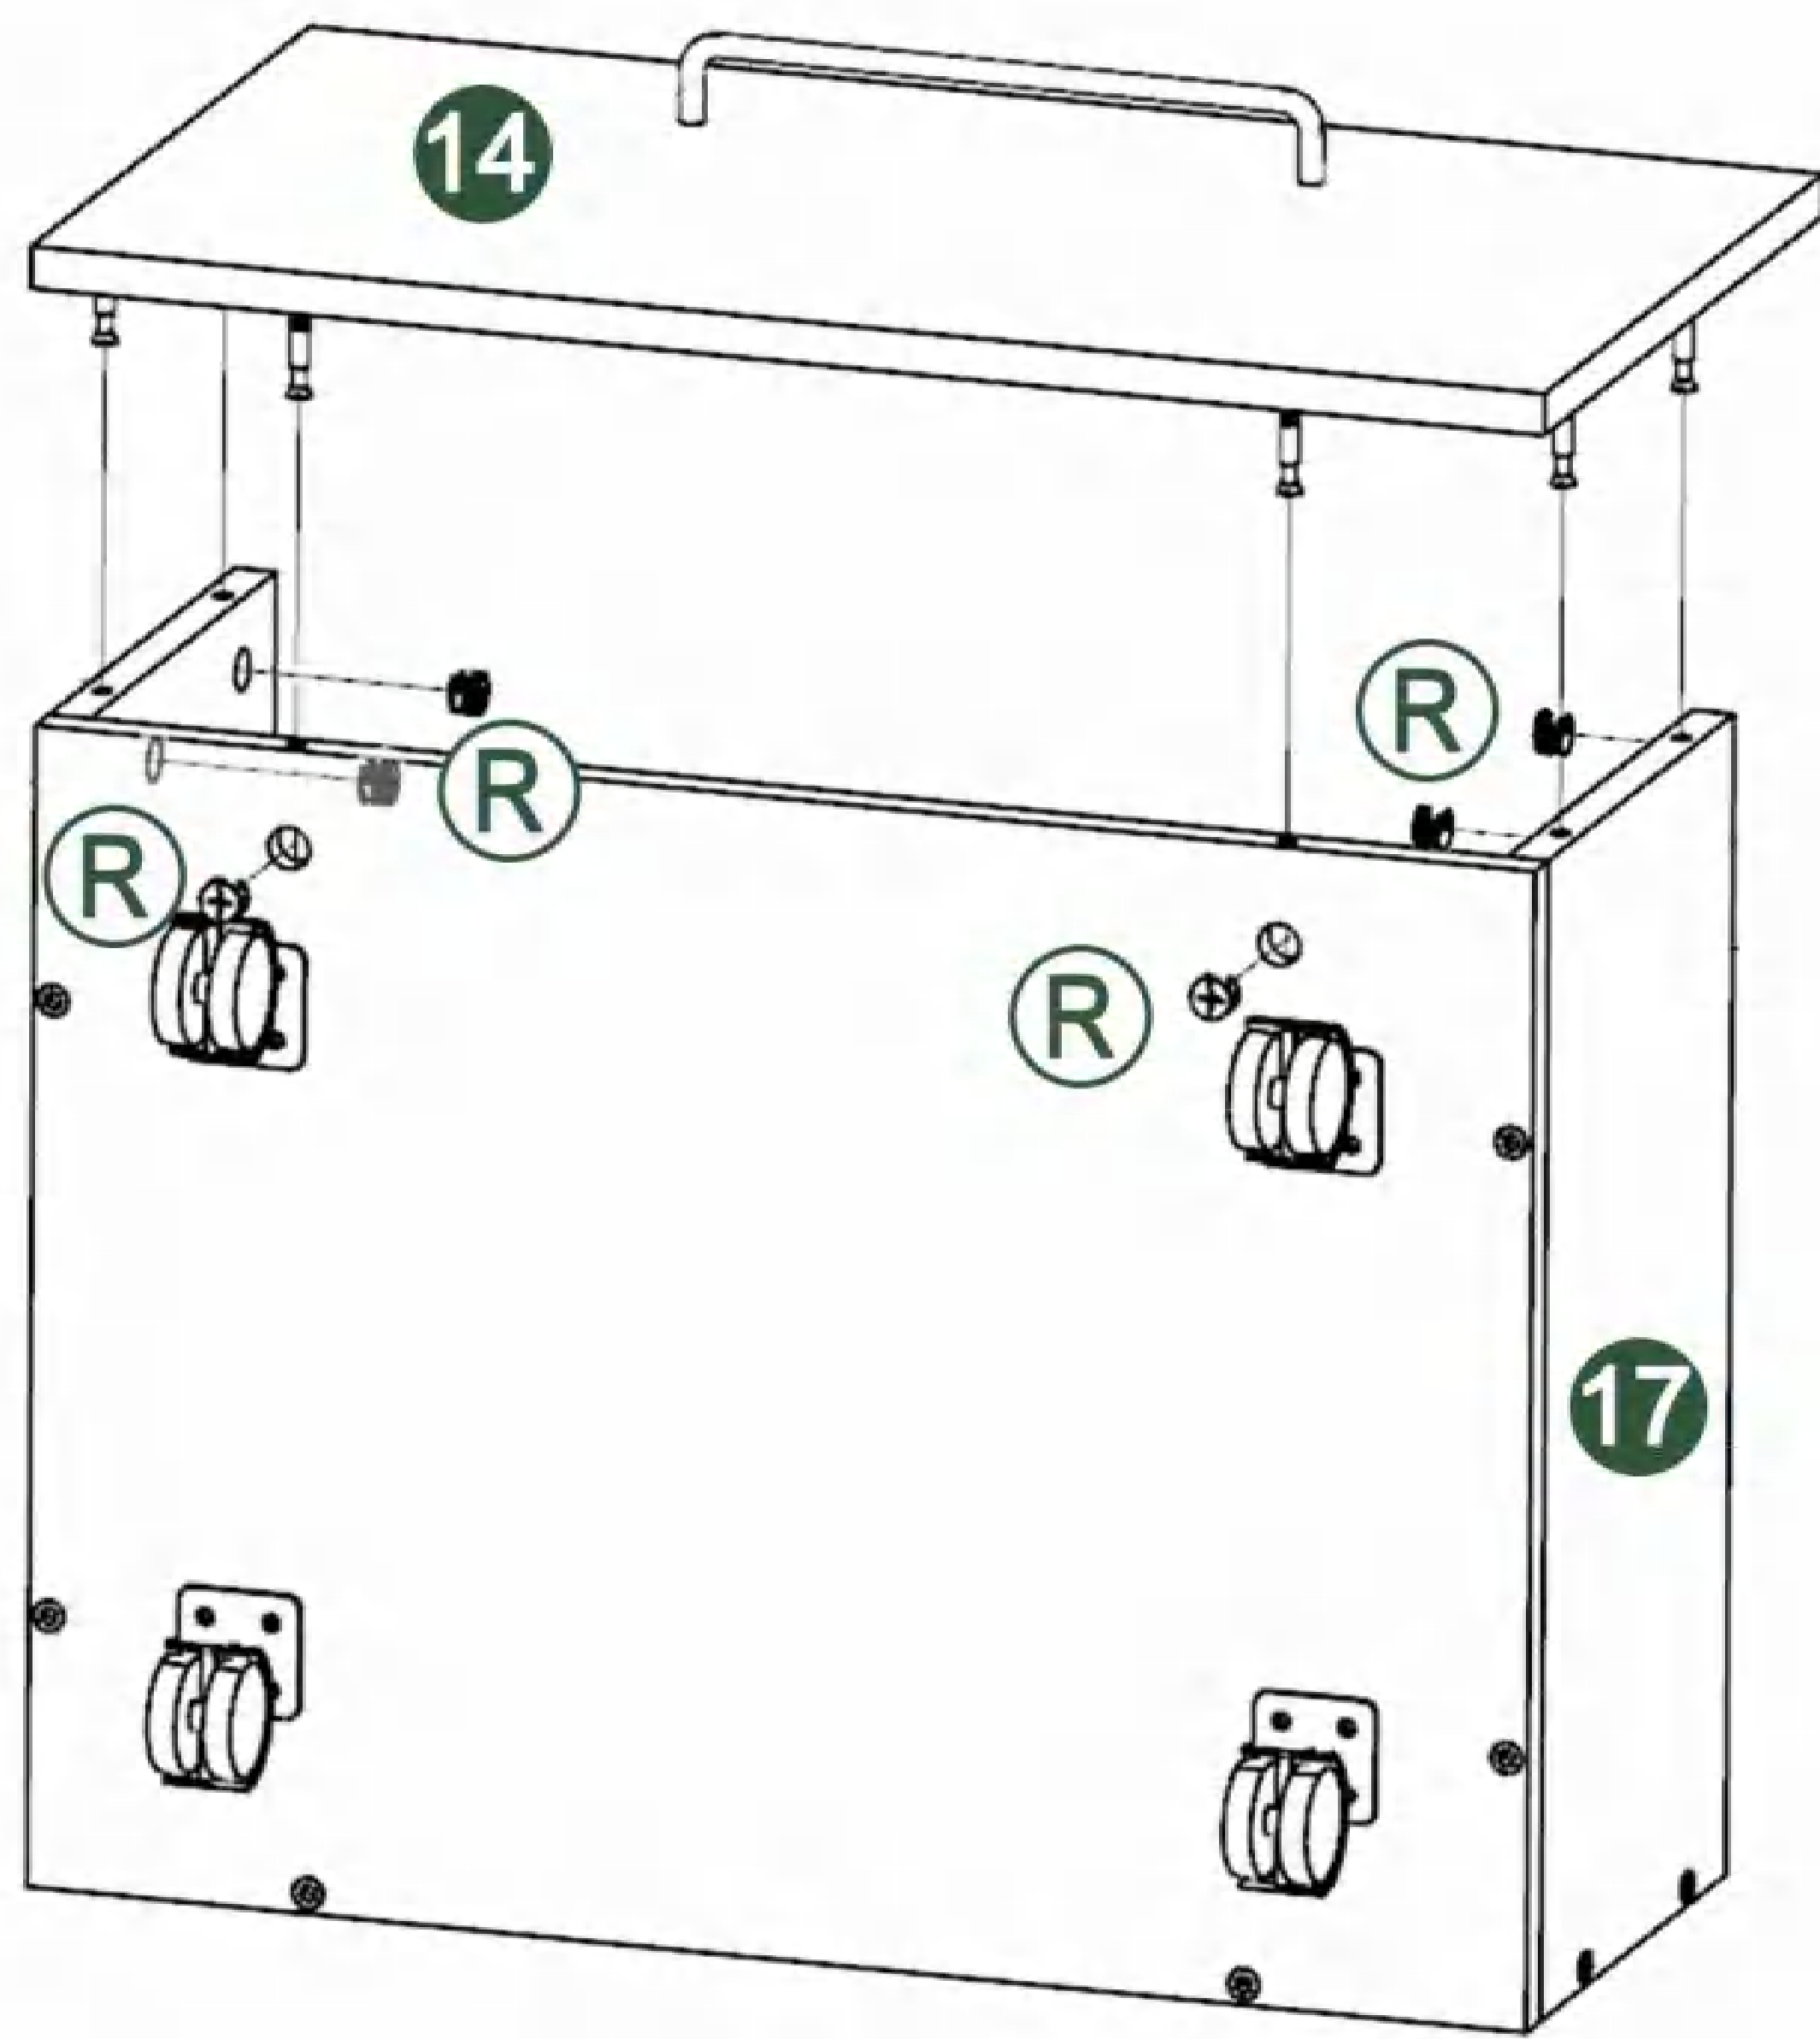

13.

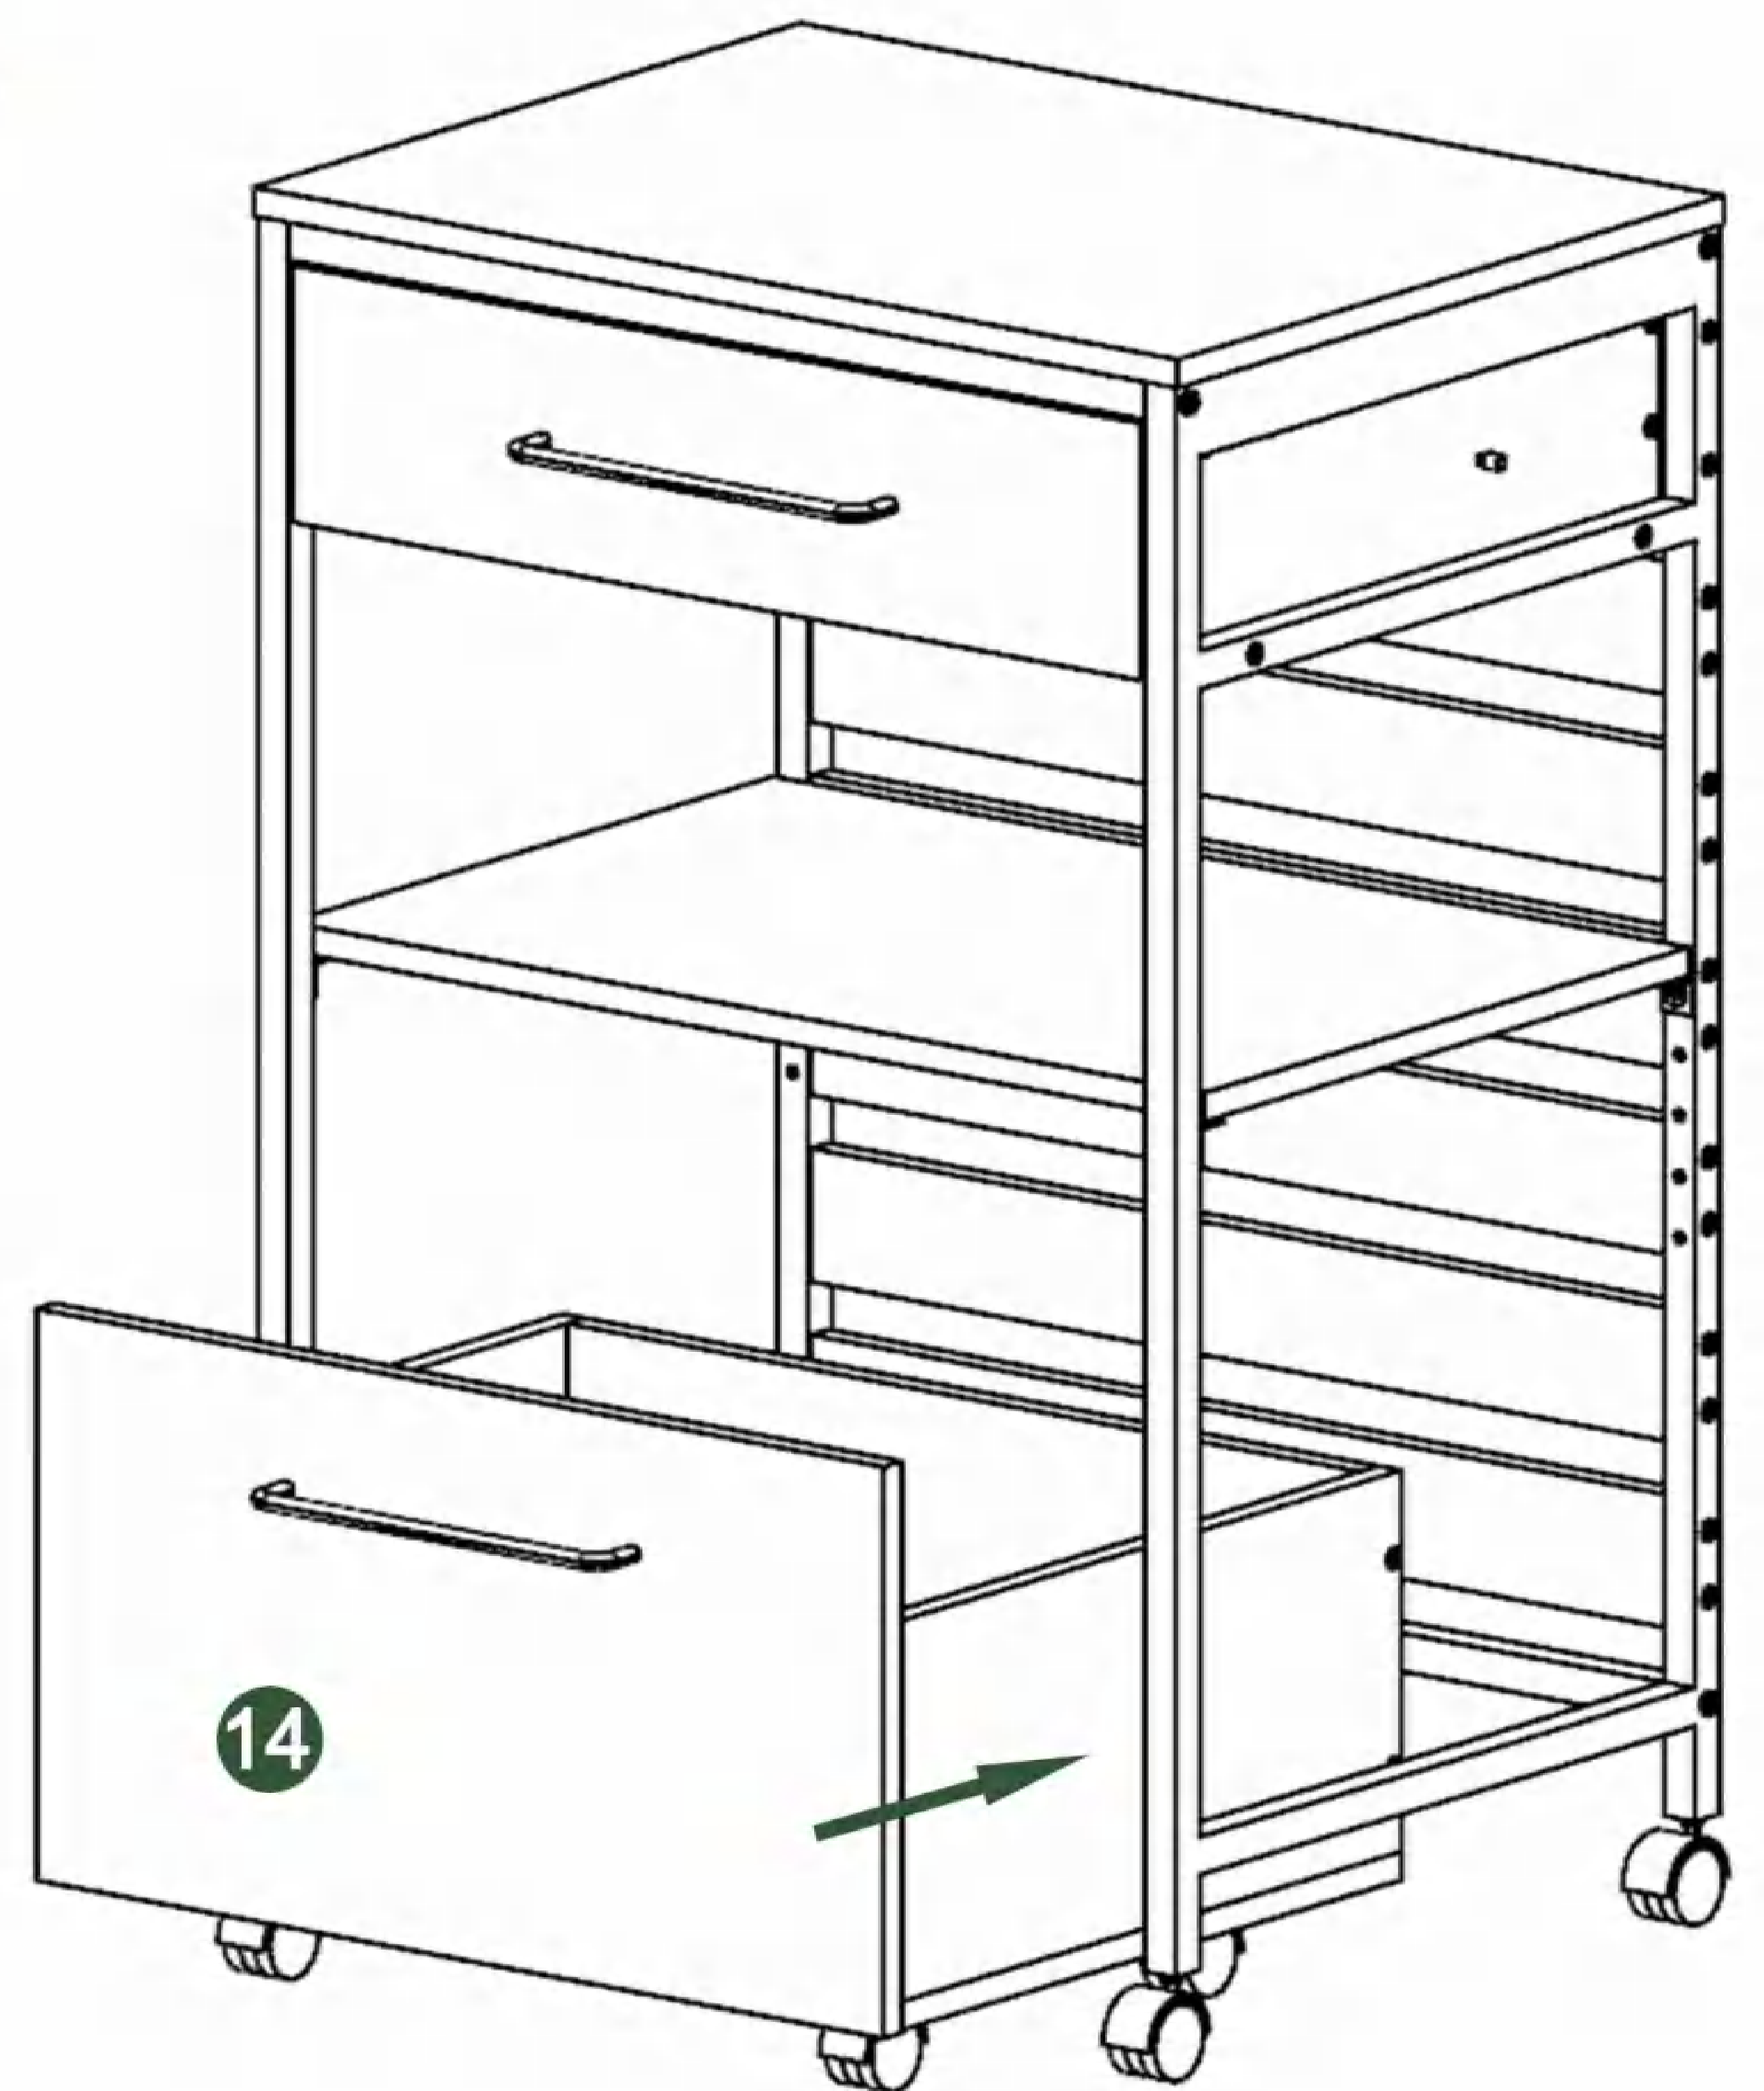



Scan the QR code to answer a short survey



Scan the QR code to share your review