


INSTALLATION


- Provide powered track to the required point of installation
- Remove the 2 screws securing the terminal cover (see Fig 1)

Fig 1

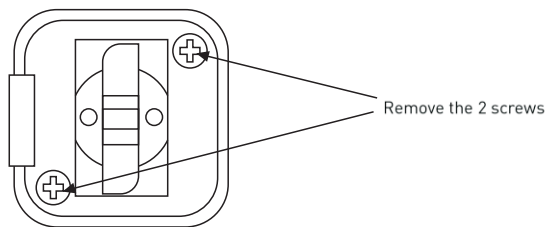


- Remove the 2 loose ring terminals and the 2 pieces of heat shrink from inside the fitting (See Fig 2)

Fig 2

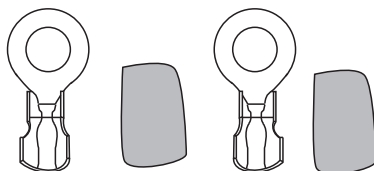


- Place heat shrink onto the Live and Neutral wires and crimp the ring terminals securely onto the wires (see Fig 3)

Fig 3

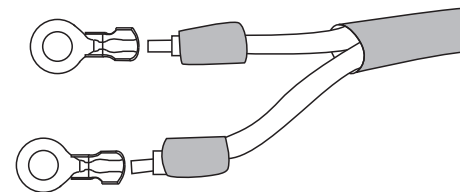


- Once the crimp terminals have been secured to the 2 wires, pull the heat shrink over the crimped area and shrink with a heat gun (see Fig 4)

Fig 4

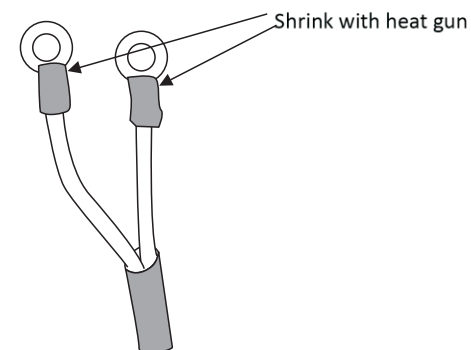

- Remove the 2 screws from the Live and Neutral terminals and ensuring that correct polarity is observed terminate Live (brown) Neutral (blue) to the screw terminals (see Fig 5)

Fig 5

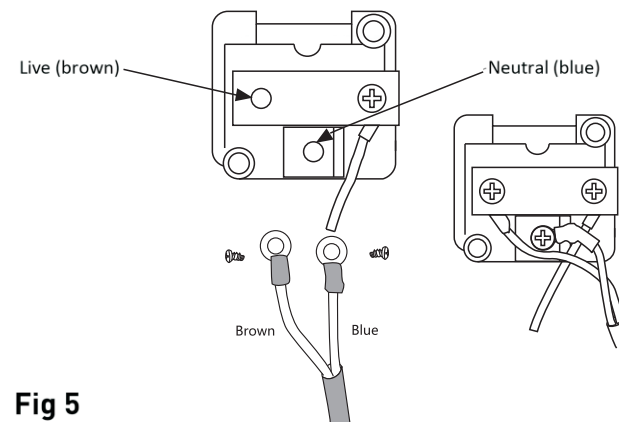

- Refit the terminal cover and fasten down the 2 screws
- Ensuring track polarity is observed, lock the fitting into the track
- Switch on and check for correct operation