
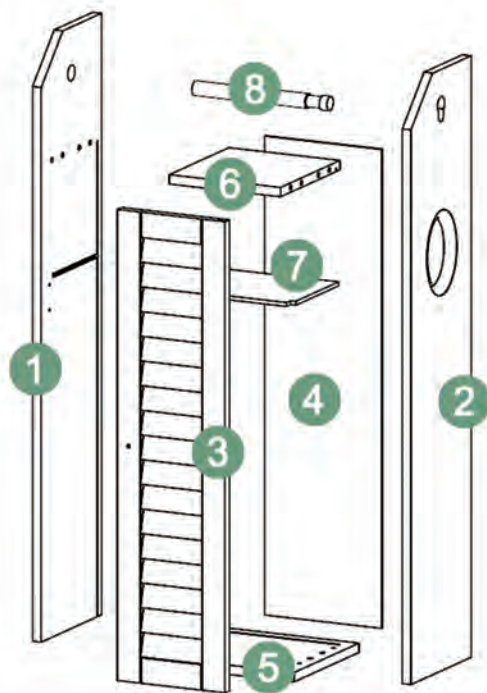


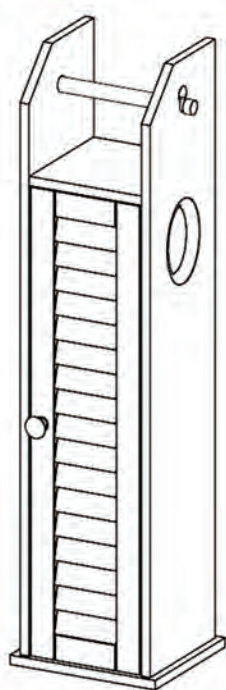

2021-01

BZR49**SoBuy****TOOLS:**

UNIT:MM

1

770×167×12

2

770×167×12

3


603×150×15

4

613×163×3

5

200×180×12

6

165×155×12

7

165×130×5

8

188×φ18

UNIT:MM

A

×4



M6×35

B

×4



Φ15×10

C

Φ22×20

D

M4×16

E

×4



M4×30

F

×8



Φ6×30

G

×2



M2.5×14

H

×6

**J****K**

×4



10×10

L

35×12.5×1







M

M3×12

BOLT INSTALLATION AS BELOW:**BOLT****Connecting piece****X****✓**


Adjust connecting piece direction if condition as illustrated

Insert bolt when Connecting piece under Such condition

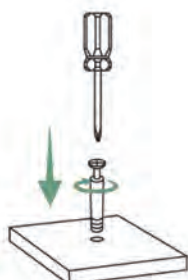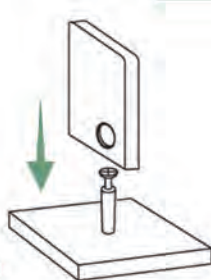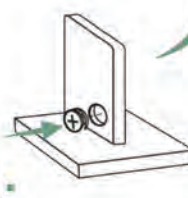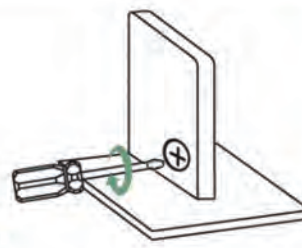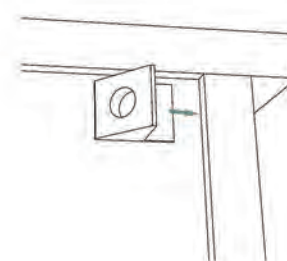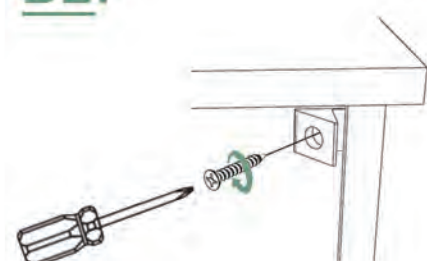
A1.**A2.****A3.****A4.****BACKPLATE BUCKLE INSTALLATION AS BELOW:****B1.****B2.**Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:02.2021


1.

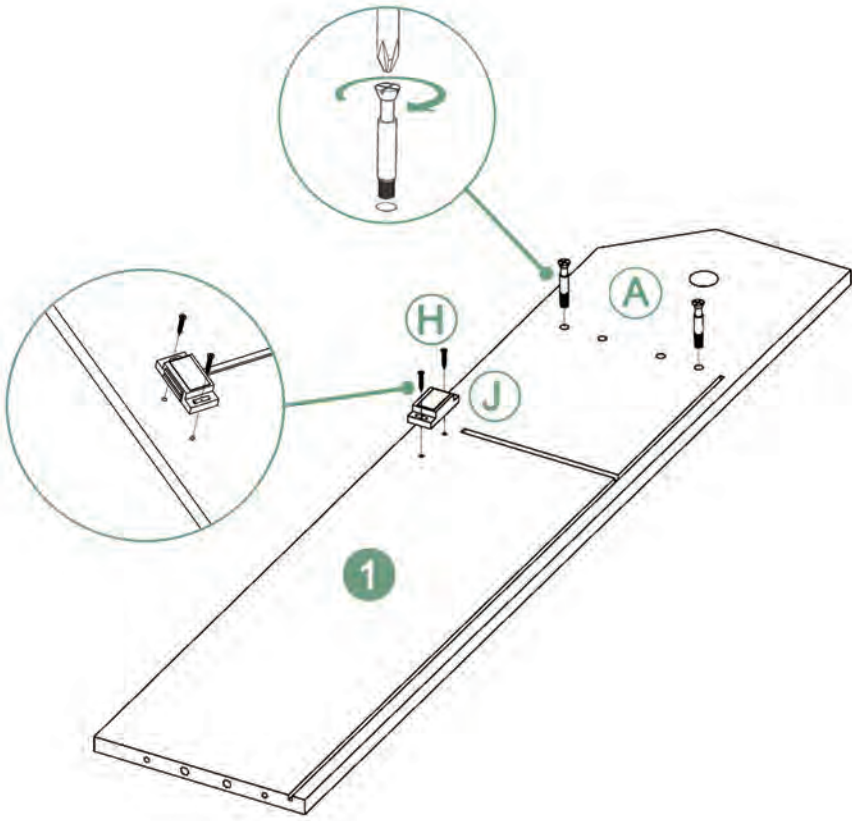


2.

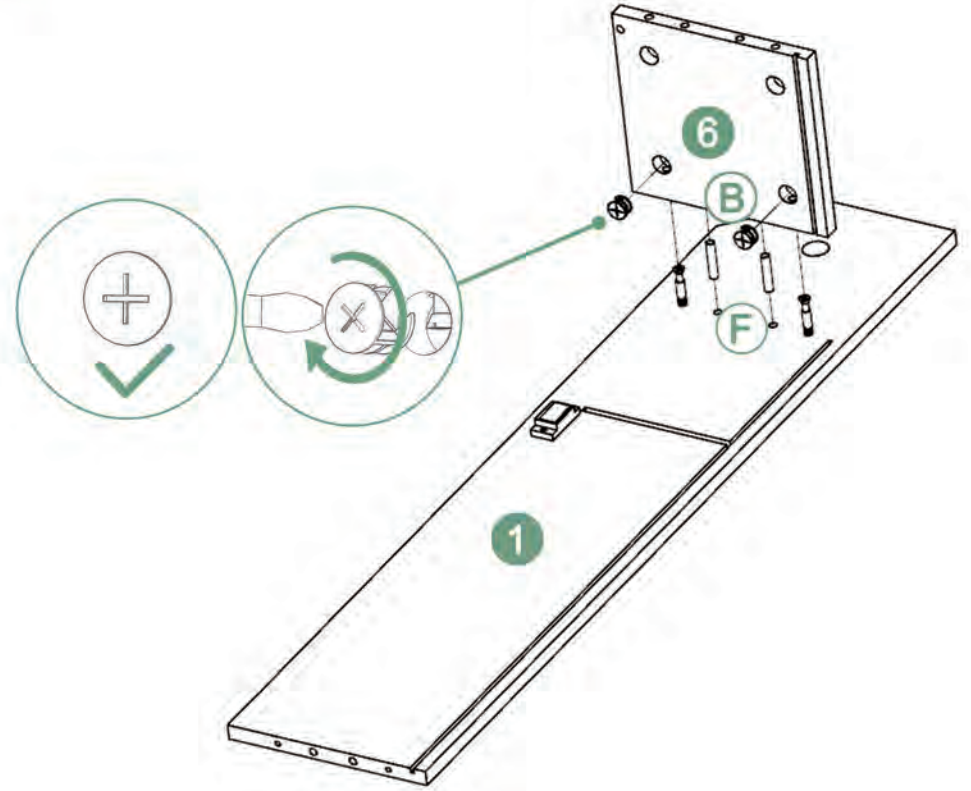


3.

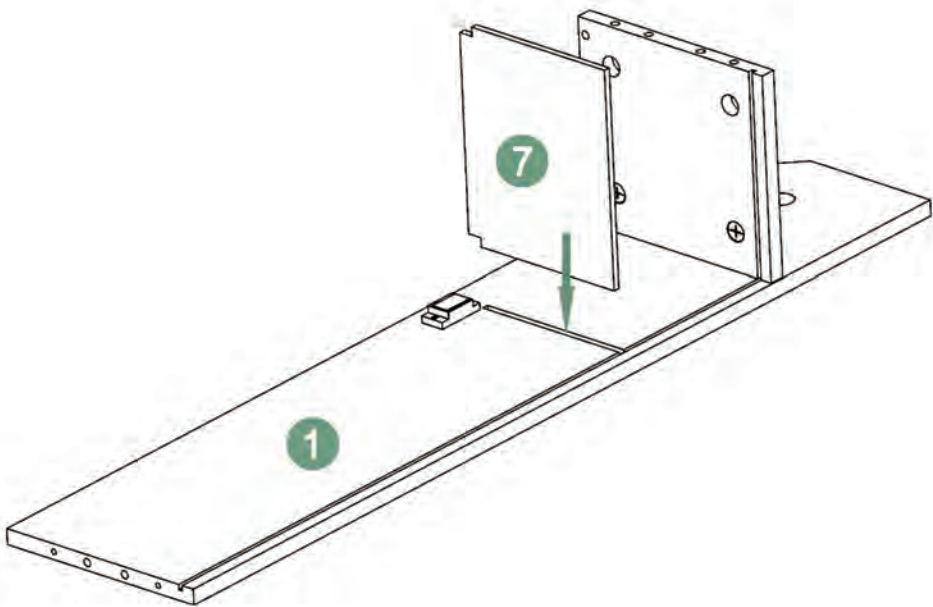


4.

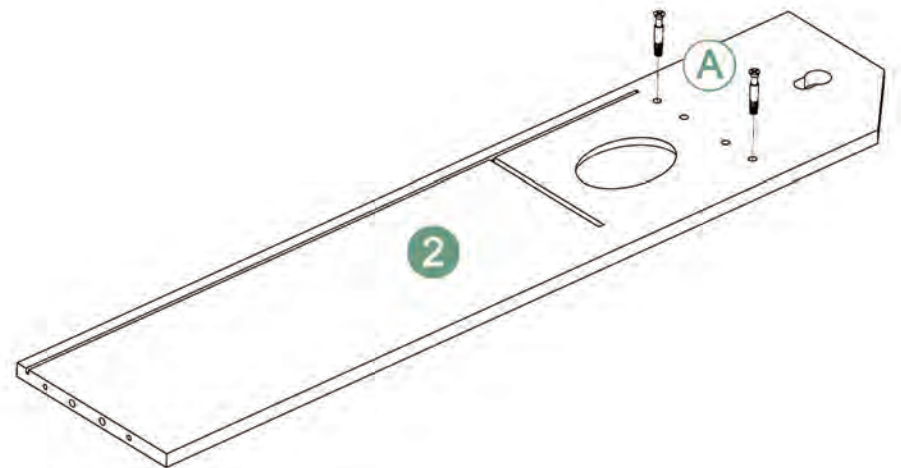


5.

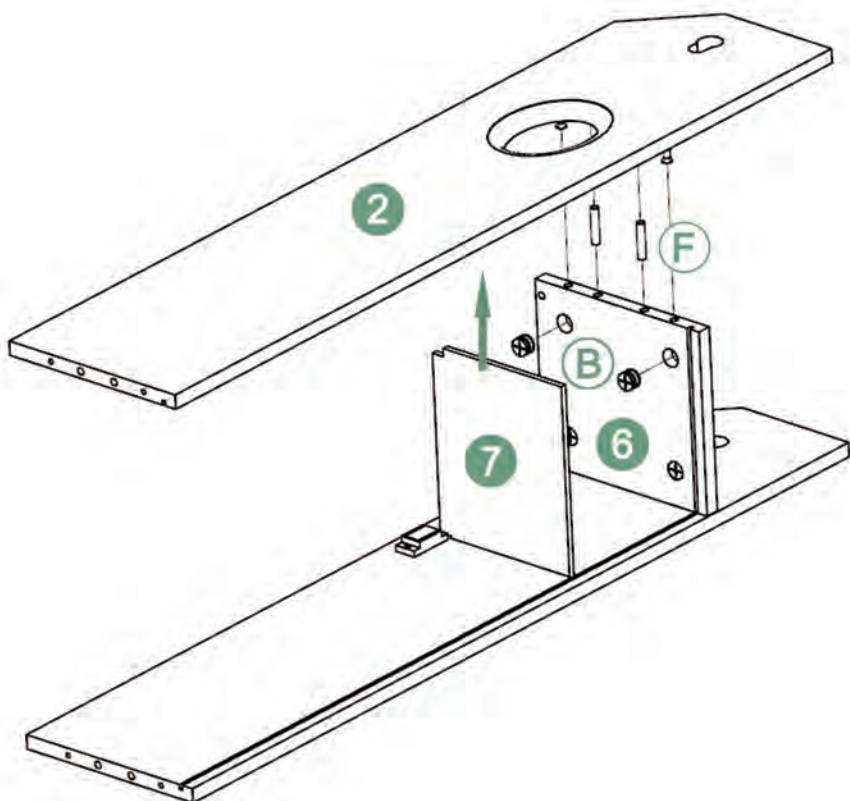


6.

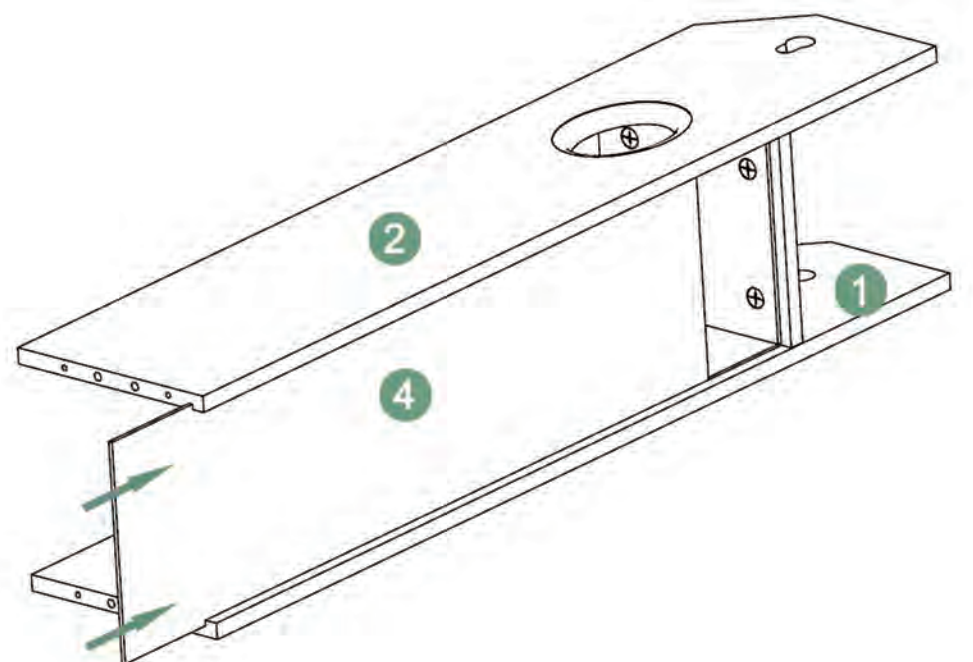


7.

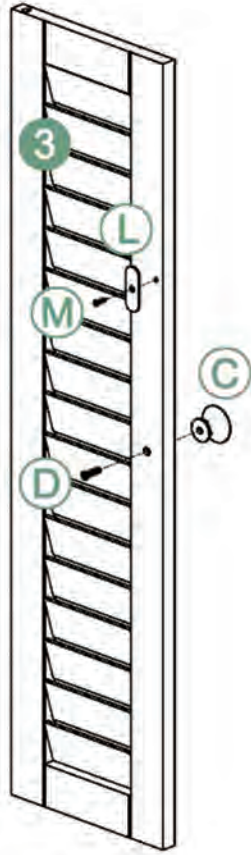


8.

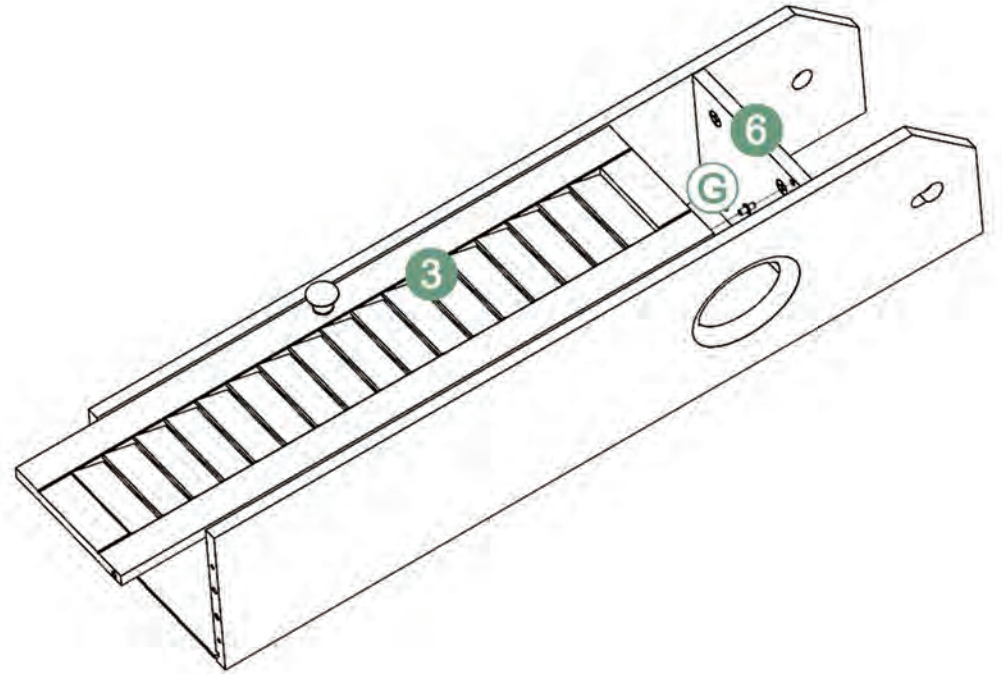


9.

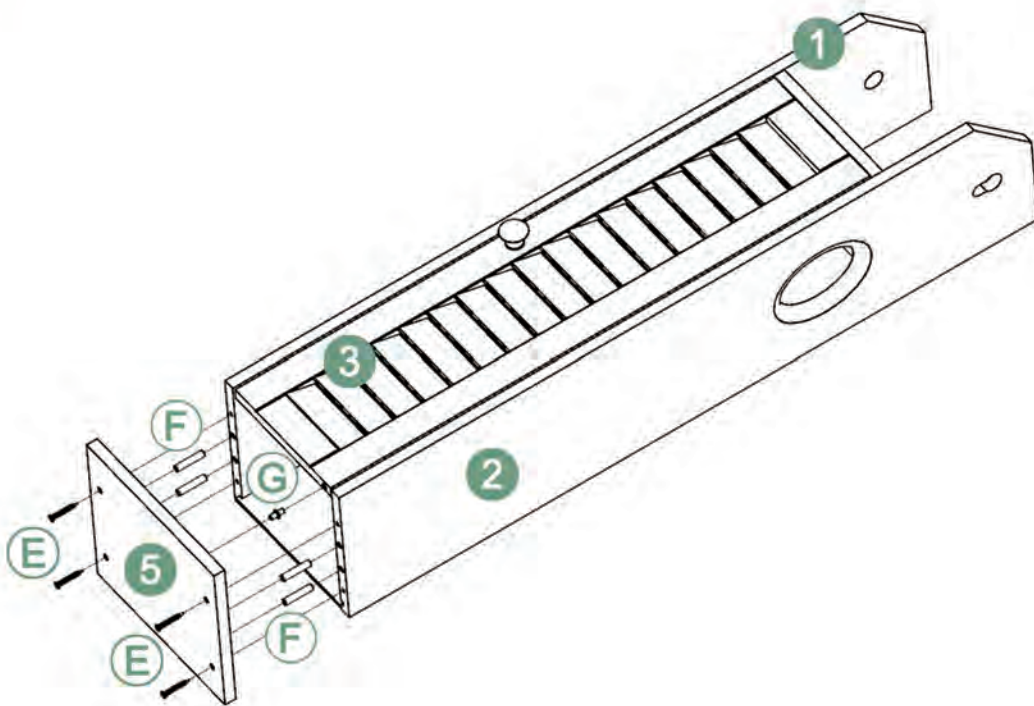

10.

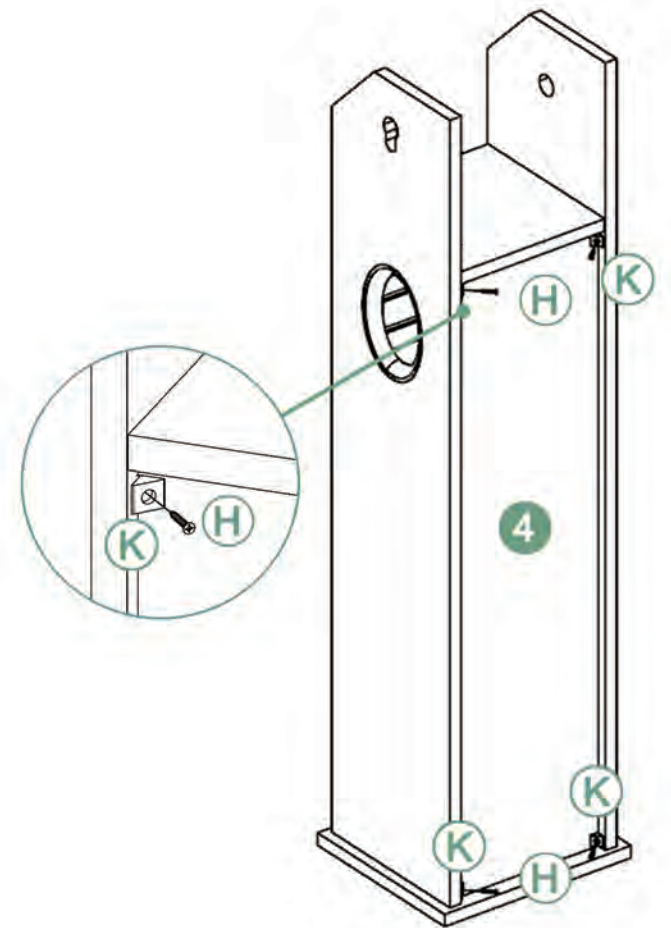

11.

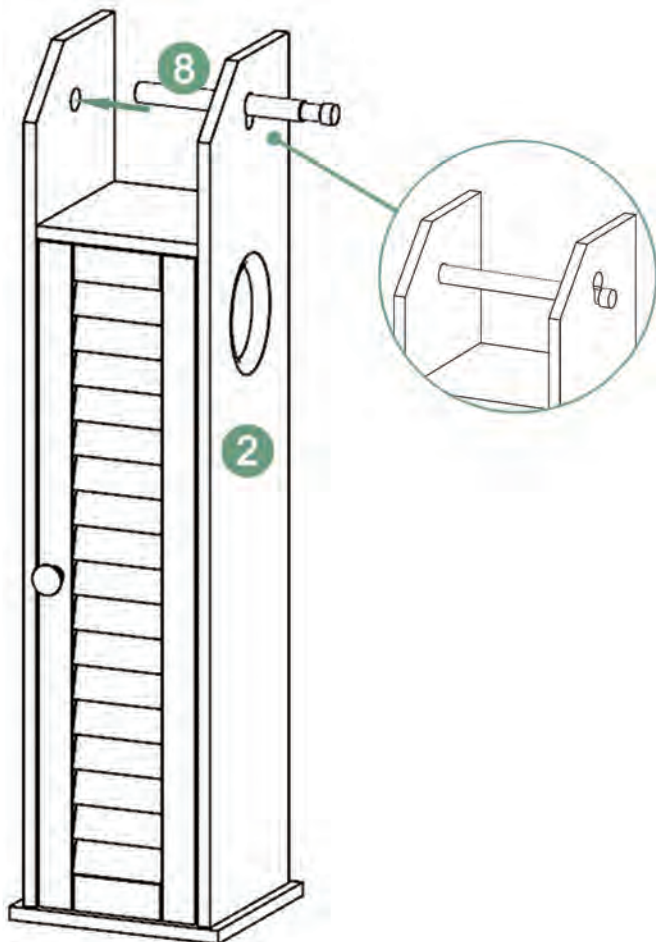

12.

