




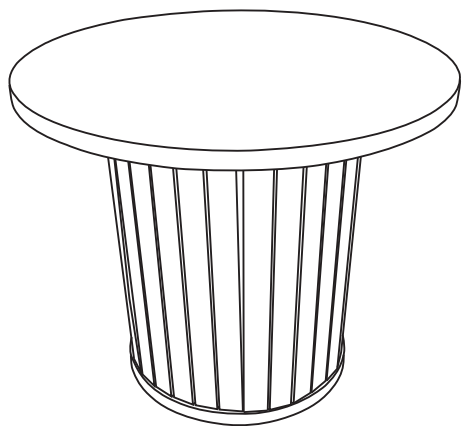


Step 1

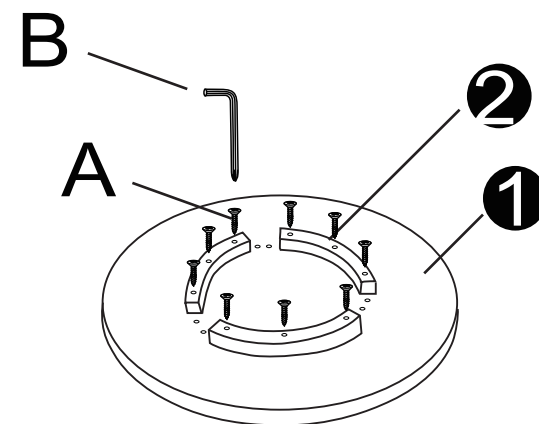


Step 2

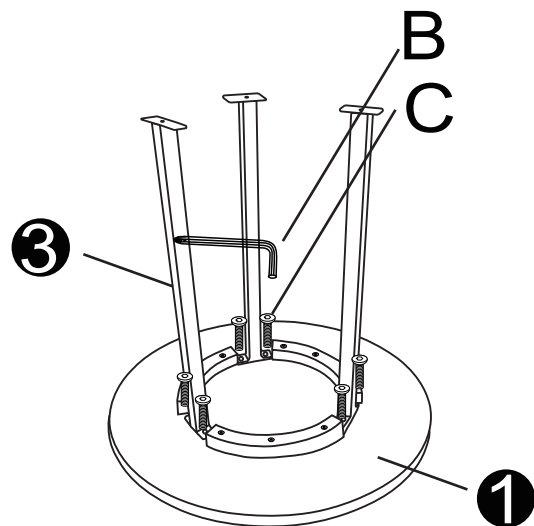


Step 3

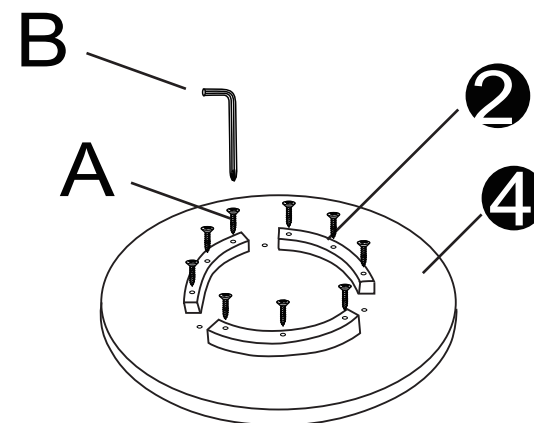

Step 4

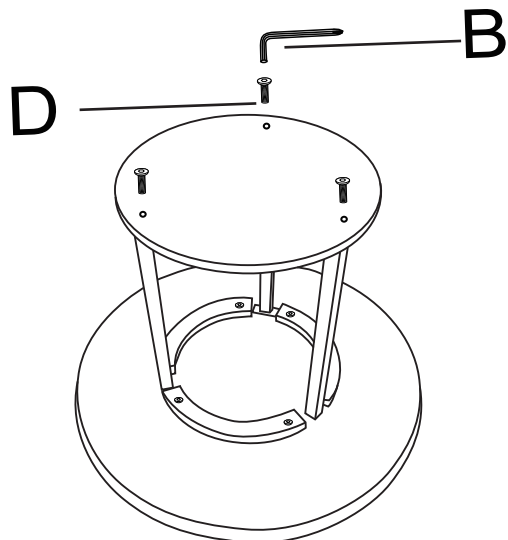


Step 5

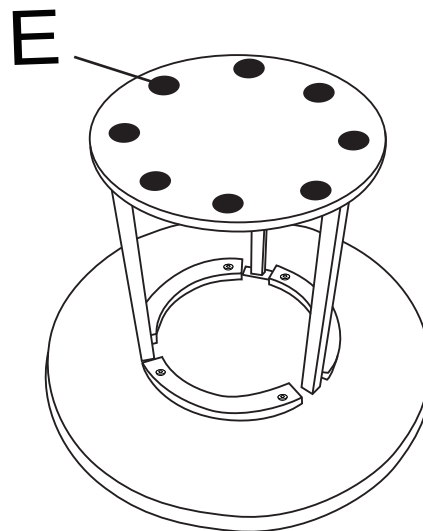


Step 6

The vertical sliver should not be folded directly in half. It should be slightly bent.

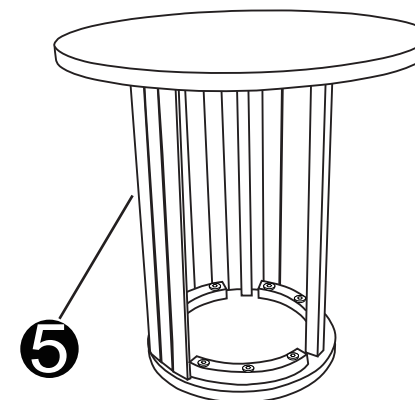

1

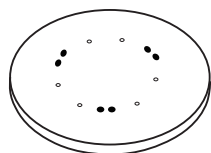

x1

2




x6

3



x3

4

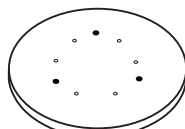

x1


5



x2

Step 7

When gluing the slats, align the joints from the middle of the slats.

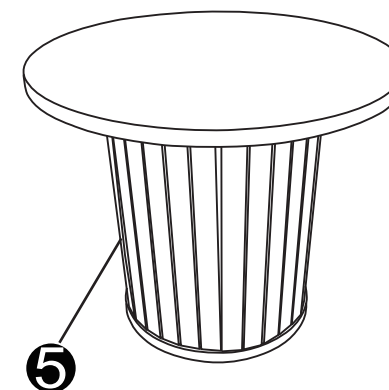


A



x18

B

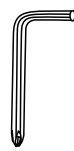

x1


C



M6x13mm

x6

D



M6x30mm

x3

E



x8