


WEEE Number: 80133970

INSTALLATION INSTRUCTION

MODEL: VT-711 SPOTLIGHT FITTING

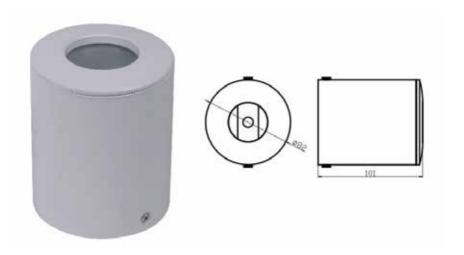


INTRODUCTION


Thank you for selecting and buying V-TAC LED SPOTLIGHT FITTING. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any other query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.





INSTALLATION INSTRUCTIONS

- 1. Switch off the power.
- 2. Cut the appropriate size above on the ceiling, put the rubber plug in hole, fix the bracket on the ceiling with screw solidly. (picture 1)
- 3. Connect (110-220V) in a coorect way. (picture 2)
- 4. Install the lamp body into bracket and tighten the screw safely and solidly. (picture 3)
- 5. Switch on the power if above steps are done properly without any mistakes.

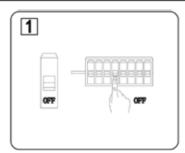

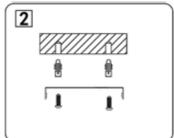

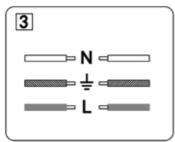

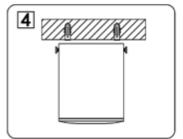

WARRANTY

- This product is warranted from manufacturing defect only.
- The warranty is valid for 2 years from the date of purchase.
- The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear.
- The company gives no warranty against damage to any surface due to incorrect removal and installation of the product