




Step 1

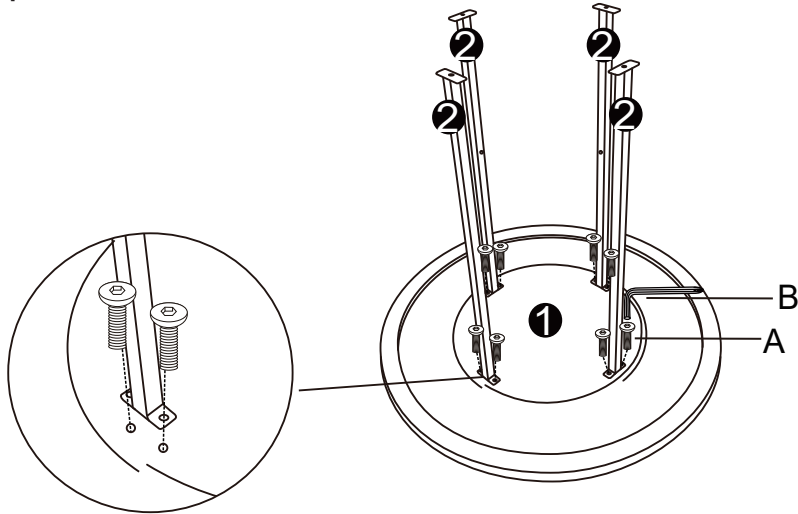


Step 2

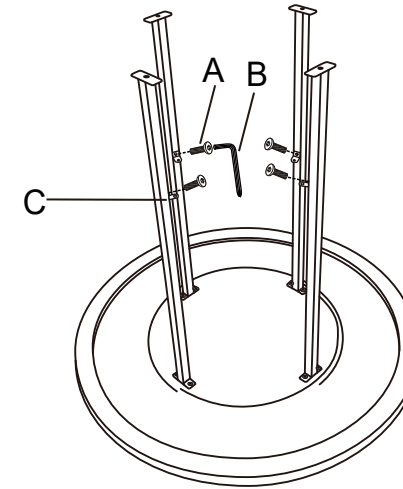


Step 3

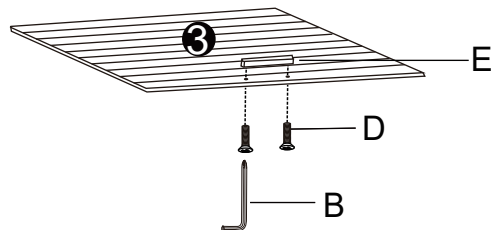


Step 4

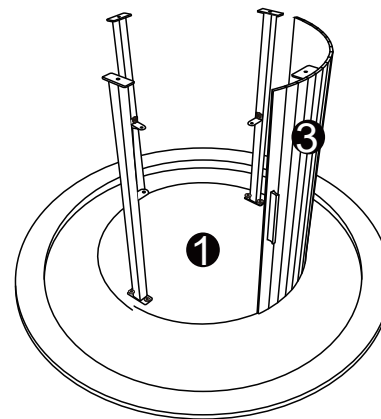

Step 5

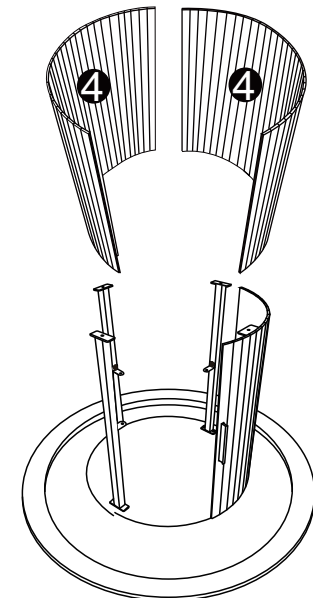


### Step 6

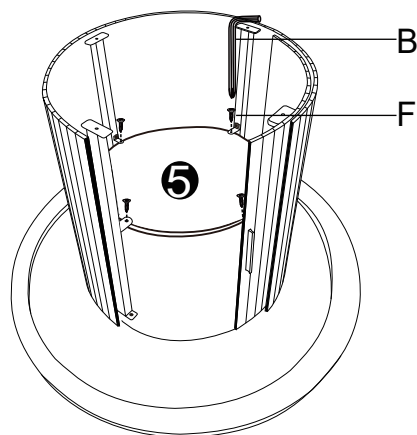


### Step 7

Tighten the screw only 30% and do not over-tighten.  
After adjusting the upright boards and inserting them into the slots, tighten the screws.

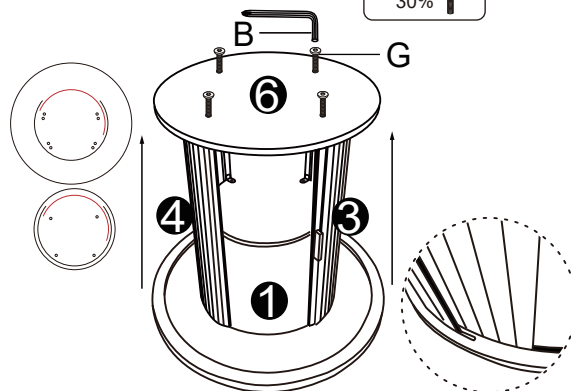


Put the No.4 and No.3 plates to make them all enter the groove, and then press the No.6 plate; When installing No.6 plate and No.4 and No.3 plate, No.4 and No.3 plate and No.1 plate should be installed, so that all No.4 and No.3 plates will enter the No.1 plate groove.

### Step 8

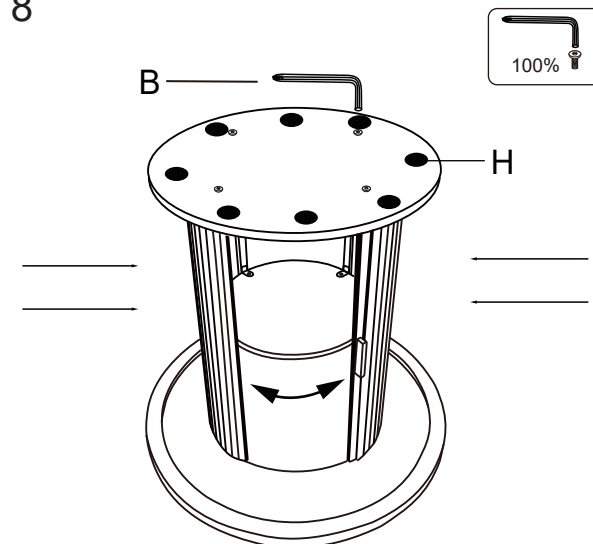

①

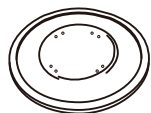

x1

②



x4

③




x1

④




x2

⑤



x1

⑥



x1

A



M6x13mm


x12

B



x1

C



x4

D



M4x8mm

x2

E



x1


F



M3x12mm

x4

G



M6x35mm

x4

H



x8

### Step 9

